

# CONTENTS

<b>Safety and precautions</b>	<b>p. 4</b>
<b>Information</b>	<b>p. 8</b>
<b>1. Your telephone</b>	<b>p. 9</b>
1.1 Keys	p. 9
1.2 Icons	p. 11
1.3 Symbols used in the User Guide	p. 12
<b>2. Getting started</b>	<b>p. 13</b>
2.1 SIM Card and battery	p. 13
2.2 Switching your phone on	p. 16
2.3 Switching your phone off	p. 16
<b>3. Calls</b>	<b>p. 17</b>
3.1 Making a call	p. 17
3.2 Calling your voice mail	p. 18
3.3 Receiving a call	p. 18
3.4 During the call	p. 19
3.5 Double line management	p. 23
<b>4. Call memory</b>	<b>p. 24</b>
4.1 Accessing and calling back	p. 24
4.2 Available options	p. 25
<b>5. MENU</b>	<b>p. 26</b>
<b>6. Events</b>	<b>p. 29</b>

<b>7. Directories</b>	<b>p. 31</b>
7.1 Accessing your directories	p. 31
7.2 Creating a directory file	p. 33
7.3 Classifying a file in a family	p. 34
7.4 Available options	p. 35
7.5 The voice recognition function	p. 38
7.6 Assigning a ring tone to a family	p. 39
7.7 Temporary SIM card	p. 39
<b>8. Vibrator</b>	<b>p. 41</b>
8.1 Activating / deactivating the vibrator	p. 41
<b>9. Messages</b>	<b>p. 42</b>
9.1 Accessing messages	p. 42
9.2 Reading your messages	p. 43
9.3 Composing a message	p. 48
9.4 Data entry system: predictive mode	p. 50
9.5 Sending a message	p. 53
<b>10. My setup</b>	<b>p. 54</b>
10.1 Sounds	p. 54
10.2 Main screen	p. 59
10.3 On/Off screens	p. 59
10.4 Downloading	p. 59
10.5 Zoom	p. 61
10.6 Numbers	p. 61
<b>11. Alarms</b>	<b>p. 63</b>
11.1 Wake up	p. 63
11.2 Appointments	p. 64
11.3 Birthdays	p. 64
11.4 Options	p. 64

<b>12. Memo</b>	<b>p. 65</b>
12.1 Recording a voice memo	p. 65
12.2 Using a voice memo	p. 66
<b>13. Calculator/Converter</b>	<b>p. 67</b>
13.1 Convert	p. 67
13.2 Calculator	p. 70
<b>14. Setup</b>	<b>p. 71</b>
14.1 Services	p. 71
14.2 Clock	p. 79
14.3 Languages	p. 79
14.4 Dictionary	p. 79
14.5 Input mode	p. 80
14.6 Display	p. 80
14.7 Pickup	p. 80
14.8 Automatic power off	p. 81
14.9 Double line management	p. 81
14.10 Keypad lock	p. 81
<b>15. WAP</b>	<b>p. 82</b>
15.1 Accessing WAP Services	p. 82
15.2 Available options	p. 83
15.3 Setting up your access	p. 85
15.4 Changing the WAP access mode	p. 87
<b>16. Games</b>	<b>p. 88</b>
<b>17. Warranty</b>	<b>p. 92</b>
<b>18. Accessories</b>	<b>p. 97</b>

## SAFETY AND PRECAUTIONS

We recommend that you read this chapter carefully before use. The manufacturer disclaims any liability for damage which may result as a consequence of improper use or use contrary to the instructions contained herein.

### • CONDITIONS OF USE:

Switch the phone off before boarding an aircraft, otherwise you may be prosecuted. Switch the phone off when you are in health care facilities except in areas where it is allowed. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency. When the phone is switched on, avoid placing it near a medical aid device if you carry one such as a pacemaker, hearing aid or insulin pump. Especially when you have a call, you should hold the telephone against the ear on the opposite side to the device, if any.

Do not switch the phone on when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere. Do not let small children use the phone without supervision. Do not attempt to open or repair it yourself. Use only Alcatel batteries, battery chargers, and accessories that are compatible with your phone model. (See Accessories List, page 97) The manufacturer disclaims any liability for damage caused by use of other batteries, chargers or accessories. Do not allow your phone to be exposed to unfavourable environmental conditions (humidity, rain, ingress of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -20 °C to +40 °C. Over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

### • BATTERY:

Before removing the battery from your phone, please make sure that the phone is switched off. Take precautions with the battery and do not attempt to open the battery (chemical substances may cause burns). Do not pierce, disassemble nor cause a short-circuit in a battery. Do not burn or dispose of a used battery in household waste or store it at temperatures above 60 °C. Batteries must be disposed of in accordance with locally applicable environmental legislation. Batteries should not be used for other purpose than the one they are designed for. Never use damaged batteries.

### • TRAFFIC SAFETY:

Always check whether local legislation permits operation of a mobile phone while driving a vehicle. When it is said that the use of mobile phones whilst driving a vehicle is a risk factor, we strongly recommend that you park the car before using the phone. However if you intend to use your phone while driving, you must use it connected to the "Easy-to-install hands-free car kit".

Your mobile phone when powered emits radiation which may interfere with the vehicle electronic systems such as anti-lock brakes (ABS, airbag). As a result, you should:

- avoid placing the phone on the dashboard.
- connect the phone to an external antenna. The antenna should be mounted and located away from the driver and passengers or separated from them by a metal screen (e.g. the car roof).
- check with the car manufacturer that the dashboard is adequately shielded from mobile phone RF energy.

### • RADIO WAVES:

Before a phone model is available for sale to the public, compliance with the International guidelines (ICNIRP) or European Directive 1999/5/EC (R&TTE) must be shown. These guidelines or directive include as one essential requirement the protection of the health and the safety for the user and any other person.

## THIS MODEL PHONE MEETS THE INTERNATIONAL AND EU REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio-frequency (RF) energy recommended by International guidelines (ICNIRP) (1) and by the Council of the European Union (Recommendation 1999/519/EC) (2). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the International guidelines or recommended by the Council of the European Union is 2 W/kg (3). Tests for SAR are



- (1) ICNIRP guidelines are applicable in the following areas: Central America (except Mexico), South & North Africa, Asia Pacific (except Taiwan, Korea, and Australia).
- (2) European recommendation (1999/519/EC) is applicable in the following areas: Europe, Eastern Europe, Israel.
- (3) The SAR limit for mobile phones used by the public is 2 Watts/kilogram (W/kg) averaged over ten grams of body tissue. The international guidelines or European limit incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output of the phone.

The highest tested SAR value for this model phone for use at the ear and compliance against the standard is 0.31 W/kg. While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant International guidelines and EU requirements for RF exposure.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

## INFORMATION

 
- Web site: [www.alcatel.com](http://www.alcatel.com)
- Wap address: [wap.alcatel.com](http://wap.alcatel.com)
- Alcatel hotline No.: see "Alcatel Services" leaflet (calls charged at applicable local rate in your country).

Your telephone is designed to make and receive calls. It operates on GSM networks with 900 MHz and 1800 MHz bands.

The **CE** or **CE0165** marking indicates that your telephone complies with EC directive 1999/5/EC (R&TTE) and the accessories with applicable EC directives. The entire copy of the Declaration of Conformity for your telephone can be obtained through Alcatel website [www.alcatel.com](http://www.alcatel.com).

# 1

## YOUR TELEPHONE

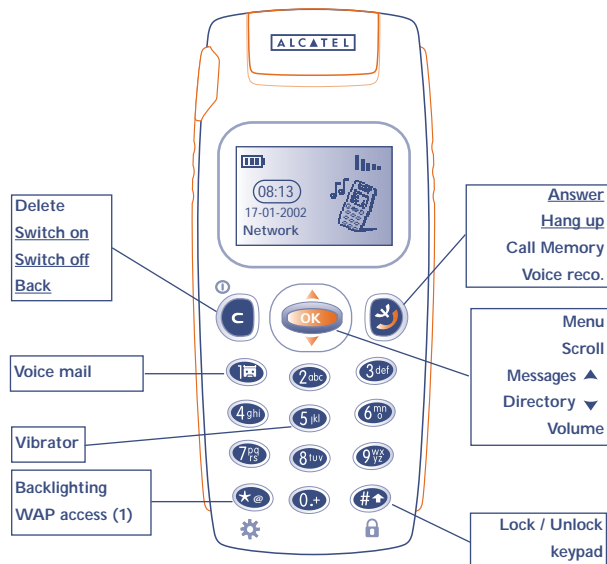

### 1.1

#### Keys



Delete (short keypress).

Return to the previous screen (short keypress).

Return to the main screen (long keypress).



**Switch phone On/Off** from the main screen (long keypress).



Access the MENU / Confirm the option (short keypress).  
Access the "Operator" services (long keypress).



Volume control during a call.  
Scroll to select an option.

Access the directory (keypress downwards).  
Access the messages (keypress upwards).



### **Answer/Hang up**

Access the call memory (Redial) (short keypress).  
Use the voice recognition function (long keypress).



Access your voice mail (long keypress).



**Switch On/Off the backlighting** (long keypress).  
Access WAP (long keypress) (1).



Lock or unlock the keypad (long keypress).  
Enter upper / lower case letters, digits, punctuation marks,  
access the bar of symbols.



Activate / deactivate the vibrator (long keypress).



(1) Depending on your phone model.

## 1.2

## Icons (1)



**Battery charge level.**



**Vibrator mode:** your telephone vibrates but emits no ring tone nor beep. (See page 56)



**Silent mode:** your telephone emits no ring tone, no beep and does not vibrate. (See page 56)



**Events** (Information to consult): voice messages, all unanswered calls, unread short messages, unlistened voice memos, downloaded data (see page 29), and WAP alerts (2).



**Short message list is full:** your telephone cannot store any more messages. You must access the short message list and delete at least one message. (See page 43)



**Call Forwarding activated:** your calls are forwarded. (See page 74)



**Programmed appointments, birthdays, or wake-up.** (See page 64)







**Signal strength indicator.**



(1) Icons and other illustrations shown in this User Guide are for information only.

(2) Check the availability of this service with your operator.

-  Preferred tariff area. (1)
-  Keypad locked.
-  "Manual Network Search" mode.  
(See page 78).
-  Roaming within your subscription country.

### 1.3 Symbols used in the User Guide

The following symbols are used throughout the guide:



Briefly press the scroll key in its centre in order to confirm an option.



Move the scroll key up or down in order to select an option.



Use the keypad keys to enter digits, letters, and punctuation marks.



(1) Check the availability of this service with your operator.

 
# 2

## GETTING STARTED


### 2.1 SIM Card and battery

#### Inserting and removing the SIM card (1)


You must insert a SIM card in order to use your phone.

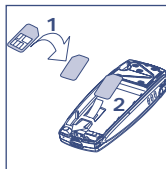

 Fit SIM card with the chip facing downwards

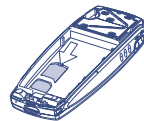

 Slide the SIM card into its compartment. Check that it is properly inserted

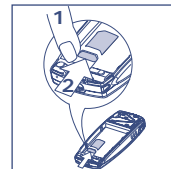

Push the SIM card with your finger to release it




(1) The telephone is compatible with 3 V, 3/5V, and 1.8/3 SIM cards. Former 5 V SIM cards can no longer be used. Contact your operator.


## Inserting the battery



 Insert the battery

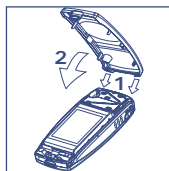


Close the cover as shown

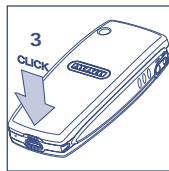 


Click into place


## Charging the battery

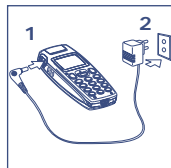 

Connect the battery charger

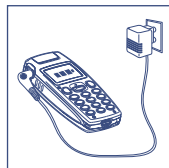 

 The on-screen indicator stops flashing when charging is over

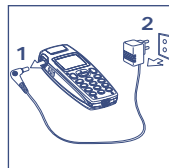

Disconnect the battery charger once charging is complete

- A beep will sound when charging begins.
- The charging indicator icon may take several minutes to start to flash if your battery is new or very low.

- The mains socket outlet must be close to the phone and easily accessible.




Use exclusively Alcatel chargers that are compatible with your phone model.

When you first use your phone you must charge the battery for approximately 3 hours.


For optimal backlighting, your battery must be fully charged.



## Removing the battery

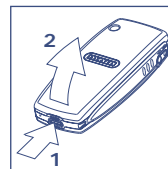 

Push and lift

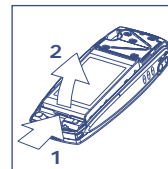 

Remove the battery



## 2.2 Switching your phone on



Switch your phone on (long keypress) | Enter your PIN code if you are prompted to | Confirm | Main screen

If you are prompted to enter the time and date, enter the new data if necessary, then confirm by .

If cell broadcast messages are displayed, use the  key to browse through them in full or press the  key to return to the main screen.

While the phone is searching for a network, <<<->>> is displayed. (??-?? is displayed if your SIM card is rejected by the network, in this case please contact your operator).

## 2.3 Switching your phone off

From the main screen, press the  key (long keypress).



If you do not know your PIN code, please contact your network operator.

Do not leave your PIN code near your phone and store your card in a safe place when you are not using it.

# 3 CALLS


## 3.1 Making a call



Dial the number | Make the call | Talk | Hang up

If you make a mistake, you can delete digits by pressing the  key.



To enter characters "+" or "P" (pause), make a long keypress on  (the following characters scroll: 0, +, \*, P).

### Making an emergency call

If your telephone is within the area covered by a network, you can make an emergency call by dialling 112 or any other number provided by your operator.

### Making an international call



 
Display the "+" prefix (long keypress) | Display the list of countries | Select the country/area | Confirm

You may find the country's or the area's name by pressing the key associated with the first character of it's name.

Once the country/area code is displayed, dial the rest of the number and make the call.

### 3.2 Calling your voice mail

The network provides voice mail service to ensure that you do not miss any calls; it works like an answering machine which you can interrogate at any time.

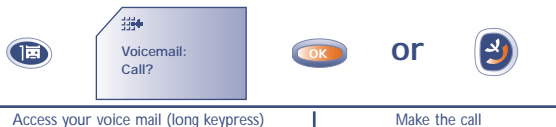



! To use your voice mail abroad, contact your operator before leaving.

If your operator's voice mail access number is not shown, dial the number that was supplied to you with your subscription. To later modify this number, use the "Numbers" MENU option. (See page 61)

### 3.3 Receiving a call





If the  icon is displayed, the vibrating system is enabled and no ring tone is heard.

If the  icon is displayed, the vibrator and ring tone are both deactivated.

! The caller's number is displayed if it was transmitted by the network (check the availability of this service with your operator).

### Switching the ring tone off (without losing the call!)








Press the  key while the phone is ringing; you can still answer the call by pressing the  key.

Pressing the  key again rejects the call.

### 3.4 During the call

! During a call, you can use the  key to adjust the volume.




During a call, you can use the  key to access the following options:


	<b>Volume</b>	Increase or decrease the sound level
	<b>Handsfree</b>	Activate/deactivate handsfree mode (the  symbol is then replaced by  )
		<b>Caution:</b> move the handset away from your ear before activating this mode because the amplified volume could cause hearing damage
	<b>Hold call (1)</b>	Place an ongoing call on hold (you can later resume the call by pressing the  key)
	<b>Dial (1)</b>	Make a second call (an ongoing call will be automatically put on hold and you can switch between calls by pressing the  key)
	<b>Save Number</b>	Store a phone number in one of your directories: SIM or Product (Mobile)
	<b>Directory</b>	Access the directory
	<b>Messages</b>	Read your messages
	<b>Services (1)</b>	Access the services supported by your network operator
	<b>Back</b>	Return to the previous screen

 
! (1) Check the availability of this service with your operator.

## Handling a second incoming call (1)

You are on a call and a second call comes in notified by an audible signal.

If you accept the new call by pressing the  key, the ongoing call is automatically put on hold; you can then swap between the calls by pressing the  key and then the  key.

To refuse the second call, press the  key twice.

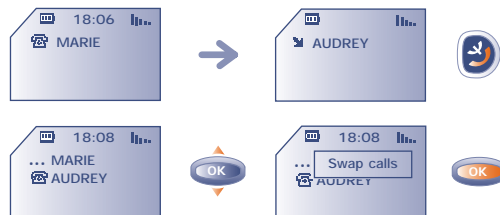

## Conference calls (1)

Your telephone allows you to converse with several persons at the same time.

! (1) Check the availability of this service with your operator.



You are handling 2 calls

Select "Conference"

Confirm



The conference starts

 
### • A third call comes in



A third call comes in

Answer the call and speak with your new caller


Confirm



Select "Conference"

Confirm

The caller joins the conference

Pressing on the  key hangs up the communication you had with the caller you have selected.

To end the conference call, click on the  key and select the "End Conf. Call" option.

## 3.5 Double line management (1)

Your SIM card can contain two lines with two different phone numbers.

By default, you are automatically on line 1. To switch from line 1 to line 2, open "Menu/Setup/Double line/Line choice" (1).

Whichever line is selected (1 or 2) you can receive calls intended for both lines.

Calls made will be invoiced on the selected line.



(1) Check the availability of this service with your operator.




# 4

## CALL MEMORY

### 4.1 Accessing and calling back

 




Each call is identified by one of the following symbols:

-  Answered incoming call.
-  Unanswered incoming call.
-  Outgoing call.

 The caller's number is displayed if it was transmitted by the network (check the availability of this service with your operator).
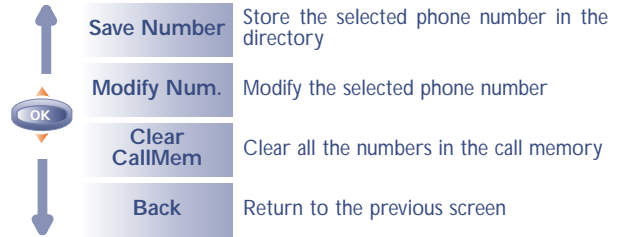
### 4.2 Available options




 To return to the main screen, press the  key (long keypress).


# 5
 
## MENU

From the main screen, press the  key to go to the MENU.

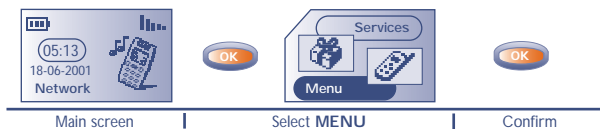

### Choosing a MENU function

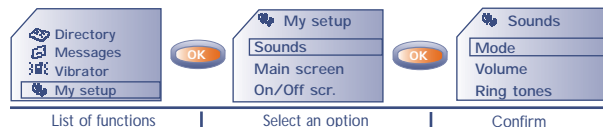 

### Return to the screen:

**Previous screen:** Press  (short keypress).

**Main screen:** Press  (long keypress).

### Organisation of functions

For each of the listed functions, refer to the appropriate chapter in this User's Guide.



#### Directory:

Access / create directory files and make calls from your directory.



#### Messages (SMS):

Read, write and send your short messages.



#### Vibrator:

Activate / deactivate the vibrator.



#### My setup:

Customise your ring tones, icons, switch On/Off and main screens, your direct dial numbers, your keypad and prefixes.



#### Alarms:

Set your telephone's alarms (appointments, birthdays, wake-up).



#### Memo:

Record and listen to voice messages.



#### Games:

Access the games proposed.



### Calculator/Converter:

Perform currency conversions (Euros/currencies, etc.) and basic calculations.





### Setup:

Set up your telephone (displays, formats, etc.) and take advantage of the features provided by your operator (security, call forwarding, etc.).



### Events:

Access your voice mail, unanswered incoming calls, unread short messages, voice memos, and information downloaded in the handset as well as WAP notifications (1).

You can customise your main MENU by changing the order of the options. For example, you can choose to display “**Sounds**” at the beginning of your Menu, select this option, make a long keypress on the  key to place it in the first position in your new list. The  icon is displayed after the selected option.

To cancel, select the new order and make a long keypress on the  key.

 


(1) Depending on your model, the language and availability of this service with your operator.

# 6

## EVENTS

You can read all of the events which occurred on your telephone in your absence and which you have not yet accessed.

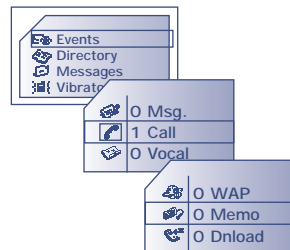

**Messages (Msg.):**

Access unread messages. (See page 42)

**Unanswered incoming calls (Call):**

Display the numbers of callers who tried to reach you with no success. (See page 17)

**Voice mail (Vocal):**

Call your voice mailbox to listen to your new voice messages. (See page 18)

**Notifications (WAP) (1):**

Access the WAP notifications you received.

**Voice memos (Memo):**

Listen to the voice memos you recorded. (See page 66)

**Information downloaded (Dnload):**

Access the received information you downloaded.



(1) Check the availability of this service with your operator.

# 7

## DIRECTORIES

### 7.1

### Accessing your directories

- Press the key downwards to access the directories from the main screen.
- Or press the key from the MENU (see page 26) then select "Directory".



To search for the name you are looking for

Two directories are available, the SIM directory and the product directory (Mobile) .

For easy consultation, all your contacts are stored in a joint list.

The icon displayed in front of a name indicates whether the name belongs to the SIM directory or to the Mobile's:



SIM directory



Product directory (Mobile).



 
## Searching for a name by its first letter

You can also search for the name of the person you wish to contact by pressing the key associated with the first letter of his/her name.

Example: Press the **2abc** key twice to find the first name beginning with "B", then scroll the list to the name you are looking for using the **OK** key. In some languages, depending on the input mode, this search is performed using the "Search name" option. (See page 35)


## Calling from the directory

You can assign 3 different numbers to the same name: home, mobile, office (see page 34). If you want to call a party who has several numbers, first you must choose the number you wish in the list.



Choose the appropriate number


## Displaying a phone number

 

## 7.2 Creating a directory file

If your directories are empty, the "Directory empty! Create a file?" message will be displayed.

 
From the list of names in your directories, press the **OK** key to create a file.

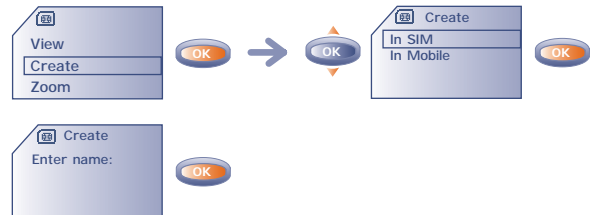

Each name in a directory can have up to 3 numbers: Home, Mobile, Office.

Files created in the SIM directory can be consulted from a different mobile.

 ! If you use your telephone abroad, you should store the numbers in the directory in the international format with the "+" prefix. (See page 17)

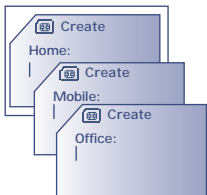




Switch from one to another by pressing on the  key or  key.

**!** You don't have to fill in all the information, but at least one number must be entered for each name.

Up to 250 phone numbers can be stored in the product directory. The SIM directory's capacity depends on the operator.


### 7.3 Classifying a file in a family


To differentiate your files, you can classify them in groups called "families": Private , Profession. , Other , or None. A different ring tone can be assigned to each family. This classification will allow you to easily distinguish a professional call from a private call (1). It is possible to screen incoming calls by family. (See page 76)

The files you create may be organised in alphabetical order, by family (Private , Profession. , Other , or None) or by directory (SIM then Mobile). (See page 33)

**!** (1) If the caller's number is displayed.

### 7.4 Available options

From the list of names in your directory, you can access the following options by pressing the  key:

	<b>View</b>	Display the contents of each file
	<b>Create</b>	Create a file
	<b>Zoom</b>	Change the character size (1)
	<b>Search name</b>	Find a name in a list (1) according to the entry mode
	<b>Modify</b>	Modify the file contents
	<b>Organise</b>	Display names: - Alphabetical order - By family: private, professional, other - By directory: SIM then Mobile
	<b>Delete</b>	Delete the selected file

**!** (1) Depending on the language.

**Classify**

Classify the selected file in the appropriate family

**Ring tones**

Assign a melody to a family

**Copy**

Copy a file from a directory into the other

**Copy all**

Copy the whole directory into the other

**Voice reco.**

Record a voice recognition command for a file

**Memory**

 
Display the available memory in your directories

**Back**

Return to the previous screen

## Copying from a directory into the other


You can copy a file or all the contents of a directory into the other. You may choose to keep or to delete the original directory or file.

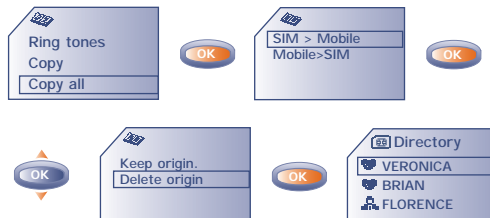


## 7.5 The voice recognition function

### Recording a voice recognition command

 Select a contact from the directory for which you would like to record a voice recognition command.

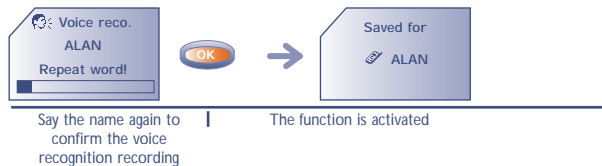

Contacts for which you have stored a voice recognition command are identified by the  icon.

Fifty names can be accessed by using the voice recognition function.

## Using the voice recognition command

From the main screen



Say the name of the person to be called.

Long keypress

## 7.6 Assigning a ring tone to a family



You can assign a ring tone to a family, so when you receive a call from a contact classified in a particular family, the ring tone for the incoming call will be the one assigned to that family. An icon is also assigned to each of the family, allowing you to easily recognise your caller's family. (See page 34)

## 7.7 Temporary SIM card

When you create a file, you can include 3 different numbers (Home, Mobile, Office).

If you change your SIM card, an information message will be displayed when the telephone is switched on. You must then decide if this card will become your main SIM card or if it is being inserted temporarily:





- Keypress on : the SIM you just inserted becomes your main SIM card. You can modify the files as you wish. If you reinsert your old SIM card, you will no longer find the three numbers that were formerly associated with the same name.
- Keypress on : the SIM you just inserted is considered as "Temporary", which does not allow you to create a file with three different numbers (Home, Mobile, Office). You can still create or modify files with one number. If you then reinsert the first card (your main card), you will find the three number association it originally contained.

## 8


## VIBRATOR

You can enable the vibrator in public places (such as restaurants, museums, etc.) allowing you to keep your telephone switched on while remaining as discreet as possible. When you receive a call, your telephone will vibrate instead of ringing or beeping.

## 8.1 Activating / deactivating the vibrator

- By pressing (long keypress) the  key from the main screen.
- Or by pressing the  key from the MENU (see page 26) and by selecting "Vibrator".








- If the  icon is displayed, your telephone vibrates but emits no ring tone.

# 9

## MESSAGES (1)

### 9.1 Accessing messages

- Make a keypress upwards on the  key from the main screen.
- Or press the  key from the MENU (see page 26) and select "Messages".


  	<b>Unread</b>	Read new messages
	<b>Read/Saved</b>	View the read messages
	<b>Write</b>	Create a new message
	<b>My canned</b>	Create your own canned messages
	<b>Zoom</b>	Change character size (2)
	<b>Parameters</b>	Set parameters, especially the number of the service centre if it is not automatically displayed (you cannot send a message without this number)

- (1) Check the availability of this service with your operator.
- (2) Depending on the language.

### 9.2 Reading your messages

The messages are stored in your SIM card and classified in two groups: unread messages and read messages.

 
#### "Unread" messages

When a new message is received, a screen message "Do you want to read your new messages?" and the  icon are displayed and an audible signal (1) is emitted.

The  icon disappears when all new events (messages, calls, ...) have been consulted.

#### • Read immediately


If you want to read immediately the messages, press the  key.




- (1) To deactivate the audible signal (see page 54).

## • Read later

 
If you don't want to read your messages now, press the  key.

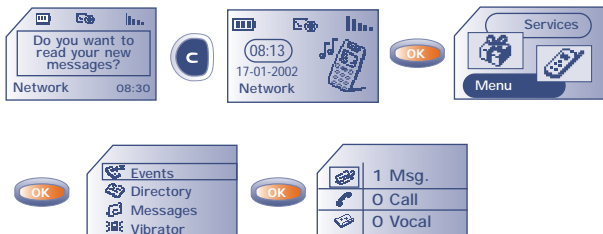



 

 



The capacity of your SIM card depends on your operator. The  icon is displayed when there are too many stored messages: please delete some.

## Available options

While reading a message, you can access the following options by using the  key:



	Delete the selected message
	Write a message to reply to a message you received
	Send the selected message again after modifying the recipient's name or the parameters
	Store the original message number or the destination number in the directory
	Store an icon in the list of icons
	Store an animation in the list of animations
	Store a sound in the list of sounds
	Store this message as a canned message



(1) If the received message contains sounds, images, icons, smileys.

## Parameters

Update the following parameters:

**Serv. Centre:** your operator's service centre call number (may be provided automatically)

**E-mail centre (1):** calling number for sending an e-mail (can be automatically presented to you)

**Format:** in which the message is to be delivered to your correspondent (SMS, e-mail, fax, etc.)

**Validity:** time during which the network presents the message again to your recipient in case of unsuccessful delivery

**Receipt:** activate/deactivate the acknowledgement receipt request

## Zoom

Change the character size (2)

## Back

Return to the current message

## "Read/Saved" messages

These messages can be read messages, composed messages which are sent or not sent, or messages that are stored.



- (1) Check the availability of this service with your operator.
- (2) Depending on the language.

## Received:

All messages that you received, read, and stored.

Your friends can send you messages containing icons, animations, smileys, sounds and texts. When you receive those messages, in addition to the options listed below, you may also store the icons, smileys, sounds, and animations so that you can use them later.

If a message contains several icons, sounds, or animations, select the object using the  key and confirm with the  key.

## To send:

All written and not yet sent messages.

## Sent:

All written, sent and stored messages.

If the "Receipt" was activated in the "Parameters" option, when you view the sent messages, the following symbols are displayed:



Message sent in expectation of an acknowledgement receipt.



Message sent and acknowledgement received.





Message not delivered (in this case you should send the message again).



We recommend that you clear your stored messages on a regular basis to avoid saturating your SIM card.

 


## 9.3 Composing a message

- Make a keypress upwards on the  key from the main screen.
- Or press the  key from the MENU (see page 26) and select “Messages”.

You can create a message or amend a stored message.

You can create a message with text only but can also assign icons or sounds, or smileys. (See page 51)

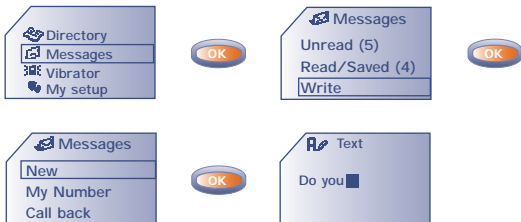


The shape of the cursor will tell you whether you are in:

- predictive mode  (data entry system, see page 50) or
- normal mode 

To switch from one mode to the other, make a long keypress on the  key.

While writing the message, depending on the selected entry mode, you can access the following options by pressing the  key.

The underlined options (see page 49) will be displayed only in the predictive mode.



Send to	Send the message
Insert Icon	Add icons
Insert Sound	Add sounds
Insert Smiley	Add smileys
Preview	Preview the message
Save message	Save the message
Confirm word	<u>Accept the word suggested</u>
OtherWords	<u>Access the list of other suggested words</u>
Insert digits	<u>Insert digits</u>
Punctuation	Insert a punctuation mark
Predictive/ Normal mode	Switch from normal to predictive mode
Add word	<u>Add a word to the dictionary</u> (depending on the language)
Language	<u>Modify the dictionary language</u>
Back	Return to the main screen

## 9.4 Data entry system (1): predictive mode

To make it easier to write short messages, your phone has an assisted data entry system: in predictive mode (1), the cursor looks like a thick bar ■. To create a word, you only need to press the key for each letter contained in the word.



The character displayed may not correspond to the one you requested; the system suggests the most usual word. Do not worry about the words initially suggested, go on typing, the system will make better suggestions as you type.

When the word is completely entered, if you want to reject it: Press the key to scroll for other suggestions, or Press the key to accept the word and insert a space.



(1) Depending on the language.

You may also use the following keys:



There is a dictionary in which you can add (1), modify or delete words. Add a word while composing a message by pressing the key and selecting the "Add word" option (1).



(1) Depending on the language.

## Icons, sounds, smileys

Your messages can be customised with icons, sounds or smileys to reflect your emotion:

	Ironic		Sad		Glad
	Confused		Amazed		Happy
	Indifferent		Crying		In love
	Devil		Angry		Laughing
	Inquiring		Show-off		Joking

You can also create your own smileys using the alphabetical characters (example: :-)).

While writing the message, the icon or sound that you inserted is represented by a symbol ( or ).

 
You can add more icons and sounds to your phone by downloading them from the Internet. (See page 59)

The recipient of the message must have a compatible EMS (Enhanced Message Service) mobile phone in order to display icons and smileys, and listen to the sounds attached to your message.

## 9.5 Sending a message (1)

You can send a message:

- To a recipient from your directories. (See page 31)
- Manually by keying in your correspondent's number

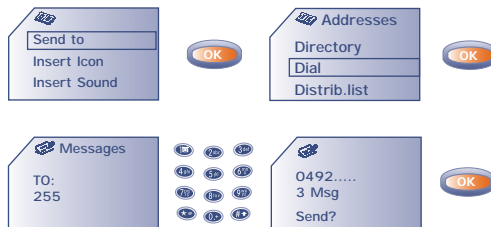

- To several recipients by selecting the group of recipients (choose the **"Distrib.list"** option).  
The list should have been created beforehand.
- To a recipient with an e-mail address, if you have stored the email centre number using the **"Parameters"** option. (See page 46)



(1) Messages exceeding 160 characters, input of icons, sounds and smileys may result in the billing of several SMS. The number of SMS will be indicated before the sending is confirmed.


# 10 MY SETUP

For each of the functions described in the rest of this chapter, select the desired option.

From the main screen, press the  key to access the MENU.





## 10.1 Sounds

From the “**Sounds**” menu, press the  key to access the various options.



## Mode

 
You can choose from the following modes:

- Sound** Normal ring tone (increasing volume).
- Vibrator +tone** Activation of the vibrator followed by a normal ring tone (increasing volume).
- Vibra... sound** Vibrator is activated followed by several beeps, then by a normal ring tone (increasing volume).
- Vibrator** No sound is emitted (ring tone, message or appointment alert, low battery beep) but the vibrating system is activated, the  icon is displayed. (See page 41)
- Silent** No sound is emitted and the vibrator is deactivated. The  icon is displayed.


## Compose my melody




From the “Compose” option, you can create your own tunes.

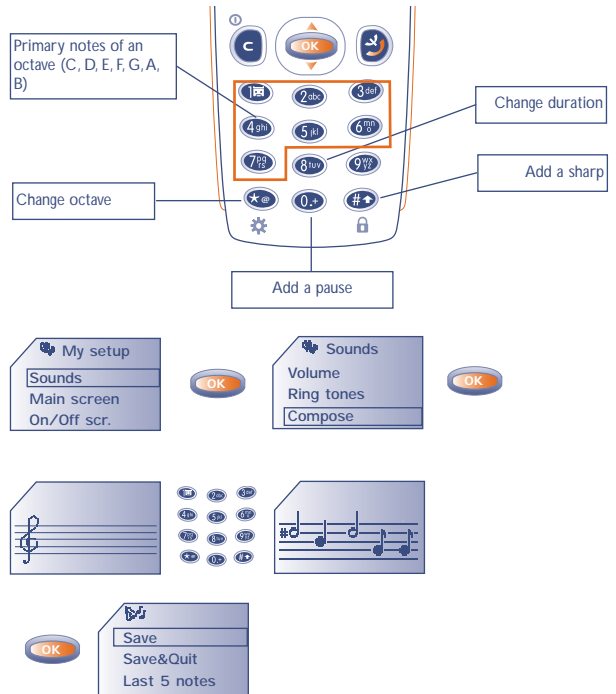
To compose your melody, use the keypad as shown below:



## Available options

While you are composing your tune, use the  key to access the following options:

  	<b>Save</b>	Save your tune
	<b>Save&amp;Quit</b>	Save your tune and return to the previous screen
	<b>Last 5 notes</b>	Listen to the last five notes
	<b>Play all</b>	Listen to the entire melody
	<b>Modify title</b>	Change the title of the melody
	<b>Instrument</b>	Choose an instrument: piano, flute, xylophone, organ, guitar, bass, strings, brass, cello, and saxophone
	<b>Tempo</b>	Choose the tempo: allegro, andante, lento
	<b>Delete</b>	Delete the selected melody
	<b>Back</b>	Return to the previous screen

 
! To return to the main screen, press the  key (long keypress).

## 10.2 Main screen

The main screen is displayed when your telephone is switched on and/or when no feature is in use (calls, sending short messages, etc.). From the MENU, you can personalise your screen by changing the icon and display format for the date.

## 10.3 On/Off screens

The “Menu/My setup/On/Off scr.” option




allows you to customise the On/Off screens of your mobile phone with a welcome message, an animation, or an icon.

## 10.4 Downloading (1)

 Your telephone is equipped with a system allowing you to download icons, sounds, animations, and canned messages.

! (1) Depending on the country.

Downloading may be performed from your mobile (WAP), Internet or from a voice server. Once you are connected to WAP or a website offering this service on the Internet (1), select the object you wish to download and perform the downloading. When it is completed, you will receive an SMS containing the object you selected.

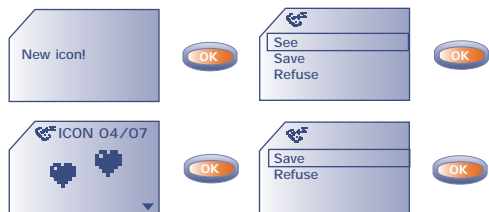

The saved data will then appear in the appropriate lists (sounds, main screen icons, icons, smileys, switch on/switch off screens, canned messages) (2).



- !
- (1) Depending on the country.
  - (2) If your mobile has no available memory, this means that too many icons, sounds, etc. are stored, you should delete some.

## 10.5 Zoom (1)

Your telephone can display two different sized characters (small or large). If you want to display more information (Wap, Directory, Messages, MENU), select the "Zoom" function.



## 10.6 Numbers

### My Number

Save your telephone number, (usually given on your SIM card). Enter the number - confirm by pressing .

### Voicemail

 
Change your voice mail number (enter the number - confirm by pressing ).

- !
- (1) Depending on your phone model and the language.

## Keyboard

Direct dial numbers, once entered, can be dialled directly from the main screen by a long keypress on keys **2**, **3**, **4**, **6**, **7**, **8**, **9** of the keypad. (1).

Create or modify direct dial numbers



## Prefix

Activates/cancels the prefix which will be added automatically in front of the phone number when making the call (enter the number - confirm by pressing **OK**).



(1) Depending on your product.

# 11


## ALARMS

Access the alarms features from the MENU (see page 26) by pressing the **OK** key.





### 11.1 Wake up


Set the alarm time and confirm by pressing **OK**.

Once this feature is activated, the  icon appears on the main screen. Under “Options”, you can choose to program the alarm clock with a melody. The alarm will sound whether the phone is switched on or off, but pressing any key will shut it off.



## 11.2 Appointments

You can schedule your appointments (enter the date and time – confirm by pressing  -enter the purpose of the appointment – confirm by pressing ) and program how often they occur (once, daily, weekly).

Once an appointment is scheduled, the  icon appears. You can schedule up to five appointments. The alarm will sound whether the phone is switched on or off, but pressing any key will shut it off.

You can also change or cancel an appointment. In addition, you can program a short message to be sent (with icons, and/or a melody) at the appointment time.

## 11.3 Birthdays


You schedule birthdays in the same way as appointments but on an annual basis. You can schedule up to five birthday dates.

## 11.4 Options

 
The "snooze" function can be activated when you program any alarm. The alarm will be repeated at regular ten minute intervals after the first sounding.

# 12 MEMO

The voice memo feature acts as a dictaphone and allows you to record personal messages.

- From the main screen, press the  key to access the menu, then choose "Memo". (See page 26)



## 12.1 Recording a voice memo

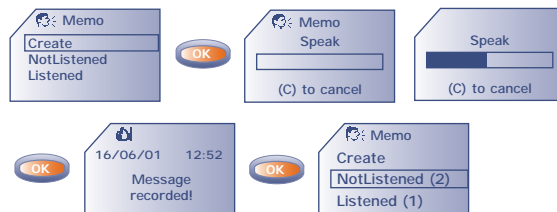

## 12.2 Using a voice memo

You can use a voice memo to personalise the sounds played by your telephone:

  - when your telephone is switched on or off,
- when there is an incoming call from a caller classified in a directory family.
- when an appointment, an alarm or a birthday becomes due.



**!** WARNING: Whenever you listen to a voice memo, the "Hands free" mode is automatically activated.

Move the handset away from your ear before activating this mode because the amplified volume could cause hearing damage.

# 13

## CALCULATOR/ CONVERTER

You can access the calculator and the currency converter from the main screen in two different ways:

- Enter a figure directly on the keypad, then press the key and select the "Convert" or "Calculator" option.
- Press the key from the Menu and select the "Convert" or "Calculator" option.

### 13.1 Convert

 
The currency converter allows you to:

- Convert easily and quickly into Euro (Euro zone only) from the main screen (1):




- !** (1) The currency converter uses the final conversion rates for the EURO (€) set on 31/12/1998, which are used in accordance with the official conversion rules.

- **Convert a currency into Euros and vice-versa (1).**

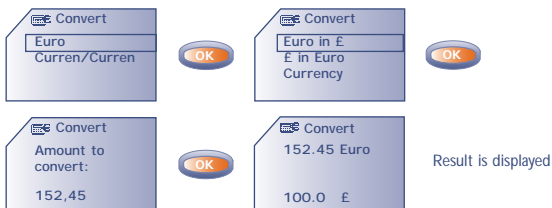

 
- **Convert a sum of money into another currency (e.g. US dollars into French francs).**

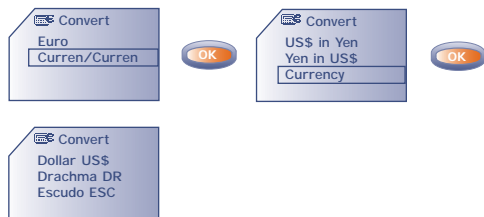

(1) Depending on your product.

To enter decimals ("."), use the key (long keypress).  
To return to the main screen, press the key (long keypress).

 From this table, choose the currencies to convert using the key to access the following options:

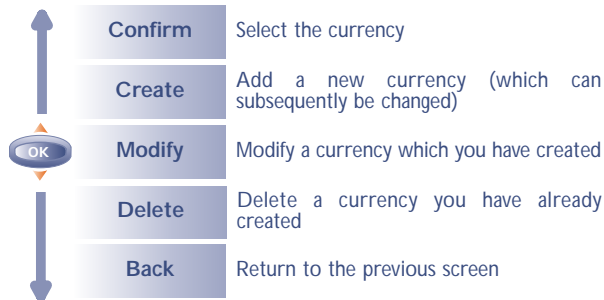

**If you are in the Euro converter:**

Once the currency has been selected or created, you must enter the exchange rate of the currency in euros (or confirm it if it is already shown).

 
**If you are in the currency converter:**

When you have selected or created the first currency, repeat the same operation for the second currency, then enter the rate for exchanging these 2 currencies.



To return to the main screen, press the key (long keypress).

## 13.2 Calculator

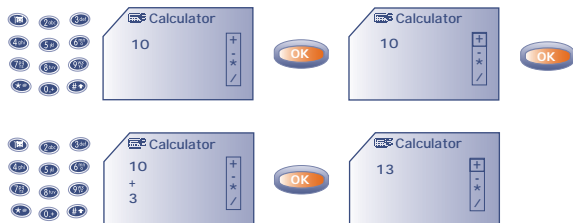

! To enter decimals ("."), use the **0.** key (long keypress).  
To return to the main screen, press the **c** key (long keypress).

# 14 SETUP

Access "Setup" from the MENU (see page 26) by pressing the **OK** key.



## 14.1 Services

### Security

**PIN Code (1)** SIM card protection code requested each time the phone is switched on if the code is activated.

Activate/ Deactivate      Activate (or cancel) this code.

Change                      Update the code (4 to 8 digits).

**PIN2 Code (1)** Protection code for certain functions on the SIM card (Billing / Cost / FDN, etc.) requested when these functions are used if this code is activated.

Change                      Update the code (4 to 8 digits).

! (1) Contact your operator if necessary.

**Network Code (1)** Code requested to access the **"Forbidden"** options associated with the network.

**MENU code** Protection code for certain MENU functions (Services, Setup / Language), requested when these functions are used if this code is activated.

Activate/  
Deactivate Activate (or cancel) this code.

Change Update the code (4 to 8 digits).

**Prod.Code** Protection code for your telephone, requested each time it is switched on if this code is activated.

Activate/  
Deactivate Activate (or cancel) this code.

Change Update the code (4 to 8 digits).

**Change SIM** Defines SIM card as the main SIM card (see page 39).

## **Billing**

**Duration** Call time management.

Last call Duration of the last call.


Avail.Duration Remaining time available in relation to time indicated under the **"InclusiveTime"** (for user's information only).

 (1) Check the availability of this service with your operator.

Cumul. dur. Total duration of calls made.

InclusiveTime Duration of subscription (enter the time - confirm by ).

Reset Reset (immediately or periodically) the total duration of calls made.


Beep durat. Activate/cancel the beep which sounds during a call at an interval set by the user (enter the interval - confirm by ).

**Expense (1)** Management of call charges.


Last call Cost of last charged call.

Credit Remaining credit in relation to **"Set Credit"**.

Cumul. cost Total cost of charged calls



Set Credit Maximum credit beyond which all charged calls are barred (enter credit - confirm by ).

Reset Reset the total cost of charged calls.

Unit value Cost of one telecom unit in the chosen currency (select the **"Others?"** option for another currency and press the  key to enter a decimal point).

 (1) Check the availability of this service with your operator.

## Forward (1)

-  **All** All your calls are forwarded. The  icon is displayed.
- Conditional** Calls are forwarded if the line is busy, the call isn't answered or the phone is out of range of the network.
- If busy** Calls are forwarded only if your line is busy.
- No reply** Calls are forwarded only if the call isn't answered.
- Unreach.** Only if the phone is out of range of the network.
- Data** Data calls are forwarded to the specified number.
- Fax** Fax calls are forwarded to the specified number.
- Status** List of call forwarding operations activated from this phone.
- Cancel All** Cancel all activated call forwarding.

## Calls

- Call wait (1)** Activate/cancel signalling of a second incoming call by a beep while you are in communication.
- Conceal ID (CLIR) (1)** Activate/cancel the option which makes your calls anonymous (your number is not transmitted by the network to the parties you call).



(1) Check the availability of this service with your operator.

**Caller ID (CLIP) (1)** Activate/cancel presentation of the caller's number (or name if it is stored in the directory) with every call.

### **Auto Redial (2)**

Activate/Deactivate Activate/cancel automatic call back if the first call was unsuccessful.

**Forbidden No** List of numbers for which automatic call back was unsuccessful (10 unsuccessful attempts).

**Reset** Reset the blacklist.

**Ntwk. Redial (1)** (Completion of Calls to Busy Subscribers) Automatic callback of the last dialled busy number.

## Call Barring

**Outgoing** Activate/cancel call barring. This option is applicable in the following cases:

 **Except Dir.** Calls to numbers not stored in your phone directories are barred.

 **All (1)** All outgoing calls are barred.

**International (1)** Outgoing international calls are barred.

**Exc.-> Home (1)** Outgoing calls except those to the subscription country are barred.



(1) Check the availability of this service with your operator.


(2) Depending on your product.


ExceptFDN (1) Calls to numbers other than the specific FDN directory (contained in the SIM card) are barred.

Activate/ Deactivate All calls which do not begin by one of the numbers stored in the "FDN" directory are barred.

Change If the "ExceptFDN" option is activated, you can update the "FDN" directory after entering PIN2 code (update "FDN" directory by pressing .

View View the list of FDN numbers.


 Exc. "Private" All calls other than those to numbers included in the "Private" family are barred.

 Exc. "Prof." All calls other than those to numbers included in the "Profession." family are barred.

 Exc. "Other" All calls other than those to numbers included in the "Other" family are barred.


**Incoming** Activate/cancel incoming call barring. This option is applicable to the following cases:


 Except Dir. All calls from a number not stored in your directories are barred.


 (1) Check the availability of this service with your operator.

 All (1) All incoming calls are barred.

If abroad (1) Incoming calls are barred if you are abroad.

 Exc. "Private" All calls other than those from numbers included in the "Private" family are barred.

 Exc. "Prof." All calls other than those from numbers included in the "Profession." family are barred.

 Exc. "Other" All calls other than those from numbers included in the "Other" family are barred.

**Status** List of call barring operations activated.



## Networks

**SMS CB (1)** Messages broadcast over the network (weather, traffic, etc.) are automatically displayed on the main screen.

CB list List of the message codes to be displayed:

Reception Depending on the selected option, the phone displays messages broadcast by the network.

 (1) Check the availability of this service with your operator.

Full	The phone permanently scans the network and displays received messages according to your list (see <b>"CB list"</b> option).
Limited	The phone intermittently scans the network and displays received messages according to your list (see <b>"CB list"</b> option).
None	The phone does not receive any messages.
<b>Searching</b>	Search for a home network.
Available	List of available networks in your radio environment.
Mode	Depending on the selected option, search mode is:
Automatic	First searched network is the last one used.
Manual	User chooses the network, from a list.
Preferred	List of networks for priority connection (update this list with  ).
Forbidden	List of forbidden networks (update the list with  .

## WAP

Direct access


Profile access (see page 87)

### 14.2 Clock

**Time/Date** Setting your telephone's date and time.

**Format** Date and time display format.

### 14.3 Languages (1)

Message display languages (select by pressing ). The **"Automatic"** option chooses the language of your SIM card (if it is available in the phone).

### 14.4 Dictionary (2)

There is a dictionary to which you can add your own words to those already contained in the assisted data entry system.

When you consult your dictionary, you can add, modify or delete words using the options available by pressing the  key.



(1) Depending on your product.



(2) Depending on your phone model and language.



## 14.5 Input mode

Access to different entry modes (1).

## 14.6 Display

**Backlight** Backlighting intensity (press  to adjust); we recommend using the minimum necessary intensity to save battery power. However, you can use the  key (long keypress) to activate the backlighting.

**Contrast** Display contrast (press  to adjust).

## 14.7 Pickup

**Pickup** Allows you to choose the way a call will be answered.

**Automatic** Automatically (without touching a key) after approximately 2 rings (this option is only available if your phone is connected to an audio accessory).



(1) Depending on the language.


Key = 

After pressing the  key.

Any key

After touching any key on the keypad (1 to #).

## 14.8 Automatic power off

**Power off** When this option is activated, the phone is automatically switched off if it is not used (i.e. no keypresses, no calls, no incoming messages) after an amount of time chosen by the user (enter the duration - confirm by ).

## 14.9 Double line management

This function allows you to move from line 1 to line 2 (1).

## 14.10 Keypad lock

**Keypad lock** When this option is activated, the keypad will be automatically locked (if you are not going to use your phone for a prolonged period of time).



(1) Check the availability of this service with your operator.

# 15

## WAP (1)

### 15.1 Accessing WAP Services (2)

 
WAP (Wireless Application Protocol) is a service that allows you to obtain information such as weather conditions, stock market averages, traffic conditions, etc.

You can access mobile Internet services from the main screen by pressing:

- the  key (long keypress)
- or  key and then selecting "Services"



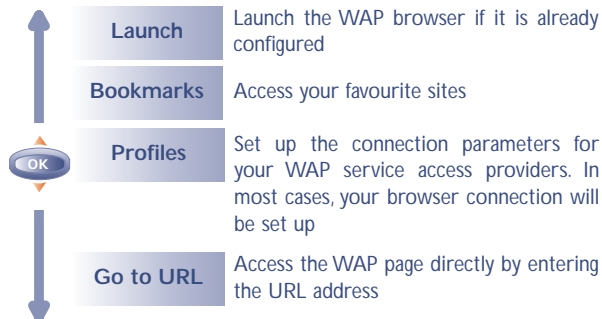

- (1) Check the availability of this service with your operator.
- (2) Depending on your phone model and the language.
- (3) Depending on the operator, this screen may not be displayed. (To switch between modes, see page 87).




### 15.2 Available options (1)


While viewing a WAP page, you can access a number of options by pressing either:

- the  key (long keypress)
- the  key (short keypress)



- (1) Depending on your phone model.


When browsing, you can exit the WAP mode anytime by pressing the  key.

...	Can be accessed from the current page
HomePage	Return directly to the home page
Enter address	Access a site directly by entering its address
Add bookmark	Add a favourite site to your bookmarks
Bookmarks	Access your favourite sites (bookmarks)
 Show URL	Display the address of the site you are currently visiting (1)
Connect. Status	Display the information bar for your Internet session (1)
Alert List	Display the list of your alerts (2)
Zoom	Change character size
Exit WAP	Finish consulting Internet services and return to the main screen
Back	Return to the previous screen

(1) Depending on your phone model.

(2) Check the availability of this service with your operator.

### 15.3 Setting up your access (1)

Select a profile from the list of profiles and access the following options by pressing the  key.

Launch	Launch WAP even if no profile is pre-selected
Activate	Select a preset profile and go back to the profile list (2)
Create	Create a new profile (3)
Modify	Modify the profile parameters (2)
Delete	Delete a profile that you created (2)
Back	Return to the previous screen

(1) Enter the information provided by your operator.

(2) Depending on the profile type.

(3) Depending on your phone model.

To create a new profile, you must fill in all of the following parameters (1) :

 
- Profile name
- Homepage
- IP address
- Security: Normal (port 9201)/Secure (port 9203)
- Access Type (Digital/Analogue)
- Login
- Password
- Access No.
- Transmission Speed (9600-14 400 bits/s)
- Validate

(1) Depending on the profile type.

## 15.4 Changing the WAP access mode (1)

By selecting **Setup/Services/WAP**, you can access a menu that allows you to modify the parameters to launch your browser:

- **Direct Access:** when you select Services/WAP from the main screen, your WAP homepage is automatically accessed.
- **Profile Access:** when you select Services/WAP from the main screen, the following screen is displayed:



(1) Enter the information supplied by your operator.

# 16

## GAMES



The game software programs built into your telephone have been designed and developed by Infogrames. They are covered by copyright laws. Any non-authorized reproduction of this software as well as any alterations to the copyright notices or other rights appearing on the software are categorically prohibited.

You can access the games from the MENU by pressing the  key.



You have the option of setting the parameters for the Games in the **“Config.”** option (keypad, sounds, difficulty...).

Starshot, a hero from deep space, travels throughout the galaxy to discover new entertainment. He is accompanied by his two faithful companions, Willfall (the little robot) and Willfly (the little rocket). Help him foil the traps set for him by the terrible Wolfgang.






## Killer Expo

While at the commands of the Willfly rocket, you must avoid obstacles encountered on Killer Expo planet and at the same time eliminate the enemies you cross at the 4 levels on the way to save Starshot.

To steer, use the  ↑,  ↓,  ←,  → keys.

To fire, use the  key.

During the game, you can display:

- Your position 
- Your result,
- Your shield points 
- Your life points 

Willfly's mission will be made easier if the many bonuses are collected: Weapon  , Shield  , Invulnerability  , Star  .  
Warning: some bonuses have been hidden by the scarry Wolfgang!

If you think you are the best, send your high scores to your friends. Your name will certainly be shown in their **“High scores”** tables (1).



 
(1) Requires the sending of SMS.

## Eyes & Stars

For this strategy game, you must align 4 pawns (horizontally, vertically or diagonally). Your opponent, over several rounds, is the terrible Wolfgang. You have the option of choosing your pawns to affront the enemy.

To align the pawns, use the  ↑,  ↓,  ←,  → keys.

To confirm the placement of a pawn, use the  key.



## Run run run

Saved by Willfly, Starshot must pass the platforms to get out of the labyrinth.



Starshoot can run on these platforms, climb up and down the ladders, hang and move along the cables, jump from one platform to the other and finally control the stars that he collected on the way in order to dig a hole to trap in his opponents.

Note: you must absolutely find the key to advance through the 7 steps of each of the 4 levels.

To guide yourself from one platform to the next, climb up and down the ladders, hang and move along the cables, use the  ↑,  ↓,  ←,  → keys.

To throw a star, jump from one platform to the other, use the  key.

During the game, you can display:

- Your result,
- Your star points ,
- Your life points .
- Key (when it is found)

If you think you are the best, send your high scores to your friends (1). Your name will perhaps be shown in their "High scores" tables.



(1) Requires the sending of SMS.

### 17.1 Warranty for the telephone

Congratulations for choosing this mobile phone - we hope that you will be totally satisfied with it.

Notwithstanding any other applicable statutory warranties, this mobile phone and the battery are guaranteed against any manufacturing defect for a period of ONE (1) year from the date of purchase shown on your invoice.

Nevertheless, if the statutory warranty in force in your country exceeds one (1) year, the statutory warranty will apply in place of the manufacturer's warranty. The present warranty terms also apply to the accessories but for a period of SIX (6) months from the date of purchase shown on your invoice.

Under the terms of this warranty, you must inform your dealer or any maintenance centre (see list of maintenance centres at our website - [www.alcatel.com](http://www.alcatel.com)) without delay of any defect and present the invoice given to you at the time of purchase.

The dealer will decide whether to replace or repair, as appropriate, all or any part of the equipment (telephone or accessory) found to be defective. This warranty covers the cost of parts and labour but excludes any other costs. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

Servicing under the terms of this warranty, especially repair, modification or replacement of parts shall entitle to a three month warranty unless there are statutory provisions to the contrary.

This warranty shall not apply to damage or defects (to your telephone and/or accessory) caused by:

- use not conforming with the instructions for use or installation,
- non observation of the technical and safety standards applicable in the country where the equipment is used,
- improper maintenance of batteries and other sources of energy, and of the overall electric installation,
- accidents or the consequences of theft, (of the vehicle), acts of vandalism, lightning, fire, humidity, infiltration of liquids, atmospheric influences,
- combination or integration of the equipment in hardware not supplied by the manufacturer unless the latter gave written, explicit consent for such,
- modifications, alterations, or repairs carried out by parties not authorised by the manufacturer or by the maintenance centre,
- use of the equipment for a purpose other than that for which it was designed,
- normal wear,
- deterioration caused by external causes (RF interference produced by other equipment, fluctuations in mains voltage and/or voltages on telephone lines, etc),
- modifications made to the equipment even if they are unavoidable due to changes in regulations and/or modification of network parameters,
- connection faults resulting from unsatisfactory radio transmission or caused by the absence of radio relay coverage.



Equipment on which markings or serial numbers have been removed or altered, and handsets on which labels have been removed or deteriorated shall be excluded from the warranty.

Apart from the statutory warranty, the above provisions constitute the only claims which can be made against the manufacturer and dealer on the grounds of equipment defects, this warranty excludes any other explicit or implied warranty associated with the sale of the equipment.



## CHARACTER SET



To enter a word, press the key which corresponds to the desired letter several times until the wanted letter appears.

	1	2	3	4	5	6	7	8	9	10	11	12
	┌	1	_	,	'	"	:	;	?	¿	!	i
	A	B	C	2	À	Ä	Æ	ç				
	D	E	F	3	É	Δ	Φ					
	G	H	I	4	Γ							
	J	K	L	5	Λ							
	M	N	O	6	Ñ	Ø	Ö	Ω				
	P	Q	R	S	7	ß	Π	Σ				
	T	U	V	8	ü	ø						
	W	X	Y	Z	9	Ξ	Ψ					
	+	0	•	-	#	/	%	(	)	<	>	
	*	=	@	\	~	€	\$	£	¥	&	\$	
	#	→										

┌ : space.

 


A short keypress on the  key will display the symbol bar with the cursor automatically placed on the “.”. The  key allows you to move from left to right.


	Up				Down				
	1	2	3	4	5	6	7	8	9
A	@	;	:	,	.	!	?	(	)
B	'	ı	ı	+	=	-	*	<	>
C	\	~	”	□	#	§		¥	฿
D	\$	€euro	£	%	&	—	/		

# 18 ACCESSORIES (1)


Alcatel latest generation of GSM mobile phones feature a built-in “hands-free” mode which enables use of the telephone at a certain distance, i.e. on a table. Users who wish to protect confidentiality of their conversations may use the headset accessory.

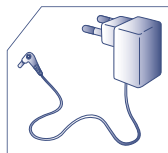


Charger  
C 55

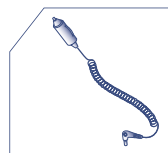 


Cigar lighter charger  
C 56

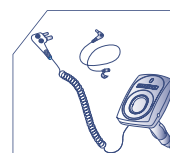 


Basic car kit  
MP 79

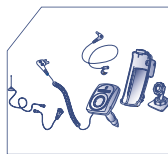 

 Easy-to-install hands-free car kit  
MP 81

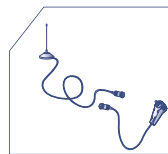

Antenna kit  
A 3

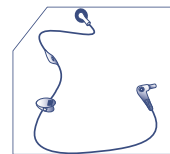 


Headset  
M 13




(1) Depending on your phone model and availability.



 
Only use your mobile phone with Alcatel batteries, battery chargers, and accessories that are compatible with your phone model.

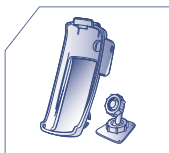


Basic cradle  
MP 80

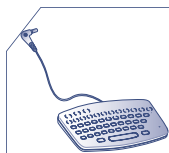 


SMS Keyboard  
KB 1

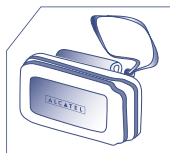 


Carrying case  
HC 26

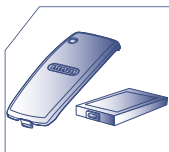 

Battery  
B 55

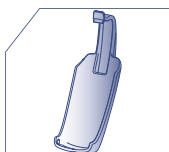 

Belt clip  
BC 11

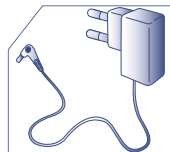 

Travel charger  
C 57



Online purchase: [www.alcatel.com](http://www.alcatel.com)



## TROUBLESHOOTING

We recommend that you carry out the following checks before contacting the Customer Care Service:

**My mobile phone is not on**

- Press the  key during at least two seconds
- Check your battery charge level

**The <<< >>>> symbol is displayed: my mobile phone is not connected to a network:**

- Try to reach the network by moving to a different location (if you are inside a building, stay near a window)
- Check your mobile coverage with your operator
- Make sure your SIM card is valid by checking with your operator

**SIM card error**

- Make sure the SIM card is correctly inserted
- Check with your operator that your SIM card is 3V compatible, former 5V SIM cards can no longer be used

**Outcoming calls cannot be made or no incoming calls are received**

- Make sure your mobile phone is connected to the network
- Check your subscription with your operator (credit, SIM card validity)

**I cannot create a file in my directory**

- Make sure your SIM directory is not full, if it is, delete some files or store them in the mobile directories (professional, private)

**I cannot access my voice mail**

- Make sure that your voicemail number is stored in the **"Numbers"** option

I cannot send messages

- Check the service centre number with your operator
- Your correspondent's phone could be incompatible with the transmission mode you are using (EMS standard for any transmission of icons, sounds,...)

My phone main screen displays a (black envelope) icon

- Too many short messages are stored in your SIM memory, delete some!

I already entered 3 incorrect PIN codes

- Contact your operator to get your PUK code to unblock your mobile

Notes...

Notes...

© ALCATEL BUSINESS SYSTEMS 2001.  
All rights reserved. Alcatel reserves the right to alter  
material or technical specification of its products  
without prior notice.

