

SIEMENS

Gigaset 3010 Classic



Operating Instructions

 
and Safety precautions 

General

Safety precautions

- Only use the **plug-type AC adapter supplied** as indicated on the underside of the unit.
- Never use ordinary (non-rechargeable) batteries. Only use **approved batteries of the same type** (rechargeable), as otherwise battery damage can result (dangerous), see the table on page 11.
- Medical equipment can be affected by the handset.
- The handset can cause an unpleasant humming sound in hearing aids.
- Do not install the base station in bathrooms or showers.
- Do not operate the telephone in environments where there is risk of explosion (e.g. paint shops).
- Dispose of batteries and the telephone in an environmentally friendly manner in accordance with the relevant legislation.
- Ensure that the operating instructions are included when passing on your Gigaset to a third party.

The handset's battery compartments feature the following diagrams:


 










Insert rechargeable batteries correctly in accordance with polarity symbols.



Operate battery type in accordance with these operating instruction.

 Displays

	Base station icon	P	Pause
	Charging status icon	R	System code
	Mailbox function: New number in the caller list	=	Blank
	Off hoo		Star key 
EXT	External connectio	-	Hash key 
INT	Internal connection	u	Recall key (Flash) 
—0	handset locked	P, n	Telephone PIN input
		≡≡≡	Keypad protection
		↑	Select from list using 
		↓	Select from list using 
		OK	 to confirm the selection

Gigaset 3000 Classic handset: brief overview

Base station icon

- **Constant:** ready for dialling/to receive
- **Flashing:** no base station contact

Speed dialling

Activate

Set key

- To save
- For settings

End call key

- End call
- **Handset on/off:** hold key down
- Cancel function

Recall key (Flash)

- For systems & select services
- **Pause:** hold key down



Charging status

- ☺ full
- ☹ empty

Redial a number

Make internal call

Talk key

- accept call
- dial call number


Keypad protection

on/off: hold key down

Delete characters

Display keys


 


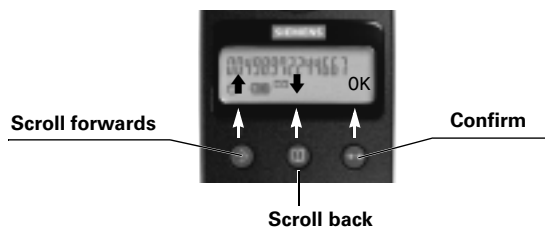






 













 


 














 




 

 
 
When icons are displayed above the 3 keys in the display, the meaning of these icons is as follows:



General

Quick reference guide

For information on handset settings, see overview on cover.

Function	Key combination
Activate/deactivate the handset	Hold down  for 1 second
Activate/deactivate keypad protection	Hold down  for 1 second
Answer a call	
Make an external call	 
Redial a number	 or  
Save a speed dial number	  e.g.      
Dial a speed dial number	  or e.g.  
Dial a number from call list	   
Set handset volume	    e.g.  
Mute microphone	 Microphone muted ;  Microphone on
Make an internal call	 e.g. 
Call all handsets	 
Transfer call (connect)	 e.g.  
Internal enquiry call	 e.g.  ; terminate enquiry call: 
Set date	    set the date 
Set time	    Set the tim 

General	2
Safety precautions	2
Displays	2
Gigaset 3000 Classic handset: brief overview	3
Quick reference guide	4
Preparing the telephone	8
Checking the package contents	8
Installing/connecting the base station	8
Inserting/charging the batteries	10
Attaching the belt clip	12
Activating/deactivating the handset	12
Activating/deactivating keypad protection	12
Making calls	13
Making an external call	13
Making an internal call	13
Answering a call	14
Displaying the incoming call number (CLIP)	14
Muting the microphone	14
Paging	15
Enhanced telephone features	16
Redial	16
Speed dialling	16
Caller list/mailbox function	18
Cost-effective telephoning	19
Network access support	19
Displaying the call duration	19
Individual handset settings	20
Setting the ringer volume	20
Setting the ring melody	20
Setting the handset volume	20
Activating/deactivating beeps	20
Activating/deactivating base station display	21
Auto talk	21
Resetting the handset to factory default	22
Registering at more than one base station	22
Changing the base station	22

Base station settings	23
Setting the date/time	23
Setting the ringer volume	24
Setting the ring melody	24
Activating/deactivating music on hold	24
Setting pauses	25
Resetting the factory settings	26
Handset security	27
Changing the telephone PIN	27
Activating direct station selection	27
Activating the telephone lock	28
Dialling an emergency number	28
Deactivating the telephone lock/direct station selection	28
Base station security	29
Changing the base station's system PIN	29
Activating/deactivating the base lock	29
Barring/enabling call numbers	30
Saving emergency numbers	31
Operating more than one handset	32
Registering additional handsets	32
Making an internal call	33
Forwarding a call	33
Internal enquiry call	34
Accepting call waiting	34
Collective call	34
Displaying the handset number	34
Open listening at the handset	35
De-registering handsets	35
Disabling external dialling from individual handsets	36
Connecting a fax/modem	36
Activating/deactivating the ringer	37
Setting ring delay/collective call	37
Connecting to a PABX	39
Setting the dialling mode	39
Switching to tone dialling	39
Saving a dial-out code	40
Pause after dial-out code	40

Appendix	41
Maintenance	41
Troubleshooting	41
Guarantee/service/approval	42
Index	44
Settings – overview	cover page

Preparing the telephone

Preparing the telephone

Checking the package contents

The package contains the following:

- one Gigaset 3010 base station
- one Gigaset 3000 Classic handset
- one plug-type AC adapter
- one telephone cord
- one belt clip for the handset
- two batteries
- one set of Gigaset 3010 Classic operating instructions

Installing/connecting the base station

Notes on installation



- The base is designed for operation **in protected rooms** with a temperature range from +5°C to +45°C.
- Install the base station in a **central location** in the flat/house, e.g. in the hall.



- Do **not** install the base station **in the bathroom**.
- Do not operate the handset in environments where there is risk of explosion, such as a paint shop.

Range

The base station range is approx. 300 m outdoors and up to 50 m indoors. The base station icon indicates whether radio contact exists between the base station and handset:



Base station icon is constant:

The handset is ready for dialling and to receive calls.



Base station icon flashes:

No radio contact between the handset and the base station - dialling or calling is not possible!


Preparing the telephone


Connecting the base station




Only use the plug-type AC adapter supplied as indicated on the underside of the base station.

1.

- Insert **small connector on telephone cord** into  jack (clicks into place)
- Place cord in cable duct
- Insert telephone jack into telephone socket

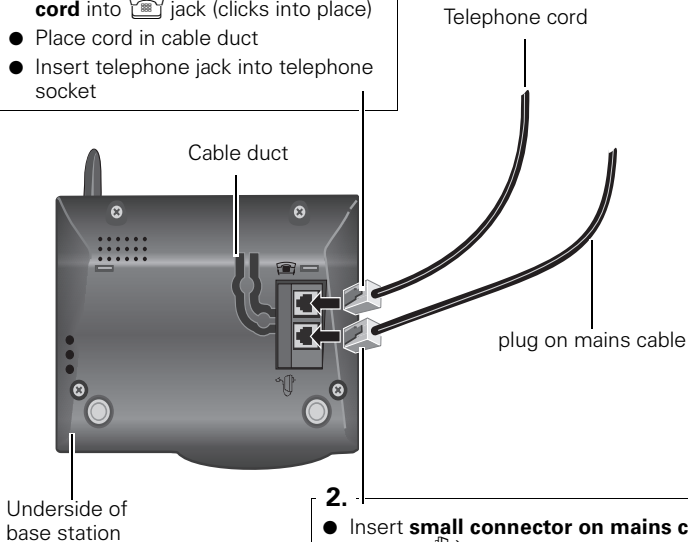

2.

- Insert **small connector on mains cable** into  socket
- Place cord in cable duct
- Insert AC adapter with plug into mains socket

Preparing the telephone

Inserting/charging the batteries




- The **handset** is already registered at the base station **when shipped**.
- For information on registering **additional handsets or replacement handsets** (after repairs), see page 32.

Inserting the batteries



- Never use ordinary (non-rechargeable) batteries. Only use **batteries that have been approved** (rechargeable), see table on page 11.
- Only use approved batteries of the same type.
- Never use non-Siemens charging units as these can damage the batteries.
- Please dispose of old, defective batteries in an environmentally-friendly manner.

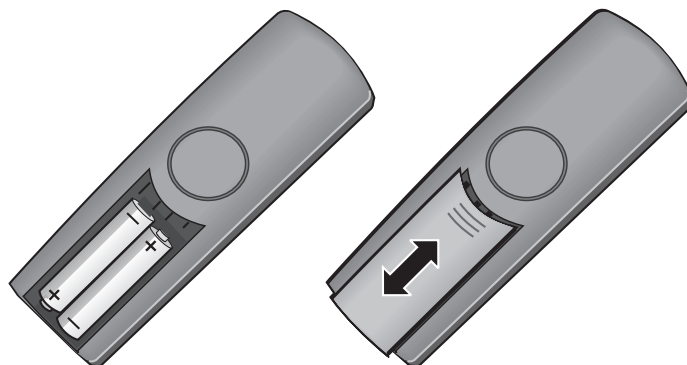

 

 

- Insert the batteries, ensuring **correct polarity** – see figure on left.
- Insert the cover approx. **3 mm into the battery compartment** and push gently **forwards** until it clicks into place.
- **To open** the cover, press the grooved area on the cover and slide **back**.

Preparing the telephone

Charging the batteries

The batteries supplied are **not charged**.

To charge the batteries, insert the handset in the base station or Gigaset 3000L charging unit (accessory) – you will hear the confirmation beep. The charging status icon flashes on the handset display to indicate that a charging operation is in progress:

 Batteries empty
  Batteries $\frac{2}{3}$ charged
 Batteries $\frac{1}{3}$ charged
  Batteries full



- We recommend initially charging the batteries for at least 16 hours without interruption – irrespective of the status shown on the charging status icon.
- Once the first charging operation is complete, you can replace the handset in the base station after every call. Charging is controlled electronically. This ensures optimum charging and prolongs battery life.
- The batteries heat up during charging. This is normal and not dangerous.
- The battery charging status is only correctly displayed after uninterrupted charging/discharging. You should therefore avoid opening the battery compartment unnecessarily.

Approved batteries:


Nickel-cadmium (NiCd)	Nickel-metal-hydride (NiMH)
Sanyo N-3U (700 mAh)	Sanyo H-3 U (1500 mAh)
GP GP60AAKC (600 mAh)	GP GP130 AA HC (1300 mAh)
Varta 751RS (700 mAh)	GP GP150 AA HC (1500 mAh)
Mobile Power 700 (700 mAh)	Varta VH 1101 or Phone Power(1000 mAh)
Panasonic 60 DT (600 mAh)	Panasonic HHR-110 AA (1100 mAh)
	Friwo NiMH (1400 mAh)
	Toshiba TH-1200 AARE (1200 mAh)

Handset operating time/charging time:

Capacity (mAh)	Standby time (hours)	Talktime (hours)	Charging time (hours)
700	up to 100	over 10	approx. 5
1100	up to 160	over 15	approx. 9
1500	up to 220	over 20	approx. 12

Preparing the telephone

Attaching the belt clip

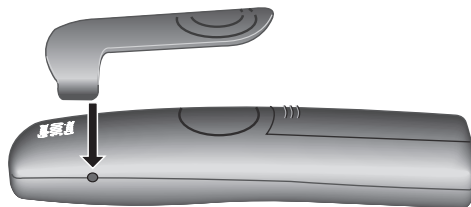

Press the belt clip onto the back of the handset until the side protrusions click into place in the holes provided.

Activating/deactivating the handset




Press the end call key for **1 second** – you will hear the confirmation beep*!



The handset activates automatically as soon as you insert the batteries and place it in the base station/charging unit.

Activating/deactivating keypad protection

You can deactivate the handset keys, e.g. when carrying the unit in your pocket or bag. This protects the keypad against inadvertent activation. Calls can be accepted with the talk key .



To activate/deactivate keypad protection, hold the key shown for **1 second** – you will hear the confirmation beep*!



Display when keypad protection is activated.

* 1 long tone = confirmation, 4 brief tones = error

Press keys:


Making calls

Making an external call

External calls are calls using an external line.



Enter the call number.

If necessary, correct it with the delete key .




 



Press the talk key to start the dial operation.



Ending a call:

Press the end call key.



- You can also **press the talk key**  **first** and then enter the call number – each digit is dialled immediately.
- You can **cancel the dial operation** with the end call key .
- You can insert a **pause** with the recall key  (hold key down).
- You can opt to **not save entries**, e.g. when controlling external telephone services: press the keys  , all numbers entered afterwards are **not** saved for number redial.
- Adjust the handset volume (even during a call), see page 20.

Making an internal call


You can conduct **internal calls with up to 6 handsets**.



Press the INT key – the handset's internal call number is displayed.

e.g.



Enter the internal call number of the handset you want to call.
Press  to call all handsets.




Ending a call:

Press the end call key.

Making calls

Press keys:

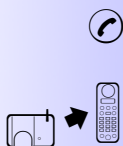

Answering a call

A call is signalled by the ringer.

Either press the talk key

or

if the auto talk feature is activated, remove the handset from its base station.

 


For information on setting the handset's handset volume (even during a call), see page 20.

Displaying the incoming call number (CLIP)

If calling line identification presentation (CLIP) is supported by the network carrier and you have subscribed to the service, the caller's number and **EXT** appear on the handset's display:

e.g.



or

--- and **EXT** if the number was not available or received or
 -----, if the number has been suppressed by the caller

or

the internal call number of another handset and **INT**.



Check with your dealer whether your 3010 base station is compatible with the CLIP function offered by the network provider in your country.

Muting the microphone

You can deactivate your microphone during external calls in order, for example, to talk privately to somebody in the room. The calling party cannot hear your conversation during this time.



Mute the microphone – the calling party on hold will hear music .




Re-activate the microphone.

Press keys:

Paging

- Press the **base station key** – all handsets ring.

Ending paging:

- Press the base station key again or press the talk key  on a handset.

Enhanced telephone features

Press keys:

Enhanced telephone features


Redial

Your handset automatically stores the last five call numbers dialed. You can dial, change, display and delete these numbers.

Redialling a number



Display call numbers – the last number dialed is displayed:

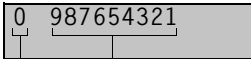e.g.  Call number
Memory location



Select a call number .



 
Press the talk key to start dialling.



- **Display keys** , see also page 3!
- **Modifying the call number displayed:**
 and supplement or press to correct.

Deleting all numbers

All **five redial numbers** are deleted.



Telephone PI



Initiate the function.

Enter the handset's telephone PIN and confirm (factory setting: 0000).

Delete all numbers.

Confirm the delete action and terminate the function.

Speed dialling

The speed dialling list simplifies dialling for up to 10 call numbers.



- Numbers can also be saved **during** a call!
- **Display keys** , see also page 3!

 
Enhanced telephone features

Press keys:



Saving/changing/deleting call numbers

Press the set key and then the speed dialling key – the entry for speed dialling number 1 is displayed:



e.g. or

Enter the speed dial number (digit **0** to **9**) or press to scroll to the speed dialling number you want to dial.



Confirm the selection.



Enter a new call number (destination) or change an existing call number. If necessary, delete the entire call number with .



Save the number – you will hear the confirmation beep.
To save additional numbers: press again, enter the speed dialling number and proceed as described above.



Terminate the function.

Speed dialling



Press the speed dial key.

e.g.

Enter the speed dial number (digit **0** to **9**) or scroll with .



Dial the call number.



Changing a speed dial number before dialling:

Confirm the number displayed with , change the number and dial with .

Saving a call number from the redial list



e.g. or

Press the set key followed by the speed dial key.



Enter the speed dial number (digit **0** to **9**) and confirm.



Select a call number in the redial list.



Save the call number (confirmation beep) and terminate the function.

Deleting the speed dial list

All numbers are deleted!

Initiate the function.

Telephone PI




Enter the handset's telephone PIN and confirm (factory setting: 0000).

Confirm the delete action and terminate the function.

Enhanced telephone features


Press keys:

Caller list/mailbox function

If transmitted, the call numbers for the **last 30 incoming calls** are stored in the caller list (CLIP, page14). **New entries** in the caller list are indicated by the  icon.


Dialling a number

Initiate the function – the following displays flash alternately:

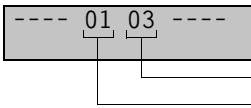e.g. 

Old entries
New entries

and the **call number of the 1st entry**:

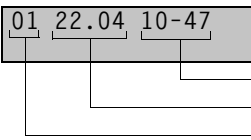e.g. 

Time
Date
Number of calls for the setting "un-answered calls" or number of the entry for the "all calls" setti



Scroll down to the required entry.



Dial the call number – the entry is deleted from the caller list and stored in the redial list.

Caller list settings

You can make the following settings:

- only **unanswered calls** are saved (factory setting) **or**
- **all incoming calls** are saved



This operation **deletes all entries**



Initiate the function.

e.g. 

For example, **all calls** are to be saved.

Unanswered calls = **1**, all calls = **2**



Saving settings and terminate the function.

Deleting the caller list

All entrie are deleted!



Initiate the function.

System PIN

Enter the base station's system PIN and confirm (factory setting: 0000).



Delete the caller list and terminate the function.


Press keys:

Cost-effective telephoning

Network access support

This function simplifies the dialling operation when using a telephone company **other than** your local telecom company.

● Using the speed dial key

- Save the call number of the telephone company as the speed dial number "0", see "Speed dialling" page 16.
- **Hold down the speed dial key**  to display the telephone company's call number saved as speed dialnumber "0".

Prerequisite: number is saved.



Hold down the speed dial key – the telephone company's prefix code is displayed.



Enter the user's call number.



Press the talk key and dial the **complete number**.

● By "linking" the speed dial list

You can **save** prefix codes for various telephone companies **as numbers** and use them as follows when dialling:



e.g.



Display the prefix code you want to dial.



Confirm the prefix code.



e.g.



Enter the user's call number from the speed dial list **or** enter it manually.



Press the talk key and dial the **complete number**.

Displaying the call duration



The handset automatically displays the current call duration.

Individual handset settings

Press keys:

Individual handset settings

Setting the ringer volum e

You can choose between **5 ringer volumes** (ringing) and the "**crecendo**" **ring** (increasing volume).



Initiate the function – you will hear the current ringer.



Enter the number of the required ringer volume.
Volume levels = **1 to 5**; crescendo = **6**



Save the setting.

Setting the ring melod y

You can choose between **10 ring tones**.



Initiate the function – you will hear the current ring.



Enter the desired ring tone (**0 to 9**).



Save the setting.

Setting the handset volum

You can set the **handset volume** (volume of the conversation) to any of **3 levels** – even during a call.



Initiate the function.



Enter the handset volume required (**1, 2 or 3**).



Save the setting.



Terminate the function (**do not press** this key during a call).

 
Activating/deactivating beeps

You can activate/deactivate the following warning and signal tones:

- **Confirmation beeps:** confirmation beep (1 tone) when you conclude inputs/settings; error beep (4 short tones) when you make an incorrect entry.
- **Key beep:** every keystroke is confirmed.
- **Battery warning beep:** the battery must be charged.

Individual handset settings

Press keys:



e.g. **0**

 


Activating/deactivating confirmation beeps

Initiate the setting.

For example, deactivate confirmation beeps.
Deactivate = **0**; activate = **1**

Save the setting and terminate the function.



e.g. **0**

 


Activating/deactivating key beep

Initiate the setting – the current setting is displayed.

For example, deactivate the key beep.
Deactivate = **0**; activate = **1**

Save the setting and terminate the function.



e.g. **0**



Activating/deactivating the battery warning bee

The battery warning beep is generated when the charging status of the battery in the handset falls below a predefined level.

 
Initiate the setting.

For example, deactivate the battery warning beep.
Deactivate = **0**; activate = **1**;
battery warning beep only during a call = **2**

Save the setting and terminate the function.

Activating/deactivating base station display

If the display is activated, the currently valid base station is displayed when the handset is idle, e.g. -1-.



e.g. **1**



 
Initiate the setting.

For example, activate the display.
Activate = **1**; deactivate = **0**

Save the setting and terminate the function.

Auto talk

When this function is active, you can answer a call by removing the handset from the base station/charging unit.



e.g. **0**



Initiate the setting.

For example, deactivate auto talk.
Deactivate = **0**; activate = **1**

Save the setting and terminate the function.

Individual handset settings

Press keys:



Resetting the handset to factory default

This setting does **not** delete the **telephone PIN**.
Base station registrations are maintained.

Handset factory settings:

Speed dial numbers, redial, hot key number	deleted
Handset volume, ring tone	1
Ringer volume	6
Auto talk, key beep, battery warning beep, confirmation beep	on
Base station display	off


Initiate the setting.

Enter the telephone PIN and confirm
(factory setting: 0000).

Reset settings to factory default and terminate the function.

Registering at more than one base station

You can operate your handset at up to **4 base stations**.

 For information on registration at **Gigaset 3010**, see page 32!

Changing the base station

Prerequisite: the handset is registered at several base stations.

You can choose one of the following:

- Set the handset to **automatically select** the best base (factory setting).
- Set the handset to **priority base station** – the handset searches for other base stations if this is not found within 30 seconds.
- Set the handset to **a fixed base station**.

Press the set key followed by the INT key.


For example, set Base 1 as the priority base.

For **automatic selection:** enter **0**.

For **priority base:** enter the base number **twice**.

For **fixed base:** enter the base number **once**.

Save the setting and terminate the function.

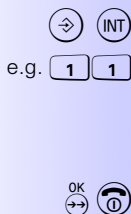

Press keys:

Base station settings

All base station settings are made **via the handset**.

 

Setting the date/time

Setting the date

The date setting is required to display the date on which the message was received by the caller list. (Used in conjunction with the CLIP function, page14)




Initiate the setting – the current setting is displayed; the current input position flashes:

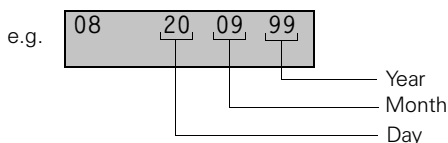

Enter the **day**.

 If necessary, press to jump back and start again.



Enter the **month**.



Enter the **year**.



 
 
Save the setting and terminate the function.

Setting the time

The time setting is required to display the time at which the message was received by the caller list. (Used in conjunction with the CLIP function, page14)




Initiate the setting – the current setting is displayed; the current input setting flashes:




Enter the **hours**.

 If necessary, press to jump back and start again.



Press for AM or for PM.

 

Enter the **minutes**.



 
Save the setting and terminate the function.



The date and time must be reset after a power cut or disconnecting the base station's AC adapter and plug.

Base station settings

Press keys:



e.g. **4**



Setting the ringer volume

You can choose between **5 ringer volumes**, the "**crescendo**" ring (increasing volume) and **ringer off**.

Initiate the setting – the ringer sounds, the current setting is displayed.

Enter the number corresponding to the required ringer volume.

Volume levels = **1 to 5**

crescendo = **6**

ringer off = **0**

Save the setting.



e.g. **3**



Setting the ring melody

You can choose between **10 ring tones**.

Initiate the setting – the melody sounds, the current setting is displayed.

Enter the desired ring tone (**0 to 9**).

Save the setting.



System PIN

e.g. **0**



Activating/deactivating music on hold

This refers to the music that the caller hears when placed on hold, e.g. during an internal enquiry call.

Initiate the setting.

Enter the base station's system PIN and confirm (factory setting 0000).

For music on hold.


Deactivate = **0**; activate = **1**

 
Save the setting.

Press keys:

Setting pauses

Pause after picking up an outside line

You can use this function to set the length of the pause that is automatically inserted after you press the talk key  and before the call number is transmitted.



Initiate the function.

System PIN 

Enter the base station's system PIN and confirm (factory setting: 0000).

e.g. 


Enter the pause length.

 
1 second = **1**; 3 seconds = **2**; 7 seconds = **3**;
2,5 seconds = **4**.



Confirm the setting and terminate the function.

Pause after the recall key

You can use this function to set the length of the pause that is inserted with the recall key  when dialling, e.g. specific international numbers.



Initiate the function.

System PIN 

Enter the base station's system PIN and confirm (factory setting: 0000).

e.g. 

Enter the pause length.

0.8 seconds = **1**; 1.6 seconds = **2**; 3.2 seconds = **3**



Save the setting and terminate the function.

Base station settings

Press keys:

Resetting the factory settings

When resetting the base station, the **system PIN is not changed** and handset registration is not affected. You can:

- reset **all** factory settings, see table below
- delete the **caller list** only

Base station factory settings:

Ringer volum	5
Ring tone	1
Disable/enable call numbers, base lock, automatic prefix	Off
Number for disabling/enabling, stored emergency numbers	Deleted
External dialling (all handsets)	Possibl
Dialling mod	DTMF, adjustable flash
Flash time	300 ms
Pause after recall key	800 ms
Pause after picking up line/ dial-out code	3 s



System PIN

0



Initiate the setting.

Enter the base station's system PIN and confirm (factory setting: 0000).

For example, reset setting to the factory default. Reset to factory default = **0**; delete caller list = **1**;

Confirm the delete action and terminate the function.

Press keys:




 
Handset security

You can change the telephone PIN, configure direct station selection or lock your telephone (handset).

 
Changing the telephone PIN

Important functions/settings are protected by the handset's telephone PIN (**P**ersonal **I**dentification **N**umber).

 **Do not forget your PIN!** The PIN can only be reset by calling the **Siemens hotline**, see page 42.



Initiate the function – the following appears:



Information on PIN input

Function code entered previously

Telephone PI 

Enter the current telephone PIN and confirm (factory setting: 0000).

2x new PIN

Enter the new telephone PIN twice (4 digits, a dash is deleted every time a digit is entered).



Confirm the new telephone PIN – you will hear the confirmation beep, the new PIN is saved.

 


Terminate the function.

Activating direct station selection

If direct station selection (DSS) is activated, **every keystroke** sets up a connection to the DSS number **stored**. This function can therefore be used to call for assistance.

DSS numbers can be stored, changed or deleted with the following steps.



Initiate the function.

TelephonePI 


Enter the telephone PIN and confirm (factory setting: 0000).



Press these keys.



Enter the DSS number.

If necessary correct or delete with .

Do not forget to enter the dial-out number at PABXs.

 
 
 


Save the number – you will hear the confirmation beep. **Direct station selection is activated.** The DSS number and **—0** are displayed.


Handset security

Press keys:



- If **no DSS number is stored** (display ) , then the telephone lock is activated after pressing  – display .
- **To deactivate direct station selection/telephone lock**, see below.

Activating the telephone lock

All functions with the exception of emergency call are unavailable when the telephone (handset) is locked. You can still be reached, however. Simply press the talk key  to accept a call.




Initiate the function.

Enter the telephone PIN and confirm (factory setting: 0000).



Activate the telephone lock.

Save the setting – you hear the confirmation beep  appears on the display.

Dialling an emergency number

Prerequisite: you have saved the emergency number in the base station, see page 31, and the handset is locked.



Press the talk key.

Enter the emergency number.

Deactivating the telephone lock/direct station selection



- **When direct station selection is activated the following steps must be carried out quickly** to avoid dialling the DSS number.



Initiate the function.

Enter the telephone PIN and confirm (factory setting: 0000).



Deactivate the telephone lock.

Save the setting and terminate the function.

Press keys:



Base station security

Changing the base station's system PIN



System PIN

Initiate the function.

Enter the current system PIN and confirm (factory setting: 0000).

2x new PIN

Enter the new system PIN (4 digits) twice.



Confirm the new base station PIN – when you hear the confirmation beep, the new PIN has been saved.



Terminate the function.

Activating/deactivating the base lock

Outgoing external calls are blocked **for all handset** when the base is locked.

Stored **emergency numbers** can be dialled.



System PIN

Initiate the function.

Enter the system PIN and confirm (factory setting: 0000).

e.g.

To activate the base lock.

Activate = **2**; deactivate = **0**



Save the setting and terminate the function.

Base station security

Press keys:

 
Barring/enabling call numbers

You can use this function to **bar specific call number**, e.g. all international numbers (00...). You can also specifically **enable these numbers**. Barring/enabling actions affect **all handsets**.

All external numbers dialled are checked. Dialling is cancelled and the barred digits are displayed if the call number matches the **barred number**. This does not happen if the **number is enabled**.


Saving/changing/deleting call numbers

You can save 5 numbers. The numbers can be displayed, changed, and deleted at any time.



Initiate the function.

Enter the system PIN and confirm (factory setting: 0000) – the first entry is displayed:

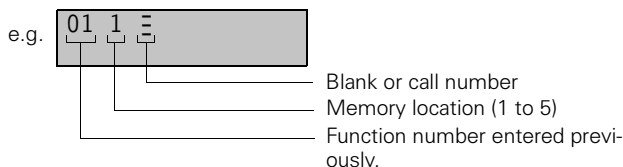

If necessary, press to scroll to the required entry (memory location).



Select the entry displayed.

 


Enter the call number, e.g. **00** to bar **international calls**, or change. If necessary, press to delete the number



Save the entry and terminate the function **and now activate barring/enabling** as described below.

Activating/deactivating call barring/enabling



Initiate the function.

Enter the system PIN and confirm (factory setting: 0000).



e.g. bar numbers.

Bar numbers = **1**;

Enable numbers = **3**;

Deactivate call barring/enabling = **0**



Save the setting and terminate the function.

Press keys:

Saving emergency numbers

You can save **4 emergency numbers**.
The emergency numbers are valid for **all handsets**.



An **emergency number can be dialled**, even if the telephone is locked.

Saving/changing/deleting emergency numbers

Initiate the function.

Enter the system PIN and confirm (factory setting: 0000) – the 1st entry is displayed:


e.g.



Blank or call number

Memory location (1 to 5)

Function number entered previously.

 
If necessary, press  to scroll to the required entry (memory location).

Select the entry displayed.

Enter or change the emergency number (up to 16 digits).

If necessary, press  to delete the number.

Save the entry and terminate the function.




System PIN



Operating more than one handset

Press keys:

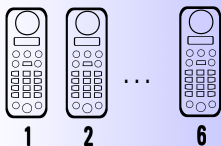

Operating more than one handset

Registering additional handsets

- You can register and operate up to **6 handsets** at your 3010 base station.
- A Gigaset 3000 Classic handset can be registered at up to 4 base stations.

Registering a Gigaset 3000 Classic handset

- The **handset** is already registered at the base station when **shipped**.



e.g. **1**

Initiate registration – the base station numbers are displayed.

Enter the **number of the base station** and confirm with .
Base station 1=**1**; base station 2=**2**;
Base station 3=**3**; base station 4=**4**

- Normally, enter **1** for base station 1 when registering for the first time. When registering the handset at additional base stations, e.g. at work, enter **2**, **3** or **4** as the number of the base station.

System PIN

Enter the base station's system PIN and confirm (factory status: 0000) – the base icon is flashing.

At base station

Press the base station key until a signal tone is generated at the base station (hold key down for approx. 10 seconds) – unassigned internal call numbers are displayed after a few seconds, e.g. 23456 (number 1 is assigned to the handset supplied).

e.g. **2**

Enter the **internal call number of the other handset** – the **stationary** base icon is displayed **if registration is successful** (stops flashing).

Your handset is ready for operation!

Operating more than one handset

Press keys:

At base station



● Registering Gigaset 1000/2000

For information on preparing these handsets, see the relevant operating instructions.

● Registering third-party handsets

Prerequisite: the non-Siemens handset complies with the **GAP** standard!

GAP (Generic Access Profile) is a European standard for the interaction of cordless telephones and base stations.

Refer to the operating instructions of the handset to be registered for information on how to register it at a **GAP base station**.

Preparing your base station for registration:

Press the base station key **until a signal tone** is given by the base station (hold down for approx. 10 seconds).

Your Siemens base station assigns the **first unassigned** internal call number to the handset on registration.

Making an internal call

Internal calls are conducted with your other registered handsets – free of charge





Press the INT key – the relevant internal call number is displayed.

e.g.



Enter the internal call number of the handset you want to call.

Press  to call all handsets 



Ending a call:

Press the end call key.

Forwarding a call

You can forward an external call to another handset. (connect).



Press the INT key – the external user hears music on hold.

e.g.



Dial the internal call number of the handset.



When the user answers:

Press the end call key to transfer the call.

Operating more than one handset

Press keys:



e.g.



Internal enquiry call

You are on a call with an external user. You can call another internal user for an enquiry call without clearing down the initiated connection. You are automatically reconnected to the external user when you end the enquiry call.

The external user (call) is placed on hold and can hear music on hold.

Dial the internal number of the handset you want to call. Press to call all handsets.

End the enquiry call to revert to the caller placed on hold.

Accepting call waiting

The call waiting tone (1 brief tone) is generated when you receive an external call while conducting an internal call; **EXT** flashes on the display.



Press the end call key – the **internal call is cleared down**. Wait for the external call (auto talk).



Answer the external call when the handset rings.

or



Press the recall key – the **internal call is cleared down** and you are immediately connected to the external caller.

Collective call

All handsets are called and ring. You can accept the call at any handset by pressing the talk key .



Press the INT key.



Press the display key – all available handsets are displayed. The busy tone is generated if there is no available handset.

Displaying the handset number



Press the INT key – the handset's internal call number is displayed.



Ending the display:
Press the end call key.

Operating more than one handset

Press keys:

Open listening at the handset


Prerequisite: at least 2 handsets are registered.

You can use this function to listen in on an external call at another handset.

You are conducting a call with an external user:

The call is placed on hold.

e.g.  

Enter the call number of the other handset – the other handset rings, the other internal user presses the talk key .


 

You are reconnected to the external user. The other internal user can hear the conversation.

Deactivating open listening:

The external connection is not affected, the internal user hears the busy tone.

 The internal user can terminate open listening by replacing the handset.

De-registering handsets

A handset that has been de-registered from a base station (e.g. to protect against unauthorised use) cannot be used to make calls at this base station.

System PIN 

Initiate de-registration.

Enter the system PIN and confirm (factory setting: 0000) – the numbers of all registered handsets are displayed.

e.g. 

Enter the internal call number of the handset **to be de-registered** (number is no longer displayed).

Confirm de-registration.

Operating more than one handset

Press keys:



System PIN

e.g.

e.g.



Disabling external dialling from individual handsets

The factory setting permits you to make external calls from each registered handset. You can use the disabling function to **prevent external numbers** being dialled from **individual handsets**.

You can use "blocked" handsets to:

- make internal calls
- accept external calls
- dial the emergency numbers saved at the base station (see page 28).

Initiate the setting.

Enter the system PIN and confirm (factory setting: 0000) – the numbers of all registered handsets are displayed.

 
Enter the internal call number of the **handset to be disabled**.

For example, deactivate external dialling (block).
Deactivate = **0**; activate = **2**

Save the setting and terminate the function.

Connecting a fax/modem

You can register fax machines, modems and "stationary" telephones at the base station in the same way as a handset via a cordless **Gigaset 1000 TAE** connector. To do this, you must modify the **device type for the Gigaset 1000 TAE** as described below:



System PIN

e.g.

e.g.



Initiate the function.

Enter the system PIN and confirm (factory setting: 0000) – all registered handsets are displayed.

Enter the internal call number of the TAE.

 
Set the device type.

"stationary " telephone/handset = **1** (factory setting); fax = **2**; modem = **3**

Save the setting and terminate the function.

Operating more than one handset

Press keys:




System PIN

e.g. DEF 3



Activating/deactivating the ringer

All handsets ring immediately to signal an incoming external call – collective call (factory setting). The calls can be accepted at all handsets by pressing the talk key .

However, you can **deactivate** the ringer on **individual handsets** – these handsets will no longer ring when external calls are received.

Initiate the setting.

Enter the system PIN and confirm (factory setting: 0000) – all handsets **with ringer on** are displayed.

Enter the internal call numbers of the handset:

- call number is **displayed** = ringer **on**,
- call number is **not displayed** = ringer **off**.

 
Save the setting and terminate the function.

Setting ring delay/collective call

You can use this function to switch from collective call (factory setting) to ring delay. When ring delay is switched on, external calls are signalled first at the priority handset:

- If **collective call** is activated, **all handsets ring immediately** when external calls are received
- If **ring delay** is activated, calls are signalled first at the **priority handset** and then at the other handsets after a pre-determined number of rings. The priority handset and the ring delay (number of rings) must first be defined.

Setting the ring delay/collective call



System PIN

e.g. ABC 2



Initiate the setting.

Enter the system PIN and confirm (factory setting: 0000).

 
e.g. set the ring delay.

Collective call = **1**; ring delay = **2**

Save the setting and terminate the function.

Operating more than one handset

Press keys:



Setting a priority handset

The handset with 1 as call number is automatically the priority handset – and rings first (factory setting).

You can set any **other handset** as the **priority handset**:

Initiate the function.

Enter the system PIN and confirm (factory setting: 0000) – the priority number is displayed.

Enter the call number of the **priority handset**.

Save the setting and terminate the function.

Setting ring delay

You can set the **number of rings** allowed before the call is signalled at the **other handsets**.

Initiate the function.

Enter the system PIN and confirm (factory setting: 0000) – the current setting is displayed, e.g. 3.

Enter the number of rings.

The call is signalled at the telephone after: 2 rings = **2** to 9 rings = **9**

Save the setting and terminate the function.

Press keys:

Connecting to a PABX

Setting the dialling mode

Only necessary if your PABX does **not** operate with **DTMF** (dual-tone multifrequency signalling), and flash – see the operating instructions for your PABX.

Options:

- DTMF, adjustable flash time
- DP (dial pulsing)

Setting the dialling mode:


Initiate the function.

Enter the system PIN and confirm (factory setting: 0000).

Set the dialling mode.

DTMF, adjustable flash time = **2**; DP = **4**

Save the setting and terminate the function.

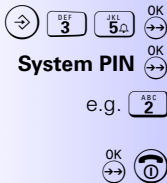

Setting the flash time

Prerequisite: you switched to DTMF, adjustable flash time as described but your PABX requires a different flash time.


Initiate the function.

Enter the system PIN and confirm (factory setting: 0000).

Set the flash time.

80 ms = **1**, 100 ms = **2**, 120 ms = **3**, 180 ms = **4**,
250 ms = **5**, 300 ms = **6**, 600 ms = **7**

Save the setting and terminate the function.

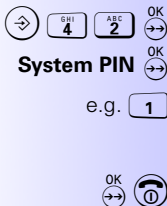

Switching to tone dialling

If you are operating the base station at a PABX with dial pulsing (DP), you can switch to tone dialling (DTMF), for example to check an answering machine.

Prerequisite: a connection is active.


Press the set key.

Activate tone dialling – tone dialling is active until the call is cleared down.



Connecting to a PAB

Press keys:

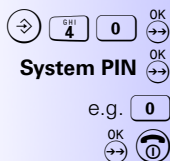

Saving a dial-out code

Prerequisite: a dial-out code must be dialled before the actual call number on all external calls.

The dial-out code is also known as a **prefix code or system code (SC)**.



- Please note that the dial-out code must be entered when saving **emergency numbers, call numbers for the speed dialling list** and **network provider prefix numbers**.
- Since an **emergency call cannot** be made with the emergency numbers you should **re-save** the emergency numbers with the dial-out code for security reasons.
- The **dial-out code** that you save "here", is always automatically inserted before the call numbers in the caller list and dialled.

Initiate the function.

Enter the system PIN and confirm (factory setting: 0000).


Enter the dial-out code (up to 3 digits) or change.

Save the setting and terminate the function.

Pause after dial-out code

Prerequisite: you have saved a dial-out code and would like to change the default pause.

The pause set here is always inserted by the base station after the dial-out code. For information on whether and how long this pause must be, see the operating instructions for your PABX.

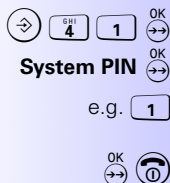

Initiate the setting.

Enter the system PIN and confirm (factory setting: 0000).

Enter the pause length.

1 second = **1**; 2 seconds = **2**; 3 seconds = **3**; 6 seconds = **4**

Save the setting and terminate the function.

Appendix

Maintenance



 


- Simply wipe the base station and handset with a damp cloth or an antistatic wipe. **Never** use a dry cloth as this can cause static discharge.

Troubleshooting



Resetting the handset factory settings, see page e22.

Resetting the base station factory settings, see page e25.

Fault	Possible cause	Solution
No display	Handset not activated	Hold down the end call key  for 1 second
	Batteries flat	Charge the batteries.
No reaction to key-stroke	Keypad protection activated	Hold down the  key for 1 second
No radio connection to the base station –  flashing!	Handset outside the base station range	Move closer to the base station
	Handset not registered	Register the handset (page 32)
	Base station not activated	Check the connector at the base station (page 9)
Handset does not ring	Ringer off	Activate the ringer (page 37)
External call numbers cannot be dialled	Base lock activated	Deactivate lock (page 29)
	Handset lock activated	Deactivate lock (page 28)
	Call number matches a barring code	Barring codes (page 30)
	External dialling disabled	Disable external dialling (page 36)
The called party cannot hear	The  was pressed – the microphone is switched off.	Press  to activate the microphone

Appendix

Fault	Possible cause	Solution
The caller's number is not displayed	Call number not transmitted	Request call number transmission feature from telephone company

Guarantee/service/approval

Guarantee

Over a guarantee period of six months from the date of purchase from the stockist, Siemens AG will rectify all material or manufacturing defects by repairing or replacing the defective terminal.

The guarantee shall not cover damage caused by improper use, wear and tear or third party access. The guarantee shall not cover consumables or defects which only slightly decrease the value or serviceability of the device.

Service

Service contact:

Country	Service phone number	Country	Service phone number
Argentina	0800-888-9878	Lithuania	822391555
Austria	051707-5004	Luxem- bourg	43843399
Belgium	078152221	Netherlands	0703333100
Brazil	0800169001	Norway	22708400
Bulgaria	02739488	Poland	0800220990
Croatia	016105381	Portugal	014178393
Czech Republic	0224199259	Russia	0957372968
Denmark	35258600	Singapore	8454818
Finland	0922943700	Slovak Republic	0759682266
France	0156384200	Slovenia	0611746333
Germany	01805333222	South Africa	6523800
Greece	016864389	Spain	902115061
Hong Kong	22583636	Sweden	087509911
Hungary	0614572444	Switzerland	012120090
Iceland	5113000	Taiwan	0225186504
Ireland	1850777277	Turkey	08002116223-24
Italy	0269893691	United Kingdom	0990334411
Latvia	7501114		



Siemens Service should only be contacted if problems arise with the unit. Your specialist dealer will be happy to answer any questions on unit operation. Contact your network provider for questions concerning telephone connections.

Approval

Gigaset 3010 Classic has been approved for operation in your country, as shown on the underside of the base station.

European approval:

The Gigaset 3010 Classic is approved acc. I-CTR37 for use within the European Economic Area (EEA).

Note for approval in compliance with I-CTR 37: (extract from the I-CTR 37 - Annex II). The equipment has been approved pursuant to Commission Decision 1999/303/EC for pan-European connection to the public switched telephone network (PSTN). However, due to differences between the individual PSTNs provided for in different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN network termination point.

In the event of problems, you should contact your equipment supplier in the first instance.

Index

Index

A

- Activating
 - battery warning beep 21
 - beeps 20
 - confirmation beep 21
 - handset 12
 - key beep 21
 - keypad protection 12
 - music on hold 24
 - telephone lock/direct station selection 28
- Approval 43
- Auto talk 21
- Auto talk (automatic) 21

B

- Base lock, activating/deactivating 29
- Base station
 - activating/deactivating music on hold 24
 - changing 22
 - connecting 9
 - installing 8
 - resetting the factory setting 25
 - setting pauses 25
 - setting the date 23
 - setting the ring melody 24
 - setting the ringer volume 24
 - setting the time 23
- Batteries, inserting and charging 10
- Battery warning beep 20
- Beeps
 - battery warning beep 20
 - confirmation beeps 20
 - key beep 20
- Belt clip 12
- Brief overview
 - handset 3

C

- Call duration, displaying 19
- Call numbers, barring/enabling 30
- Call waiting
 - accepting a call 34
- Call, connecting 33
- Caller list 18
- Calls
 - external 13
 - internal 33
- CLIP (call number display) 14

- Collective call 34
- Collective call/ring delay, setting 37
- Confirmation beeps 20
- Connecting 33
- Contents of the package 8

D

- Deactivating
 - battery warning beep 21
 - beeps 20
 - confirmation beep 21
 - handset 12
 - key beep 21
 - keypad protection 12
 - music on hold 24
 - telephone lock/direct station selection 28
- Direct station selection 27
- Display (symbols/keys) 2, 3
- DP (dial pulsing) 39
- DTMF (dual-tone multifrequency signalling) 39

E

- Emergency number
 - dialling 28
 - saving 31
- Enquiry call (internal) 34
- Error beep 20

F

- Fault clearance 41
- Fax/modem, connecting 36
- Flash time 39
- Forwarding 33

G

- GAP standard 33
- Guarantee 42

H

- Handset
 - activating/deactivating 12
 - activating/deactivating base station display 21
 - changing to another base station 22
 - de-registering 35
 - disabling external dialling 36

Index

displaying an internal number 34
preparing 10
registering additional handsets 32
registering at more than one base station 22
resetting the factory settings 22

Handset lock
activating 28
deactivating 28

Handset settings (overview) 4
Handset volume, setting 20

K

Key beep, activating/deactivating 21
Keypad protection 12

M

Mailbox function 18
Making calls
answering calls 14
external 13
internal 33
Making external calls 13
Malfunctions (troubleshooting) 41
Microphone, muting 14
Modem/fax, connecting 36

N

Network access 19

O

Open listening 35

P

PABXs
flash time 39
saving a dial-out code 39
saving a pause after a dial-out code 40
setting the dialling mode 39
switching to tone dialling 39
Paging (searching for handsets) 15

PIN, changing
base station PIN 29
handset PIN 27

Q

Quick reference guide 4

R

Range 8
Redial 16
Ring tone, setting 20
Ringer 37
Ringer volume, setting 20
Ringer, activating/deactivating 37

S


Safety precautions 2
Saving
emergency number 28
speed dial number 17
system PIN 29
telephone PIN 27
Service 42
Settings
base station ring melody 24
base station ringer volume 24
date 23
handset ring tone 20
handset ringer volume 20
handset volume 20
pauses 25
time 23
Settings - overview, Cover
Speed dialling 16

T


Telephone lock 28
Telephone maintenance 41
Tone ringer 37
Troubleshooting 41

Settings – overview

Handset settings

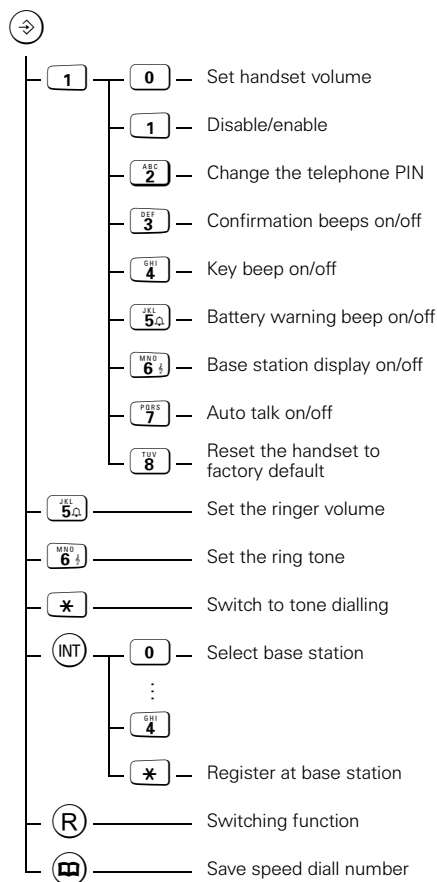

Base station settings

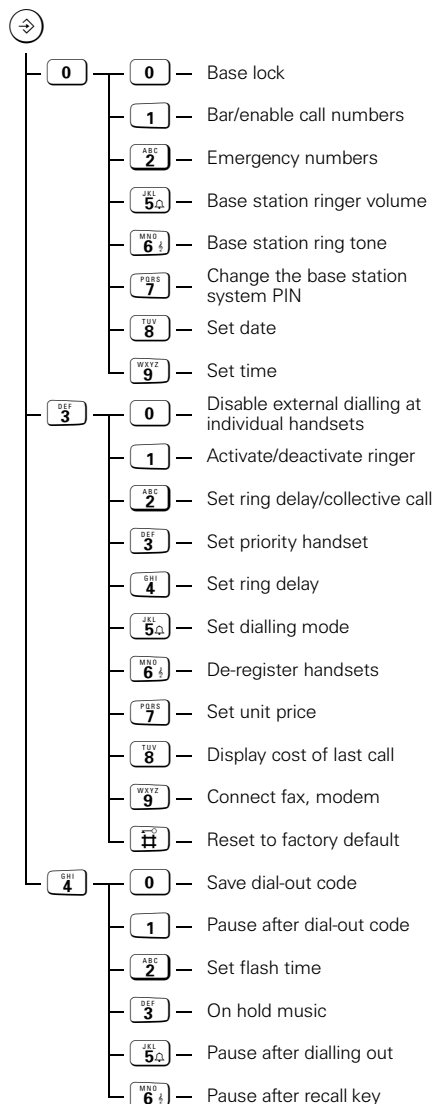

Issued by
Information and Communication Products Group
Hofmannstraße 51, D-81359 München

© Siemens AG 1999. All rights reserved.
Subject to availability.
Right of modification reserved.

Siemens Aktiengesellschaft

Reference no.: A31008-G3010-U001-1-5819
Printed in Germany
09/99

Internet: <http://www.siemens.com/gigaset>