


SIEMENS

Be inspired







 





 


 



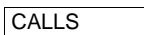
 




 

 


 
 





 

 
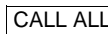

 


 
 


 



 



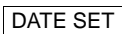
 



 

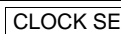

 
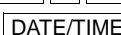
 



 
 
Operating instructions

and safety precautions 

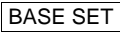General

Quick reference guide

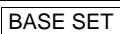Handset

Activate/deactivate the handset	hold down 
Activate/deactivate the keypad protection	hold down 
Activate/deactivate tones	hold down 
Make an external call	
Redial a number	 If applicable,  select an entry 
Copy telephone number to the directory	   
Dial with the directory	  [Name] and/or  
Dial with the caller list	    if necessary  
Set the handset volume	       
Make an internal call	 e. g.  or    
Call all handsets	  or   
Transfer call to another handset	 e. g.  
Internal enquiry calls	 e. g.  ; End:   
Set the date	        
Set the time	         
Set the alarm clock	    Enter the alarm call 

Brief overview of the handset

Status LED (li.-em. diode)

- lights up during a call;
- flashes at:
 - incoming call
 - new messages
 - alarm call

Talk key

- answer a call
- dial a telephone number

Directory key

- Open the directory

Key 1

- Hold down to select the mailbox

Asterisk key

- Hold down to activate/deactivate the ringer

Recall key

- Pause (hold key down!)
- R key function (flash)

Microphone

Charg. status

Display (display field)

Current display and display keys

see below!

End call key and On/Off key

- end the call
- cancel function
- one menu level back (press briefly)
- Return to idle state (hold down)
- when the telephone is idle on/off (hold down!)

Pound key

- Hold down to activate/deactivate keypad protection

Sel Services key

- Open the network access list

Display and display keys

Time

Internal telephone number

Asterisk

- The asterisk indicates that the alarm clock is set.

Charging status

- ☐ battery empty
- ☐ battery fully charged
- flashes: when empty



Display keys:

- Press the corresponding keys to initiate the function shown in the display




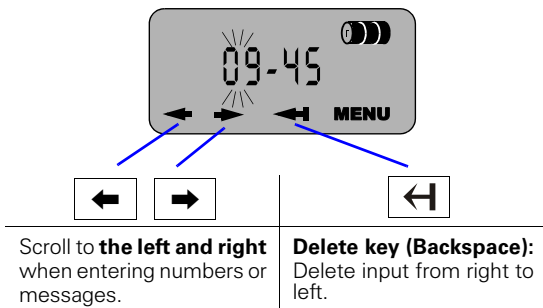
General

Display symbols

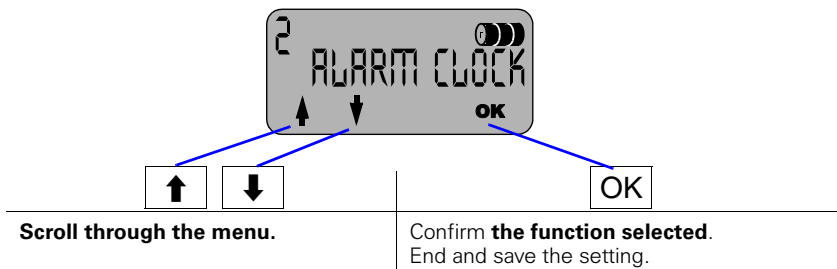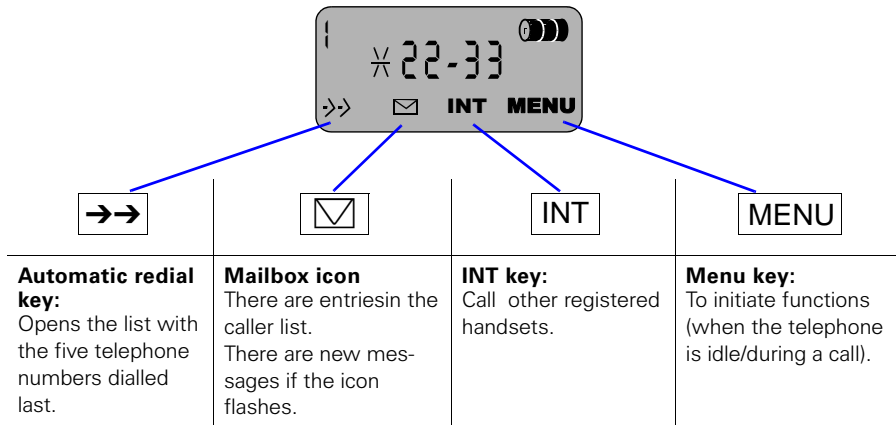

Then:

Press  **briefly:** 1 menu level up
hold down : Return to the idle state
No input: Automatically to the idle state



Contents

Quick reference guide	II
Brief overview of the handset	III
Display and display keys	III
Display symbols	IV
Safety precautions	4
Preparing the telephone	5
Installing the base station	5
Operating the handset	7
Attaching the belt clip	8
Activating/deactivating handset	8
Activating/deactivating keypad protection	8
Date and time	9
Setting the date and the time	9
Setting the alarm clock	10
Making calls	12
Making an external call	12
Internal dialling	12
Answering a call	13
Displaying telephone numbers (CLIP)	13
L Muting the microphone	14
Mailbox	15
Enhanced telephone features	16
Automatic redial	16
Directory and network access list	17
Character map	18
Caller list	21

For further information please refer to the index – → page 62!

Mailbox features	24
Functions before a call24
Functions during a call26
Callback when busy27
Making cost-effective calls	28
Network access list (call-by-call)28
Automatic preselection30
Setting call charges33
Registering and de-registering handsets	35
Automatic registration35
Manual registration36
De-registering handsets37
Operating several handsets	38
Changing the name of a handset38
Changing a handset's internal number39
Making internal calls39
Connecting a call40
Internal enquiry calls41
Accepting or rejecting a waiting call41
Joining in a call ("barging in")42
Deactivating the ringer43
Individual handset settings	44
Changing a handset's display language44
Modifying the volume and changing the melody45
Activating/ deactivating Auto talk46
Resetting a handset to the factory setting46
Base station settings	47
Changing the system PIN47
Modifying volume and melody48
Repeater support49
Resetting the base station to the factory setting50

Connecting the base station to a PABX	51
Dialling mode and flash time	51
Switching temporarily to tone dialling	52
Setting pauses	52
Appendix	53
Maintenance	53
Troubleshooting	53
Guarantee	55
Service:	55
Technical data	56
Menu table	58
Accessories	60
Index	62

Safety precautions

Congratulations



on your Siemens Gigaset!

The following pages describe how your telephone works, so that you will be able to use it easily.

Safety precautions



Only use the power supply unit supplied, identified by the symbol  on the underside of the device.



Only use **approved rechargeable batteries of the same type**. Never use ordinary (non-rechargeable) batteries. Otherwise health risks and personal injuries cannot be excluded.



Insert rechargeable batteries in accordance with polarity symbols (this instruction is found in the handset's battery compartments).



Use the batteries indicated in these operating instructions (this instructions is found in the handset's battery compartments).



Medical equipment can be affected by the use of the telephone. Observe the conditions in your environment (e.g. doctor's practice).



The handset can cause an unpleasant humming sound in hearing aids.



Do not install the base station in bathrooms or showers.



Do not operate the telephone in environments where there is risk of explosion (e.g. paint shops).



Ensure that the operating instructions are included when passing on your Gigaset to a third party



Dispose of batteries and telephone in an environmentally friendly manner.



Not all functions described in these operating instructions are available in all countries.

Preparing the telephone



 
The package contains the following:

- one base station,
- one Gigaset 4000 Classic handset,
- one power supply unit,
- one telephone cord,
- one belt clip for the handset,
- two batteries,
- one set of operating instructions.

Installing the base station

Notes on the installation

The base station is designed for operation in protected rooms with a temperature range from +5 °C to +45 °C. Install the base station in a central location in the flat/house e. g. in the hall.



Range

The base station range is approx. 300 m outdoors and up to 50 m indoors.

Preparing the telephone


Connecting the base station


for the analogue network:

Power supply unit
(220/230 V with
mains cable)

Telephone jack with telephone cord
(type varies depending on country!)


1


- Insert **the small plug on the mains cable** into  jack,
- place cord in cable duct,
- insert power supply unit into mains socket.

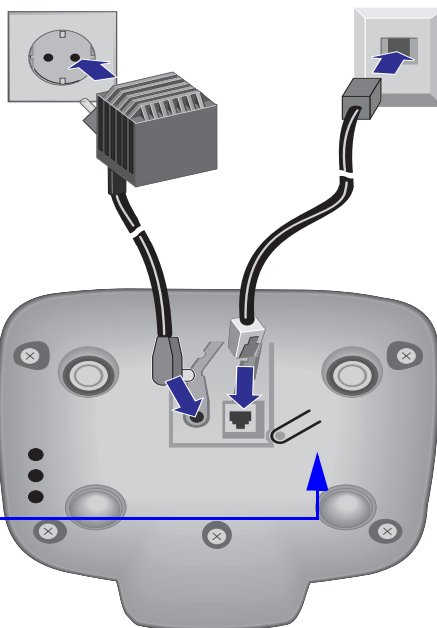

Key to register
additional hand-
sets

2

- Insert **small black plug on the telephone cord** into  jack (clicks into place),
- place cord in cable duct,
- insert telephone jack into tele-
phone socket.

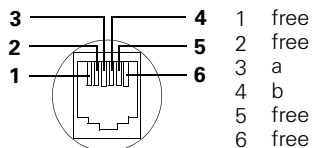

- **Only use the power supply unit supplied** as indicated on the underside of the device.
- **If you buy another cord, ensure that it has 3-4 assignment (terminal assignment).**



Exercise caution when using a new telephone cord. Only use the cord provided.


Preparing the telephone

Operating the handset

The display is protected by a plastic film.
Remove the protective plastic film!




Inserting the batteries

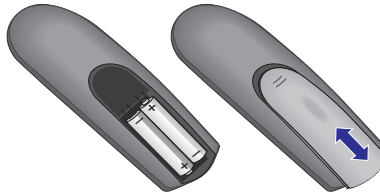

- Insert the batteries **ensuring correct polarity** – see figure on left.
- Replace cover and push gently **upward** until it clicks into place.
- **To open**, press the grooved area on the cover and slide **back**.



 - Only insert the recommended rechargeable **batteries** (see page 56). Never use ordinary (non-rechargeable) batteries or health risks and personal injuries cannot be excluded.
- Never use non-Siemens charging units as these can damage the batteries.



Placing the handset into the base station and charging the batteries

Before activating your handset, place it in the base station with the display facing upward. After approx. one minute, the handset's internal number is displayed (e.g. "INT 1").



For information on how to register **further handsets** (bought additionally), see page 35.



Leave the handset for approx. five hours in the base station to charge the batteries. The charging status icon flashes on the handset indicating that the batteries are being charged:

- | | | | |
|--|------------------------------|--|---------------------|
| | Batt. empty (symbol flashes) | | Batt. 2/3 charged |
| | Batteries 1/3 charged | | Batt. fully charged |

Note:


Your Gigaset is now ready for operation. Please set date and the time (see page 9), so that the time of incoming calls can be noted correctly.

Preparing the telephone



- Once the initial charging operation is completed you can replace your handset into the base station after each call. Charging is controlled electronically. This ensures optimum charging and prolongs battery life.
- The batteries heat up during charging. This is normal and not dangerous.
- The battery charging status is correctly displayed only after uninterrupted charging/discharging. You should therefore avoid opening the battery compartment unnecessarily.

Attaching the belt clip

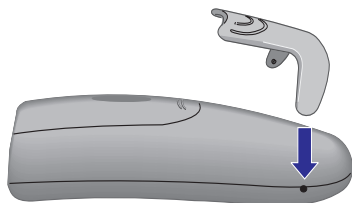

Push the belt clip onto the back of the handset until the side protrusions click into place.

Activating/deactivating handset



To activate/deactivate, **hold down** the end call key – You will hear the confirmation beep*.




The handset is activated as soon as you insert the batteries and place the handset in the base station.

Activating/deactivating keypad protection

You can disable the handset keys when carrying the unit in your pocket or bag. This protects the keypad against inadvertent activation.

If there is an incoming call, the key lock is automatically deactivated and re-activated after the call has ended.

Accepting a call: Press the talk key .



To activate/deactivate, **hold down** key – you will hear the confirmation beep*.

* Confirmation beep = rising tone sequence,
Error beep = falling tone sequence.

Press keys:



MENU

↓ BASE SET OK
 ↓ CLOCK SET OK
 ↓ DATE SET OK

e. g. 2^{ABC} 0+ 0+ 5^{JKL} 0+ 1^{ABC}

← →

OK

MENU

↓ BASE SET OK
 ↓ CLOCK SET OK
 ↓ DATE/TIME OK

e. g. 1^{ABC} 9^{WXYZ} 0+ 5^{JKL}

← →

OK

AM OK

or ↓ PM OK

OK

Date and time

Your Gigaset has an alarm clock function to help you keep track of your schedule.

Setting the date and the time

The date and time setting is necessary in order for the date and time of the arrival of messages/incoming calls to be displayed correctly.

You can also set the clock mode, i.e. 12 h mode (**AM** and **PM**) or 24 h mode.

Date

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

The current setting is displayed in the DD-MM-YY mode.

Enter the day/month/year (e.g. 20.05.2001 as shown).

If necessary, jump to a digit, for example to correct it.

Save the setting and terminate the function.

Time

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

The current setting is displayed as HH:MM.

Enter the hours/minutes e.g. 19.05 h as shown.

If necessary, jump to a digit, for example to correct it.

Save the setting and terminate the function.

If 12 h mode is set as **CLOCK MODE** :


Confirm first half of the day.

Select second half of the day and confirm.

Save the setting and terminate the function.

Date and time

Press keys:

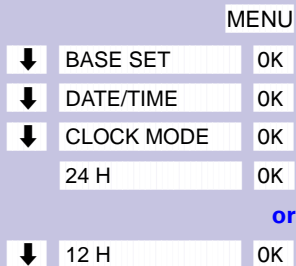

Display mode (12 or 24 hours)

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm 24 h mode.

Select 12 h mode and confirm.

Setting the alarm clock

You can use your handset like an alarm clock.

Activating the alarm clock

The active alarm clock rings every day at the set time.


Open the menu.

Select the menu item and confirm.


Enter the time for the alarm call (hours/minutes)
e.g. 7.15 h as shown.

If necessary, jump to a digit, e. g. to correct it.

Save the setting and terminate the function.

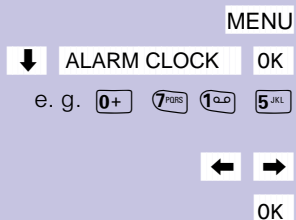

The asterisk indicates that the alarm clock is set.

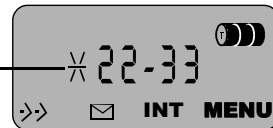

Press keys:

↓ ALARM CLOCK OK

MENU

Deactivating the alarm clock

The alarm clock is set, but you do not want the alarm to sound.

Open the menu.

Select the menu item and confirm.

The alarm call is deactivated. The asterisk before the time display is no longer shown.

Turning off the alarm call

An alarm clock rings and the status LED flashes (approx. 30 s). Press any key to turn off the alarm call.

Making calls

Press keys:

Making calls

Making an external call

External calls are calls into the public telephone network.



Dial the telephone number, if necessary use the display key to correct single digits.



Press the talk key.



To end the call, press the end call key.



- You can also press the talk key **first** and then enter the telephone number – each digit is dialled immediately.
- You can cancel the dialling operation with the end call key .
- You can insert a pause with the recall key (hold key down), e.g. for international calls.

Internal dialling

Internal calls are calls to other registered handsets. Internal calls are free of charge (e.g. to call within your home from the kitchen to the living room).

INT e. g.

Enter the handset's internal telephone number.

or

INT

Press.



Select the desired user and press the talk key.

INT

Call all handsets:

All handsets are called.

Ending a call:



Press the end call key to end the call.

Press keys:




Answering a call

Your telephone rings (ringer) and the status LED flashes.

Press the talk key

Simply remove the handset from the base station (factory setting: Auto talk, see page 46).



- If the **ringer is disturbing you**: Open the menu via **[MENU]** and select **[SILENT]**.
- As long as the call is displayed, you can accept it by pressing the talk key  for example.
- Setting the handset volume (while you are talking, see page 45).

Displaying telephone numbers (CLIP)

The network provider must support the calling line identification (CLIP) and the telephone number must have been transmitted. Contact your network provider.

An incoming call is displayed as follows (example):

Telephone number

02303 1230

MENU

If the number received is saved in the handset directory, the stored name is displayed (example: **[ANNE]**).

If the telephone number or the name is not displayed, you see:

[<< >>]

If you have not requested **CLIP**.

[UNAVAILABLE]

If the caller has not requested the telephone number transmission or if display of the number was deliberately suppressed by the caller (**CLIR**)

CLIP	Calling Line Identification Presentation = Displaying the caller's telephone number
CLIR	Calling Line Identification Restriction = display of the incoming telephone number suppressed.

Making calls

Press keys:

INT

Mute the microphone – the call is placed on hold and the external caller will hear music.

MENU

Re-activating the microphone:

Open the menu.

GO BACK

OK

Confirm.

You return to the external caller.

L Muting the microphone

You can deactivate your microphone during external calls in order to talk confidentially to another person in the room, for example. The external caller cannot hear your conversation during this time. You do not hear your caller either.

Press keys:

MENU		
↓	ANS MACHINE	OK
↓	SET KEY 1	OK
	MAILBOX	OK

Mailbox

Storing the mailbox for fast access

You can use the mailbox for fast access.

 
Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the telephone number of the mailbox and confirm.



Once you have selected the mailbox, simply hold down the  key on the handset. You are directly connected to the mailbox (fast access).

Checking the mailbox


Prerequisite:

You have entered the number of the mailbox.

Display flashes.

Select the menu item and confirm.

Select the menu item and listen to the message.

		
↓	MAILBOX	OK
↓	PLAYBACK	OK

Enhanced telephone features

Press keys:

Enhanced telephone features

In addition to standard telephoning, your Gigaset offers a number of other fast, convenient features.



Automatic redial

Your handset automatically saves the five telephone numbers dialled last or names (see page 17).



Display the telephone number/name.



Select the required telephone number/name.



Press the talk key – the telephone number is dialled.

Delete the redialling list



Open the redialling list.

MENU

Open the menu.



DEL ENTRY?

OK

Press digit 6 and confirm the prompt.



Display the telephone number.



MENU

Select a telephone number and open the menu.



COPY TO DIR

OK

Select the menu item and confirm.



OK

If necessary, change the telephone number and confirm.



If necessary enter the name.

Input of letters and characters (see page 18).


OK


Confirm input.

Enhanced telephone features

Press keys:

Directory and network access list

With the **directory**  you can store up to 20 telephone numbers and then dial them at the push of a button.

In order to make calls cost-effectively you can save the prefixes (Call-by-Call) of telephone companies in the **network access list** .

Storing an entry



Open the directory/network access list.

MENU

Open the menu.



NEW ENTRY

OK

Select the menu item and confirm.



Enter the **telephone number**.

OK

Confirm input.



Enter **the name**.

For information on entering letters and characters (max. 12) see the character map.

OK

Confirm input.



Max. number of numbers:


 






 
 

 
Directory 22 digits

Network access list 12 digits

Enhanced telephone features




Press keys:

Character map

	1 x	2 x	3 x	4 x	5 x	6 x
	□	1				
	A	B	C	2		
	D	E	F	3		
	G	H	I	4		
	J	K	L	5		
	M	N	O	6		
	P	Q	R	S	7	
	T	U	V	8		
	W	X	Y	Z	9	
	+	0	-		?	_
	*	/	()	,	
	□					

Press the relevant key repeatedly or hold it down:



Controlling the cursor with  . Deleting a character with . Characters are always inserted to the left of the cursor.

The entries are sorted in the **following sequence:**

1. Blank (□)
2. Digits (0 to 9)
3. Letters (alphabetical)
4. Remaining characters

To avoid the alphabetical sequence of the entries in the directory, enter a blank before the name. This entry then goes to the first position (example: entering "□Karla").



Enhanced telephone features

Press keys:

e. g.  




Open the directory.

Enter the first letter of the name (e.g. for the name Emma - first letter "E"): Press the  key twice and scroll with the  key. The names are listed in alphabetical order.



Press the talk key. The telephone number is dialled.



After selecting the number, you can also open the menu, select **EDIT ENTRY**, extend/change the number and dial with the talk key .

Dialling with the network access list

You can use this function to put a network provider's prefix in front of the telephone number (linking).



Open the network access list.

 **MENU**

Select Call-by-Call number and open menu.

EDIT ENTRY **OK**

Confirm entry.



Enter the number for "linking"

or

 **OK**

Select the telephone number for "linking" and confirm.



Press

Displaying and changing a directory entry




Open the directory.

e. g.  

Enter the first letter of the name.

MENU

Open the menu.

 **SHOW ENTRY** **OK**

Select the menu item and confirm. The number is displayed.



If necessary, change telephone number.

For information on entering letters and characters, see page 18.

OK

Confirm input.




Overwrite the name.

OK

Confirm input.

Enhanced telephone features

Press keys:

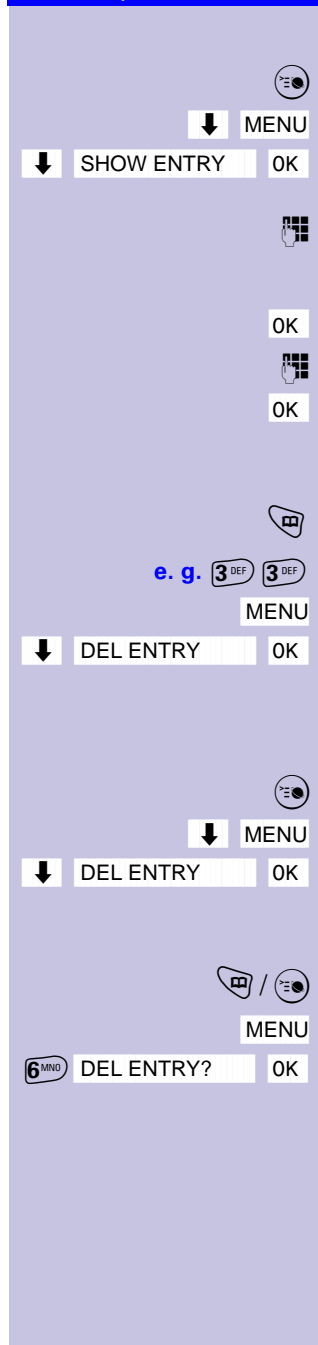

Displaying and changing the network provider entry

Open the network access list.

Select a telephone number and open the menu.

Select the menu item and confirm. The number is displayed.

Overwrite number if necessary.

For information on entering letters and characters, see page 18.

Confirm input.

Overwrite the name.

Confirm input.

Deleting a single entry from the directory

Open the directory.

e. g. **3** DEF **3** DEF

Open the menu.

Select the menu item and confirm.

Deleting a single entry from the network access list

Open the network access list.

Select a telephone number and open the menu.

Select the menu item and confirm.

Deleting all numbers in the directory

Open the directory/network access list.

Open the menu.

Press digit 6 and confirm the prompt.

Enhanced telephone features

Press keys:


Caller list

The numbers of the last 30 calls are saved in the caller list.

Prerequisite: The incoming call number has been transmitted (CLIP).


If several calls are received under the same number, the last call is saved.

Activate the caller list

If there are new calls,  in the display and the status LED flash.

Press the display key of the flashing icon.



Even if there are no new entries, you can open the caller list by pressing .



Open the caller list.

If the status LED does not flash, no new calls or messages have been saved.

Select caller list.

The display in the example means:

 symbolizes caller list.

 symbolizes 2 new calls.

 symbolizes 6 old calls.



OK

The number received last is displayed.



Scroll to the next or previous entry. One list entry is displayed.



You can delete a phone number from the list via  and .



Terminate the function.

or

Call back a caller



Calling back a caller.

The entry is copied to the redialling list.

Enhanced telephone features

Press keys:

↓ CALLS OK

↓ MENU

↓ COPY TO DIR OK

OK



OK

Copying telephone number to the directory

Open the caller list.

Select the menu item and confirm.

Select the required entry and open menu.

Confirm. Extend the number if necessary.

Confirm input.

Enter the name.

For information on entering letters and characters, see page 18.

Confirm input.



You can also store a telephone number during a call via **MENU** and **COPY TO DIR** ("notebook function").

Caller list settings

Optionally you can choose to save:

- only the **missed calls**
- **all incoming calls.**

↓ CALLS OK

MENU

↓ LIST MODE OK

MISSED OK

or

↓ ALL OK

Open caller list.

Select the menu item and confirm.

Open the menu.

Select the menu item and confirm.

Confirm.

Select the menu item and confirm.

Deleting the caller list

↓ CALLS OK

MENU

↓ DELETE LIST OK

Open the caller list.


Select the menu item and confirm.

Open the menu.

Confirm.

Enhanced telephone features

Press keys:

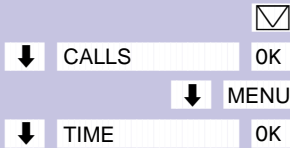

Finding out the date and time of a call

In the caller list you can also display the time the call was received.

Open the caller list.

Select the menu item and confirm.

Select the required entry and open menu.

Select the menu item and confirm.

The display shows for example:

In the example, the call was received on the 23.12. at 11.56 h.

If the time is set to the 12 h mode, an behind the time indicates the first half of the day and a indicates the second half of the day.

Finding out the status of a call

In the caller list you can also display whether an entry is new or old or whether the call was answered.

Open the caller list.

Select the menu item and confirm.

Select the required entry and open the menu.

Select the menu item and confirm.

The display shows the following examples:

The second of four new calls.

The first of three old calls.

The call has been answered (LIST MODE ALL).

There is a new message from the network provider in the list.

The message from the network provider has already been read.

Mailbox features

Press keys:

Mailbox features

Your handset helps you use the mailbox features. Functions are activated via the menu before a call (when the telephone is idle) and during a call. Your network provider will be happy to answer any questions, as the network functions may vary.


Functions before a call

You can set these functions before the call:

- Suppress telephone number for one outgoing call
- Activate/deactivate call waiting
- Deactivate callback
- Set call divert.

Suppress telephone number for the next call (CLIR)

Your number appears on the display of the person you called (if this is released by your network provider). If you want to withhold your number, you can suppress the display for the next outgoing call.

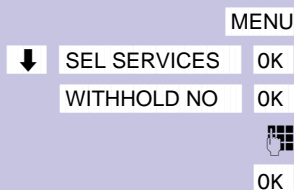

Open the menu.

Select the menu item and confirm.


Select the menu item and confirm.

Enter the required telephone number.

Confirm.

The telephone number is suppressed for this call.

Activating/deactivating call waiting

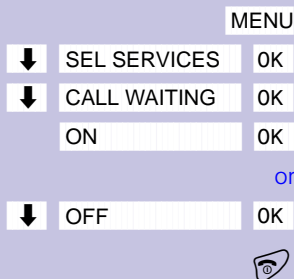

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

or

Select the menu item and confirm.

Press after confirmation from the telephone network.

Mailbox features

Press keys:

Call forward

Incoming calls are diverted to another telephone number. You can define the following conditions:

- Immediately
- When the call is not answered
- When the number is busy.

You want to divert all calls to another number permanently.

MENU

Open the menu.

↓ SEL SERVICES OK

Select the menu item and confirm.

↓ CALL DIVERT OK

Select the menu item and confirm.

ALL OK

Select the menu item and confirm.

AUTOMATIC OK

Set to automatically divert all incoming calls. Calls are no longer signalled.

or

↓ NO ANSWER OK

Set to divert incoming calls if nobody answers after several ring cycles.

or

↓ IF BUSY OK

Set to divert incoming calls when your line is busy.

Then activate or deactivate:

ON OK

Activate call divert.


 OK

Enter the telephone number to which incoming calls should be diverted.

or

↓ OFF OK

Deactivate call divert.

After confirmation from the telephone network, press the end call key .

Mailbox features

Press keys:

Functions during a call

You can set the following functions during a call:

- Enquiry call, toggling, initiating/ending a conference,
- Accepting/rejecting a waiting call.

Enquiry calls, toggling, conference

Enquiry call: You are conducting an external call and want to call a second external user. The first user waits in the meantime.

MENU

Open the menu.

EXTN CALL

OK

Confirm.



Enter the second user's telephone number. The telephone number is dialled.



For dialling the second user, you can also use the directory (key, see page 17) or the caller list (icon, see page 21)!

MENU

Open the menu.



END CALL

OK

End the second call. You are re-connected to the waiting caller.

or



Toggling: Toggling between two callers.

or

MENU

Open the menu.

CONFERENCE

OK

Conference: You and two external users can simultaneously listen and talk.

MENU

Open the menu.

END CONF

OK

End the conference:

You return to the "toggling" status and are re-connected to only one caller.



If necessary, change to the user whose call is to be disconnected.

MENU

Open the menu.

END CALL

OK

You carry on the call with the other user.



Press. The call is ended and all users are disconnected.

Mailbox features

Press keys:

MENU
ACCEPT OK
or
↓ REJECT OK

Call waiting during a call

You are conducting an external call and hear a call waiting tone that signals an additional external call.

The incoming number is displayed if it has been transmitted (CLIP).

Open the menu.

Accept the waiting call.

Reject the waiting call.

Callback when busy

Activate callback

When the line of the called user is busy, you can initiate a callback. When the called user is available, a callback is made automatically (this is shown in the display). The user is called only after you have accepted the callback.



Please note that for the selection **MENU** **RINGBACK** the call duration must first be shown in the display (it appears after 2-3 sec) .

MENU
↓ SEL SERVICES OK
↓ RINGBACK OK

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

After confirmation from the telephone network, press the end call key .

Deactivating callback

You have decided not to receive a callback.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

After confirmation from the telephone network press the end call key .

MENU
↓ SEL SERVICES OK
↓ RINGBACK OFF OK

Making cost-effective calls

Press keys:



Making cost-effective calls

To save money you should use the services of the cheapest network providers. You are provided with prefixes that you dial before the actual telephone number (call-by-call). This gives you convenient access to low-cost telephone tariffs.

Network access list (call-by-call)

You can save the numbers of telephone companies (call-by-call) in the network access list (☎) (see page 17). Before dialling the telephone number, you can conveniently choose the stored Call-by-Call number.

Dialling with the network access list

You can use this function to put a network provider prefix in front of the telephone number (linking).



Activating the network access list.



MENU

Select Call-by-Call number and open menu.

EDIT ENTRY

OK

Confirm entry.



Enter the number for "linking"

or



OK

Choose number for "linking" and confirm.



Press.




Enter, change, delete a network provider:

You can manage entries in the network access list in the same way as entries in the directory. Instead of using the phonebook key (☎), call up the network access list with (☎) and press **MENU**. Then select the required function (see page 19).

Making cost-effective calls

Press keys:

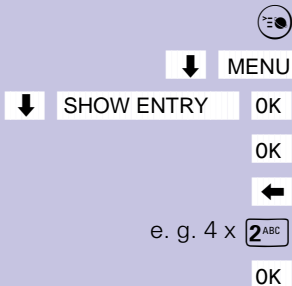

Storing the network provider prefix (call-by-call) for speed dialling

You can store eight numbers (2 – 9) for speed dialling from the network access list. To do so, you must enter the digit for the speed dialling **before** the network provider's name.

Example: **2** and now the network provider's name.



Activate the network access list.



MENU

Choose the network provider and open the menu.



SHOW ENTRY

OK

Select the menu item and confirm.

OK

Confirm the telephone number.



Move the cursor to the first position of the name.

e. g. 4 x



Enter the speed dial key **2**.

OK

Save the change.



Store a new entry and enter the speed dial number as the first character of the network provider's name.

To use speed dialling:

z. B. **2**

Hold **down** key: The stored network provider number is displayed.

e. g.

Enter the number for "linking"

or



OK

Select entry in the directory and confirm.



Press.

Making cost-effective calls

Press keys:

Automatic preselection

You can store the number of a frequently used network provider (call-by-call). It is automatically put in front of the telephone number dialled ("linking").

You must therefore define lists of telephone numbers to be dialled "**with preselection**" and "**without preselection**".

List with preselection

In this list telephone numbers to be used **with** automatic preselection are stored.

Example:

You enter a "0" in this list. Whenever you dial a telephone number that begins with "0", the stored network provider prefix is used automatically.

List without preselection

In this list telephone numbers **not** to be used with automatic preselection are stored.

Example:

You enter "00" in this list. Whenever a telephone number that begins with "00" is dialled, **automatic** preselection is **not** used.



For information on manual "linking" of a network provider prefix (call-by-call) and a telephone number, see page 28.



Step 1: Storing the network provider prefix

You must first store the prefix of a frequently used network provider (preselection).

MENU

↓	BASE SET	OK
↓	PRESELECT	OK
	PRESELECT NO	OK
	OK	

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

Enter or change the network provider prefix.

Confirm input. Automatic preselection is active.

Making cost-effective calls

Press keys:



Step 2: Saving/changing entries in the preselection lists

Both lists can contain:

Five entries	with up to six digits
Six entries	with up to two digits

Empty entries contain dashes.

List "with preselection"

MENU

Open the menu.

↓ BASE SET OK

Select the menu item and confirm.

↓ PRESELECT OK

Select the menu item and confirm.

↓ WITH PRESEL OK

Select the menu item and confirm.

↓ ↑

If necessary select the required entry.

MENU

Open the menu.

OK

Enter the telephone number, for example enter **0+**
8^{TUV} and confirm.

List "without preselection"

MENU

Open the menu.

↓ BASE SET OK

Select the menu item and confirm.

↓ PRESELECT OK

Select the menu item and confirm.

↓ W/O PRESEL OK

Select the menu item and confirm.

↓ ↑

If necessary the select required entry.

MENU

Open the menu.

OK

Enter the telephone number, for example enter
0+ 0+ and confirm.

Making cost-effective calls

Press keys:

Dialling with automatic preselection

When dialling with automatic preselection, the prefixes entered are checked.



Enter the telephone number.



Press the talk key.

The first digits of the dialled telephone number are checked against the list "with preselection". If these match, the stored network provider prefix is automatically put in front.

Dialling without automatic preselection

When dialling without automatic preselection, the prefixes entered are checked.



Enter the telephone number.




Press the talk key.

The first digits of the dialled telephone number are checked against the list "without preselection". If these match, the stored network provider prefix is **not** put in front.

Making cost-effective calls

Press keys:

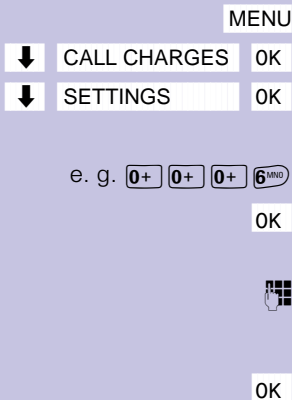

Setting call charges

If you want to call charges to be displayed, you must request the call charge pulse transmission from your network provider. Units are displayed automatically. You can set call charges per unit and the currency by yourself.

If the call charge pulses are not transmitted, the handset automatically displays the current call duration.

Setting call charges per unit and currency

If you want the the call charges to be displayed as a sum of money , you must set the call charges per unit with the relevant currency.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

"RATE ," is displayed:

Enter call charges per unit (for example: 2 pence).

Confirm input.

"CURRENCY" is displayed:

Enter the letters for the currency abbreviation, e.g. GBP (for information on entering letters and characters, see page 18).

Confirm input.



If you set **the call charges per unit to zero**, the **units are** displayed instead of the call charges.

Making cost-effective calls

Press keys:

MENU
 ↓ CALL CHARGES OK
 LAST CALL OK
 or
 ↓ ALL CALLS OK

Displaying/deleting call charges

You can have the following call charges displayed:

- The charges of the last call,
- The total call charges of all handsets.

Open the menu.

Select the menu item and confirm.

Confirm.


The charges of the last call are displayed.

Select the menu item and confirm.

The call charges of all handsets are displayed.



- The call charges are displayed if previously set. If not, the units are displayed.

- If you now press , the call charges or units are deleted.

Registering and de-registering handsets

Press keys:



Registering and de-registering handsets

To be able to make calls with your handset, you must “introduce” it to its base station (registering). This is very simple and occurs automatically.


Handsets of the Gigaset 2000/3000 families and non-Siemens handsets must be registered manually.

Automatic registration

Gigaset 4000 handsets at the Gigaset 4010 base station

Automatic registration (“introducing”) is only possible for the supplied handset and any other G4000 handsets bought additionally. Before activating your handset, **place it** in the base station **with the display facing upward**. After approx. 1 minute, the handset's internal number is displayed (e.g. “ 1 ”).



Make sure that you do **not** press the On/Off key  before placing the handset in the base station. If you have inadvertently activated the handset, please deactivate it.


The next unassigned internal number (1 – 6) is automatically assigned to the handset. If all numbers are assigned, the internal number 6 is re-assigned. The handset which was registered under number 6 is then deregistered.

It is possible to assign a different internal number (see page 39) or a different internal name (see page 38) to a handset later.

Registering and de-registering handsets

Press keys:



Underside of the base station 

Manual registration

Gigaset 4000 handsets at the Gigaset 4000 base station

If a handset has already been registered at a different base station, you must now register it at your base station. The Gigaset 4000 Classic handset cannot be registered at more than one Gigaset 4010Classic base station at one time.

Step 1:

Open the menu.

Select the menu item and confirm, PIN **** is displayed.

Enter the 4-digit system PIN (factory setting: 0000) and confirm.

After entering the system PIN, REGISTER HS flashes in the display.

Step 2:

Press the key on the underside of the base station briefly. A signal tone is generated at the base station. The next unassigned internal number (1 – 6) is automatically assigned to the handset.

If all numbers are assigned, the internal number 6 is re-assigned. The handset which was registered under number 6 is then deregistered.

After about a minute the internal number of the handset is shown in the left-hand corner of the display (e.g. "2").

Registering and de-registering handsets

Press keys:

Registering Gigaset 2000/3000 handsets and non-Siemens handsets at the Gigaset 4010 base station

Prerequisite:

The non-Siemens handsets must also comply with the **GAP standard!**

However, it is possible that not all functions will be available on your handset!

GAP	Generic Access Profile = European standard for the interaction of handsets and base stations
------------	---



Step 1:

Register your handset according to the operating instructions of the relevant handset.

After registration, your Siemens base station assigns the **first unassigned** internal number to the handset.



Underside of the base station 

Step 2:

Press the key on the underside of the base station briefly

A signal tone is generated at the base station.

De-registering handsets

Prerequisite:

You can only de-register handsets with a Gigaset 4000.

Press the display key.

The list of internal users is displayed.

Select the handset to be de-registered.

Open the menu.

Select the menu item and confirm is displayed.

Enter the 4-digit system PIN (factory setting: 0000) and confirm.

Confirm the prompt.

INT



MENU

 DE-REG H/SET OK

 OK


DE-REGISTER? OK

Operating several handsets

Press keys:



Operating several handsets

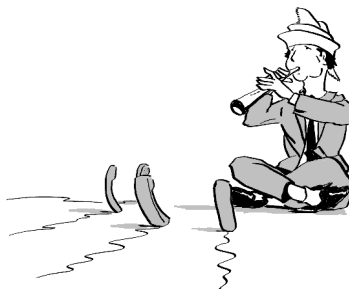

Turn your Gigaset into a small PABX! You can register and operate up to six handsets at your base station.

Changing the name of a handset

The names 1, 2 etc. are assigned automatically. However, you can change these names, e.g. to "ANNE," "OFFICE" etc. (10 characters maximum).

INT

Press the display key.



Select the required handset.

MENU

Open the menu.



OK

Select the menu item and confirm.



Enter name (see character map on page 18).

OK

Confirm input.

Operating several handsets

Press keys:

INT

MENU

RE-ASSIGN NO OK

↓ OK

e. g. 2^{ABC} OK

INT e. g. 2^{ABC}

or INT

↑ ↓ 

INT 



Changing a handset's internal number

You can change the number of a handset.

Press the display key.

Open the menu.

Confirm. All registered handsets are displayed.

Select a handset.

Select a free internal number and confirm.



If the selected internal telephone number has already been assigned to a different handset, you will hear an error beep (descending tone sequence).

Making internal calls

Internal calls are calls to other registered handsets; they are free of charge.

Enter the handset's internal number.

Press.

Select the desired user and press talk key.

Calling all handsets:

All handsets are called ("collective call").

Ending a call:

 
Press to end the call.

Operating several handsets

Press keys:

A large, light purple vertical bar on the left side of the page contains a small handset icon at the top left. The rest of the bar is empty.

INT

e.g. 



Connecting a call

You can transfer an external call to another handset.


Press the display key – the external user hears music on hold.

Enter the internal number.

When the internal user answers, announce the external call. Then:

Press the end call key. The call is connected.



 
Instead of announcing the call, you can also immediately press the end call key .

If the internal user does not answer or if his line is busy, the call is automatically returned to you.

Operating several handsets

Press keys:

INT

e. g. 

MENU

GO BACK

OK

or



MENU

ACCEPT

OK

or



REJECT

OK

Internal enquiry calls

You are conducting a call with an external user. You can call another internal user and conduct an enquiry call without clearing down the initial connection. You are automatically reconnected to the external user when you end the enquiry call.

Press the display key – the external user hears music on hold.

Enter the internal number of the handset. You are now talking to the second internal user.

Ending the enquiry call:

Open the menu.

Confirm.

You are reconnected to the external user.

The external call is transferred to the second internal user.

Accepting or rejecting a waiting call

You hear the call waiting tone (short beep) if you receive an external call while conducting an internal call. This function must be requested from the network provider.

Open the menu.

Confirm. The internal call is **ended**. You are connected to the external caller.

Select the menu item and confirm.

You are still connected to the internal user.

Operating several handsets

Press keys:

		MENU
↓	BASE SET	OK
↓	ADD FEATURES	OK
↓	BARGE IN	OK

Joining in a call ("barging in")

An internal user conducts an external call. A second internal user can barge in on this call and speak to the other users. This is indicated by a signal tone (not available in all countries!).

Activating/deactivating this function

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

To deactivate, confirm the function marked with ✓ once more with **[OK]**.

Barging in

You see **[LINE IN USE]** in the display and want to barge in.



Lift the handset. The conference call is signalled by a beep in the active call.

During the call, you see the display

[LISTENING IN].



Replace the handset to leave the call.

Operating several handsets

Press keys:


Deactivating the ringer

All handsets ring when there is an incoming call. You can deactivate the ringer.



Hold down the * key until the handset does not ring any more.

The ringer is **permanently** deactivated.

To re-activate the ringer, press .

or

MENU

Open the menu.

SILENT

Press.

The ringer is deactivated **for the current call**.


Paging



Press the base station key briefly – all handsets ring at the same time (“Paging”).

End paging:



Press the base station key briefly or press the talk key  on a handset.


(not available in all countries!)

Individual handset settings

Press keys:



Individual handset settings

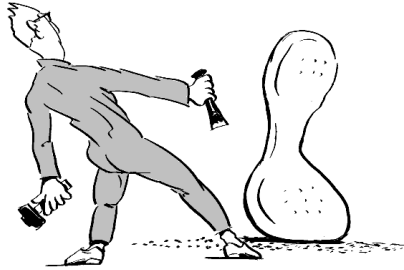

You can set your handset according to your wishes to distinguish it from the standard settings and to obtain optimum convenience.

Changing a handset's display language

MENU

Open the menu.

9WXYZ **2**ABC

First press 9, then 2 and then:

0+ **1**QW

for German (factory setting),

or **0+** **2**ABC

for English,

or **0+** **3**DEF

for French,

or **0+** **4**GHI

for Italian,

or **0+** **5**JKL

for Spanish,

or **0+** **6**MNO

for Portuguese,

or **0+** **7** PQRS

for Dutch,

or **0+** **8**TUV

for Danish,

or **0+** **9**WXYZ

for Norwegian,

or **1**QW **0+**

for Swedish,

or **1**QW **1**QW

for Finnish,

or **1**QW **2**ABC

for Czech,

or **1**QW **3**DEF

for Polish,

or **1**QW **4**GHI

for Turkish.

Individual handset settings

Press keys:

MENU
 ↓ AUDIO SET OK
 H/SET VOL OK
 ↓ OK

MENU
 ↓ AUDIO SET OK
 ↓ RINGER OK
 ↓ OK

MENU
 ↓ AUDIO SET OK
 ↓ MELODY OK
 ↓ OK

Modifying the volume and changing the melody

Handset volume

You can choose from three levels of volume for the handsets – **even during a call**.

Open the menu.

Select the menu item and confirm.

Confirm.

You hear the current volume and its level is displayed. Select the required volume and confirm.

Ringer volume (“ring tone”)

You can choose from seven options:

- Five ringer volumes (1 - 5),
- “crescendo” ring (increasing volume; 6),
- No ringer (ringer off; 0).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

You hear the current volume and its level is displayed. Select the required volume and confirm.

Ringer melody

You can choose from ten ringer melodies (1 – 10).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

You hear the current melody and its number is displayed. Set the required melody and confirm.

Individual handset settings

Press keys:

MENU



or



Activating/deactivating battery low beep

When this function is activated, you are acoustically informed that the battery is almost empty (factory setting).

Open the menu.

Activate the function.

Deactivate the function.


MENU



or



Activating/ deactivating Auto talk

When this function is activated, you can remove the handset from the charging unit without pressing the handset key  to accept a call (factory setting).

Open the menu.

Activate the function.

Deactivate the function.



MENU



Resetting a handset to the factory setting

The directory, the network access list and the caller list are not deleted when you reset the handset. Registration at the base station is not affected.

Open the menu.

First press 9 and then 3 to activate the procedure

RESET ?

OK

Confirm prompt.

Function	Factory setting
Handset volume (see page 45)	1
Ringer volume ("ring tone," see page 45)	5
Ringer melody (see page 45)	1
Auto talk (see page 46)	on
Battery low beep (see page 46)	on
Display language (see page 36)	local
Alarm clock (see page 9)	off

Press keys:



Base station settings

All base station settings are conveniently made via the handset!

Changing the system PIN

To prevent unauthorised registration of a handset, you should change the preset system PIN (factory setting: 0000) to a PIN that only you know.

MENU



BASE SET

OK

Open the menu.
Select the menu item and confirm.



SYSTEM PIN

OK

Select the menu item and confirm.



Enter the currently valid system PIN (4 digits; factory setting: 0000).

For security reasons only four asterisks (****) are displayed.

OK

Confirm. is displayed:



Enter the new system PIN (4 digits).

OK

Confirm. is displayed:



Repeat the new system PIN.

OK

Confirm.

Base station settings

Press keys:

MENU
 ↓ BASE SET OK
 AUDIO SET UP OK
 ↓ RINGER VOL OK
 ↓ OK

Modifying volume and melody

Ringer volume ("ring tone")

You can choose from seven options:

- Five ringer volumes (1 – 5),
- "crescendo" ring (increasing volume; 6),
- No ringer (ringer off; 0).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

Your hear the current volume and its level is displayed.
 Select the required level and confirm.

OFF

Incoming calls are not signalled at the base station but only on the handset.

CRESCENDO

Increasing volume.

Base station settings

Press keys:

MENU
 ↓ BASE SET OK
 AUDIO SET UP OK
 ↓ MELODY OK
 ↓ OK

Ringer melody

You can choose from ten ringer melodies (0 – 9).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

You hear the current melody and its number is displayed. Select the required melody and confirm.

Repeater support

With the Gigaset repeater you can extend the range from your base station to the handset and increase the areas in which reception is possible.

If you want to use a repeater, you must activate this function.

MENU
 ↓ BASE SET OK
 ↓ ADD FEATURES OK
 ↓ REPEATER OK
 SURE? OK

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm prompt.

Base station settings

Press keys:



MENU

↓ BASE SET OK

↓ BASE RESET OK

OK

RESET ? OK

Resetting the base station to the factory setting

Resetting the base station does not affect the system PIN or handset registration.

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Enter the system PIN (factory setting: 0000) and confirm.

Confirm prompt.:

Function	Factory setting
Ringer volume (see page 48)	5
Ringer melody (see page 49)	1
Call charges per unit (see page 33)	00.00
Preselection (see page 30)	none
Joining a call (barging in) (see page 42)	off
The handset's name (see page 38)	INT 1 to INT 6
Repeater (see page 49)	off
Pause after R (see page 52)	800 ms
Pause after line seizure (see page 52)	3 s
Dialling mode (see page 51)	DTMF
Flash time (at PABXs, see page 51)	100 ms

Connecting the base station to a PABX

Press keys:

Connecting the base station to a PABX

Dialling mode and flash time



Step 1: Changing the dialling mode

It is necessary to change the dialling mode only if your PABX does not operate with the preset tone dialling (DTMF - **d**ual-**t**one **m**ultifrequency. **Please refer to the operating instructions of your PABX.**

Options:

- Tone dialling (DTMF),
- **D**ial **p**ulsing (DP).

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Confirm.

Select the required dialling mode and confirm.

MENU

↓	BASE SET	OK
↓	ADD FEATURES	OK
	DIAL MODE	OK
↓		OK



Step 2: Setting the flash time:

Prerequisite:

Your PABX requires a flash time different to the preset flash time, **Please refer to the operating instructions of your PABX.**

Open the menu.

Select the menu item and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the flash time and confirm.

80 ms, 100 ms, 120 ms, 180 ms, 250 ms, 300 ms, 600 ms.

MENU

↓	BASE SET	OK
↓	ADD FEATURES	OK
↓	TBR	OK
↓		OK



The current setting is marked with ✓.

Connecting the base station to a PABX

Press keys:

MENU
 ↓ TEMP TONE OK

Switching temporarily to tone dialling

If your PABX still operates with dial pulsing (DP) but tone dialling (DTMF) is required (e.g. to check the mailbox), you must switch to tone dialling (DTMF) during the call.


Prerequisite: You are conducting a call!

Open the menu.

Select the menu item and confirm.
Tone dialling is active.

Setting pauses

Pause after line seizure

With this function you can set the length of the pause inserted automatically after pressing the talk key  before transmitting the telephone number.

Open the menu.

MENU
 8^{TUV} 9^{WXYZ} 1[☎] 6^{MIND}
 p. ex. 1[☎] OK


Initiate the setting.

Enter the pause length and confirm.

1 second = **1**; 3 seconds = **2**; 7 seconds = **3**;
2.5 seconds = **4**.

The setting is saved.

Pause after recall key

With this function, you can set the length of the pause that is inserted after holding down the  - key.

Open the menu.

MENU
 8^{TUV} 9^{WXYZ} 1[☎] 2^{ABC}
 p. ex. 1[☎] OK

Initiate the setting.

Enter the pause length and confirm.

None = **1**; 800 ms = **2**; 1600 ms = **3**;
3200 ms = **4**

The setting is saved.



Appendix

Maintenance

Simply wipe the base station and handset with a **damp cloth** or an antistatic wipe. **Never** use a dry cloth as this can cause static discharge!

Troubleshooting

If your telephone does not behave the way you want it to, first try to solve the problem using the following list.

Fault	Possible cause	Solution
No display.	Handset not activated Batteries empty	Hold down the end call key  for 1 second Charge or replace the batteries (see page 7).
No reaction to key-stroke.	Keypad protection activated	Hold down the  key for 1 second
No radio connection to the base station – all displays flashing.	Handset outside the base station range. Handset not registered Base station not activated	Move closer to the base station. Register the handset (see page 35). Check the connector at the base station (see page 6).
Handset that is in the base station is not charging.	Line seized by a second handset for a long period.	Maximum charging power is only possible while nobody is making calls.
Handset/base station does not ring.	Ringer off	Activate the ringer (see page 45/page 49).
Units/call charges are not displayed.	There is no call charge pulse.	Request call charge pulse transmission from your network provider.
Call charges are not displayed	Price per unit = 00.00	Set the price per unit (see page 33)
Your caller on the telephone cannot hear you.	The [INT] key was pressed – the microphone is “muted.”	Press [GO BACK] [OK] to re-activate the microphone.

Appendix

Fault	Possible cause	Solution
The incoming call number is not displayed although CLIP is set.	The telephone number transmission is blocked.	Callers must permit the transmission of their telephone numbers at their network providers.
The ringer/dialling tone cannot be heard.	You have changed the telephone cord on your Gigaset.	Ensure, when purchasing a new cord, that it has the correct pin assignment (3-4 assignment of the telephone leads/ EURO CTR37).
Error beep is generated (descending tone sequence)	Wrong input	Repeat the procedure; note the display and, if necessary, refer to the operating instructions.

Guarantee

Over the guarantee period from the date of purchase from the stockist, Siemens AG will rectify all material or manufacturing defects by repairing or replacing the defective device.

As of 01.01.2002, the European guarantee period will be 24 months (until 31.12.2001: 12 months).

The guarantee does not cover damage caused by improper use, wear and tear or third party access. The guarantee shall not cover consumables or defects which only slightly decrease the value or serviceability of the device.

Service:

www.siemens.com/troubleshooting

Ireland: Siemens hotline 01850777277

United Kingdom: Siemens hotline 02077441447



Siemens Service should be contacted if problems arise with the unit. Your specialist dealer will be happy to answer any questions on unit operation. Contact your network provider for questions concerning telephone connections.

Your Gigaset is intended for operation in your country, as depicted on the underside of the base station. Country-specific features have been taken into account.

The conformity of the device with the essential requirements of the R&TTE directive is confirmed by the CE symbol.

Excerpt from the original declaration:

„We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with the registration number „Q810820M“ in compliance with ANNEX V of the R&TTE-Directive 99/05/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/05/EC is ensured.“

Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. If necessary, a copy of the original DoC can be made available via the company hotline.

CE 0682

Appendix

Technical data

Recommended batteries

Nickel-cadmium (NiCd)	Nickel-metal-hydride (NiMH)
Sanyo N-3U (700 mAh)	Current VHAAH 1300 (1300 mAh)
Mobile Power 700 (700 mAh)	YDT 1200 (1200 mAh)
Panasonic P-60AA DT (600 mAh)	Panasonic HHR-110 AA (1100 mAh)
Emmerich 700 (700 mAh)	Sanyo HR-3U (1600 mAh)
	GP GP130 AA HC (1300 mAh)
	Emmerich1300 (1300 mAh)

The handset's operating times/charging time

Capacity (mAh)	Standby time (hours)	Talktime (hours)	Charging time (hours)
700	up to 200 (8 days)	more than 10	approx. 5.5
1200	up to 320 (13 days)	more than 17	approx. 9
1600	up to 400 (18 days)	more than 23	approx. 12



We recommend initially charging the batteries for at least 16 hours without interruption – irrespective of the charging status icon!

The battery charge capacity decreases after a few years for technical reasons.

Power consumption

- In standby mode (without charging) approx. 1,6 Watt.
- In standby mode during charging approx. 4,6 Watt.
- During a telephone call (without being charged) approx. 3.2 Watt.

Appendix

Feature	Value
DECT-Standard	is supported
GAP standard	is supported
No. of channels	Base station: 120 duplex channels Handset: 60 duplex channels
Radio frequencyrange	1880 - 1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Power supply	Base station 220/230 V ~/ 50 Hz (power supply unit SNG X-a)
Base station power consumption	standby approx. 3 Watt when calling approx. 5 Watt
Environmental conditions for operation	+5 °C to +45 °C 20 % to 75 % relative humidity
Dialling mode	DTMF (tone dialling)/DP (dial pulsing)
Flash time	Flash: 100 ms
Dimensions Base station	136.6 x 149 x 64.2 mm (L x W x H)
Dimensions Handset	155.5 x 53.6 x 36.2 mm (L x W x H)
Weight	Base station 215 g Handset with batteries < 160 g
Length of the cords	Telephone connecting cord approx. 3 m Mains cable approx. 3 m

Menu table

Menu table

It is faster to select a menu function by pressing **[MENU]** than selecting the digit combinations by scrolling, e.g. **[5^{PH}] [2^{ANC}] [2^{ANC}] = 5-2-2** to set the time.



Main menu

[MENU] when the telephone **is idle**, press:

1	SEL SERVICES	1-1	WITHHOLD NO					
		1-2	CALL WAITING					
		1-3	RINGBACK OFF					
		1-4	CALL DIVERT					
2	ALARM CLOCK	Enter alarm call						
3	AUDIO SET	3-1	H/SET VOL	set				
		3-2	RINGER	set				
		3-3	MELODY	set				
4	CALL CHARGES	4-1	LAST CALL	display				
		4-2	ALL CALLS	display				
		4-3	SETTINGS	Enter cost per unit				
5	BASE SET	5-1	AUDIO SET UP	5-1-1	SPEAKER VOL	set (G4015 only)		
				5-1-2	RINGER VOL	set		
				5-1-3	MELODY	set		
		5-2	CLOCK SET	5-2-1	DATE SET			
				5-2-2	DATE/TIME			
				5-2-3	CLOCK MODE	5-2-3-1	24 H	
						5-2-3-2	12 H	
		5-3	SYSTEM PIN	enter				
		5-4	BASE RESET	factory setting				
		5-5	ADD FEATURES	5-5-1	DIAL MODE	5-5-1-1	TONE	
						5-5-1-2	PULSE	
						5-5-1-3	DTMF-EARTH (country-specific)	
				5-5-2	TBR	5-5-2-1	80 MS	
						Until		
						5-5-2-7	600 MS	
5-5-3	REPEATER	on/off						
		5-5-6	BARGE IN	on/off				
5-6	PRESELECT	5-6-1	PRESELECT NO	Prefix/network provider				
		5-6-2	WITH PRESEL	List				
		5-6-3	W/O PRESEL	List				
6	ANS MACHINE	6-1	SET KEY 1	6-1-1	MAILBOX			
7	REGISTER HS							

Menu table


Directory/network access list

Press  /  to open the corresponding list.

The following **MENU** functions are now available:

1	EDIT ENTRY	Add number
↓		
2	NEW ENTRY	Save new telephone number
↓		
3	SHOW ENTRY	Display/change telephone number
↓		
4	DEL ENTRY	Delete entry


Messages

Press  to open the list with the messages.

The following **MENU** functions are now available:

1	ANS M	(if available)		
↓				
2	MAILBOX			
↓				
3	CALLS			
		3-1	DELETE	Delete entry
		3-2	COPY TO DIR	Copy no. to the directory
		3-3	TIME	Display date/time
		3-4	STATUS	Indicate new/old
		3-5	LIST MODE	3-4-1 MISSED
				3-4-2 ALL
		↓		
		3-6	DELETE LIST	

Accessories

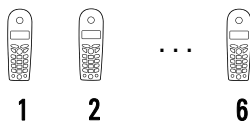

Upgrade your Gigaset to a cordless PABX:

- Everyone has their own handset
- Toll-free internal communication
- Transferring external calls to the right person etc.

Gigaset 4000 Classic handset

The Gigaset 4000 Classic offers you the following features:

- 12-digit display to show the time, telephone numbers etc.
- Directory with 20 entries
- Alarm clock
- Automatic redialling of the last 5 numbers



The package includes: Handset with charging unit
Colour: midnight blue or glacier green

Gigaset 4000 Comfort handset

The Gigaset 4000 Comfort offers you enhanced options.

- 5 line illuminated graphic display
- Walkie-Talkie
- Handsfree talking
- Directory for approx. 200 telephone numbers/ names
- Room monitoring
- Reminder function
- Full ISDN functionality in connection with an ISDN base station.



The package includes: Handset with charging unit.
Colour: midnight blue or glacier green.*

* Depending on the country



Gigaset repeater

With the Gigaset repeater you can extend your Gigaset's range and open up areas in which reception was not possible.

All functions of the handset can be used in the extended transmission area (**not available in all countries!**).



Gigaset 3000 Micro

The Comfort handset in a mobile phone format:

- **Small and compact**
- Easy operation via an illuminated keypad and 4 line illuminated graphic display
- Directory for up to 100 telephone numbers/names
- Complete ISDN functionality when connected to an ISDN base station
- Programmable handset volume
- Automatic redialling of the last 5 numbers
- **Headset socket**

The package includes: Handset with charging unit

Colour: midnight blue*

All **devices, accessories** and **batteries** are available in **specialised shops** or via the **Siemens Service Shop** on the Internet:

<https://communication-market.siemens.de/serviceshop/default.asp>.

Dear customer,

Your opinion is important to us!

Please take a little time to fill in a questionnaire on the Internet:

<http://www.siemens.com/sustomersurvey>

Participants take part in a draw for Siemens products worth a total of 5000 Euro.

Closing date is 31st August 2002.

Thank you for entering!

*

Depending on the country

Index

Index

A

- Accessories **60**
- Activating
 - handset **8**
 - keypad protection **8**
- Alarm call **11**
- Alarm clock **10**
 - activating **10**
 - deactivating **11**
- Auto talk
 - activating/deactivating **46**
- Automatic preselection **30**
- Automatic redial **16**

B

- Barging in (joining a call) **42**
- Base station
 - connecting **6**
 - connecting to a PABX **51**
 - installing **5**
 - resetting to the factory setting **50**
 - setting pauses **52**
 - setting the ringer volume **48**
- Batteries
 - inserting **7**
 - loading **7**
 - recommended **56**
- Battery low beep **46**
- Belt clip **8**
- Brief overview **III**

C

- Call
 - connecting **40**
 - ending **12**
- Call charges
 - displaying/deleting **34**
 - setting **33**
- Call charges per unit **33**
- Call divert **25**
- Call duration **33**
- Call waiting **41**
- Callback a caller **21**

- Callback when busy **27**
- Call-by-Call **28**
- Caller list **21**
- Changing the display language **44**
- Changing the system PIN **47**
- Character map **18**
- Charges see call charges **33**
- Charging status icon **7**
- CLIP
 - caller list **21**
 - displaying numbers **13**
- CLIR **24**
- Collective call (making internal calls) **39**
- Conference **26**
- Confirmation beep **8**
- Connecting a call **40**

D

- Date setting **9**
- Deactivating
 - battery low beep **46**
 - handset **8**
 - keypad protection **8**
 - ringer **43**
- Delivery package **5**
- De-registering handsets **37**
- Dialling modes **30, 36, 37, 51**
- Dialling with automatic preselection **32**
- Directory **17**
 - deleting a single entry **20**
 - deleting all entries **20**
 - dialling a number **19**
 - storing an entry **17**
- Display keys **III**
- Displaying telephone numbers (CLIP) **13**
- Displaying/deleting call charges **34**
- Diversion see call divert **25**
- DP (Dial pulsing) **51**
- DTMF (dual-tone multifrequency) **51**

E

- Enquiry call (internal) **41**
- Error beep **8**

F

- Factory setting
 - base station **50**
 - handset **46**
- Flash time **51**

G

- GAP standard **37**
- Guarantee **55**

H

- Handset
 - activating/deactivating **8**
 - all handsets ring ("Paging") **43**
 - automatic registration **35**
 - de-registering **37**
 - name of a handset **38**
 - operating **7**
 - operating times/charging time **56**
 - power consumption **56**
 - registration **35**
 - resetting to the factory setting **46**
- Handset volume **45**

I

- Internal dialling **12**
- Internal enquiry calls **41**
- Internal number **39**

K

- Keypad protection **8**
- Keys **III**

M

- Mailbox **15**
- Mailbox features **24**
- Maintenance **53**
- Making an external call **12**
- Making calls
 - answering a call **13**
 - external call **12**
 - internal dialling **12, 39**
- Medical equipment **4**
- Muting the microphone **14**

N

- Name of a handset **38**
- Network access list **19, 28**
 - deleting a single entry **20**
- Network access list (call-by-call)
 - displaying and changing an entry **19, 20**
 - entering a name **19**
 - storing an entry **17**
- Network provider **28, 29**
- Notebook function **22**

O

- Operating times of the handset **56**
- Operation see preparing the telephone **5**

P

- PABX **51**
 - switching to tone dialling **52**
- Paging **43**
- Pause **12**
- Power consumption **56**
- Power supply unit **4**
- Preparing the telephone **5**
- Preselection **30**
 - list with preselection **30**
 - list without preselection **30**
- Preselection, automatic **30**
- Protective plastic film **7**

R

- Range **5**
- Redialling list **16**
- Registering handsets **35**
- Repeater **49**
- Ring tone
 - base station setting **48**
 - handset setting **45**
- Ringback **27**
- Ringer melody (base station) **49**
- Ringer melody (handset) **45**
- Ringer volume (base station) **48**
- Ringer volume (handset) **45**

S

- Safety precautions **4**
- Service **55**

Index

Setting the language

display **44**

Settings **44**

display language **44**

Speed dialling **29**

Symbols **IV**

T

Technical Data **56**

Telephone number **17**

copying to the directory **22**

redialling list **16**

suppressing for the next call **24**


Time setting **9**

Toggling **26**

Tone dialling **52**

Troubleshooting **53**

Operating the telephone

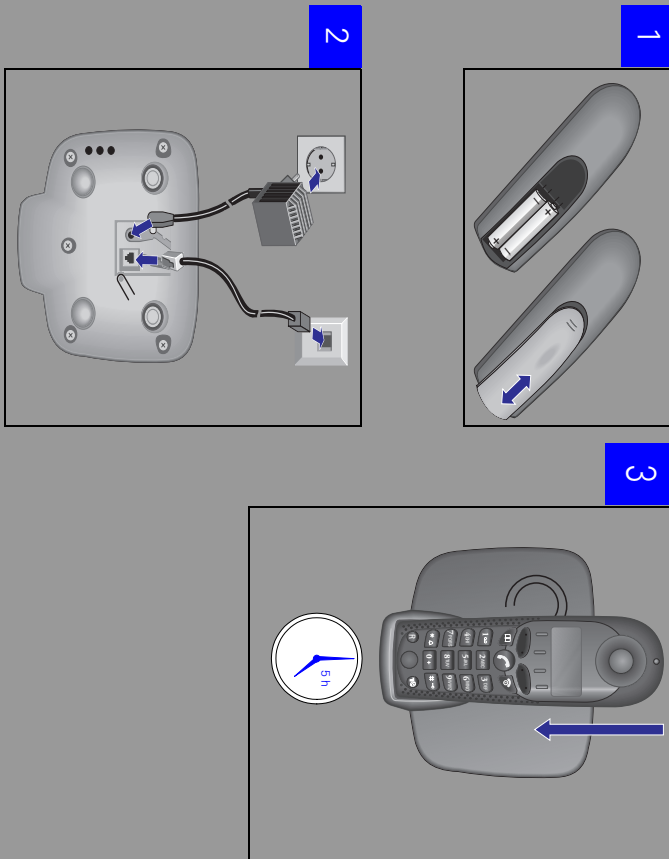

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 München

© Siemens AG 2001
All rights reserved. Subject to availability.
Right of modification reserved.
Printed in Germany (06/2001).

Siemens AG
<http://www.my-siemens.com>

Reference No.: A31008-G4010-B101-1-7619

