

# SIEMENS

Be inspired



ENGLISH

IL TELEFONO **ALESSI**

Design by Stefano Giovannoni

# Brief overview

## Signal strength

### Talk key

- ◆ Answer a call
- ◆ Initiate dialling
- ◆ Switch from handsfree to "earpiece" mode

### Control key

Opens the menu, directory, voice dialling. Navigation in the input field

### Handsfree Key

- ◆ Switch from "earpiece" to handsfree mode
- ◆ Lights up: Handsfree is activated
- ◆ Flashes: incoming call, automatic last number redial

### Open directory

### Key 1

Select answer machine/ T-NetBox (press for around 2 seconds)

### Star key

- ◆ Ringer on/off (press for approx. 2 seconds)
- ◆ Toggles between upper/ lower case and digits

### Recall key

Insert a dial pause (hold key down)

## Display (display screen)

### Charge status

- ☐ flat    🔌 fully charged
- ☐☐☐ flashes: battery is almost flat or is charging

### Current functions and display keys

The display keys give you access to the functions shown in the display.

### End call key, On/Off key

- ◆ End call
- ◆ Cancel function
- ◆ One menu level back (short press)
- ◆ Back to idle status (press for approx. 1 second)
- ◆ Handset on/off (press for approx. 2 seconds)

### Message key

- ◆ Accesses the lists of text messages, network mailbox, calls list/answering machine
- ◆ Flashes: new SMS, messages, calls

### Hash key

Keypad lock on/off (press for approx. 2 second)

### Speed dial list key

Open the speed dial list (short press)

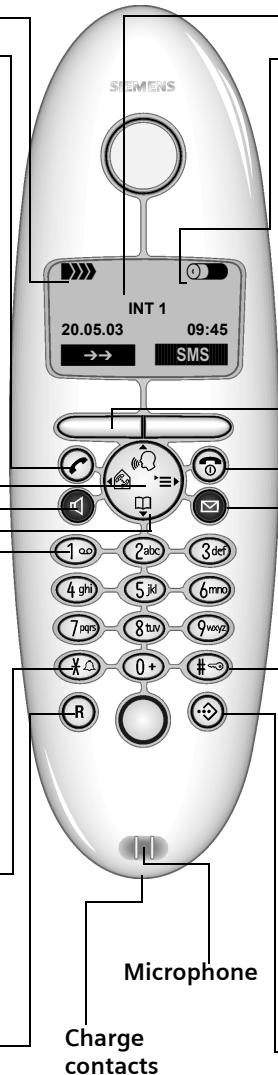


Illustration of a handset that is registered to a base with SMS functionality.

# Contents

<b>Brief overview</b> .....	<b>2</b>
<b>Safety precautions</b> .....	<b>5</b>
<b>Preparing to use your phone</b> .....	<b>6</b>
Preparing to use the handset .....	6
Manual registration .....	7
Changing the display language .....	8
Changing the base .....	8
Activating/deactivating the handset .....	8
Activating/deactivating the keypad lock .....	8
<b>Operating the telephone, menu guidance</b> .....	<b>9</b>
Keys .....	9
Main menu .....	10
<b>Date and Time</b> .....	<b>11</b>
Setting the date and the time .....	11
Setting the alarm clock .....	11
Setting an appointment .....	11
<b>Making calls</b> .....	<b>12</b>
Making external calls and ending a call .....	12
Internal calls, ending a call .....	12
Answering a call .....	13
Handsfree .....	13
Muting the handset .....	13
<b>Using the directory and other lists</b> .....	<b>13</b>
Directory and speed dial list .....	13
Managing entries in the directory and speed dial list .....	14
Voice-activated dialling .....	15
Linking a call-by-call number with a phone number .....	16
Last number redial list .....	17
Email directory .....	17
Display available memory .....	18
<b>Using several handsets</b> .....	<b>18</b>
Internal consultation calls .....	18
Accepting/rejecting call waiting during an internal call .....	18
Using a handset as a room monitor .....	18
Setting the Walk and Talk mode .....	20

## Contents

<b>Handset settings</b> .....	<b>21</b>
Activating/deactivating Auto Answer .....	21
Adjusting the loudspeaker volume .....	21
Changing the ringer tone .....	21
Activating/deactivating advisory tones .....	22
Restoring the handset factory settings .....	22
<b>Appendix</b> .....	<b>24</b>
Care and contact with liquid .....	24
Service (Customer Care) .....	24
Specifications .....	25
Character set chart .....	25
Predictive text .....	26
Warranty Certificate Ireland .....	27
<b>Index</b> .....	<b>28</b>

## Safety precautions



Only use **the power supply unit supplied**, as indicated on the underside of the device.



Fit only the **recommended rechargeable batteries (page 25)** of the same type! Use no other types of batteries or non-rechargeable batteries, as they could damage health and cause personal injury.



Ensure correct polarity when fitting rechargeable batteries, and use the battery type according to these instructions (you will see polarity symbols in the handset's battery compartments).



The operation of medical appliances may be affected. Be aware of the technical conditions within the particular environment (e.g. doctor's practice).



The handset may cause an intrusive 'hum' in hearing aids.



The handset is not watertight (page 24).



Drivers must not use their phones while driving (Walk and Talk function).



Switch off your phone while on board an aircraft (Walk and Talk function). Ensure that it cannot be switched on again accidentally.



Do not use the phone in environments subject to explosion hazard (e.g. auto paint shops).



Ensure that your IL TELEFONO ALESSI handset is accompanied by these instructions when you give it to others to use.



Dispose of the batteries and phone in accordance with environmental regulations.

*i*

Not all of the functions described in these instructions are available in all countries.

# Preparing to use your phone

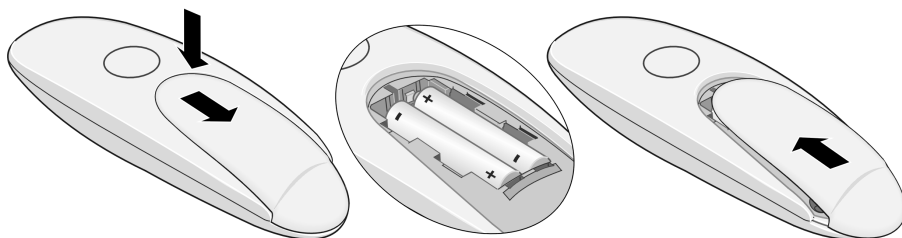
The pack contains:

one IL TELEFONO ALESSI handset, a charger, two batteries, a power supply unit with power cord, one set of operating instructions.

## Preparing to use the handset

The display is protected by a plastic film. **Remove the protective plastic film!**

## Inserting the batteries




1. **To open** the battery compartment, press down on the battery cover as shown and slide the cover **down** – see figure on left.
2. Insert the batteries **ensuring correct polarity** – see centre figure.
3. **To close** the battery compartment, position the cover so that it is **open by about 3 mm** then slide **up** until it closes with a click – see figure on right.




Use only the rechargeable batteries recommended on page 25! Never use conventional batteries (non-rechargeable) or other battery types as this may cause significant damage to health and property. For example, the jacket of the battery could be destroyed (hazardous). The phone could also malfunction or be damaged.

## Placing the handset into the base (registering) and charging the batteries

When you place the IL TELEFONO ALESSI handset into the base, it will register to the base **automatically**. Proceed step by step as follows:

1. Place the handset **vertically** in the base with the **display to the front**.
2. Wait till the handset has registered automatically to the base: This operation takes **around one minute**. While registration is in progress the screen displays **Regstr.Procedure** and **Base 1** flashes. When the handset has registered, the internal number that is assigned to it appears in the display (e.g. "INT 2").
3. Now leave the handset in the charger for the batteries to charge – the batteries are supplied uncharged. Battery charging is indicated in the top right of the display by the flashing battery icon .

	For the initial charge we recommend a continuous, uninterrupted charging period of five hours, whatever charge status is indicated. After a while the charge capacity of the batteries will decrease for technical reasons.
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------






The battery charging status is correctly displayed only after **uninterrupted charging/discharging**. You should therefore avoid removing the batteries unnecessarily and ending the charging process prematurely.

<i>i</i>	<ul style="list-style-type: none"> <li>◆ Once initial charging is complete, you can replace your handset in the base after each call in two different positions:             <ul style="list-style-type: none"> <li>– vertically, with the display to the front</li> <li>– horizontally, with the display down.</li> </ul>             Please ensure the handset is the right way round in this position. The battery charging contacts on the handset must touch the contacts on the base.           </li> <li>◆ Charging is controlled electronically. This ensures that the batteries are charged in a way that maximises their life.</li> <li>◆ The batteries heat up during charging. This is normal and not dangerous.</li> <li>◆ Never use non-Siemens chargers as these could damage the batteries.</li> </ul>
----------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## Manual registration

If automatic registration is interrupted or if you wish to use your IL TELEFONO ALESSI handset on a different Gigaset base (1000, 2000, 3000 or 4000 family), then you must register it **manually**. You must initiate handset registration on the handset and on the base.

### 1. On the handset

		Open the menu.
	Settings <span style="float: right; border: 1px solid black; padding: 0 5px;">OK</span>	Select the menu item and confirm.
	Register H/Set <span style="float: right; border: 1px solid black; padding: 0 5px;">OK</span>	Select the menu item and confirm.
	Base 1 <span style="float: right; border: 1px solid black; padding: 0 5px;">OK</span>	Select base (1–4) and confirm, e.g. <b>Base 1</b> .
	<span style="border: 1px solid black; padding: 0 5px;">OK</span>	Enter the system PIN of the base (the default is 0000) and confirm.

**Base 1** flashes in the display when the system PIN has been entered.









### 2. On the base

Please refer to the operating instructions for the base to find out how to initiate handset registration on the base.






## Preparing to use your phone

### Changing the display language

You can view the display texts in different languages.


 





		Open the menu.
	Settings 	Select the menu item and confirm.
	Language 	Select the menu item and confirm. The current language is checked ✓ (the default setting is English).
		Select a language and confirm.
		<b>Long press</b> (back to idle status).

You have selected a language in error:

Press   , select the correct language with  and then press  to confirm.


### Changing the base

If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (**Best Base**).

;  **Settings** ;  **Select Base** ;  
 (select registered base or **Best Base**) .



### Activating/deactivating the handset


To **activate**: Press the 'end call' key  **and hold**.

To **deactivate**: Press the 'end call' key  again in the idle status **and hold**.

The handset activates automatically when placed in the charger.

### Activating/deactivating the keypad lock

Press the hash key  **and hold** (the  icon appears in the display).

To **deactivate/unlock**: Press the hash key  **again** and hold.

The keypad lock deactivates automatically when you receive a call. It re-activates when the call is finished.

*i*


When the keypad lock is active, you cannot even call emergency numbers.



# Operating the telephone, menu guidance

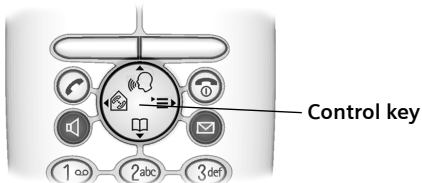
## Keys

### Control key





The control key has four arrows and associated icons. A certain function is activated depending on which side of the key you press. In the operating instructions, the side you must press is highlighted in black, e.g. key  for right = open menu.

You can also use the **control key** to execute many of the functions of the **right-hand display key**.

**Example:**



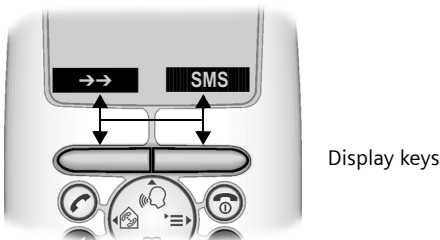
### Different functions of the control key:

	In the idle status	In lists and menus	In an input field
	Initiate voice-activated dialling (long press)	Scroll up	Move the cursor up a line
	Open directory	Scroll down	Move the cursor down a line
	Open the menu	Confirm the selected option (same as <b>OK</b> )	Move the cursor to the right
	Open list of handsets	Go back one menu level, or cancel	Move the cursor to the left

### Display keys







The display keys are the **horizontal rocker keys** just below the display. Their function changes depending on the particular operating situation. The current function is shown in the display directly above the key to which it relates.

**Example:**



## Operating the telephone, menu guidance

The various icons have the following meanings when the keys are pressed:



	Last number redial key: Open the list of the last 10 numbers you dialled.
	OK key: Confirm menu function or confirm an input and store.
	Menu key: Open the main menu. Open a status-dependent menu while making a call.
	Delete key: Delete input from right to left one character at a time.
	Escape key: Go back one menu level, or cancel the operation.
	Open email directory.

### Reverting to idle status from anywhere in the menu

Press the 'end call' key  for around 1 second, **or** do not press any key.

The display **automatically** reverts to the idle status after 2 minutes. Changes which you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or with **Save Entry** **OK** will be lost.

### Main menu

To open the main menu, press the right side of the control key  with the phone in the **idle status** and scroll to the required option with .

1	SMS	
2	Select Services	
3	Add. Features	The menu options that are available will depend on your base.
4	Calendar/Clock	
5	Audio Settings	
6	Call Charges	
7	H/Set Settings	
8	Base Settings	
9	Answer Machine	

# Date and Time

## Setting the date and the time

Correct date and time settings are essential if you want to know exactly when calls were received.

; **Calendar/Clock** **OK** ; **Date/Time** **OK** ; (enter day/month/year);  
 (to the next line) (enter hours/minutes);  
 (to the next line if necessary) (select the 12 or 24 hour clock display); **Save**,  
 (back to idle status).

If you have selected the 12 hour display, on the **Time:** line you can use the display key **am/pm** to toggle between **am** and **pm**.

## Setting the alarm clock

**Precondition:** The date and time have already been set (page 11).

### Activating and setting the alarm clock

; **Calendar/Clock** **OK** ; **Alarm Clock** **OK** .  
 (select **On**); (enter the wake-up time); **Save**; (return to idle status).

If you have selected the 12 hour display, on the **Time:** line you can use the display key **am/pm** to toggle between **am** and **pm**.

A wake-up call will only work when the handset is in the idle status, it will not work when the Room Monitor or Walk and Talk functions are activated, or during a call or an automatic redial.

**To find out how to set the volume and melody, turn to page 21.**

### Deactivating the alarm clock

The alarm clock is set to a particular time but you do not want it to ring.

; **Calendar/Clock** **OK** ; **Alarm Clock** **OK** ; (select **Off**); **Save**;  
 (return to idle status).

### Deactivating the wake-up call

Press the display key **Silence** or **any key**.

## Setting an appointment

You can use your handset to remind yourself of up to five appointments.


### Activating and setting an appointment

; **Calendar/Clock** **OK** ; **Set Appoints.** **OK** ; **Appoint. 2** (example) **OK** .  
 (select **On**); (enter day/month); (enter hours/minutes);  
**Edit**; (enter name) **OK** ; **Save**; (back to idle status).

Once set, an appointment is displayed with the icon.


## Making calls

An appointment call will only work when the handset is in the idle status, it will not work when the Room Monitor or Walk and Talk functions are activated, or during a call or an automatic redial.

If you have selected the 12 hour display, on the **Time:** line you can use the display key  to toggle between **am** and **pm**.



To find out how to set the volume and melody, turn to page 21.



### Deactivating an appointment call

When the appointment call sounds, you can deactivate it with .

### Viewing and deleting missed appointments, anniversaries etc.




;  **Calendar/Clock** ;  **Missed Dates** ;  select appointment/anniversary).

 <b>Delete</b>	Press the display key.
<b>... then</b>	
	<b>Long press</b> (back to idle status).


A missed appointment is indicated by , a missed anniversary by .

## Making calls

### Making external calls and ending a call

 (enter the number) and press  (the 'talk' key) – the sequence does not matter. To **end** a call/cancel dialling: press  ('end call' key).


 




#### Dialling pause

You can insert a dialling pause. To do this, press  for around 2 seconds. Now enter the telephone number.




### Internal calls, ending a call

Calls to other handsets that are registered to the same base are free of charge.




#### Calling a specific handset

;  (select handset); press . **Or:** Press   (example). To **end the call:** press  ('end call' key).

#### Calling all handsets ("group call")

; press  (star key). To **end the call:** press  ('end call' key).

## Answering a call



Your handset rings, the call is displayed and the handsfree key  flashes. Press  (Talk key) (or display key **Accept** or handsfree key ).

If the **Auto Answer** function is activated (page 21) you just need to lift the handset out of the charger to take the call.


If the **ringer is intrusive**, press the display key **Silence**. You can take the call so long as it is displayed on the screen.


## Handsfree

### Activating/deactivating handsfree

**Before you dial:**  (enter the number); press  (the handsfree key).

**During a call:** press  (the handsfree key).


To **deactivate:** press  (the Talk key).



If you wish to place the handset in the charger during a call you must press the handsfree key  and hold it down as you do so.

*i*

You should inform your caller that you intend to use the handsfree function before you activate it.


### Adjusting the volume while in handsfree mode during a call

A call is in progress and handsfree  is activated.

Press  (the handsfree key) **again**;  volume softer or louder; **Save**.

### Muting the handset


. The call is "held" (wait melody).


To **end the call:** press the display key .

## Using the directory and other lists

### Directory and speed dial list

You can store up to 200 numbers in the directory and the speed dial list.





You open the **directory** with the  key. You can store an anniversary/birthday for every directory entry and mark the entry as "VIP".

The **speed dial list** is a special directory in which you can store particularly important numbers such as private telephone numbers and prefixes of network providers (so-called "call-by-call numbers"). You open the speed dial list with the  key.






 



**The speed dial list is operated in just the same way as the directory, except for the way in which entries are stored.**

- ◆ The **EATONI** predictive text helps you input names (page 26, this feature is deactivated when you purchase your phone).

## Using the directory and other lists



 
- ◆ Please refer to the **Character Set Chart** (page 25) to see how to enter text correctly.
- ◆ You can enter up to 32 digits for a number and up to 16 letters for a name.
- ◆ When entering a number you can insert the required pause with ,  **Insert Pause**  or by pressing  for about 2 seconds.

### Storing a telephone number in the directory

 (open directory); **New Entry**  ;  (enter the number);  
 (to the next line);  (enter name);  (open menu), **Save Entry**   
(To enter an anniversary as well, **after** you have entered the name: press  to go to the **Annivers.:** line, press the display key **Edit** and enter the date. Press **Save.**); press  **and hold** (return to idle status).

To delete an anniversary, in the directory entry in the **field for the anniversary**, press the display key **Edit**, then when the display changes press the display key **Delete** and finally after another display change press **Save**.


### Anniversary reminder call






 



 
The handset sounds a reminder call with the selected ringer melody. The display shows the directory entry with   .

*i*

If your phone is connected to a PABX you may have to enter the access code (outside line code) as the first digit of your directory entry.




### Storing a telephone number in the speed dial list

You can assign one of the digits 0, 2–9 to **up to nine** entries on your speed dial list. When you press and hold one of these digits with the handset in the idle status, then press the Talk key , you are immediately connected to the telephone number that is assigned to that digit.

 
 
 
 

 (open speed dial list); **New Entry**  ;  (enter the number);  
 (to the next line);  (enter name);  (open menu); **Save Entry**   
(To enter a speed dial digit as well, **after** you have entered the name: press  to go to the **Enter key:** line, press  to select a digit [0, 2–9] for this number, then press the display key **Save**); press  **and hold** (back to idle status).


 




**Speed dial digits cannot be assigned more than once at a time.**

### Dialling with the directory/speed dial list

 or  (open directory/speed dial list);  (select entry); .

### Managing entries in the directory and speed dial list

To use one of the following menu functions, press the directory key  or the speed dial list key . Scroll to the entry with  and then press  to open the menu. Use the  key to scroll to the function you require.

**Or:**  or  ;  (enter first letter); if necessary scroll with  or  enter more letters of the name; .

Display Number	
Edit Entry	
Delete Entry	
VIP Entry	For the directory only (☺)
Copy and Edit	For the directory only (☺)
Copy Entry	
Delete List	
Copy List	
Available Memory	

Once you have selected an entry, press the display key **View** and then **Edit** to view / edit it.


 
 


 

### The "Mark as VIP" and "copy and edit" functions

You can mark the directory entries of particularly important callers as **VIP** (Very Important Person); this links a particular melody to them. You can then tell who is calling you from the ringer melody. **Precondition:** Calling Line Identification.

So that you do not have to enter a similar entry twice, you can create a **copy** and then **edit** that entry.

### Sending a single entry or complete list to a handset

You can send individual entries or the entire list to another II Telefono Alessi handset or a handset in the Gigaset 4000, 3000 or 2000 series that is registered to the same base. VIP settings, stored voice patterns and speed dial digits are not sent.


 or  (open directory/speed dial list);  (select entry);  
 (open menu);  **Copy Entry** **OK** or  **Copy List** **OK**);  
 (enter the internal number of the receiving handset); **OK** .

You can select further entries provided you confirm with the display key **Yes** after you have sent an entry. Select **No** to stop sending.

### Voice-activated dialling

With voice-activated dialling, you dial simply by speaking the name of the person you wish to call. To do this, you must first store a voice pattern, i.e. the name which you speak will be stored in the handset.



 
Up to four users can store/record a voice pattern per entry. Before he records a voice pattern, the user must "identify" himself, e.g. as **User 2**.

A **maximum** of 29 voice patterns can be stored for directory entries. An entry stored with a voice pattern is indicated by  in the voice directory.

### Recording a voice pattern for an existing directory entry

Record your voice pattern in quiet surroundings (holding the handset about 25 cm away).

#### Step 1: Open the directory for voice-activated dialling:

 (open directory);  (select entry); **Language**;  **User 2** (example) **OK** .

## Using the directory and other lists

### Step 2: Begin recording:

**record**; **OK** (Confirm the display prompt). Speak the name when prompted to do so by the display. Repeat the name when prompted again to do so. Your recording is stored automatically.

Press **⏪** and hold (return to idle status).

A message tells you if your speech pattern is **too much like** another user's. Close this message with **↶**, go back to the start of the voice pattern recording sequence and repeat the recording.

**Using voice-activated dialling:** Press **⏪** and hold and speak the name.

### Phone announces the caller's name

---

When you receive an external call, you hear the ringer and the telephone announces the caller's name.

**Preconditions:** Calling Line Identification. A voice pattern is stored (page 15).

### Activating/deactivating the name announcement

**⏪** (open menu); **⏪** **Audio Settings** **OK**; **⏪** **Ringer Settings** **OK**; **Ext. Calls** **OK**; 2x **⏪** (to the next-but-one line); activate/deactivate **⏪** (**Announce**); **Save**; press **⏪** and hold (return to idle status).

### Play the voice pattern

---

Open the directory for voice-activated dialling (see **Step 1**, page 15). **Now:**

**⏪** (select an entry); **Play**; press **⏪** and hold (back to idle status).

### Changing or deleting voice patterns

---

Open the directory for voice-activated dialling (see **Step 1**, page 15). **Now:**

**⏪** (select an entry); **⏪** (open menu); **Record Name** **OK** or **⏪** **Delete Name** **OK**; press **⏪** and hold (return to idle status).

Deleting a voice pattern does not affect the telephone number or name. The voice patterns of other users are also unaffected.

### Changing a user name

---

**⏪** (open directory); **⏪** (select an entry); **Language**; **⏪** **User 2** (example) **OK**; **Edit**; **⏪** (enter name) **Save**; press **⏪** and hold (return to idle status).

### Linking a call-by-call number with a phone number

---

This function can be used to put a network provider's prefix (which is stored in the speed dial list) in front of the telephone number ("linking").



**⏪** (open the speed dial list); **⏪** (select an entry); **>≡** (open menu); **Display Number**; **⏪** (open directory); **⏪** (select an entry) **OK**; or **⏪** enter the number; **⏪**.




## Last number redial list


 
The last number redial list contains the ten last dialled numbers.

### Manual last number redial


→→ (open last number redial list);  (select an entry); .

### Automatic redial

With this function the number is automatically dialled every 20 seconds. When the other party answers the call, press  (the Talk key). If the call is not answered, ringing stops after about 30 seconds. The function is cancelled after ten failed attempts.




Press  (the 'end call' key); →→ (open last number redial list);  (open menu);

**Automatic Redial** .

To **cancel** the redial: Press the display key  or **any key**.

### Managing entries in the last number redial list

You can use the following menu functions:

→→ (open the redial list);  (select an entry);  (open menu);  (select function).

Automatic Redial	
Display Number	
Copy to Directory	
Delete Entry	
Delete List	




## Email directory

You store email addresses in the email directory. You can store a maximum of 200 entries in the directory, email directory and speed dial list together.




Email directory entries are managed in the same way as normal phone directory entries page 14.




### Storing a new email address

#### Step 1: Open the email directory:




 (open directory);  **Deleting** .



#### Step 2: Create an email entry:

**New Entry** ;  (enter address);  (open menu);

(select , ".", "@" or the predictive text function as required ). With the predictive text activated, press  once long and once short.

#### Step 3: Save an email entry:

 (open menu); **Save Entry** ; press  **and hold** (return to idle status).

When you have selected an entry, press the display key , then  and enter the address. Save as described.

## Using several handsets

### Display available memory

The memory space is divided up between the directory, the speed dial list (page 13) and the email directory (page 17). The available memory of all these lists is displayed.

(open directory); (select entry); (open menu);  
 **Available Memory** **OK**; press **and hold** (return to idle status).

## Using several handsets

### Transferring a call to another handset

(open internal list); select (a particular handset or **Call All**); **OK**.

The internal user answers: press ('end call' key).

If he does not answer or is busy, the call will come back to you automatically (**Recall** appears in the display).

### Internal consultation calls

You can make an **internal** call while an **external** call is in progress.

(open internal list); (select handset), **OK**.

To **end the call**: press the display key **End** (back to outside caller).

### Accepting/rejecting call waiting during an internal call

If you get an external call while conducting an **internal** call, you will hear the call waiting tone (short tone). Press the display key **Accept** or **Reject**.

The rejected call waiting tone can still be heard at other registered handsets.

### Using a handset as a room monitor

With this function, a previously stored internal or external number is called when a set noise level in the room is reached. The room monitor **remains activated** on the handset even after you hang up.


The handset should be between 1 and 2 metres away from the baby.

The microphone must be directed towards the baby.

When the room monitor is activated, incoming calls to the handset which is near the baby are indicated **without a ring tone**, they are just shown on the display. The display and the key pad are not illuminated.

When entering an external phone number, make sure that the line to which you want the room monitor to be transferred is not blocked by an activated answering machine.

- ◆ If you redirect your room monitor to an external number, then you should tell that number's owner.
- ◆ The room monitor's call to an **external** phone number stops after about 90 seconds, to an **internal** number (handset) it stops after about 180 seconds (depending on the base).



	<b>Always check the settings of the room monitor before you leave home, e.g. sensitivity and phone line.</b>
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------

<i>i</i>	<p>The room monitor function severely curtails the handset's operating time. If necessary you should place the handset which is near the baby in the charger to ensure that the battery does not run down.</p> <p>The room monitor function can also be used in Walk and Talk mode.</p>
----------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## Activating the room monitor function and entering the 'call to' number for the first time


 


**Step 1: Open the input field:**   **Add. Features**  ; **Room Monitor**  ;

**Step 2: Activate room monitor:**   (in the **Room M.:** line, select **On**);



**Step 3: Enter the destination number:**   (to the next line); **Edit**;

Enter **internal** number: **INT**   (select handset)  ; **or:**





 
Enter **external** number:  ;  (open menu); **Save Entry**  ;

**Step 4: Set the sensitivity:** if necessary press   (to the next line);   ; **Save**.

The room monitor function is now activated.

Once the room monitor is activated, switch directly to the room monitor setting with   (open menu).

## Deactivating the room monitor

You can deactivate the room monitor **remotely** (depending on the base). Take the call from the room monitor and press      . The room monitor function will deactivate around 90 seconds after the call ends. The room monitor will make no further calls. The other room monitor functions on the handset (e.g. no ringer) will remain activated until you press the display key **Off** on the handset that is in the baby's room.

<i>i</i>	To reactivate the room monitor function with the same telephone number, you must turn on the activation again and save with <b>Save</b> .
----------	-------------------------------------------------------------------------------------------------------------------------------------------

## Using several handsets

### Setting the Walk and Talk mode

The Walk and Talk function allows two handsets (maximum range 300 metres) to call each other no matter how far they are from the base.


#### Precondition:



- ◆ Both handsets have been registered to the same base (recommended for the room monitor function) **or**
- ◆ Both handsets are registered to different bases and both are set to **Best Base** (page 8) **or**
- ◆ One of the handsets is not registered to any base and the registered handset is set to **Best Base or**
- ◆ Neither handset is registered to a base.

In Walk and Talk mode the handsets cannot be reached by incoming calls. The handset operating times are **greatly** curtailed.

### Activating/deactivating the Walk and Talk mode

 (open menu);  **Add. Features**  ;  **Walk and Talk** .

To **deactivate**: press the display key .

Press  (Talk key) or  (handsfree key). The call will go to all handsets that are in Walk and Talk mode. Ring and advisory tones are set in exactly the same way as if your handsets were in range of the base (page 21).









The ringer (page 22) and keypad lock (page 8) can be activated/deactivated in the Walk and Talk mode.

To open the menu, press the display key .



The Walk and Talk mode is retained even when you switch your handset off and back on.


### Using a handset in Walk and Talk mode as a room monitor

 (open menu);  **Room Monitor**  ;  (to the next line); select  (**On**);  (to the next line); select  (**Low or High**); .

The room monitor will only call handsets that are in the Walk and Talk mode.



**Always check the settings of the room monitor before you leave home, e.g. sensitivity and phone line. The distance between the handsets should not now be changed (range).**

Press the display key  on the room monitor handset to deactivate the room monitor. The handset returns to the normal Walk and Talk mode.

# Handset settings

## Activating/deactivating Auto Answer

If you have activated this function, when you get a call you can simply lift the handset out of its base or the charger without having to press the Talk key (the default setting is On).

(open menu); **Settings** ; **Auto Answer** (✓ = On);  
press **and hold** (return to idle status).

## Adjusting the loudspeaker volume

You can adjust the handsfree volume on five levels and the earpiece volume on three levels – you can even do this while an external call is in progress.

(open menu); **Audio Settings** ; **Handset Volume** ;  
 (select handsfree volume); (to the next line); (select earpiece volume); **Save**;  
press **and hold** (return to idle status).

## Ringer echo

You can enhance the sound quality of the long ringer melodies (4-10).

(open menu); **Audio Settings** ; **Ringer Echo** (✓ = On);  
press **and hold** (back to idle status).

## Changing the ringer tone

There are six different volumes and ten melodies for you to choose from.

### Settings for external calls, time control and name announcement

(open menu); **Audio Settings** ; **Ringer Settings** ; **Ext. Calls** ;  
 (select volume); (to the next line); (select melody);  
 (to the next line if necessary); (activate name announcement, page 16);

### Activating time control



Select **Time C**; (select **Time ctrl: On**); go to the line **From**: (4-digit input of the time period); go to the line **Until**: (4-digit input of the time period);  
 (enter ringer volume); **Save** (save time control); **Save** again (save setting);  
press **and hold** (back to idle status).


### Individual settings for internal calls, wake-up and appointments

(open menu); **Audio Settings** ; **Ringer Settings** ; (select function) ; (select volume); (to the next line) (select melody);  
**Save**. (With the **All** setting you must also confirm the prompt with **Yes**.)  
Press **and hold** (return to idle status).

## Handset settings

### Activating/deactivating the ringer

All handsets ring when there is an incoming call. To **deactivate** the ringer: Press the star key  and hold. The  icon appears in the display.



To **activate** the ringer: press the star key  and hold.


*i*

To cancel the ringer for the **current** call, press the display key **Silence**.

### Activating/deactivating the alert tone

When you deactivate the ringer you can activate an alert tone. When you get a call, you will hear a **short tone** (beep) instead of the ring tone.










Press the star key  and hold and **within 3 seconds** press the display key **Beep on**. You will now see  in the display.

To **deactivate**: press the star key  and hold.

 
### Activating/deactivating advisory tones

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following advisory tones can be activated and deactivated individually (the default setting is On).

- ◆ **Key click** (every key press is confirmed),
- ◆ **Acknowledge tones** (Confirmation tone, Error tone, End of menu tone),
- ◆ **Battery tone**.

 (open menu);  **Audio Settings** **OK**;  **Advisory Tones** **OK**;  
 (activate **Key Tones**);  (to the next line);  (activate **Confirm.**);  
 (to the next line);  (for **Battery**: select **On**, **Off** or **During Call**); **Save**;  
press  and hold (return to idle status).

### Restoring the handset factory settings

You can reset individual settings and changes you have made. This will not affect entries in the directory, the calls list, the email directory or the speed dial list, the handset's registration to the base and logos and melodies that you have loaded. Press  to cancel the reset.

 (open menu);  **Settings** **OK**;  **Reset Handset** **OK**; **Yes** (confirm the prompt);  
press  and hold (back to idle status)

## Factory settings of the handset

---

Earpiece volume	1	page 21
Handsfree volume	3	page 21
Ringer volume	5	page 21
Time control for ringer	deactivated	page 21
Ringer melody	1	page 21
Name announcement	deactivated	page 16
Auto answer	activated	page 21
Battery tone/Key click/Confirmation tone	activated	page 22
Display language	country specific	page 8
Alarm clock/appointment	deactivated	page 11/ page 11
Appointment name	deleted	page 11
Last number redial list	empty	page 17
Room monitor/room monitor sensitivity	deactivated/high	page 19

## Appendix

### Care and contact with liquid

Wipe the handset with a **damp** cloth (use no solvent) or an antistatic cloth. **Never** use a dry cloth. This can cause static.

If the handset should come into contact with liquid, **on no account switch the device on. Remove all batteries immediately.**

Allow the liquid to drain out of the device, and then pat all parts of the device dry.

Keep the handset with the batteries removed in a warm, dry place for at least 72 hours. In many cases, you will then be able to use it again.

### Service (Customer Care)

Our **online support** on the Internet:

[www.my-siemens.com/customer-care](http://www.my-siemens.com/customer-care)

If you need any repair work, or have a guarantee claim to submit, our

**Service-Center Ireland 18 50 77 72 77**

will give you quick and reliable assistance. Keep your till receipt handy.

**You will find more service numbers in the section entitled "Service" at the end of this booklet.**

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Country-specific features have been taken into account.

The IL TELEFONO ALESSI handset is approved for use in Switzerland and throughout the EU.

The CE mark certifies conformity of the device with the essential requirements of the R&TTE directive.

#### **Excerpt from the original declaration**

"We, Siemens AG, declare that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with the registration number "Q810820M" in compliance with ANNEX V of the R&TTE Directive 99/05/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/5/EC is ensured."

Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. In case of need, a copy of the original DoC can be made available via the company hotline.

 **0682**



## Specifications

### Recommended batteries: Nickel-metal-hydride (NiMH)

Sanyo Twicell 700; Sanyo Twicell 650; Panasonic 700 mAh; GP 700 mAh;  
YDT AAA SUPER 700; VARTA PhonePower AAA 700 mAh.

### Handset operating times/charging times

 








 
 

Capacity (mAh)	Standby time (hours)	Calling time (hours)	Charging time (hours)
700	approx. 170 (7 days)	approx. 13	approx. 5

These operating and charging times apply only when using the recommended batteries.








## Character set chart

### Standard characters

Press the relevant key repeatedly or hold it down:

	1 x	2 x	3 x	4 x	5 x	6 x	7 x	8 x	9 x	10 x	11 x	12 x	13 x	14 x
	Space	1	€	£	\$	¥	¤							
	a	b	c	2	ä	á	à	â	ã	ç				
	d	e	f	3	ë	é	è	ê						
	g	h	i	4	ï	í	ì	î						
	j	k	l	5										
	m	n	o	6	ö	ñ	ó	ò	ô	õ				
	p	q	r	s	7	ß								
	t	u	v	8	ü	ú	ù	û						
	w	x	y	z	9	ÿ	ý	æ	ø	å				
	.	,	?	!	0	+	-	:	;	‘	’	;	;	_
	abc-> Abc	Abc-> 123	*	/	(	)	<	=	>	%				
	#	@	\	&	§									

### Creating and editing text (without predictive text)

- ◆ The cursor is controlled with    .
- ◆ Characters (to the left of the cursor) are deleted with  **C**.
- ◆ Characters are added to the left of the cursor.
- ◆ To switch from upper case (first letter upper case, all other letters lower case) to lower case, press  before you key in the letter. Pressing  again switches from lower case letters to digits. Press again to return to upper case letters.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

## Appendix

- ◆ When you press a key **and hold it**, the characters of that key appear in the **bottom display line** and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field.
  - You can see in the display whether upper case, lower case or digits are selected:
  - "A" or "a" appears on the bottom display line when you make an entry in the directory.

### Order of directory entries

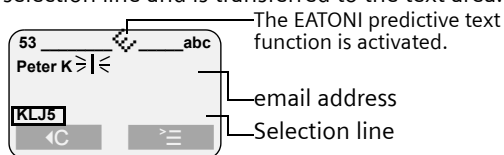
1. Space (shown here as **␣**)
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To work around the alphabetical order of the entries in the directory, insert a space before the name. This entry then goes to the first position (example: "**␣**Carla"). You can also number the entries with digits (e.g. "1Jane", "2Mary", "3John").

### Predictive text

The EATONI predictive text helps you to write names (in the directory, speed dial list or email directory).

Each key between **(0+)** and **(9www)** is assigned **several letters and characters** which all appear on a **selection line** immediately above the display keys (beneath the text area) as soon as you press a key. When you are entering letters, the letter you are **most probably** looking for is **reverse highlighted**. This letter is at the beginning of the selection line and is transferred to the text area.



If this letter is the one you want, confirm it by pressing the next key. If the letter selected by the EATONI is not the one you want, then press the **hash key** **(#=>)** repeatedly until the required letter appears reverse highlighted in the display line and is transferred to the text area.

<b>(*)</b>	Press the star key briefly <b>for about 2 seconds</b> . Switches from abc to Abc, from Abc to 123 and from 123 back to abc mode (applies to the next letter).
<b>(#=&gt;)</b>	Goes to the next letter in the selection list.

### Activating/deactivating predictive text

Predictive text is activated and deactivated according to specific functions.

**Precondition:** You are in a text input field (name in the directory, speed dial list or email directory).

**(\*)** (open menu); **(\*)** **Predictive Text** **OK** (**✓** = On)

Give the **(\*)** 'end call' key a **short press** to return to the text field. Now enter your text.

## Warranty Certificate Ireland

- ◆ Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:
- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
  - The device is opened (this is classed as third party intervention)
  - Repairs or other work is done by persons not authorised by Siemens.
  - Components on the printed circuit board are manipulated
  - The software is manipulated
  - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
  - Devices fitted with accessories not authorised by Siemens
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 – The Republic of Ireland.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To make a claim under this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

# Index

- A**
- Acknowledge tones . . . . . 22
  - Activate
    - alarm clock . . . . . 11
    - appointment . . . . . 11
    - handset . . . . . 8
    - keypad lock . . . . . 8
    - Walk and Talk . . . . . 20
  - Advisory tones . . . . . 22
  - Alarm clock . . . . . 11
  - Alert tone . . . . . 22
  - Anniversary . . . . . 12, 14
  - Appointment . . . . . 12
  - Auto answer . . . . . 21
- B**
- Batteries
    - charging . . . . . 6
    - display . . . . . 6
    - inserting . . . . . 6
    - recommended . . . . . 25
  - Battery tone . . . . . 22
  - Best base . . . . . 8
  - Block
    - keypad lock . . . . . 8
- C**
- Call (external/internal) . . . . . 12
  - Call waiting (internal call) . . . . . 18
  - Call-by-Call numbers . . . . . 13
  - Cancel (operation) . . . . . 10
  - Care of the telephone . . . . . 24
  - Changing the base . . . . . 8
  - Character set chart . . . . . 25
  - Charge contact . . . . . 2
  - Charge contacts . . . . . 2
  - Charging status display . . . . . 6
  - Confirmation tone . . . . . 22
  - Connect . . . . . 18
  - Consultation call (internal) . . . . . 18
  - Control key . . . . . 9
  - Cursor . . . . . 9
  - Customer Care (Service) . . . . . 24
  - Customer service . . . . . 24
- D**
- Date and time . . . . . 11
  - Date setting . . . . . 11
  - Deactivate
    - appointment call . . . . . 12
    - handset . . . . . 8
    - keypad lock . . . . . 8
    - ringer (handset) . . . . . 22
    - wake-up call . . . . . 11
  - Delete (voice pattern) . . . . . 16
  - Delete key . . . . . 10
  - Dialling pause . . . . . 12
  - Directory . . . . . 13
    - opening the . . . . . 9
    - order of entries . . . . . 26
    - send an entry to a handset . . . . . 15
    - storing a number . . . . . 14
  - Display
    - 12/24 hour display . . . . . 11, 12
    - changing language . . . . . 8
    - keys . . . . . 9
    - memory . . . . . 18
- E**
- Earpiece mode . . . . . 2
  - Earpiece volume . . . . . 21
  - EATONI, see Predictive text
  - email directory . . . . . 17
  - End call . . . . . 12
  - End call key . . . . . 2
  - Enter
    - appointment . . . . . 11
    - wake-up time . . . . . 11
  - Error/Error tone . . . . . 22
  - Escape key . . . . . 10
- F**
- Factory settings of the handset . . . . . 22
  - Fast access
    - set Key 1 . . . . . 2
- G**
- Group call . . . . . 12

- H**
- Handset
- activate/deactivate . . . . . 8
  - change for best reception . . . . . 8
  - change to another base . . . . . 8
  - list . . . . . 9
  - muting . . . . . 13
  - operating and charging times . . . . . 25
  - preparing to use . . . . . 6
  - register on another base . . . . . 8
  - restore factory settings . . . . . 22
  - use as room monitor . . . . . 18
- Handset charging times . . . . . 25
- Handsfree . . . . . 13
- key . . . . . 2
- Hash key . . . . . 2, 8
- Hearing aids . . . . . 5
- I**
- Internal
- consultation . . . . . 18
  - making calls . . . . . 12
- K**
- Key 1 (fast access) . . . . . 2
- Keys**
- cancel . . . . . 10
  - control key . . . . . 9
  - display keys . . . . . 9
  - Escape/Menu/Delete/OK . . . . . 10
  - key click . . . . . 22
  - key press (confirmation tone) . . . . . 22
  - keypad lock . . . . . 8
  - last number redial key . . . . . 10
- L**
- Language, see Display
- Last number redial . . . . . 17
- List
- email directory . . . . . 17
  - handsets . . . . . 9
- Loudspeaker volume . . . . . 21
- M**
- Making calls . . . . . 13
- answering a call . . . . . 13
  - external . . . . . 12
- Medical appliances . . . . . 5
- Memory . . . . . 18
- Menu
- back one menu level . . . . . 10
  - end tone . . . . . 22
  - guidance through the menu . . . . . 9
  - key . . . . . 10
  - opening the . . . . . 9
- Messages
- key . . . . . 2
- Microphone . . . . . 2
- Missed
- anniversary . . . . . 12
  - appointment . . . . . 12
- Muting (handset) . . . . . 13
- N**
- Network provider (numbers list) . . . . . 13
- Number, see also Tel. Number or Entry . . . . . 14
- O**
- On/Off key . . . . . 2
- Open
- directory . . . . . 9
  - menu . . . . . 9
- Operating time
- in Walk and Talk mode . . . . . 20
  - of the handset . . . . . 25
  - of the room monitor . . . . . 19
- Operation (preparing to use your phone) . . . . . 6
- Order in directory . . . . . 26
- P**
- Pack contents . . . . . 6
- Play (voice pattern) . . . . . 16
- Power supply unit . . . . . 5
- Predictive text . . . . . 26
- Preparing to use (the phone) . . . . . 6
- Protective plastic film . . . . . 6
- R**
- Recall key . . . . . 2
- Reminder call . . . . . 14
- Ringer . . . . . 21
- Room monitor . . . . . 18

## Index

<b>S</b>	
Safety precautions . . . . .	5
Saving	
directory entry . . . . .	14
Select (menu option) . . . . .	9
Select option (menu) . . . . .	9
Send a directory entry . . . . .	15
Service . . . . .	24
Setting	
alarm clock . . . . .	11
appointment . . . . .	11
date . . . . .	11
display language . . . . .	8
earpiece volume . . . . .	21
loudspeaker volume . . . . .	21
ringer volume . . . . .	21
time . . . . .	11
Signal tone, see Advisory tones . . . . .	22
Specifications . . . . .	25
Speed dial key . . . . .	13
Speed dial list . . . . .	13
store a number . . . . .	14
Speed dial list key . . . . .	2
Star key . . . . .	2
Storing	
speed dial list entry . . . . .	14
Switch off, see Deactivate . . . . .	11
<b>T</b>	
Talk key . . . . .	2
Telephone number	
pick from directory . . . . .	15
store (directory) . . . . .	14
Time setting . . . . .	11
Tone	
error tone . . . . .	22
Tone (confirmation/error/batt./ end of menu) . . . . .	22
<b>V</b>	
VIP (directory entry) . . . . .	15
Voice patterns . . . . .	16
Voice-activated dialling . . . . .	9, 15
Volume . . . . .	21
<b>W</b>	
Wait melody . . . . .	13
Wake-up call . . . . .	11
Walk and Talk . . . . .	20
Warning tone, see Advisory tones . . . . .	22
Warranty . . . . .	27

## Service

---

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

[www.my-siemens.com/customer-care](http://www.my-siemens.com/customer-care).

Abu Dhabi . . . . .	0 26 42 38 00	Luxembourg . . . . .	43 84 33 99
Argentina . . . . .	0 80 08 88 98 78	Macedonia . . . . .	02 13 14 84
Australia . . . . .	18 00 62 24 14	Malaysia . . . . .	03 21 63 11 18
Austria . . . . .	05 17 07 50 04	Malta . . . . .	00 35 32 14 94 06 32
Bahrain . . . . .	40 42 34	Mauritius . . . . .	2 11 62 13
Bangladesh . . . . .	0 17 52 74 47	Mexico . . . . .	01 80 07 11 00 03
Belgium . . . . .	0 78 15 22 21	Morocco . . . . .	22 66 92 09
Bosnia Herzegovina . . . . .	0 33 27 66 49	Netherlands . . . . .	0900-3333102
Brazil . . . . .	0 80 07 07 12 48	New Zealand . . . . .	08 00 27 43 63
Brunei . . . . .	02 43 08 01	Norway . . . . .	22 70 84 00
Bulgaria . . . . .	02 73 94 88	Oman . . . . .	79 10 12
Cambodia . . . . .	12 80 05 00	Pakistan . . . . .	02 15 66 22 00
Canada . . . . .	1 88 87 77 02 11	Philippines . . . . .	0 27 57 11 18
China . . . . .	0 21 50 31 81 49	Poland . . . . .	08 01 30 00 30
Croatia . . . . .	0 16 10 53 81	Portugal . . . . .	8 00 85 32 04
Czech Republic . . . . .	02 33 03 27 27	Qatar . . . . .	04 32 20 10
Denmark . . . . .	35 25 86 00	Romania . . . . .	02 12 04 60 00
Dubai . . . . .	0 43 96 64 33	Russia . . . . .	(800) 200 10 10
Egypt . . . . .	0 23 33 41 11	Saudi Arabia . . . . .	0 22 26 00 43
Estonia . . . . .	06 30 47 97	Serbia . . . . .	01 13 22 84 85
Finland . . . . .	09 22 94 37 00	Singapore . . . . .	62 27 11 18
France . . . . .	01 56 38 42 00	Slovak Republic . . . . .	02 59 68 22 66
Germany . . . . .	01805 333 222	Slovenia . . . . .	0 14 74 63 36
Greece . . . . .	0 80 11 11 11 16	South Africa . . . . .	08 60 10 11 57
Hong Kong . . . . .	28 61 11 18	Spain . . . . .	9 02 11 50 61
Hungary . . . . .	06 14 71 24 44	Sweden . . . . .	0 87 50 99 11
Iceland . . . . .	5 11 30 00	Switzerland . . . . .	08 48 21 20 00
India . . . . .	01 13 73 85 89 - 98	Taiwan . . . . .	02 25 18 65 04
Indonesia . . . . .	0 21 46 82 60 81	Thailand . . . . .	0 22 68 11 18
Ireland . . . . .	18 50 77 72 77	Tunisia . . . . .	0 71 86 19 02
Italy . . . . .	02-243 64400	Turkey . . . . .	0 21 65 79 71 00
Ivory Coast . . . . .	80 00 03 33	Ukraine . . . . .	8 80 05 01 00 00
Jordan . . . . .	0 64 39 86 42	United Arab Emirates . . . . .	0 43 31 95 78
Kenya . . . . .	2 72 37 17	United Kingdom . . . . .	0 87 05 33 44 11
Kuwait . . . . .	2 45 41 78	USA . . . . .	1 88 87 77 02 11
Latvia . . . . .	7 50 11 14	Vietnam . . . . .	45 63 22 44
Lebanon . . . . .	01 44 30 43		
Libya . . . . .	02 13 50 28 82		
Lithuania . . . . .	8 22 74 20 10		