



## Welcome


Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V3 GSM wireless phone.

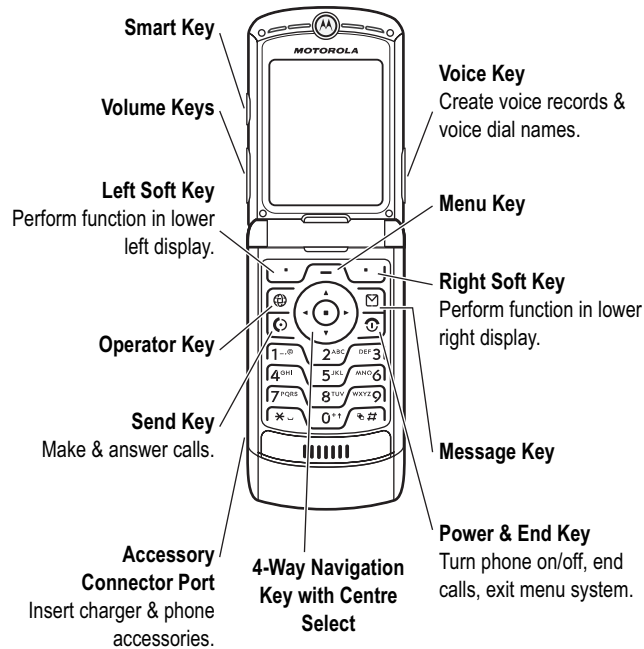 


## Check It Out!

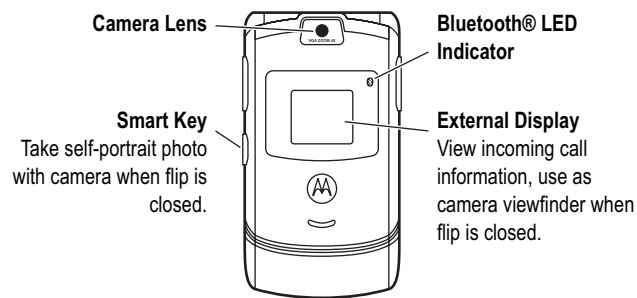

Feature	Description
<b>Take Photo</b>	Press <b>CAMERA</b> (ﻛﻤ) or press  > <b>Multimedia</b> > <b>Camera</b> to activate the camera, point lens at subject, press <b>CAPTURE</b> (ﻛﻤ) to take a photo.
<b>Take Self-Portrait</b> (flip closed)	Activate the camera, close the flip, use viewfinder to aim lens, press smart key to take a photo.
<b>Send Photo</b>	Send a photo to a phone number or email address: Take photo, then press <b>STORE</b> (ﻛﻤ) > <b>Send In Message</b> .
<b>Set Photo as Picture ID</b>	Assign a photo to a phonebook entry to allow picture caller ID: Take photo, then press <b>STORE</b> (ﻛﻤ) > <b>Apply as Phonebook Entry</b> .

Feature	Description
<b>Send Multimedia Message</b>	Send a multimedia message with pictures, animations, sounds, and videos:  ☑ > <b>New Message</b> > <b>New Multimedia Msg</b>
<b>Wireless Connection</b>	Set up a Bluetooth® wireless connection to a headset accessory, car kit, or external device: ⏪ > <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Setup</b> > <b>Power</b> > <b>On</b> , press <b>BACK</b> (⏩), press > <b>Handsfree</b> > <b>(Look For Devices)</b>



[www.motorola.com](http://www.motorola.com)



MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2004



#### **Software Copyright Notice**

  The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.




4 - Check It Out!

  





## Contents

---

 
<b>Getting Started</b> .....	15
About This Guide .....	15
Installing the SIM Card .....	16
Battery Use .....	16
Installing the Battery .....	18
Charging the Battery .....	18
Turning Your Phone On .....	20
Turning Your Phone Off .....	20
Adjusting Volume .....	21
Making a Call .....	21
Answering a Call .....	22
Viewing Your Phone Number .....	22
<b>Highlight Features</b> .....	23
Taking and Sending a Photo .....	23
Sending a Multimedia Message .....	26
Using a Bluetooth® Wireless Connection .....	29
<b>Learning to Use Your Phone</b> .....	32
Using the Display .....	32
Using the 4-Way Navigation Key .....	37
Using the Operator Key .....	37
Using the Message Key .....	37
Using Menus .....	38
Entering Text .....	40
Using the Smart Key .....	51
Using the External Display .....	51
Using the Handsfree Speaker .....	53



Changing a Code, PIN, or Password . . . . .	53
Locking and Unlocking Your Phone . . . . .	53
If You Forget a Code, PIN, or Password . . . . .	55
Using the Phonebook . . . . .	55
<b>Setting Up Your Phone . . . . .</b>	<b>58</b>
Setting a Ring Style . . . . .	58
Changing the Call Alert . . . . .	59
Setting the Time and Date . . . . .	59
Setting a Wallpaper Image . . . . .	60
Setting a Screen Saver Image . . . . .	61
Changing Phone Skin . . . . .	62
Setting a Phone Theme . . . . .	62
Setting Answer Options . . . . .	63
Setting Display Brightness . . . . .	64
Adjusting the Backlight . . . . .	64
Setting Display Timeout . . . . .	64
Storing Your Name and Phone Number . . . . .	65
<b>Calling Features . . . . .</b>	<b>66</b>
Turning Off a Call Alert . . . . .	66
Viewing Recent Calls . . . . .	66
Redialling a Number . . . . .	68
Using Automatic Redial . . . . .	68
Returning an Unanswered Call . . . . .	69
Using the Notepad . . . . .	69
Putting a Call On Hold or Mute . . . . .	70
Using Call Waiting . . . . .	70
Using Caller ID (Incoming Calls) . . . . .	71
Calling an Emergency Number . . . . .	71
Dialling International Numbers . . . . .	71
Calling With 1-Touch Dial . . . . .	72

    

Using Voicemail . . . . .	72
Changing the Active Line . . . . .	74
<b>Phone Features . . . . .</b>	<b>75</b>
Main Menu . . . . .	75
Settings Menu . . . . .	76
Feature Quick Reference . . . . .	77
Calling Features . . . . .	77
Messages . . . . .	78
Phonebook . . . . .	79
Personalising Features . . . . .	81
Instant Messaging . . . . .	82
Chat . . . . .	83
Email . . . . .	84
Menu Features . . . . .	84
Special Dialling Features . . . . .	85
Call Monitoring . . . . .	85
Handsfree Features . . . . .	86
Data and Fax Calls . . . . .	87
Bluetooth® Wireless Connections . . . . .	87
Network Features . . . . .	89
Personal Organiser Features . . . . .	89
Security . . . . .	91
News and Entertainment . . . . .	91
<b>Specific Absorption Rate Data . . . . .</b>	<b>94</b>
<b>Index . . . . .</b>	<b>96</b>

 

## ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

### ***Exposure To Radio Frequency (RF) Energy***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

 
 
### ***Operational Precautions***

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

### ***External Antenna Care***

Use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorised antennas may result in non-compliance with the local regulatory requirements in your country.





### **Phone Operation**

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

### **Body-Worn Operation**

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimetres) from your body when transmitting.

### **Data Operation**

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimetres) from your body.

### **Approved Accessories**

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at [www.Motorola.com](http://www.Motorola.com).

### **RF Energy Interference/Compatibility**

**Note:** *Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.*



### **Facilities**

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

### **Aircraft**

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

 
 
### **Medical Devices**

#### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimetres) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimetres) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.




#### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

#### **Other Medical Devices**

 If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your GP may be able to assist you in obtaining this information.



### **Use While Driving**

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

### **Operational Warnings**

#### **For Vehicles With an Air Bag**

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

#### **Potentially Explosive Atmospheres**

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as "Intrinsically Safe." Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** *The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.*






### **Blasting Caps and Areas**

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

### **Batteries**

 
Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, bag, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

### **Seizures/Blackouts**

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television





or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

 
 
- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.



### ***Repetitive Motion Injuries***

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

  - Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.




### European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with



- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

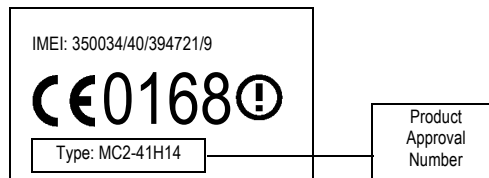

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte) - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site

### France Indoor Only



**Note:** If your phone type MQ3-4411H11 carries the alert mark, then your phone's Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors.

## Getting Started

---

### About This Guide

This guide describes the basic features of your Motorola wireless phone.



To obtain a copy of this guide, see the Motorola Web site at:

<http://hellomoto.com>

### Selecting a Menu Feature

Use the menu system to access your phone's features. This guide shows you how to select a menu feature from the home screen as follows:

**Find the Feature**       > **Recent Calls** > **Dialled Calls**

This example shows that, from the home screen, you must press the menu key  to open the menu, scroll to and select  **Recent Calls**, then scroll to and select **Dialled Calls**.

Press the 4-way navigation key  to scroll and highlight a menu feature. Press **SELECT** () to select the highlighted menu feature.

### Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

### Optional Accessories




This label identifies a feature that requires an optional Motorola Original™ accessory.

### Installing the SIM Card

Your *Subscriber Identity Module* (SIM) card contains your phone number, service details, and phonebook/message memory.

**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Slide the SIM card under the retention strap to insert it into the card slot as shown below:

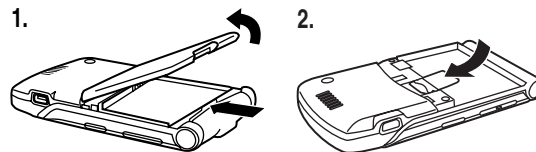

### Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector; and your voice, data, and other application usage patterns.

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.



To maximise your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $45^{\circ}\text{C}$  ( $113^{\circ}\text{F}$ ). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.




The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods.

**Warning:** Never dispose of batteries in a fire because they may explode.

### **Installing the Battery**



Your phone is designed to use only Motorola Original batteries and accessories.

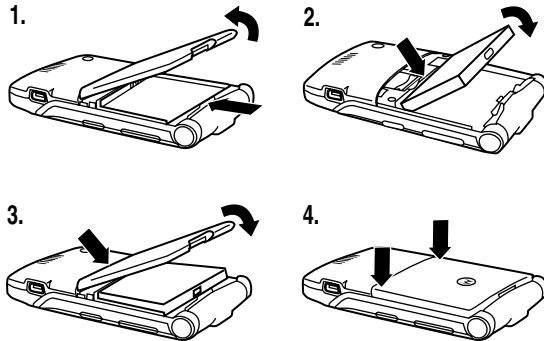


### **Charging the Battery**

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

**Tip:** The angle connector provided with your phone makes it easier for you to use the phone with an attached battery charger or phone accessory.

**Action**

- 1 Insert the travel charger plug into the detachable angle connector as shown.
- 2 Insert the angle connector into the USB connector port on your phone.

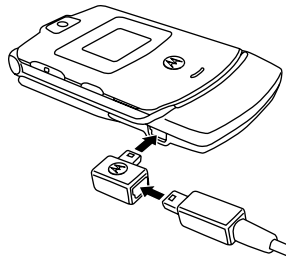

- 3 Plug the other end of the travel charger into the appropriate electrical outlet.


**Note:** It may take up to 10 seconds for your phone to provide a visible or audible indication that the battery is charging.

- 4 When your phone indicates **Charge Complete**, remove the travel charger and angle connector.


**Note:** You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.


## Turning Your Phone On

### Action


- 1 Press and hold the power key  for 2 seconds to turn the phone on.



**Note:** It may take up to 4 seconds for the display to illuminate after you turn the phone on.

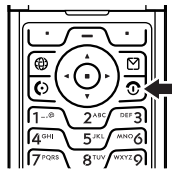

- 2 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.


**Caution:** If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

  - 3 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.

At startup, you may be prompted to personalise your phone. Select **YES** () to set personal phone options, or **NO** () to go to the home screen. For more information about personalising your phone, see page 81.

## Turning Your Phone Off


### Action

Press and hold the power key  for 2 seconds to turn the phone off.

## Adjusting Volume

Press the up or down volume keys to:

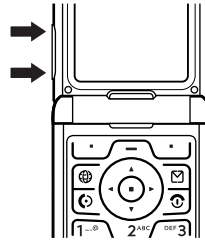

- silence an incoming call alert
- increase or decrease earpiece volume during a call
- increase or decrease ringer volume when the home screen is visible (flip must be open)



**Tip:** At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to switch back to vibrate alert, then ring alert.

## Making a Call

You must be in the home screen to dial a phone number (see page 32).

	Press	To
1	keypad keys	dial the phone number
2		make the call
3		end the call and "hang up" the phone when you are finished



**Tip:** You can also close the phone flip to end the call.

## Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

When the phone flip is active, open the phone to answer the call. (To activate, press  $\sqrt{-}$  > **Settings** > **In Call Setup** > **Answer Options** > **Open To Answer**.)

If the phone flip is **not** active:

Press	To
1  or <b>ANSWER</b> ( $\sqrt{-}$ )	answer the call
2 	end the call and "hang up" the phone when you are finished

## Viewing Your Phone Number

To view your phone number from the home screen, press  $\sqrt{-}$   $\sqrt{*#}$ .

While you are on a call, press  $\sqrt{-}$  > **My Tel. Numbers**.

**Note:** Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 65. If you do not know your phone number, contact your service provider.

## Highlight Features

You can do much more with your phone than make and receive calls!


### Taking and Sending a Photo

**Shortcut:** From the home screen, press **CAMERA** (☺) to activate the camera.


To activate your phone's camera from the menu system:

**Find the Feature**      ☺ > **Multimedia** > **Camera**


The active viewfinder image appears on your display.

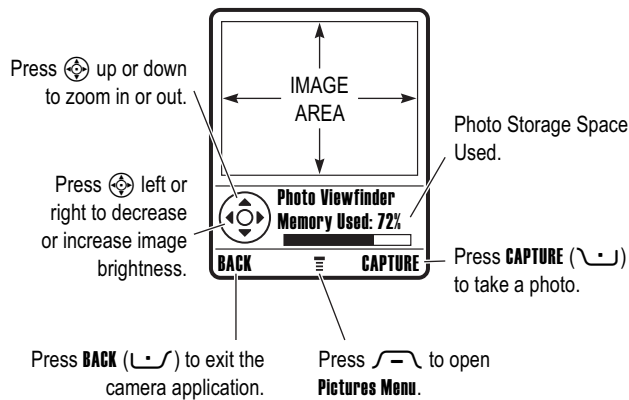

Point the camera lens at the photo subject, then:

Press	To
1 <b>CAPTURE</b> ( \ . )	take a photo
2 <b>STORE</b> ( \ . )	view storage options If you choose to store the photo, continue to step 3.
or	
<b>DISCARD</b> ( \ . )	delete the photo and return to active viewfinder
3 	scroll to <b>Send in Message, Store Only,</b> <b>Apply as Wallpaper, Apply as Screen Saver, or</b> <b>Apply as Phonebook Entry</b>
4 <b>SELECT</b> ( \ . )	perform the storage option

### Taking a Self-Portrait

 Action
1 From the home screen, press <b>CAMERA</b> ( \ . ) or press  > <b>Multimedia</b> > <b>Camera</b> to activate the camera, then close the flip. or Close the flip, then press and hold the smart key to activate the camera and external display viewfinder.
2 Use the external viewfinder to aim the camera lens.
3 Press the smart key to take a photo.




**Action**

- 4 Wait 5 seconds for your phone to save the photo and reset the external viewfinder.
- or
- Open the flip to store or discard the photo.

**Adjusting Camera Settings**

Press  to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:

Option	Description
<b>Go To Pictures</b>	View pictures and photos stored on your phone.
<b>Auto-Timed Capture</b>	Set a timer for the camera to take a photo.
<b>Pictures Setup</b>	Open the setup menu to adjust the following settings:
	<ul style="list-style-type: none"> <li>• <b>Auto Repeat:</b> Return to the beginning when the last picture displays in a picture album slideshow.</li> <li>• <b>Shuffle:</b> Set pictures to display randomly when viewing a picture album slideshow.</li> <li>• <b>Allow Alert:</b> Enable or disable all phone sound/vibration alerts when taking a picture. </li> <li>• <b>Lighting Conditions:</b> Set to <b>Automatic</b>, <b>Sunny</b>, <b>Cloudy</b>, <b>Indoor (Home)</b>, <b>Indoor (Office)</b>, or <b>Night</b>.</li> <li>• <b>Exposure:</b> Set to <b>+2</b>, <b>+1</b>, <b>0</b>, <b>-1</b>, or <b>-2</b>.</li> </ul>

Option	Description
<ul style="list-style-type: none"> <li>• <b>Resolution:</b> Set the camera to capture photos at the following resolutions: <b>MMS</b> (160x120 pixels), <b>Medium</b> (320x240 pixels), or <b>High</b> (640x480 pixels)</li> <li>• <b>Shutter Tone:</b> Activate a tone that sounds when you take a photo. Can be set to <b>None</b>, <b>Chimp</b>, <b>Quack</b>, <b>Flix</b>, <b>Boing</b>, or <b>Click</b>.</li> </ul>	
<b>View Free Space</b>	See how much memory remains for storing pictures.

### **Sending a Multimedia Message**












A *Multimedia Messaging Service* (MMS) multimedia message contains one or more pages with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and video clips). You can send a multimedia message to other wireless phone users, and to email addresses.

 

**Tip:** The layout of all pages in a multimedia message is defined by the layout of the first page. To display a media object at the top of the page, insert it in the first half of the message text. To display a media object at the bottom of the page, insert it in the second half of the message text.






**Find the Feature**      > **New Message** > **New Multimedia Msg**

Press	To
1 keypad keys	enter text on the page
2	open the <b>MMS Menu</b>
3	scroll to <b>Insert</b>
4 <b>SELECT</b> ()	display a list of items you can insert

Press	To
5 	scroll to <b>Picture, Voice Record, Sound, Video, New Page, Quick Note, or Contact Info</b>
6 <b>SELECT</b> (  )	select the file type
7 	highlight the file you want
8 <b>SELECT</b> (  )	insert the file  To add another page to the message, continue to step 9.
9 	open the <b>MMS Menu</b> to insert a new page
10 	scroll to <b>Insert</b>
11 <b>SELECT</b> (  )	display a list of items you can insert
12 	scroll to <b>New Page</b>
13 <b>SELECT</b> (  )	insert a new page after the current page  Repeat steps 1 to 8 to enter contents for the new page.

When you finish composing the multimedia message:

Press	To
1 <b>OK</b> (  )	store the message
2 	scroll to a <b>Send To</b> option:  Highlight an existing phonebook entry.  Or highlight <b>(One Time Entry)</b> to enter one or more phone numbers or email addresses.  Or highlight <b>(New Phonebook Entry)</b> to enter a number/address and add it to the phonebook.

<b>Press</b>	<b>To</b>
<b>3</b> <b>ADD</b> (↵)	add the phonebook entry to the list of recipients  Repeat steps 2 and 3 to add additional phonebook entries to the list.
<b>or</b>	
<b>SELECT</b> (↵)	select <b>[One Time Entry]</b> or <b>[New Phonebook Entry]</b>
<b>4</b> <b>DONE</b> (↵)	store the numbers/addresses
<b>5</b> 	scroll to <b>Subject</b>
	
<b>6</b> <b>CHANGE</b> (↵)	select <b>Subject</b>
<b>7</b> keypad keys	enter the subject
<b>8</b> <b>OK</b> (↵)	store the subject
<b>9</b> <b>CHANGE</b> (↵)	select <b>Attachments</b> to attach a file to the message, if desired
<b>10</b> 	scroll to <b>Picture, Sounds, or Video</b>
<b>11</b> <b>SELECT</b> (↵)	select the file type
<b>12</b> 	highlight the file you want
<b>13</b> <b>SELECT</b> (↵)	attach the file
<b>14</b> <b>BACK</b> (↵)	return to the message editor
<b>15</b> 	scroll to <b>Receipt</b> to request a receipt, if desired
<b>16</b> <b>CHANGE</b> (↵)	select <b>Receipt</b>
<b>17</b> <b>ADD</b> (↵) or <b>REMOVE</b> (↵)	activate/deactivate the delivery report

Press	To
18 <b>DONE</b> (↵)	return to the message editor
19 <b>SEND</b> (↵)	send the message
or	
↵	view message details, save the message in the drafts folder, or cancel the message

### Using a Bluetooth® Wireless Connection

Your phone supports Bluetooth wireless connections. You can set up a wireless link with a Bluetooth headset or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronise data.

#### France Indoor Only



*Note: If your phone type MQ3-4411H11 carries the alert mark, then your phone's Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors.*

 
### Turning Bluetooth On or Off

The preferred method for connecting your phone to a Bluetooth headset or handsfree car kit is to turn on Bluetooth on your phone, then connect your phone to the headset or car kit.

To turn Bluetooth on:

#### Find the Feature

↵ > Settings > Connection  
> Bluetooth Link > Setup > Power > On



This procedure turns Bluetooth on and leaves it on until you turn it off. When your phone's Bluetooth power is on, your handsfree accessory can automatically reconnect to the phone when you turn on the accessory or move it within range of the phone.

**Note:** To extend battery life, use the above procedure and set Bluetooth power to **Off** when not in use.

### Searching for Other Devices

To connect your phone to a Bluetooth headset or handsfree device:

#### Find the Feature

> **Settings** > **Connection**  
> **Bluetooth Link** > **Handsfree**  
> **(Look For Devices)**

 
 
 
 
If Bluetooth is turned off, your phone asks if you want to **Temporarily Power On?** Bluetooth. Press **YES** () to proceed. Alternatively, set **Power** to **On** in the **Setup** menu to turn Bluetooth on and leave it on.

 
Your phone scans for and displays a list of device(s) located within range of the phone.

**Note:** If your phone is already connected to a device, you must disconnect from it to search for other devices.

To connect to a device, highlight the device name and press **SELECT** ()

The device may request permission to bond with your phone. Select **YES** () and enter the correct PIN code to create a secure connection with the device. When the connection is made, the Bluetooth indicator displays in the home screen, and the external Bluetooth LED indicator flashes.






### **Sending Objects to Another Device**


You can use a Bluetooth wireless connection to send a picture, sound, video, phonebook entry, datebook event, or bookmark from your phone to another phone, computer, or hand-held device.
 
#### **Sending a Picture, Sound, or Video**





Highlight the object on your phone that you want to send to the other device, then press  > **Copy**.

Select a recognised device name listed in the **Object Exchange** menu, or **(Look For Devices)** to search for the device to which you want to send the object.

#### **Sending a Phonebook Entry, Datebook Event, or Bookmark**

 Highlight the item on your phone that you want to send to the other device, then press  > **Send**.

    Select a recognised device name listed in the **Object Exchange** menu, or **(Look For Devices)** to search for the device to which you want to send the item.





 
## Learning to Use Your Phone



See page 1 for a basic phone diagram.



### **Using the Display**

  The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

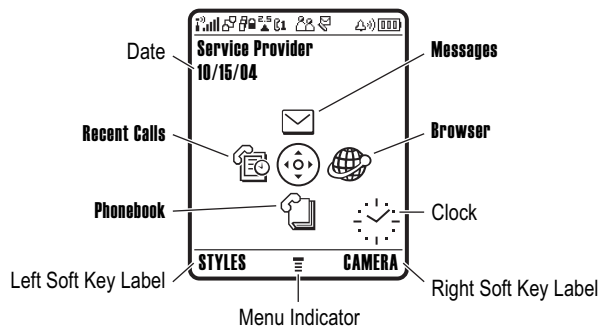

Press the 4-way navigation key  up, down, left, or right to select a menu feature icon. If you select a menu icon by mistake, press  to return to the home screen.

  The menu indicator  shows that you can press the menu key  to enter the main menu.



Labels at the bottom corners of the display show the current soft key functions. Press the left soft key  or right soft key  to perform the indicated function.







**Notes:**

  
 




- *Your home screen may appear different than shown. For example, the menu feature icons normally are hidden to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide menu icons, see page 82.*
- *Your phone can display an analog or digital clock in the home screen (see page 81).*
- *Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key. To set the time that the backlight stays on, see page 64.*
- *To further extend battery life, you can set the display to turn off, in addition to the backlight, after a period of inactivity. The display turns back on when you open the flip or press any key. To set the time that the display stays on, see page 64.*

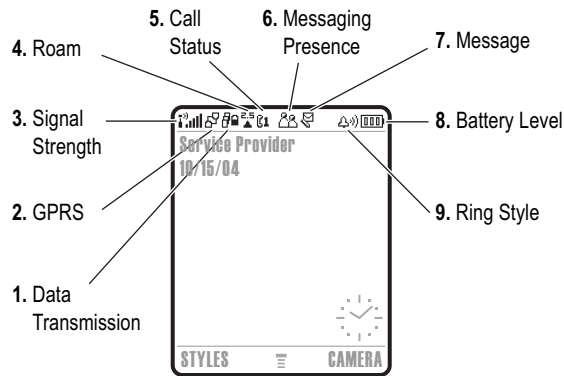

The following status indicators can display:





**1. Data Transmission Indicator** – Show connection and data transmission status. The Bluetooth® wireless connection indicator  shows when a Bluetooth connection is active. Other indicators can include:


 
- |  |   |
|--|---|
|  = secure packet data transfer                  |  = unsecure packet data transfer   |
|  = secure application connection                |  = unsecure application connection |
|  = secure <i>Circuit Switch Data</i> (CSD) call |  = unsecure CSD call               |




**2. GPRS Indicator** – Shows that your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. GPRS allows faster data transfer speeds. Other indicators can include:

 = GPRS PDP context active

 = GPRS packet data available


**3. Signal Strength Indicator** – Vertical bars show the strength of the network connection. You cannot make or receive calls when the no signal indicator  or no transmit indicator  is displayed.

 



**4. Roam Indicator** – The roam indicator  shows when your phone is seeking or using another network outside your home network.




 
**5. Call Status Indicator** – Shows the call status of your phone. For dual-line-enabled SIM cards, shows the current active phone line. Indicators can include:


 = phone in call

 = call divert on

 = line 1 active

 = line 2 active

  = line 1 active, call divert on

 = line 2 active, call divert on



**6. Messaging Presence Indicator** – Shows when instant messaging is active. Indicators can include:

- |                             |                    |
|-----------------------------|--------------------|
| = IM active                 | = available for IM |
| = busy                      | = invisible to IM  |
| = available for phone calls | = offline          |

When a Java™ application is active, the Java midlet indicator displays in this location.



**7. Message Indicator** – Displays when you receive a new message. Indicators can include:




- |                              |                     |
|------------------------------|---------------------|
| = text message               | = voicemail message |
| = voicemail and text message | = IM message        |
| = active chat session        |                     |


**8. Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

**9. Ring Style Indicator** – Shows the ring style setting.


- |                  |                     |
|------------------|---------------------|
| = loud ring      | = soft ring         |
| = vibrate        | = vibrate then ring |
| = vibrate & ring | = silent            |

### Using the 4-Way Navigation Key


Press the 4-way navigation key  up, down, left, or right to scroll through the menu system, highlight menu items, change feature settings, and play games. Press the *centre select* key  in the centre of the 4-way navigation key to select a highlighted menu item. The centre select key usually performs the same function as the right soft key .

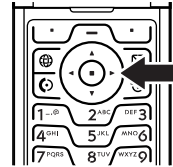


### Using the Operator Key

 From the home screen, press the operator key  to go to your service provider's portal site to access customised content and services.

If a portal site is not available, pressing the operator key launches the micro-browser.

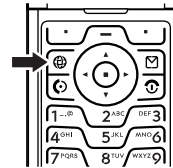


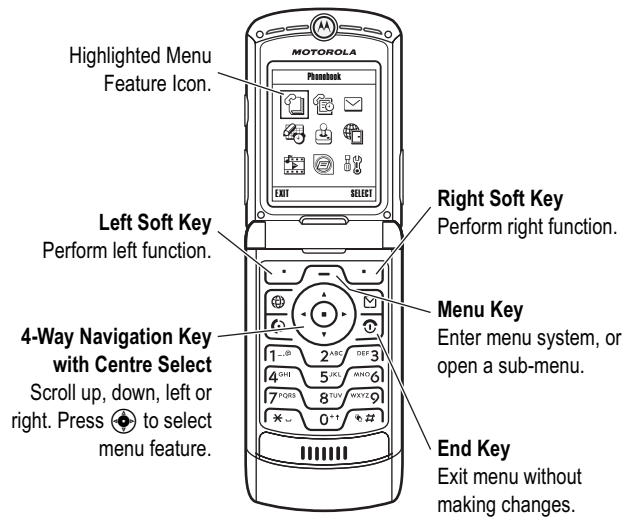
### Using the Message Key




From the home screen, press the message key  to go to the message centre, to send a message or read messages you have received.












## Using Menus

 From the home screen, press  to enter the main menu.




Press  to scroll to and highlight a menu feature icon in the main menu. Press **SELECT** () or  to select the highlighted menu feature.

The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.

Menu Icon	Feature	Menu Icon	Feature
	Phonebook		Recent Calls
	Messages		Office Tools
	Games & Apps		Web Access
	Multimedia		IM
	Settings		

### Selecting a Feature Option

Some features require you to select an option from a list:

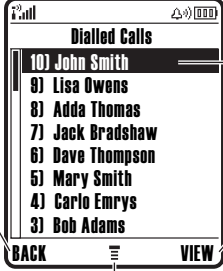



Press **BACK** (↶) to go back to previous screen.

Press **VIEW** (↷) to view details of highlighted option.

Press **↵** to open sub-menu.

Highlighted Option.


- Press  to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.


- In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press  left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

### Entering Text



Some features require you to enter information.

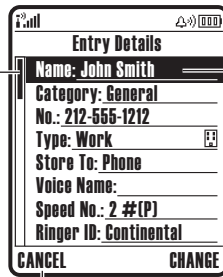Scroll down to bottom of list to view more options.




Highlighted Option. Press  to scroll to other options.

Press **CHANGE** () to set or edit highlighted option.

Press **CANCEL** () to exit without making changes. **DONE** () displays when you enter or edit information.



The message centre lets you compose text messages.

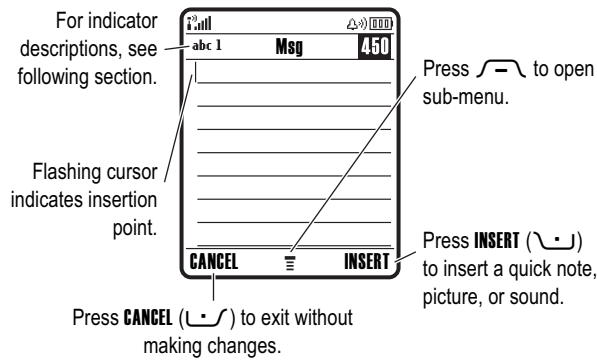

### Selecting a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.


Press **⏏** in a text entry screen to select one of the following entry modes:

- Primary** Your primary text entry mode (see below to set).
- Numeric** Enter numbers only (see page 49).
- Symbol** Enter symbols only (see page 50).
- Secondary** Your secondary text entry mode (see below to set).

Alternatively, you can select a text entry mode in any text entry screen by pressing **⏏** > **Entry Mode**.

 
### Setting Primary and Secondary Text Entry Modes

You can set different primary and secondary text entry modes, and easily switch between modes as needed when you enter data or compose a message.

Press  > **Entry Setup** in a text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

- iTAP** iTAP® software predicts each word as you enter it, to simplify and speed up text entry.
- Tap** Enter individual letters and numbers by pressing a key one or more times.
- Tap Extended** Enter individual letters, numbers, and symbols by pressing a key one or more times.
- None** Hide the **Secondary** setting if you prefer not to set a secondary text entry mode (only available for **Secondary Setup**).

### Using Capitalisation


Press  in a text entry screen to change text case. Indicators at the top of the display show the capitalisation setting:

<b>abc</b> = no capital letters	<b>Abc</b> = capitalise next letter only
<b>ABC</b> = all capital letters	

### Text Entry Mode Indicators

 In **Primary** or **Secondary** text entry mode, indicators at the top of the display show the text entry setting:

Primary	Secondary	
<b>1</b>	<b>2</b>	Tap, no capital letters









<b>1</b> ↑	<b>2</b> ↑	Tap, capitalise next letter only
<b>1</b> ↑	<b>2</b> ↑	Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalise next letter only
		iTAP, all capital letters

The following indicators identify **Numeric** or **Symbol** entry mode:

**123** = numeric mode

      **@** = symbol mode




### Using iTAP® Mode




iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.

For example, to type “the”, you would press  $\sqrt{8^{TUV}} \sqrt{4^{GH}} \sqrt{5^{EF3}}$ . The iTAP software recognises that the most common word formed by this keypress combination is “the” and predicts that “the” is the word you are spelling. Other common words or word fragments that can be spelled by the same keypress combination are presented as alternate choices at the bottom of the display.

If necessary, press  $\sqrt{*#}$  in a text entry screen to switch to iTAP mode. An indicator tells you which mode is active (see page 42). If iTAP mode is not set as the **Primary** or **Secondary** entry mode, see page 42.


### Entering Words in iTAP Mode


	Press	To
1	keypad keys (one press per letter)	show possible letter combinations at the bottom of the display
2	 left or right	highlight the combination you want


Press	To
3 	accept the predicted word completion, followed by a space
or	
	enter the highlighted combination, followed by a space
or	
<b>SELECT</b> (  )	select the highlighted combination, with no space


You can press keypad keys to add more letters at the end of the combination.


For example, if you press    , your phone displays:

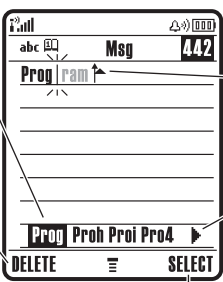


Press  to enter **Prog** and a space.

Press **DELETE** () to delete last letter.

Press  up to accept **Program**.

Press  right to highlight another combination.

Press **SELECT** () to select highlighted combination with no space.

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

### Entering Novel Words in iTAP Mode

You may enter a word that the iTAP software does not recognise. If your word is not shown as a letter combination choice at the bottom of the display:

#### Action

- 1 Press **DELETE** (⌫) one or more times to delete letters, until you see a letter combination at the bottom of the display that matches the start of the word you want to enter.
- 2 Press ⬅ or ➡ left or right to highlight the letter combination.
- 3 Press **SELECT** (⌵) to select the letter combination.
- 4 Continue to enter letters and select letter combinations to spell the word.

Your phone automatically stores the novel word and displays it as an option the next time you enter its letter combination. When the memory space for storing novel words is filled, your phone deletes the oldest words to add new words.

### Entering Numbers and Punctuation in iTAP Mode

 
To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to revert to **iTAP** mode.

Press **⌵** to enter punctuation or other characters as shown in the "Character Chart" on page 49.

 



### Using Tap Mode

This is the basic text entry mode on your phone.


 

**Tap** mode cycles through the letters and number of the key you press. **Tap Extended** mode also cycles through additional symbols as shown in the "Character Chart" on page 49.

If necessary, press  in a text entry screen to switch to **Tap** mode. An indicator shows which mode is active (see page 42). If **Tap** or **Tap Extended** is not set as the **Primary** or **Secondary** entry mode, see page 42.


### Tap Mode Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters. For example, you would press  one time to enter “a”, two times to enter “b”, three times to enter “c”, or four times to enter “2”.
- After 2 seconds, **Tap** mode accepts the character, and the cursor moves to the next position.
- The first character of every sentence is capitalised. If necessary, press  down to change the character to lowercase before the cursor moves to the next position.
- Press  to move the flashing cursor to enter or edit message text.
- If you do not want to save your text or text edits, press  to exit without saving.

### Entering Words in Tap Mode

Press	To
1 a keypad key one or more times	enter a letter, number, or symbol
2 keypad keys	enter remaining characters
	<b>Tip:</b> Press  right to accept a word completion, or  to insert a space.
3  (OK)	store the text

For example, if you press **8** one time, your phone displays:

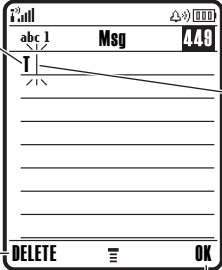


Character displays at insertion point.

After 2 seconds, character is accepted and cursor moves to next position.

Press **DELETE** (**⌫**) to delete last character entered.

Press **OK** (**⏹**) to accept and store text.

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** your phone might display:

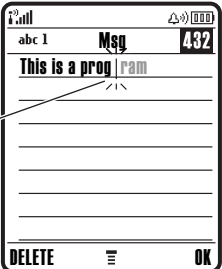








 
 
 


Press **⏪** right to accept **program**. Press **⏩** to reject it and enter a space after **prog**.


To enter a different word (such as **progress**), press keys to enter remaining characters.




### Character Chart

 
Use this chart as a guide for entering characters with **Tap Extended** mode.

	. 1 ? ! , @ _ & ~ : ; " - ( ) ' ¿ ¡ % £ \$ ¥ ¤ € + x * / \ [ ] = > < # §
	a b c 2 ä å á à â ã α β ç
	d e f 3 δ ð é è ê ø
	g h i 4 ï í î γ
	j k l 5 λ
	m n o 6 ñ ö ø ó ò ô õ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú û û
	w x y z 9 ξ ψ
	change text case, for capital letters
	enter a space (hold to enter a return)
	change text entry mode (hold for default)

**Note:** This chart may not reflect the exact character set available on your phone. In an email or Web address editor,  first shows common characters for that editor.

### Using Numeric Mode

  In a text entry screen, press  to switch entry modes until the numeric indicator **123** displays.

Press the number keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry mode.

### Using Symbol Mode

In a text entry screen, press  $\sqrt{*#}$  to switch entry modes until the symbol indicator @ displays.

Press	To
1 keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display
2 $\leftarrow$ left or right	highlight the combination you want
3 <b>SELECT</b> ( $\sqrt{\_}$ )	select the highlighted combination

You can press keypad keys to add more symbols to the end of the combination.

or

 

 



enter the highlighted combination

### Symbol Chart

 Use this chart as a guide for entering characters with symbol mode.



$\sqrt{1-@}$	. ? ! , @ _ & ~ : ; " - ( ) ' ` ; ; % £ \$ ¥ ¤ €
$\sqrt{2^ABC}$	@ _ \
$\sqrt{DEF3}$	/ : ;
$\sqrt{4GHI}$	" & '
$\sqrt{5JKL}$	( ) [ ] { }
$\sqrt{MNOP6}$	¿ ¡ ~
$\sqrt{7PQRS}$	< > =
$\sqrt{8TUV}$	\$ £ ¥ ¤ €
$\sqrt{WXYZ9}$	# % *

	+ - X * / = > < # §
	enter a space (hold to enter a return)
	change text entry mode (hold for default)


**Note:** This chart may not reflect the exact character set available on your phone. In an email or Web address editor,  first shows common characters for that editor.


### Deleting Letters and Words

 Place the cursor to the right of the text you want to delete, and then:

Action
Press <b>DELETE</b> (  ) to delete one letter at a time.
Hold <b>DELETE</b> (  ) to delete all entered text.

### Using the Smart Key

The *smart key* gives you another way to perform many basic phone functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key .

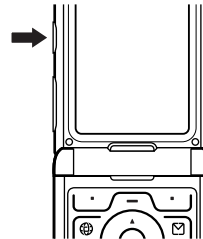

### Using the External Display

When the flip is closed, the external display shows time and phone status information. It also displays messages to notify you of

incoming calls and other events. You can perform the following functions in the external display.

### Setting Phone Ring Style

Press	To
1 volume keys	select <b>Ring Styles</b>
2 smart key	set a ring style
3 volume keys	return to the home screen

### Returning an Unanswered Call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.

#### Action

- 1 Press the smart key to display the received calls list.  
 or  
 Press the volume keys to dismiss the **Missed Calls** message.
- 2 If necessary, press the volume keys to scroll through the list and highlight an unanswered call.
- 3 If a headset is connected to your phone, press and hold the smart key to call the number.  
 or  
 Press the smart key to exit without calling.

**Note:** Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other handsfree device with this feature.

### **Using the Handsfree Speaker**

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** (🔊) to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Spkrphone On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** (🔊) again or end the call.

**Note:** *The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.*


### **Changing a Code, PIN, or Password**

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

**Find the Feature**       > **Settings** > **Security**  
> **New Passwords**

### **Locking and Unlocking Your Phone**

 
You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 71).

### **Locking Your Phone Manually**


**Find the Feature**       > **Settings > Security > Phone Lock > Lock Now**

<b>Press</b>	<b>To</b>
1 keypad keys	enter your unlock code
2 	lock the phone

### **Unlocking Your Phone**

 **Tip:** Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

<b>Press</b>	<b>To</b>
1 keypad keys	enter your unlock code
2 	unlock your phone

### **Setting Your Phone to Lock Automatically**

You can set your phone to lock every time you turn it off:

**Find the Feature**       > **Settings > Security > Phone Lock > Automatic Lock > On**

Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (↵)	activate automatic lock

### ***If You Forget a Code, PIN, or Password***

**Note:** Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

Press	To
1 ↵	display the unlock code bypass screen
2 keypad keys	enter your security code
3 <b>OK</b> (↵)	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

### ***Using the Phonebook***

This section describes basic phonebook operations. For more information about using the phonebook, see page 79.

#### ***Storing a Phone Number***

Enter a phone number in the home screen, then press **STORE** (↵) to create a phonebook entry with that number. Press **DONE** (↵) to store the number by itself, or fill in the other fields as necessary to complete the entry.

If you assign a **Name** to the phonebook entry, you can select **MORE** to store another number (for example, a work number) for the same **Name**.

### **Recording a Voice Name**

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (⏏). Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name.

**Note:** This option is not available for entries stored on the SIM card.

### **Dialling a Number**

Press ⏏ > **Phonebook**, highlight the phonebook entry, press ⏏ to call.

**Shortcut:** In the phonebook, press a keypad key one or more times to jump to entries that begin with the key's letters.

### **Voice Dialling a Number**

Press and release the voice key, and say the entry's name (within 2 seconds).

 
### **Sorting Phonebook Entries**

Press ⏏ > **Phonebook**, press ⏏ > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 80.

**Tip:** In **Primary** number view mode, highlight a name and press ⏏ left or right to view other numbers associated with the name.





### **Setting a Picture ID for a Phonebook Entry**

Press  $\sqrt{-}$  > **Phonebook** > *entry*, press  $\sqrt{-}$  > **Edit** > **Picture** > *picture name*.

Also see pages 2 and 23.

 
 
 
### **Setting Picture ID View**

Press  $\sqrt{-}$  > **Phonebook**, press  $\sqrt{-}$  > **Setup** > **View by** > **Picture**.

### **Viewing Entries By Category**

Press  $\sqrt{-}$  > **Phonebook**, press  $\sqrt{-}$  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.


To set the category for a phonebook entry, see page 80.










## Changing the Call Alert

You can change the alert that a ring style uses to notify you of incoming calls or other events. Any changes you make are saved to the ring style profile.

**Find the Feature**       > **Settings > Ring Styles > Style Detail**

**Note:** *Style represents the current ring style. You cannot set an alert for the Silent ring style setting.*

Press	To
1 	scroll to <b>Calls</b> (or <b>Line 1</b> or <b>Line 2</b> for dual line phones)
2 <b>CHANGE</b> (  )	select the event
3 	scroll to the alert you want
4 <b>SELECT</b> (  )	select the alert
5 <b>BACK</b> (  )	save the alert setting

The ring style profile contains additional settings for other events, and settings for ringer ID, ringer and keypad volume. You can change ring style profile settings as desired to personalise the ring style.


## Setting the Time and Date









 
You must set the time and date to use the datebook.

**Find the Feature**       > **Settings > Initial Setup > Time and Date**


## Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

**Find the Feature**       **Settings > Personalise > Wallpaper**


Press	To
1 	scroll to <b>Picture</b>
2 <b>CHANGE</b> (  )	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to <b>(None)</b> to turn off the wallpaper image.
4 <b>SELECT</b> (  )	select the image
5 	scroll to <b>Layout</b>
6 <b>CHANGE</b> (  )	adjust the image layout
7 	scroll to <b>Centre, Tile, or Fit-to-screen</b> <b>Centre</b> places the image in the centre of the display. <b>Tile</b> fills the display with adjacent copies of the image. <b>Fit-to-screen</b> resizes the image, if necessary, to fit the display.
8 <b>SELECT</b> (  )	confirm the layout setting
9 <b>BACK</b> (  )	save wallpaper settings



 

## Changing Phone Skin

 
Change the look and feel of your phone's user interface by selecting a different skin setting.

**Find the Feature**      > **Settings** > **Personalise** > **Skin** > *skin*

Your phone displays the new skin.


## Setting a Phone Theme

A *phone theme* consists of a bundled set of image and sound files with a specific theme (such as a special event or cartoon character) that you can apply collectively to your phone. Phone themes typically include a wallpaper image, screen saver image, and ring tone. Your phone includes several preloaded themes. You can download and install additional themes on your phone.



## Downloading a Theme

 To download a theme from a Web page with the micro-browser, see page 92. When you install the theme, you can instantly apply its screen saver, wallpaper, and ring tone when your phone prompts you to **Apply Theme Now?**





## Selecting a Theme

You can apply any of the themes installed on your phone.

**Note:** *If one of a theme's components is not available, then a default setting is applied.*

  **Find the Feature**      > **Multimedia** > **Themes** > *theme*



### Deleting a Theme



You cannot delete the preloaded themes on your phone. To delete one or all of the themes that you have downloaded and installed:

**Find the Feature**      > **Multimedia** > **Themes** > *theme*

Press	To
1	open the <b>Theme</b> menu
2	scroll to <b>Delete</b> or <b>Delete All</b>
3 <b>SELECT</b> (	select the option

### Setting Answer Options

You can use additional, alternative methods to answer an incoming call.

 
**Multi-Key**                      answer by pressing any key  
**Open to Answer**              answer by opening the flip

To activate or deactivate an answer option:

**Find the Feature**              > **Settings** > **In-Call Setup**  
    > **Answer Options**


Press	To
1	scroll to <b>Multi-Key</b> or <b>Open to Answer</b>
2 <b>CHANGE</b> (	select the option
3	scroll to <b>On</b> or <b>Off</b>
4 <b>SELECT</b> (	confirm the setting

## Setting Display Brightness

Find the Feature  > Settings > Initial Setup > Brightness

## Adjusting the Backlight

Set the amount of time that the display backlight remains on.

Find the Feature  > Settings > Initial Setup > Backlight

**Note:** Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key.

## Setting Display Timeout

To further extend battery life, you can set the display to turn off (in addition to the backlight) when no activity is detected for a period of time.

Find the Feature  > Settings > Initial Setup > Display Timeout

You can set the display to stay on for 1 or 2 minutes, or set **Off** to disable display timeout.

**Note:** The display turns back on when you open the flip or press any key.






 
## Storing Your Name and Phone Number





To store or edit your name and phone number information on your SIM card:

### Find the Feature

   > **Settings** > **Phone Status**  
> **My Tel. Numbers**

**Shortcut:** Press   from the home screen to view and edit your name and phone number(s).

If you do not know your phone number, contact your service provider.



## Calling Features

For basic instructions on how to make and answer calls, see page 21.

### Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

#### Action




- 1 Press the volume keys to turn off the alert.
- 2 Open the flip (or press the button on a handsfree headset) to answer the call.

### Viewing Recent Calls




Your phone keeps lists of incoming and outgoing calls, even for calls that did not connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

**Shortcut:** Press  from the home screen to view the dialled calls list.

**Find the Feature**  **Recent Calls**


Press	To
1 	scroll to <b>Received Calls</b> or <b>Dialled Calls</b>
2 <b>SELECT</b> (  )	select the list
3 	scroll to an entry

**Note:** ✓ means the call connected.




Press	To
4 	call the entry's number
or	
<b>VIEW</b> (  )	view entry details (such as time and date of call)
or	
	open the <b>Last Calls Menu</b> to perform other procedures

The **Last Calls Menu** can include the following options:


Option	Description
<b>Store</b>	Create a phonebook entry with the number in the <b>No.</b> field.
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Hide ID/Show ID</b>	Hide or show your caller ID for the next call.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the phonebook or recent calls lists.


 
Option	Description
<b>Send Tones</b>	Send the number to the network as DTMF tones. <i>Note: This option displays only during a call.</i>
<b>Talk then Fax</b>	Talk and then send a fax in the same call (see page 87). 

### Redialling a Number

Press	To
1 	view the dialled calls list
2 	scroll to the entry you want to call
3 	redial the number

### Using Automatic Redial

 When you receive a busy signal, your phone displays **Call Failed: Number Busy.**

Press	To
 or <b>RETRY</b> (  )	redial the number

When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and connects the call.

### Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 VIEW (⏪)	display the received calls list
2 (⦿)	select a call to return
3 (⦿)	make the call



### Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's *notepad* memory. This can be a phone number that you called, or a number that you jot down during a call, for later use. To retrieve the number stored in the notepad:

**Find the Feature**      ⏪ > Recent Calls > Notepad

Press	To
(⦿)	call the number
or	
STORE (⏪)	create a phonebook entry with the number in the <b>No.</b> field
or	
⏪	open the <b>Dialling Menu</b> to attach a number or insert a special character


 
### Putting a Call On Hold or Mute

Press	To
 > <b>Hold</b>	put all active calls on hold
or	
 > <b>Mute</b>	mute all active calls


### Using Call Waiting



 When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1 	answer the new call
2 <b>SWITCH</b> (ل.ج)	switch between calls
or	
<b>LINK</b> (ل.ك)	connect the 2 calls
or	
 > <b>End Call On Hold</b>	end the call on hold

If necessary, you must turn on call waiting to use the feature. To turn call waiting on or off:

**Find the Feature**       > **Settings > In-Call Setup > Call Waiting**

### Using Caller ID (Incoming Calls)



*Calling line identification* (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.


The phone displays the caller's name (and picture ID, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID for specific entries stored in your phonebook. For more information, see page 79.

### Calling an Emergency Number

 
Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

**Note:** *Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.*

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

### Dialling International Numbers




If your phone service includes international dialling, press and hold  to insert the local international access code (+) for the country from which you are calling.



(Inserting + enables your phone to make an international call.) Then press the keypad keys as usual to dial the country code and phone number.

### Calling With 1-Touch Dial

 To call phonebook entries 1 to 9, press and hold the single-digit speed dial number for one second.

You can set 1-touch dial to call the entries in your phone memory phonebook or the SIM card phonebook:

**Find the Feature**       > **Settings** > **Initial Setup** > **1-Touch Dial**

	<b>Press</b>	<b>To</b>
1		scroll to the location you want
2	<b>SELECT</b> (  )	select the location

### Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

**Note:** *Your service provider may include additional information about using this feature.*


### Listening to Voicemail Messages


**Find the Feature**       > **Voicemail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.



### Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the voicemail message indicator  and the **New Voicemail** notification.


Press	To
<b>CALL</b> (  )	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

### Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

**Find the Feature**   **> Voicemail Setup**

Press	To
<b>1</b> keypad keys	enter your voicemail number
<b>2</b> <b>OK</b> (  )	store the number

**Note:** You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.



## Changing the Active Line



 
 
 
Change the active phone line to make and receive calls from your other phone number.

**Note:** This feature is available only for dual-line-enabled SIM cards.

### Find the Feature

 > Settings > Phone Status > Active Line

The call status indicator in the display shows the currently active phone line (see page 35).



## Phone Features

### Main Menu

This is the standard main menu layout. **Menu organisation and feature names may vary on your phone.** Not all features may be available on your phone.

#### Phonebook

#### Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Call Cost
- Data Times
- Data Volumes

#### Messages

- New Message
- Email Msgs
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts
- MMS Templates

#### Office Tools

- SIM Apps
- Calculator
- Datebook
- Shortcuts
- Voice Records
- Alarm Clock
- Dialling Services
  - Fixed Dial
  - Service Dial
  - Quick Dial
- Chat

#### Games & Apps

#### Web Access

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions

#### Multimedia

- Themes
- Camera
- Pictures
- Sounds
- MotoMixer
- Videos

#### IM

- **Settings**  
(see next page)

## Settings Menu



### Personalise

- Home Screen
- Main Menu
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



### Ring Styles

- Style
- Style Detail



### Connection

- Bluetooth Link
- Sync



### Call Divert

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Divert Status



### In-Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



### Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- Scroll
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



### Phone Status

- My Tel. Numbers
- Credit Info/Available
- Active Line
- Battery meter
- Other Information



### Headset

- Auto Answer
- Voice Dial



### Car Settings

- Auto Answer
- Auto Handsfree



### Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



### Security

- Phone Lock
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords
- Certificate Mgmt




 

 




 

 




### Java Settings



- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight
- Set Standby App
- DNS IP
  
## Feature Quick Reference












 
This section helps you locate and use additional phone features that are not described in this guide.



### Calling Features

 Feature	Description
<b>Conference Call</b>	During a call: Dial next number, press  , press <b>LINK</b> (  ) 
<b>Transferring a Call</b>	During a call:  > <b>Transfer</b> , dial transfer number, press  . 
<b>Caller ID (Outgoing)</b>	Hide or show your caller ID phone number for the next outgoing call:  > <b>Settings</b> > <b>In-Call Setup</b> > <b>My Caller ID</b> . > <b>Next Call Only</b> > <b>Hide ID</b> or <b>Show ID</b> 
<b>Attaching a Number</b>	Dial an area code or prefix for a phonebook number, then:  > <b>Attach Number</b> 
<b>Speed Dial</b>	Speed dial and call a phonebook entry: Enter speed dial number, press  > <b>Speed Dial</b> , press  . 
<b>Call Diverting</b>	Set up or cancel call diverting:  > <b>Settings</b> > <b>Call Divert</b> 



 

 
 
 

Feature	Description
<b>Call Barring</b>	Restrict outgoing or incoming calls:  > <b>Settings</b> > <b>Security</b> > <b>Call Barring</b> 

### Messages

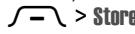Feature	Description
<b>Send Text Message</b>	Send a text message:  > <b>New Message</b> > <b>New Short Message</b> 
<b>Send Multimedia Message</b>	Send a multimedia message:  > <b>New Message</b> > <b>New Multimedia Msg</b> 
<b>Send Letter</b>	Send a multimedia letter:  > <b>New Message</b> > <b>New Letter</b> 
<b>Use MMS Template</b>	Open an MMS template with preloaded media:  > <b>MMS Templates</b> 
<b>Read New Message</b>	Read a new text or multimedia message that you have received: Press <b>READ</b> (ر) when the <b>New Message</b> notification is displayed. 
<b>Received Messages</b>	Read received messages:  > <b>Message Inbox</b>  <p><b>Tip:</b> Press  to perform various operations on the message.</p>


 
Feature	Description
<b>Store Message Objects</b>	Go to a multimedia message page, or highlight an object in a letter, then:  > <b>Store</b> 

### Phonebook

 
 
 
 
 
 
Feature	Description
<b>Add New Entry</b>	Add a new entry to the phonebook:  > <b>Phonebook</b>  > <b>New</b> > <b>Phone Number</b> or <b>Email Address</b>
<b>Dial Number</b>	Call a number stored in the phonebook:  > <b>Phonebook</b> , highlight the phonebook entry, press  to call
<b>Voice Dial Number</b>	Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (within 2 seconds).
<b>Set Ringer ID for Entry</b>	Assign a distinctive ringer alert to a phonebook entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>Edit</b> > <b>Ringer ID</b> > <i>ringer name</i> <b>Note:</b> <i>The Ringer ID option is not available for entries stored on the SIM card.</i>
<b>Set Picture ID for Entry</b>	Assign a photo or picture to a phonebook entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>Edit</b> > <b>Picture</b> > <i>picture name</i> <b>Note:</b> <i>The Picture option is not available for entries stored on the SIM card.</i>






Feature	Description
<b>Set Picture ID View</b>	View phonebook entries as text list, or with picture caller ID photos: ⏏ > <b>Phonebook</b> ⏏ > <b>Setup</b> > <b>View by</b> > <i>view name</i>
<b>Set Category for Entry</b>	Set the category for a phonebook entry: ⏏ > <b>Phonebook</b> > <i>entry</i> ⏏ > <b>Edit</b> > <b>Category</b> > <i>category name</i> <b>Note:</b> The <b>Category</b> option is not available for entries stored on the SIM card.
<b>Set Category View</b>	Set a phonebook category view: ⏏ > <b>Phonebook</b> ⏏ > <b>Categories</b> > <i>category view</i>
<b>Sort Phonebook List</b>	Set the order in which phonebook entries are listed: ⏏ > <b>Phonebook</b> ⏏ > <b>Setup</b> > <b>Sort by</b> > <i>sort order</i>
<b>Set Primary Number</b>	Set the primary number for a phonebook entry with multiple numbers: ⏏ > <b>Phonebook</b> , highlight the entry, press ⏏ > <b>Set Primary</b> > <i>phone number</i> .
<b>Copy Phonebook Entry</b>	Copy a phonebook entry between the phone and SIM card: ⏏ > <b>Phonebook</b> , highlight the entry, press ⏏ > <b>Copy</b> > <b>Entries</b> > <b>To</b>
<b>Send Phonebook Entry to Another Device</b>	Send a phonebook entry to another phone, computer, or device: ⏏ > <b>Phonebook</b> , highlight the entry, press ⏏ > <b>Send</b>






Feature	Description
<b>Create Group Mailing List</b>	Create a group mailing list as a phonebook entry:  > <b>Phonebook</b>  > <b>New</b> > <b>Mailing List</b>

 



### **Personalising Features**

Feature	Description
<b>Ringer IDs</b>	Activate distinctive ring alerts assigned to phonebook entries:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Ringer IDs</b>
<b>Ring Volume</b>	Set ringer volume:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Ring Volume</b>
<b>Keypad Volume</b>	Set keypad keypress volume:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Key Volume</b>
<b>Reminders</b>	Set reminder alerts for messages that you receive:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Reminders</b>
<b>Clock View</b>	Display an analog clock or digital time readout in the home screen:  > <b>Settings</b> > <b>Personalise</b> > <b>Home Screen</b> > <b>Clock</b>
<b>Menu View</b>	Display the main menu as graphic icons or as a text-based list:  > <b>Settings</b> > <b>Personalise</b> > <b>Main Menu</b> > <b>View</b>




Feature	Description
<b>Main Menu</b>	Reorder your phone's main menu:  > <b>Settings</b> > <b>Personalise</b> > <b>Main Menu</b> > <b>Reorder</b>
<b>Show or Hide Menu Icons</b>	Show or hide menu feature icons in the home screen:  > <b>Settings</b> > <b>Personalise</b> > <b>Home Screen</b> > <b>Home Keys</b> > <b>Icons</b>
<b>Change Soft Keys &amp; Menu Icons</b>	Change soft key labels and menu feature icons in the home screen:  > <b>Settings</b> > <b>Personalise</b> > <b>Home Screen</b> > <b>Home Keys</b>
<b>Shortcuts</b>	Create a shortcut to a menu item: Highlight the menu item, then press and hold  .  Use a shortcut: Press  , then press the shortcut number.

### **Instant Messaging**





Feature	Description
<b>Log In</b>	Log in to instant messaging:  > <b>IM</b> > <b>Log In</b> 
<b>Find Others Online</b>	After you sign on: Select <b>Contact List</b> to see a list of other users. 

Feature	Description
<b>Start Conversation</b>	Start a conversation: From your <b>Contact List</b> , highlight a name in <b>Online Contacts</b> , press <b>SEND IM</b> (↵). 
<b>Open Active Conversation</b>	Open a conversation in progress: From your <b>Contact List</b> , highlight a name in <b>Conversations</b> , press <b>VIEW</b> (↵). 
<b>End Conversation</b>	From the conversation display: ↵ > <b>End Conversation</b> 
<b>Log Out</b>	Log out of instant messaging: Select <b>Log Out</b> from the <b>IM Online</b> menu. 

 
 
 
### Chat

Feature	Description
<b>Start Chat</b>	Start a new chat session: ↵ > <b>Office Tools</b> > <b>Chat</b> ↵ > <b>New Chat</b> 
<b>Receive Chat Request</b>	When you receive a chat request: Press <b>ACCEPT</b> (↵) or <b>IGNORE</b> (↵). 
<b>End Chat</b>	During a chat session: ↵ > <b>End Chat</b> 



 
 

 

 
 
## Email

Feature	Description
Send Email Message	Send an email message:  > <b>New Message</b> > <b>New Email</b> 
Read Email Message	Read a new email message that you have received: Press <b>READ</b> (  ). 


## Menu Features

 Feature	Description
Language	Set menu language:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Language</b>
Master Reset	Reset all options <i>except</i> unlock code, security code, and lifetime timer:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Reset</b>
Master Clear	Clear all user settings and entries <i>except</i> SIM card information, erase all downloaded pictures and sound files, reset all options <i>except</i> unlock code, security code, and lifetime timer:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Clear</b>  <b>Caution:</b> Master clear <b>erases all user-entered information</b> (including phonebook and datebook entries) <b>and user-downloaded content</b> (including photos and sounds) stored in your phone's memory. After you erase the information, you cannot recover it.

 

 

 

### Special Dialling Features

Feature	Description
<b>Fixed Dial</b>	Turn fixed dialling on or off:  > <b>Settings</b> > <b>Security</b> > <b>Fixed Dial</b>  Use the fixed dial list:  > <b>Office Tools</b> > <b>Dialling Services</b> > <b>Fixed Dial</b>
<b>Service Dial</b>	Dial service phone numbers:  > <b>Office Tools</b> > <b>Dialling Services</b> > <b>Service Dial</b> 
<b>Quick Dial</b>	Dial preprogrammed phone numbers:  > <b>Office Tools</b> > <b>Dialling Services</b> > <b>Quick Dial</b> 
<b>DTMF Tones</b>	Activate DTMF tones:  > <b>Settings</b> > <b>Initial Setup</b> > <b>DTMF</b> Send DTMF tones during a call: Press number keys. Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press  > <b>Send Tones</b> .

### Call Monitoring

 



**Network connection time** is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.



The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

Feature	Description
<b>Call Times</b>	View call timers:  > <b>Recent Calls</b> > <b>Call Times</b> 
<b>In-Call Timer</b>	Display time or cost information during a call:  > <b>Settings</b> > <b>In-Call Setup</b> > <b>In-Call Timer</b> 
<b>Call Cost</b>	View call cost trackers:  > <b>Recent Calls</b> > <b>Call Cost</b> 






### Handsfree Features

*Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.*

Feature	Description
<b>Auto Answer</b> (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > <b>Settings</b> > <b>Car Settings</b> or <b>Headset</b> > <b>Auto Answer</b> 
<b>Voice Dial</b> (headset)	Enable voice dial with headset send/end key:  > <b>Settings</b> > <b>Headset</b> > <b>Voice Dial</b> 


Feature	Description
<b>Auto Handsfree</b> (car kit)	Automatically route calls to a car kit when connected:  > <b>Settings</b> > <b>Car Settings</b> > <b>Auto Handsfree</b> 

### Data and Fax Calls







Feature	Description
<b>Send Data or Fax</b>	Connect your phone to the device, then place the call through the device application. 
<b>Receive Data or Fax</b>	Connect your phone to the device, then answer the call through the device application. 
<b>Talk Then Fax</b>	Connect your phone to the device, enter the number, press  > <b>Dialing Menu</b> > <b>Talk Then Fax</b> , then press  to make the call. 

### Bluetooth® Wireless Connections

 
 
 
France Indoor Only

 **Note:** If your phone type MQ3-4411H11 carries the alert mark, then your phone's Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation


*in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors.*

Feature	Description
<b>Make Phone Visible to Other Device</b>	Allow a Bluetooth device to discover your phone: [Left Arrow] > <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Setup</b> > <b>Find Me</b> 
<b>Connect to Recognised Device</b>	Connect to a recognised handsfree device: [Left Arrow] > <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Handsfree</b> > <i>device name</i> 
<b>Disconnect From Device</b>	Disconnect from a device: Highlight the device name and press <b>DROP</b> ( [Left Arrow] ). 
<b>Switch to Device During Call</b>	Switch to a headset or car kit during a call: [Left Arrow] > <b>Use Bluetooth</b> 
<b>Send Multimedia Object to Device</b>	Send a multimedia object to another device: Highlight the object, press [Left Arrow] > <b>Copy</b> , select the device name. 
<b>Move Multimedia Object to Device</b>	Move a multimedia object to another device: Highlight the object, press [Left Arrow] > <b>Move</b> , select the device name.  <b>Caution:</b> Moving an object <b>deletes</b> the original object from your phone. 







Feature	Description
<b>Send Data to Another Device</b>	Copy a phonebook entry, datebook event, or bookmark to another device: Highlight the item, press  > <b>Send</b> .
<b>Edit Device Properties</b>	Edit the properties of a recognised device: Highlight the device name and press  > <b>Edit</b> .
<b>Set Bluetooth Options</b>	Set your phone's Bluetooth options:  > <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Setup</b>
 
### Network Features

Feature	Description
<b>Network Settings</b>	View network information and adjust network settings:  > <b>Settings</b> > <b>Network</b>
 
### Personal Organiser Features

Feature	Description
<b>Set Alarm</b>	Set an alarm:  > <b>Office Tools</b> > <b>Alarm Clock</b>
<b>Turn Off Alarm</b>	Turn off alarm: Press <b>DISABLE</b> (  ) or  .  Set 8-minute delay: Press <b>SNOOZE</b> (  ).


Feature	Description
<b>Add New Datebook Event</b>	Add a new event to the datebook: [Left Arrow] > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press [Enter], press [Left Arrow] > <b>New</b>
<b>View Datebook Event</b>	View or edit event details: [Left Arrow] > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press [Enter], press <b>VIEW</b> (F5)
<b>Event Reminder</b>	View an event reminder: <b>VIEW</b> (F5) Dismiss an event reminder: <b>EXIT</b> (F4)
<b>Send Datebook Event to Another Device</b>	Send a datebook event to another phone, computer, or device: [Left Arrow] > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press [Enter], highlight the event, press [Left Arrow] > <b>Send</b>
<b>Create Voice Record</b>	Create a voice record: Press and hold voice key, speak into the phone, release voice key <i><b>Note:</b> Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.</i>
<b>Play Voice Record</b>	Play back a voice record: [Left Arrow] > <b>Office Tools</b> > <b>Voice Records</b> > <i>voice record</i>
<b>Calculator</b>	Calculate numbers: [Left Arrow] > <b>Office Tools</b> > <b>Calculator</b>

 
 
 


 


 

 
 


Feature	Description
<b>Currency Converter</b>	Convert currency: ⏪ > <b>Office Tools</b> > <b>Calculator</b> ⏪ > <b>Exchange Rate</b> Enter exchange rate, press <b>OK</b> (↵), enter amount, press ⏪ > <b>Convert Currency</b> .






### Security

 
Feature	Description
<b>SIM PIN</b>	Lock or unlock the SIM card: ⏪ > <b>Settings</b> > <b>Security</b> > <b>SIM PIN</b> <b>Caution:</b> If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays <b>SIM Blocked</b> .
<b>Lock Application</b>	Lock phone applications: ⏪ > <b>Settings</b> > <b>Security</b> > <b>Lock Application</b>
<b>Certificate Management</b>	Enable or disable security certificates stored on your phone: ⏪ > <b>Settings</b> > <b>Security</b> > <b>Certificate Mgmt</b>

### News and Entertainment

Feature	Description
<b>Manage Pictures</b>	Manage pictures and animations: ⏪ > <b>Multimedia</b> > <b>Pictures</b> 

Feature	Description
<b>Manage Sounds</b>	Manage ring tones and music that you have downloaded or composed:  > <b>Multimedia</b> > <b>Sounds</b>
<b>Manage Video Clips</b>	Manage video clips:  > <b>Multimedia</b> > <b>Videos</b>
<b>Edit Sounds With MotoMixer</b>	Edit MIDI-based songs that you can use with your phone:  > <b>Multimedia</b> > <b>MotoMixer</b> > <b>[New Mix]</b> or <i>mix file name</i>
<b>Launch Micro-Browser</b>	Start a micro-browser session: Press  
<b>Download Objects from Web Page</b>	Download a picture, sound, or phone theme from a Web page: Highlight the file, press <b>SELECT</b> (  ) , press <b>STORE</b> (  ) . 
<b>Web Sessions</b>	Select or create a Web session:  > <b>Web Access</b> > <b>Web Sessions</b> 
<b>Download Game or Application (Micro-Browser)</b>	Download a Java™ game or application with the micro-browser:  > <b>Web Access</b> > <b>Browser</b> , highlight the application, press <b>SELECT</b> (  ) , press <b>DOWNLOAD</b> (  ) 

Feature	Description
<b>Download Game or Application (Computer)</b>	Download a Java game or application from a computer: Press  > <b>Settings</b> > <b>Java Settings</b> > <b>Java App Loader</b> , connect your phone to the computer when prompted. 
<b>Launch Game or Application</b>	Launch a Java game or application:  > <b>Games &amp; Apps</b> , highlight the application, press <b>SELECT</b> (  )
<b>Create Ring Tones</b>	Create iMelody ring tones that you can use with your phone:  > <b>Multimedia</b> > <b>Sounds</b> > <b>[New iMelody]</b>







## **Specific Absorption Rate Data**


### **This model phone meets international standards for exposure to radio waves**

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.



The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.<sup>1</sup> Tests for SAR are conducted in accordance with CENELEC<sup>2</sup> testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

     Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is: 0.62 W/kg.<sup>3</sup>







  While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.



- 1 The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
- 2 CENELEC is a European Union standards body.
- 3 Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

  

## Index

---

### A

accessories 16, 52  
active line indicator 35  
active line, changing 74  
alarm clock 89  
alert  
    creating 93  
    defined 58  
    setting 21, 52, 58, 59  
    turning off 21, 66  
animation  
    downloading 79, 92  
    screen saver 61  
    viewing 91  
    wallpaper 60  
answering a call 22, 63  
application, locking and  
    unlocking 91  
automatic redial 68

### B

backlight 64  
barring calls 78  
battery  
    charging 18

    extending battery life 16, 30,  
        33, 61, 64  
    installing 18  
    level indicator 36  
Bluetooth 3, 29, 80, 88, 89, 90  
brightness, setting 64  
browser. See micro-browser

### C

calculator 90  
call  
    adding digits after phone  
        number 67  
    alert, setting 59  
    alert, turning off 21, 66  
    answer options 63  
    answering 22  
    barring 78  
    barring password, changing  
        53  
    call waiting 70  
    costs 86  
    deleting 66  
    dialled calls list 66  
    dialling 21  
    diverting 77  
    emergency number 71



- ending 21, 22
  - handsfree speaker 53
  - hold 70
  - international access code 71
  - making 21
  - received calls list 66
  - receiving 22
  - recent calls 66
  - ring style 21, 52, 58
  - storing 66
  - talk then fax 68
  - timers 86
  - transferring 77
  - unanswered call 52, 69
  - Call Failed, Number Busy message 68
  - call waiting 70
  - caller ID 2, 24, 57, 67, 71, 77, 79, 80
  - calling line identification. See caller ID
  - camera
    - self portrait 24
    - taking a photo 2, 23
  - car kit 86
  - centre select key 37
  - certificate management 91
  - character chart 49
  - chat 83
  - clock 32, 59, 81
  - codes
    - changing 53
    - default 53, 54, 55
    - forgetting 55
  - conference call 77
  - cursor 41
  - customising the menu 81
- D**
- data call 87
  - date, setting 59
  - datebook 90
  - deleting a call 66
  - dialled calls list 66
  - dialling a number 21, 85
  - display
    - backlight 64
    - brightness 64
    - description 32
    - home screen 32
    - language 84
    - personalising 82
    - skin 62
    - timeout 64
  - distinctive ringer alert 81
  - diverting calls 77
  - drafts folder 29
  - DTMF tones
    - activating 85
    - sending 68, 85

**E**

earpiece volume 21  
email 81, 84  
emergency number 71  
end key 21, 22  
ending a call 21, 22  
Enter Unlock Code message  
54, 55  
event alert 59  
external display 51

**F**

fax call 68, 87  
fixed dial 85  
flashing cursor 41  
flip  
external display 51  
open to answer 22, 63  
screen saver 61  
4-way navigation key 37

**G**

games 92, 93  
GPRS indicator 35  
groove tunes 92


**H**

handsfree speaker 53  
handsfree use 86

headset 52, 86  
Hide ID feature 67  
hold a call 70  
home keys, personalising 82  
home screen  
clock 81  
defined 32

**I**

 IM 82  
incoming call  
answering 22  
diverting 77  
Incoming Call message 71  
indicators  
active line 35  
battery level 36  
GPRS 35  
Java midlet 36  
loud ring style 36  
message 36  
messaging presence 36  
ring style 36  
roam 35  
signal strength 35  
silent alert 36  
soft ring style 36  
text case 42  
text entry mode 42  
transmission 34



vibrate & ring style 36  
vibrate alert 36  
vibrate then ring style 36  
voicemail message 36, 73  
instant messaging. See IM  
international access code 71  
iTAP software 44

## J

Java applications 92, 93  
Java midlet indicator 36

## K

 
 
key  
centre select 37  
end 21, 22  
4-way navigation 37  
left soft key 32, 82  
menu 15  
message 37  
operator 37  
power 20  
right soft key 32, 82  
send 21, 22, 66  
smart 51, 52  
volume control 21  
keypad  
answering calls 63  
volume, setting 81

## L

language, setting 84  
left soft key  
functions 32  
personalising 82  
line, changing 74  
lock  
application 91  
phone 53  
SIM card 91  
Low Battery message 36

## M

making a call 21  
master clear 84  
master reset 84  
menu  
entering text 40  
features, rearranging 82  
features, selecting 39  
icons, changing in home  
screen 82  
icons, converting to text 81  
icons, described 32  
icons, showing or hiding 82  
language, setting 84  
lists 39  
navigating 38  
personalising 82  
view, changing 81





menu key 15  
message  
  chat 83  
  draft 29  
  menu feature icon 32  
  MMS template 78  
  MMS, defined 26  
  multimedia letter 78  
  multimedia message 78  
  reading 78  
  reminders, turning on/off 81  
  text 78  
message indicator 36  
message key 37  
messages menu feature icon  
  32  
messaging presence indicator  
  36  
micro-browser  
  browser setup 92  
  Java applications 92, 93  
  menu feature icon 32  
  using 92  
  Web sessions 92  
Missed Calls message 52, 69  
MMS template 78  
MMS. *See* message  
MotoMixer 92  
multimedia letter, sending 78

multimedia message  
  reading 78  
  sending 3, 26, 78  
multimedia messaging service.  
  *See* message  
music  
  downloading 79, 92  
  managing 92  
my telephone number 22, 65

## N

 
network settings 89  
notepad 69  
number  
  entering 49  
  storing your number 65  
  viewing your number 22

 
 
 
## O

object exchange 31  
1-touch dial 72  
open to answer 63  
operator key 37  
optional accessory, defined 16  
optional feature, defined 15


## P

passwords. *See* codes  
phone  
  active line indicator 35





- active line, changing 74
- alert, setting 59
- alert, turning off 21, 66
- answer options 63
- clear stored information 84
- codes 53
- date, setting 59
- flip 22
- keypad, answering calls 63
- language, setting 84
- locking 53
- network settings 89
- reset all options 84
- ring style 21, 52, 58
- security code 53
- skin 62
- time, setting 59
- turning off 20
- turning on 20
- unlock code 53
- unlocking 20, 53, 54, 55
- phone number
  - active line indicator 35
  - active line, changing 74
  - adding digits after 67
  - attaching 2 numbers 67
  - attaching to prefix 77
  - international access code 71
  - redialling 68
  - storing in phonebook 79
  - storing your number 65
  - viewing your number 22
- phone theme 62
- phonebook
  - adding an entry 79
  - attaching 2 numbers 67
  - attaching a number 77
  - category views 57, 80
  - copying entries 80
  - dialling a number 79
  - entry category 80
  - group mailing list 81
  - 1-touch dial 72
  - picture ID 2, 24, 57, 71, 79, 80
  - primary number, setting 80
  - ringer ID 79, 81
  - sending entries 80
  - sorting entries 56, 80
  - speed dial number 77
  - voice dialling 79
- photo
  - downloading 79, 92
  - picture ID 2, 24, 57, 71, 79, 80
  - self portrait 24
  - self-portrait 2
  - sending 2, 23
  - taking 2, 23

 

picture  
  downloading 79, 92  
  screen saver 61  
  viewing 91  
  wallpaper 60  
picture ID 2, 24, 57, 71, 79, 80  
PIN code  
  changing 53  
  entering 91  
PIN2 code, changing 53  
power key 20  
predictive text entry 44  
primary text entry mode 41

## Q

quick dial 85

 
## R

received calls list 66  
recent calls 66  
redial  
  automatic redial 68  
  busy number 68  
reminders  
  turning on/off 81  
right soft key  
  functions 32  
  personalising 82  
ring style indicators 36  
ring style, setting 21, 52, 58

ring tone  
  creating 93  
  downloading 79, 92  
  editing with MotoMixer 92  
  managing 92  
ringer ID  
  setting 79  
  turning on/off 81  
ringer volume, setting 21, 81  
roam indicator 35

## S


screen saver 61  
secondary text entry mode 41  
security code  
  changing 53  
  default 53  
  forgetting 55  
self-portrait 2  
send key 21, 22, 66  
service dial 85  
shortcuts 82  
Show ID feature 67  
signal strength indicator 35  
silent alert indicator 36  
silent alert, setting 21, 52, 58,  
  59  
SIM Blocked message 20, 91  
SIM card  
  defined 16



installing 16  
locking 91  
PIN code entry 20  
PIN code, changing 53  
PIN2 code, changing 53  
precautions 16  
SIM Blocked message 20, 91  
SIM PIN code  
  changing 53  
  entering 91  
SIM PIN2 code, changing 53  
skin 62  
smart key 51, 52  
soft keys  
  functions 32  
  personalising 82  
song  
  downloading 79, 92  
  managing 92  
sound  
  downloading 79, 92  
  managing 92  
Speaker On message 53  
speakerphone  
  automatic answer 86  
speed dial 77  
standby time, increasing 61, 64  
storing a call 66  
symbol chart 50  
symbols, entering 50

## T

 talk then fax call 68  
tap mode text entry 46  
telephone number  
  storing your number 65  
  viewing your number 22  
text  
  capitalisation, changing 42  
  character chart 49  
  entering 40  
  entry mode, selecting 41  
  entry mode, setup 42  
  flashing cursor 41  
  iTAP software predictive text  
    entry 44  
  numeric mode 49  
  symbol chart 50  
  symbol mode 50  
  tap mode 46  
text case indicator 42  
text entry mode  
  selecting 41  
  setup 42  
text entry mode indicator 42  
theme 62  
time, setting 59  
timers 86  
transfer a call 77  
transmission indicator 34  
travel charger 19



## U

- unlock
  - application 91
  - phone 53
- unlock code
  - bypassing 55
  - changing 53
  - default 53, 54, 55
  - entering 20, 54, 55
  - forgetting 55

## W

- wallpaper 60
- Web pages 92
- Web sessions 92

## V

- vibrate alert
  - setting 21, 52, 58
  - turning off 21, 66
- video clip
  - downloading 79, 92
  - managing 92
- voice dial 79, 86
- voice key
  - dialling a number 79
- voice record 90
- voicemail 72
- voicemail message indicator
  - 36, 73
- volume
  - earpiece 21
  - keypad 81
  - ringer 21, 81
  - volume keys 21

104 - Index

6803602B41

