 


# Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V878 wireless phone.

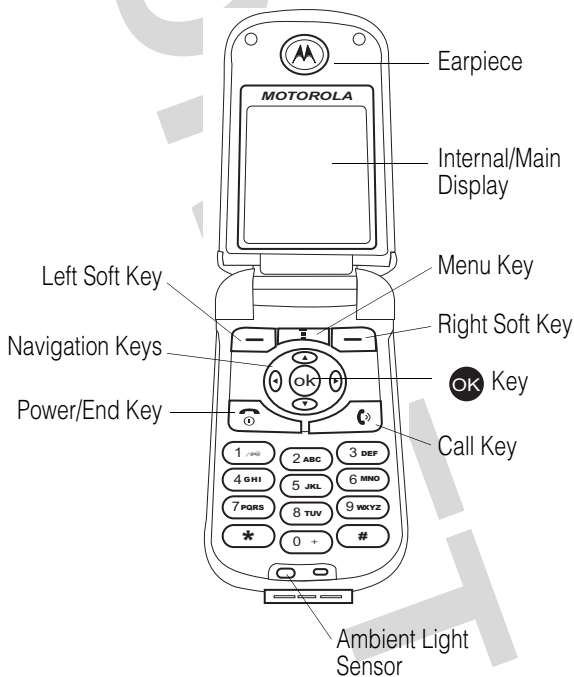

**Tip:** The 4 Navigation Keys also serve as shortcuts to the menu options (see page 102).

Personal Communications Sector  
600 North U.S. Highway 45  
Libertyville, Illinois 60048

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States)

1-800-461-4575 (Canada)

[www.motorola.com](http://www.motorola.com) (United States)

[www.motorola.ca](http://www.motorola.ca) (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2003.

### **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number:

Cover number:

# Menu Map

---

You can display your phone's main menu as icons or as a text list. Each has its own organization and is different from the other. By default, your phone displays the main menu as icons.

To change the menu display mode:

## Find the Feature



> **Settings**

> **Menu style**

**Note:** The following is the standard phone menu layout. Menu organization and feature names may vary on your phone. Not all features may be available for all users.

# Main Menu Display

## **Msg. center \***

- Text messages
- Multimedia msgs.
- Voice mailbox
- Cell broadcast
- Settings
- Sending history
- Service command

## **Games**

- Five ball
- Flying
- Popo car
- Sound effect

## **Alarm clock**


- On
- Off

## **Chatroom \***

### **OICQ \***

- Unread message
- Friends on line
- Send QQ message
- QQ chat
- Check QQ inbox
- Buddy list
- History
- QQ setup

## **Quick access**

- Browser
-  Screen saver
- Add entry to phonebook
- Write message
- Missed calls
- Profile setting
- Calendar
- Message Inbox
- Meeting mode
- Edit

## **Media center**

- New picture
- Photo album
- Picture
- Animation
- Melody
- Voice notes
- Video
- Download media
- View free space

## **Tools**

- Calendar
- Calculator
- Stopwatch
- Tone editor
- Voice commands
- Video player
- My picture

## **Java**

### **Settings**

- Language
- Backlight
- Adjust contrast
- Clock
- Auto power off
- Display
- External display
- Key lock
- Input mode
- Home keys
- Restore factory
- Security
- Call features
- Network
- Connection indication
- Minute reminder
- Menu style
- Java settings
- Light sensor

\* Optional network, SIM card, or subscription-dependent feature.

# Main Menu Display



## Profile

- Normal
- Meeting
- Outdoors
- Car
- Customized
- Office
- Handsfree
- Headset
- Silence



## Recent calls

- Missed calls
- Received calls
- Dialed calls
- Erase all
- Call time
- Call cost
- GPRS data counter
- GPRS connection time
- In-call count
- Session information



## Phonebook

- Search
- Add
- Erase
- Copy
- Option
- Speed dial
- Caller group
- Personal number
- Fixed dial number
- Voice tags
- My Own Card



## Ringing style

- Ringing volume
- Ringing tone
- Incoming call alert
- Vibrating
- Message alert tone
- Key tone volume
- Key tone type
- Warning tones
- Startup music



## Camera



## V. recorder



## Browser \*

- Home
- Bookmark
- Profiles
- Appearance settings
- Download settings
- Go to address
- Clear the cache
- Service Inbox
- Certificates



## Bookmark



## Voice notes



## STK \*

### Shortcuts


#### Open menu options:

Press  (in idle).

#### Go to dialed calls list:

Press  (in idle).

#### Turn on voice-activated commands:

 Press the voice activation key (in idle) and then say a command into the microphone.

#### Turn off the ringer:

 Press  (in idle).

#### Exit menu system:


Press .

\* Optional network, SIM card, or subscription-dependent feature.

DRAFT

# Contents

---

	<b>Menu Map</b> .....	<b>3</b>
	<b>Contents</b> .....	<b>7</b>
	<b>Safety and General Information</b> .....	<b>15</b>
	<b>Getting Started</b> .....	<b>21</b>
	What's in the Box? .....	21
	About This Guide .....	21
	Installing the SIM Card .....	22
	Installing the Battery .....	22
	Charging the Battery .....	23
	Battery Use .....	24
	Turning On Your Phone .....	25
	Adjusting the In-Call Volume .....	26
	Displaying Your Phone Number .....	26
	Making a Call .....	27
	Answering a Call .....	27
	Muting/Unmuting a Call .....	28
	<b>Learning to Use Your Phone</b> .....	<b>29</b>
	Using the Internal Display .....	29
	Using Menus .....	31
	Entering Text .....	33
	Using the External Display .....	39
	Locking and Unlocking Your Phone .....	40
	Setting and Changing Codes .....	41
	If You Forget Codes .....	42
	If You Enter the Wrong PIN or PIN2 Code 3 Times In a Row .....	42
	<b>Setting Up Your Phone</b> .....	<b>43</b>
	Adjusting the Backlight .....	43

Adjusting Display Contrast .....	43
Setting Time and Date .....	43
Setting Local Time .....	44
Setting Power-Off Time.....	44
Setting Display Color .....	44
Setting a Wallpaper Image .....	45
Setting a Screen Saver Image .....	45
Using Anykey Answer .....	46
Using Flip Answer.....	46
Setting an Ambient Light Sensor .....	46
<b>Calling Features .....</b>	<b>47</b>
Answering a New Call.....	47
Making a New Call .....	47
Making an Emergency Call.....	48
Putting/Answering a Call on Hold .....	48
Setting a Phone Number.....	49
Redialing Automatically.....	49
Checking Recent Calls .....	49
Erasing Recent Calls .....	49
Redialing Recent Calls .....	50
Saving Recent Calls in Your Phonebook.....	51
<b>Messages and Chat .....</b>	<b>52</b>
Writing and Sending an SMS Message .....	52
Writing and Sending an MMS Message .....	53
Adding Touch-Ups to an SMS Message .....	55
Checking a Received SMS/MMS Message .....	55
Checking a Sent or Unsent SMS/MMS Message.....	56
Checking a Draft SMS/MMS Message .....	56
Managing SMS/MMS Messages.....	57
Editing an MMS Template.....	58
Setting a Voice Mail Service Number .....	58
Setting a Message Topics for Service Provider .....	59



Setting a Service Command You Want Your Service Provider to Operate . . . . .	59
Opening a Chatroom . . . . .	59
Adding a Quick Note to Your Message . . . . .	60
Adding a Smiley Symbol to Your Message . . . . .	61
Editing Your Nickname . . . . .	61
Editing a Chatroom Phone Number . . . . .	62
Checking Old Messages . . . . .	62
Setting ICQ . . . . .	63
Checking an Unread Message . . . . .	64
Checking a Read Message . . . . .	64
Deleting All Read Messages . . . . .	64
Checking a Received Message . . . . .	65
Viewing an Online Friend List . . . . .	65
Refreshing an Online Friend List . . . . .	65
Sending a Message . . . . .	65
Managing a Buddy List . . . . .	65
<b>Setting Up Your Phonebook . . . . .</b>	<b>66</b>
Setting Phonebook to Use the SIM Card or Phone Memory . . . . .	66
Creating a Phonebook Entry . . . . .	66
Phonebook Options . . . . .	67
Setting 1-Touch Dialing Numbers . . . . .	69
Checking 1-Touch Dialing Numbers . . . . .	70
Changing 1-Touch Dialing Numbers . . . . .	71
Erasing 1-Touch Dialing Numbers . . . . .	71
Setting Caller Groups . . . . .	72
Changing Caller Groups . . . . .	73
Renaming Caller Groups . . . . .	73
Setting a Caller Group Ring Tone . . . . .	74
Setting a Caller Group Icon . . . . .	75
Creating Your Caller Group Icon . . . . .	76

Setting Your Personal Phone Numbers . . . . .	79
Editing Your Personal Phone Numbers . . . . .	80
Erasing Your Personal Phone Numbers . . . . .	80
Setting Fixed Dialing Numbers . . . . .	81
Editing Fixed Dialing Numbers . . . . .	83
Erasing a Fixed Dialing Number . . . . .	84
Erasing All Fixed Dialing Numbers . . . . .	85
Setting Voice Dialing Numbers . . . . .	86
Playing Voice Dialing Number Commands . . . . .	87
Changing Voice Dialing Number Commands . . . . .	88
Erasing Voice Dialing Number Commands . . . . .	89
Sending a Business Card as SMS . . . . .	90
Sending a Business Card as Text . . . . .	94
Sending a Message with a Phonebook Entry . . . . .	97
Creating Your Name Card . . . . .	98
Checking Your Name Card . . . . .	99
Sending Your Name Card . . . . .	99
Erasing Your Name Card . . . . .	101
<b>Personalizing Your Phone . . . . .</b>	<b>102</b>
Setting a Language . . . . .	102
Replacing the Service Provider Name . . . . .	102
Setting Home Keys . . . . .	102
Restoring Factory Settings . . . . .	103
Setting a Menu Style . . . . .	103
Creating an Option Shortcut . . . . .	103
Using an Option Shortcut . . . . .	104
Setting a Phone Profile . . . . .	104
Setting Ringers . . . . .	106
Setting the Vibrator, Warning Tones, and Startup Music . . . . .	107
<b>Getting More Out of Your Phone . . . . .</b>	<b>108</b>
Deflecting a Call . . . . .	108

Sending DTMF Tones . . . . .	109
Making a Multi-Party Call . . . . .	109
Ending Calls on a Multi-Party Call . . . . .	110
Diverting Calls . . . . .	110
Blocking Your Calls . . . . .	111
Setting Fax, Data, and Voice Calls . . . . .	111
Setting a Service Network . . . . .	111
Setting a Service Network Reminder . . . . .	112
Setting a Call Time Reminder . . . . .	112
Checking Call Times . . . . .	112
Resetting the Call Timer . . . . .	113
Setting the Call Cost Counter . . . . .	113
Resetting the Call Cost Counter . . . . .	113
Checking Call Cost . . . . .	113
Checking Call Credit . . . . .	114
Displaying Call Time after a Call . . . . .	114
Displaying Call Cost after a Call . . . . .	114
Using STK Services . . . . .	115
<b>Personal Organizer Features . . . . .</b>	<b>116</b>
Turning On the Alarm Clock . . . . .	116
Turning Off the Alarm Clock . . . . .	117
Creating a Calendar Note . . . . .	117
Moving or Copying a Calendar Note to Another Date . . . . .	119
Sending a Calendar Note . . . . .	120
Making a Call from a Calendar Note . . . . .	121
Checking a Calendar Note . . . . .	122
Erasing a Calendar Note . . . . .	122
Creating an Account Book . . . . .	122
Editing an Account Book . . . . .	123
Checking Your Income . . . . .	123
Checking Your Expense . . . . .	124
Checking Your Balance . . . . .	124

Erasing an Account Book . . . . .	124
Erasing All Account Books . . . . .	125
Using the Calculator . . . . .	125
Using the Stopwatch . . . . .	127
Setting Voice Commands . . . . .	129
Displaying World Time . . . . .	131
Turning On Your Phone's Voice Recorder . . . . .	132
Starting to Record . . . . .	132
Playing a Voice Note . . . . .	132
Turning Off Your Phone's Voice Recorder . . . . .	133
Renaming a Voice Note . . . . .	134
Deleting a Voice Note . . . . .	134
Deleting All Voice Notes . . . . .	135
Sending a Voice Note . . . . .	135
Checking a Voice Note . . . . .	137
Sorting Voice Notes . . . . .	138
<b>Security . . . . .</b>	<b>139</b>
Locking and Unlocking the Keypads . . . . .	139
Setting Security Codes . . . . .	140
Changing Security Codes . . . . .	140
Setting a Closed User Group . . . . .	140
<b>News and Entertainment . . . . .</b>	<b>141</b>
Playing a Game . . . . .	141
Managing Photo Folders . . . . .	141
Drawing a Picture . . . . .	141
Composing a Melody . . . . .	144
Displaying a Multimedia Object . . . . .	148
Deleting Multimedia Objects . . . . .	149
Sending a Multimedia Object . . . . .	150
Renaming a Multimedia Object . . . . .	153
Moving a Photo or Picture to Any Photo Folder . . . . .	154
Checking a Multimedia Object . . . . .	154

Sorting Multimedia Objects . . . . .	155
Editing a Multimedia Message . . . . .	156
Playing a Java Game . . . . .	160
Checking a Java Game . . . . .	161
Deleting a Java Game . . . . .	161
Setting Java . . . . .	162
Turning On Your Phone Camera . . . . .	162
Taking and Saving Pictures . . . . .	163
Naming a New Picture . . . . .	163
Renaming Your Pictures . . . . .	164
Rotating a New Picture . . . . .	165
Using a New Picture as a Wallpaper Image . . . . .	165
Using a New Picture as a Screen Saver . . . . .	166
Sending a New Picture . . . . .	167
Turning Off Your Phone Camera . . . . .	169
Customizing Your Phone Camera . . . . .	169
Checking Pictures . . . . .	175
Turning On Your Phone's Video Recorder . . . . .	176
Beginning to Record . . . . .	176
Playing a Video . . . . .	177
Turning Off Your Phone's Video Recorder . . . . .	177
Renaming a Video . . . . .	178
Deleting Videos . . . . .	178
Sending a Video . . . . .	179
Checking a Video . . . . .	181
Sorting Videos . . . . .	182
Setting a Network Profile . . . . .	183
Connecting to the Internet . . . . .	183
Setting a Bookmark . . . . .	185
Downloading Multimedia Objects . . . . .	186
Setting Display Style . . . . .	186
Allowing or Rejecting Cookies . . . . .	186

Removing Files from Your Phone's Cache Memory . . .	186
Reading Your Service Provider's Messages . . . . .	186
Reading Certificates . . . . .	187
<b>Troubleshooting . . . . .</b>	<b>188</b>
<b>Specific Absorption Rate Data . . . . .</b>	<b>194</b>
<b>Index . . . . .</b>	<b>196</b>

DRAFT

# ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.  
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

## ***Exposure To Radio Frequency (RF) Energy***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## ***Operational Precautions***

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

### ***External Antenna Care***

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

## ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

## ***Body-Worn Operation***

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

## ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

## ***Approved Accessories***

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at [www.Motorola.com](http://www.Motorola.com).

## ***RF Energy Interference/Compatibility***

**Note:** Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

## ***Facilities***

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.



## ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

## ***Medical Devices***

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## ***Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found in the “Wireless Phone Safety Tips” at the end of this manual and at the Motorola website:

[www.Motorola.com/callsmart](http://www.Motorola.com/callsmart).

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

### ***Blasting Caps and Areas***






To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in

areas posted “Turn off electronic devices.” Obey all signs and instructions.

## **Batteries**

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

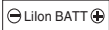Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

## **Seizures/Blackouts**

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before

playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

## ***Repetitive Motion Injuries***

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.



# Getting Started

---



## What's in the Box?

Your digital wireless phone comes with a battery and charger. You can purchase other accessories to customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

## About This Guide

### Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

### Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.


## Installing the SIM Card

Your Subscriber Identity Module (SIM) card contains your phone number, service details, and phonebook/message information.

**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

### Action

With your phone facing down, fit the SIM card into the slot, with the metal contacts facing down and the beveled corner pointed at the notch of the slot (as shown).

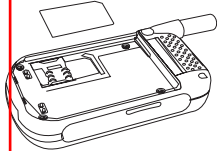

## Installing the Battery

You must install and charge the battery to use your phone.



Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

### Action

- 1 Remove the battery from the plastic case.
- 2 Insert the battery with the 2 tabs wedged into the battery slots.



## Action


- 3 Latch the other end of battery door so that it clicks into place.

## Charging the Battery

New batteries are partially charged. Before using your phone, charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

## Action


- 1 With your phone facing up, plug in the travel charger, with the LED facing up.

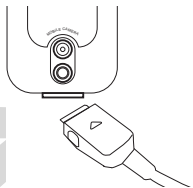

- 2 Plug the other end into the appropriate electrical outlet. The LED turns green when the battery is being charged.
- 3 When done charging, unplug the charger from the outlet, and press the release tabs to remove the charger from your phone.

When you charge the battery, the battery power level indicator in the external and internal displays shows how much of the charging process is complete. At least 1 segment of the battery power level indicator must be visible to ensure full phone functionality while charging.





When the battery power is low, your phone will play the warning tones to warn you. Charge the battery immediately (see page 23).




If battery power runs out, your phone turns off.

## Battery Use

To maximize your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.



New batteries or batteries that have been stored for a long time may require a longer charge time. When charging, displays the charging status in 10-20 minutes.

- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $45^{\circ}\text{C}$  ( $113^{\circ}\text{F}$ ). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to buy a new battery.







The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode. Refer to your battery's label for battery type.




## Turning On Your Phone

### Action



- 1 Open your phone's flip.
- 2 Press and hold  to turn on the phone.
- 3 If necessary, enter your SIM card PIN code and press  to unlock the SIM card.


**Caution:** If you enter an incorrect PIN code 3 times in a row, your phone disables the SIM card and displays **SIM Blocked**.

- 4 If necessary, enter your 4-digit unlock code and press  to unlock the phone.



**Note:** The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.


- 5 Enter the current time (*HH:MM*) and press  to confirm.
- 6 Enter the current date (*YYYY/MM/DD*) and press  to confirm.

**Tip:** To reset the time and date, press  > **Settings** > **Clock** > **Set the time** and **Set the date**.)



Your phone starts to connect to your service provider and then enters the idle display if connection is successfully established.

## Adjusting the In-Call Volume

	Press	To
1	up in-call volume key  or  down in-call volume key	increase earpiece volume during a call  decrease earpiece volume during a call
2		save the setting

**Note:** Adjust the in-call volume from the idle display.

## Displaying Your Phone Number




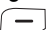


You can display your phone number to people you call.


**Tip:** Scroll to **Preset** to use the default set by your service provider.


### Find the Feature

 > **Settings** > **Call feature**  
> **Show number** > **On**

# Making a Call

Press	To
1 keypad keys	enter the phone number
	<b>Tip:</b> If you make a mistake, press <b>CLEAR</b>  to clear the last digit, or press and hold <b>CLEAR</b>  to clear all digits.
2 	make the call
3 	end the call

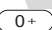

**Tip:** Press and hold  to insert a “P” (pause character) and then enter an extension following it.

**Tip:** Press and hold  to insert a “+” and then enter the country code, area code (omitting the starting 0), and phone number to make an international call.


**Note:** Dial the phone number from the idle display.

# Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
1 	answer the call
2 	end the call



**Tip:** When **Flip answer** is active, open the phone to answer the call. (To activate, press  > **Settings** > **Call feature**




> **Flip answer.**)

**Tip:** When **Anykey answer** is active, press any of the keys except  to answer the call. (To activate, press  > **Settings** > **Call feature** > **Anykey answer.**)

**Note:** If the phone is locked, you must unlock it to answer the call.

## Muting/Unmuting a Call


When you are on a call:


	Press	To
1	<b>OPTIONS</b> 	open the in-call operation menu
2		scroll to <b>Mute</b> or <b>Unmute</b>
3		mute or unmute the call



# Learning to Use Your Phone

## Using the Internal Display

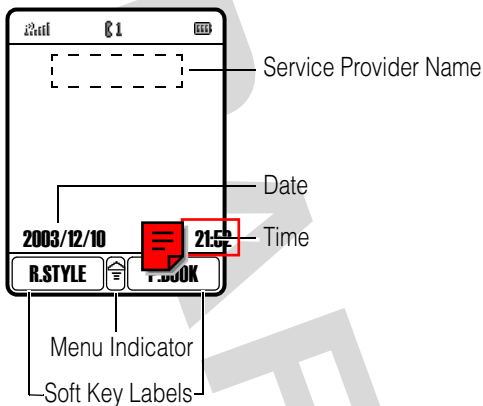
The *idle display* is the standard display when you are *not* on a call or using the menu.







The Menu indicator indicates that you can press the menu key  to display the main or options menu.

Labels at the bottom corners show the current soft key functions. Press the left soft key  or right soft key  to perform the function indicated by the left or right soft key label.



Press  from the idle display to see 4 menu feature icons. You can also decide which 4 menu options you would like to see by setting the home keys (see page 102).

At the top of the display are the following status indicators:

Icon	Name	Description
	<b>Signal Strength</b>	Indicates strength of signal being received. The more vertical bars, the better the reception (5 bars maximum).  Bars differ in color by the signal strength: green > orange > red.
	<b>Battery Power Level</b>	Indicates remaining battery power. The more bars, the more battery power available (3 bars maximum).  Bars differ in color by power level: green > orange > red. The icon flashes when battery power is near empty.
	<b>New Text Message</b>	Indicates new unread message(s).
	<b>New Text/Voicemail Message</b>	Indicates new unread/unheard message(s).



Icon	Name	Description
	<b>New Voicemail Message</b>	Indicates new unheard voicemail message(s).
	<b>Roaming</b>	Indicates you are on another network.
	<b>Line 1/Line 2</b>	Indicates telephone line you are using.
	<b>Vibrator On</b>	Indicates vibrator is turned on.
	<b>Silent</b>	Indicates ringer is turned off.
	<b>GPRS Mode</b>	Indicates you are on the GPRS network.
	<b>Call Connected</b>	Indicates you are on a call.
	<b>OICQ Mode</b>	Indicates you are using OICQ.

## Using Menus



From the idle display, press to display the main menu.

### Selecting a Menu Feature

To select a menu feature, starting from the idle display:

#### Find the Feature


> Phonebook  
> Add

Use  to scroll, and the left/right soft keys to select the soft key functions listed in the bottom left and right corners of the display. 

**Note:** In this user's guide, "Find the Feature" always indicates the feature's position in the icon menu.



## **Selecting a Feature Option**

Some features require you to select an item from a list:

- Press  to scroll up or down to highlight the item.
- In a numbered list, press an alphanumeric key to highlight the item.
- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.

## **Entering Feature Information**

Some features require you to enter information:

- Enter numbers or text with alphanumeric keys.
-  When an item has a list of possible numeric values, press an alphanumeric key to set the value.
- If you enter or edit information and do not want to save changes, press  to exit without saving.

**Phonebook** lets you create phonebook entries. A *flashing cursor* shows where text is entered.







# Entering Text

Multiple text entry modes make it easy for you to enter names, numbers, and messages on your phone.



## Setting Ready-to-Use Text Input Modes

### Find the Feature

 > Settings > Input mode  
> Preferred input mode

	Press	To
1		scroll to desired input mode
2	ON 	select input mode
3	BACK 	change setting
4		save setting

## Choosing a Text Entry Mode

Most text entry screens let you enter letters, numbers, and/or symbols as required. Press  (or  > Input mode) from a text entry screen to select a text entry mode:



**Tap mode**

Type letters, numbers, and symbols by pressing a key 1 or more times (see



**Using Tap Mode** on page 34).



**ITAP English**

Let the phone predict each word as you type it (see page 35).



**123**

Enter numbers only.

**Symbol**


Enter symbols only (see page 38).




**Note:** The text entry mode you select remains active until you change it by selecting another mode.

## Using Tap Mode

Tap mode is the standard mode for entering text on your phone.

Press  > **Input mode** from any text entry screen and select **Tap mode**.

	Press	To
1	keypad key 1 or more times	select letter, number, or symbol
2	keypad keys	enter remaining characters
3		store text

### General Text Entry Rules

Press a key repeatedly to cycle through its characters.

- If you do not press a key for 2 seconds, the highlighted character highlighted is accepted, and the cursor moves to the next position.
- The 1st character of every sentence is capitalized. After entering 3 characters of a word, you will be presented with a possible word combination. Scroll right to select this word, or scroll up and select another word from the list.

## Setting Words to Complete Automatically




**Word completion** allows you to select a word from a list after you enter the 1st 3 characters.

### Find the Feature

 > **Settings** > **Input mode**  
> **Word completion** > **ON**


To enter text using **Tap mode**:



Press	To
1 keypad keys	enter 1st 3 characters of a word
2  up	open the possible words list
3 	scroll to desired word
4 	select word



## Use iTAP™ Software Predictive Text Entry Mode



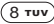
iTAP™ English is a predictive text entry mode that lets you enter a word using 1 key press per letter.

Press  > **Input mode** from any text entry screen, and select **iTAP English**.



## Entering Words

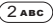


Press	To
1 an keypad key	enter the 1st letter of word <b>Tip:</b> The letters associated with the key are shown at the bottom of the display.
2 keypad keys (1 per letter)	enter rest of word <b>Tip:</b> Alternative words and letter combinations are shown at the bottom of the display. The word choices update with each key press.
3 	highlight word you want
4 	enter word at flashing cursor location <b>Tip:</b> iTAP automatically inserts a space after each word.

For example, to spell the word “art,”  
press    . The display shows **art**.

## Entering Novel Words

If you enter a word that iTAP does not recognize, the word does not display.

### Action

- 1 Press **CLEAR**  1 or more times to delete letters until a letter combination matches the start of the word.
- 2 Press  to highlight letter or letter combination.
- 3 Press **OK** , then scroll left to move cursor to the left and “lock” the selected word portion.
- 4 Continue to enter letters and highlight letter combinations to spell the word.

Your phone stores the unrecognized word and includes it in the list of alternative word choices. When memory space for unrecognized words is filled, your phone deletes the oldest words as it adds new words.

## Entering Punctuation

Press	To
 or 	enter punctuation



## Entering Numbers

### Action

- 1 Enter the 1st digit, then highlight it to put the iTAP software in number entry mode.
- 2 Press keys to add digits to the number.
- 3 Press **OK** to enter the number at the flashing cursor location.



### Deleting Letters and Words


With the cursor to the right of the text you want to delete:



### Action

Press **CLEAR**  to delete 1 letter at a time.

Press and hold **CLEAR**  to delete the entire line.


### Using Symbol Text Entry Mode

Your phone provides an alternate way to enter symbol characters. Press  > **Input mode** from any text entry screen and select **Symbol**.

	Press	To
1		highlight desired symbol
2		enter symbol at flashing cursor location

# Using the External Display

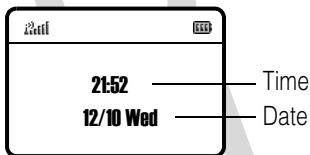

The external display shows the phone status, including network signal and battery power level. Press the in-call volume key to show time and date. Press the in-call volume key again to show the phone status only.




You can also set a clock type:

## Find the Feature

 > **Settings** > **External display**  
> **Clock type**

Press	To
1 	scroll to the desired clock type
2 	select the clock type

When you receive an incoming call, the external display shows the caller's number or name. To answer the incoming call, open the flip.

**Note:** To see a caller's name in the external display, the caller's number must match an entry in your phonebook (see page [66](#)). 



# Locking and Unlocking Your Phone


You can lock your phone manually or set the phone to lock automatically whenever you turn it off. To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*


You can make emergency calls on your phone even when it is locked.

## Locking Your Phone Manually


### Find the Feature

 > **Settings** > **Security**  
> **Code status** > **Phone lock**  
> **Lock now**

	Press	To
1	keypad keys	enter your unlock code
2		lock the phone

 **Tip:** Your phone's unlock code is originally set to 1234 at the factory. Your service provider may reset the unlock code to the last 4 digits of your phone number.

## Unlocking Your Phone

	Press	To
1	keypad keys	enter your unlock code
2		unlock the phone



## Setting Your Phone to Lock Automatically


To lock your phone every time you turn it off:


### Find the Feature

 > **Settings** > **Security**  
> **Code status** > **Phone lock**  
> **Automatic lock** > **ON**

## Setting and Changing Codes

You can set and change the following codes that block other people from using your phone and data in it:

- |                   |   |
|-------------------|---|
| <b>PIN code</b>   |  Lock your phone when you turn it off. |
| <b>PIN2</b>       | Lock certain subscription-dependent features every time you use them.   |
| <b>Phone code</b> | Lock your phone when you turn it off.   |
| <b>SIM lock</b>   | Lock your phone when you insert an unidentified SIM card.   |

 Your phone's 4-digit unlock code is factory-set to 1234, and the 6-digit SIM card code is factory-set to 000000. Your service provider may reset these before you receive your phone.

If your service provider has *not* reset these codes, you should change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the SIM card code must contain 6 digits.

To set codes:

### Find the Feature

 > **Settings** > **Security**  
> **Code status**



To change codes:

**Find the Feature**

 > **Settings** > **Security**  
> **Change code**

## ***If You Forget Codes***

If you forget your codes, contact your service provider.

## ***If You Enter the Wrong PIN or PIN2 Code 3 Times In a Row***

If you enter a wrong PIN or PIN2 code 3 times in a row, your phone prompts you to enter the PUK or PUK2 code to unblock your SIM card. For the PUK and PUK2 codes, contact your service provider.

# Setting Up Your Phone

You can set your phone and restore it to the factory settings.

## Adjusting the Backlight

You can set the amount of time that the display and keypad backlights remain on, or turn off backlights to extend battery life.



**Find the Feature**

 > Settings  
> Backlight

## Adjusting Display Contrast

**Find the Feature**

 > Settings  
> Adjust contrast

Press	To
1  right/left	scroll to the desired contrast
2 	select the contrast

## Setting Time and Date

To see time and date in the idle displays, set the time and date first.

**Find the Feature**

 > Settings > Clock  
> Set the time/Set the date



Then set the date format.

### Find the Feature

 > **Settings** > **Clock**  
> **Date format**

To see time and date in the internal idle display:

### Find the Feature

 > **Settings** > **Clock**  
> **Show clock** > **ON**

To see time and date in the external idle display:

Press	To
the in-call volume key	display time and date in the external display

## Setting Local Time


### Find the Feature

 > **Settings** > **Clock**  
> **Local time zone**

## Setting Power-Off Time

### Find the Feature

 > **Settings** > **Auto power off**  
> **On**

Tip: Press  right/left to select a repeat type.

## Setting Display Color

### Find the Feature

 > **Settings** > **Display**  
> **Color scheme**

## Setting a Wallpaper Image

You can set a picture or animation as a wallpaper (background) image in your phone's **idle** display, internal or external.

**Note:** When you set an animation as a wallpaper image, only the 1st frame of the animation displays.

### Find the Feature

- > Settings
- > Display/External display
- > **Wall paper**

## Setting a Screen Saver Image

You can set a picture or animation as a screen saver image in your phone's external or internal display. The image displays when the flip is closed or open and no activity occurs in **3 minutes**.

An animation repeats for **1 minute**, then the **1st** frame of the animation displays.


### Find the Feature

- > Settings
- > Display/External display
- > **Screen saver**

**Tip:** Scroll to **Off** or **Power saving** to turn off the screen saver to extend battery life.



## **Using Anykey Answer**

Press any keys except  to answer calls.

**Find the Feature**

 > **Settings** > **Call feature**  
> **Anykey answer** > **ON**

## **Using Flip Answer**

**Find the Feature**

 > **Settings** > **Call feature**  
> **Flip answer** > **ON**

## **Setting an Ambient Light Sensor**



**Find the Feature**

 > **Settings** > **Light sensor**

# Calling Features




## Answering a New Call

When you are on a call, and your phone displays a new incoming call message:

Press	To
1 	put the call on hold and answer the new call
2 	end the new call and continue with the call

## Making a New Call


When you are on a call, you can make a new outgoing call.

Press	To
1 <b>OPTIONS</b> 	open the in-call operation menu
2 <b>OK</b> 	select <b>Dial new call</b>
3 keypad keys	enter the phone number
4 	dial the phone number






## Making an Emergency Call

With or without your SIM card installed, you can make an emergency call to the Emergency phone number your service provider gave you.

	Press	To
1	keypad keys	enter the phone number
2		dial the phone number

## Putting/Answering a Call on Hold

When you are on a call, you can put the call on hold or answer the call on hold.

	Press	To
1	<b>OPTIONS</b> 	open the in-call operation menu
2		scroll to <b>Hold</b> or <b>Activate</b>
3		hold or answer the call on hold



# Setting a Phone Number



You can set a phone number (line) to make and receive calls.

## Find the Feature

 > Settings > Call feature  
> Phone lines

# Redialing Automatically


## Find the Feature

 > Settings > Call feature  
> Auto redial > ON

# Checking Recent Calls

## Find the Feature

 > Recentcalls  
> Missed calls/Received calls/  
Dialed calls


**Tip:** If the phone number of the selected recent call displays, press  to dial.

# Erasing Recent Calls





You can erase 1 or all of the recent calls.

## Erasing a Recent Call

### Find the Feature

 > Recent calls  
> Missed calls/Received calls/  
Dialed calls




Press	To
1 	scroll to a recent call you want to erase
2 	open the options menu
3 	scroll to <b>Erase</b>
4 	erase the selected recent call





## Erasing All Recent Calls

**Find the Feature**  > **Recent calls** > **Erase all**

## Redialing Recent Calls

You can redial recent calls if the phone number displays.

**Find the Feature**  > **Recent calls**  
> **Missed calls/Received calls/Dialed calls**

Press	To
1 	scroll to the desired recent call
2 	open the options menu
3 	scroll to <b>Call</b>
4 	make the phone call

# Saving Recent Calls in Your Phonebook

You can save recent calls as phonebook entries if the phone number displays.

## Find the Feature



> Recent calls

> Missed calls/Received calls/  
Dialed calls

	Press	To
1		scroll to desired recent call
2		open the options menu
3		scroll to <b>Save</b>
4		select <b>Save</b>
5	keypad keys	enter the name
6		save the entry in your phonebook



# Messages and Chat

You can write, send, and receive messages, either by Short Messaging Service (SMS) or by Multimedia Messaging Service (MMS). You can also reset or set a voice mail service number in **Msg. center**.







## Writing and Sending an SMS Message



### Find the Feature



- > **Msg. center**
- > **Text messages**
- > **Write message**



	Press	To
1	keypad keys	enter your message
2	<b>SEND</b> 	select a main recipient
3	<b>NAMES</b> 	open your phonebook
4		scroll to the desired entry
5	<b>OK</b> 	select the entry
6		scroll to the desired phone number
7	<b>OK</b> 	select the phone number

Press	To
8  down	add a minor recipient, if necessary
9 <b>SEND</b> 	send your message







**Tip:** Repeat steps 3-8 to add minor recipients.

## Writing and Sending an MMS Message






### Find the Feature

-  > **Msg. center**
- > **Text messages**
- > **Write message**







To send by a phone number:



Press	To
1 keypad keys	enter your message
2 <b>SEND</b> 	select <b>SEND</b>
3 <b>P.BOOK</b> 	open your phonebook
4 	scroll to the desired entry
5 	select the entry
6 	scroll to the desired phone number
7 	select the phone number



Press	To
8 <b>BACK</b> 	return to the previous menu <b>Tip:</b> Repeat steps 4-8 to add other recipients.
9 <b>BACK</b> 	return to the previous menu
10 	open the options menu
11 	scroll to <b>Send</b>
12 	send your multimedia message

To send by an e-mail address:


Press	To
1 <b>SEND</b> 	select <b>SEND</b>
2 	open the options menu
3 	scroll to <b>New e-mail address</b>
4 	select <b>New e-mail address</b>
5 keypad keys	enter the e-mail address
6 	add the e-mail address to the <b>Recipients</b> box <b>Tip:</b> Repeat steps 2-6 to add other recipients.
7 	open the options menu

Press	To
8 	scroll to <b>Send</b>
9 	send your multimedia message

## Adding Touch-Ups to an SMS Message

You can insert quick notes, phonebook numbers and names, image objects (pictures or animations), and sound objects (sounds or melodies) when writing an SMS message.

### Find the Feature



-  > **Msg. center**
- > **Text messages**
- > **Write message**



## Checking a Received SMS/MMS Message

### Find the Feature

-  > **Msg. center**
- > **Text messages/  
Multimedia msgs.**
- > **Inbox**

Press	To
1 	scroll to the desired message
2 	check the selected message

# Checking a Sent or Unsent SMS/MMS Message

## Find the Feature

- > **Msg. center**
- > **Text messages/  
Multimedia msgs**
- > **Outbox**



This icon indicates a sent SMS message.



This icon indicates an unsent SMS message or a draft SMS message.



This icon indicates a sent MMS message or a draft MMS message.



This icon indicates an unsent MMS message.



	Press	To
1		scroll to the desired message
2		check the selected message



# Checking a Draft SMS/MMS Message

## Find the Feature

- > **Msg. center**
- > **Text messages/  
Multimedia msgs.**
- > **Drafts**





Press	To
1 	scroll to the desired message
2 	check the selected message

## Managing SMS/MMS Messages

You can perform these functions on a message stored in your **Inbox**, **Outbox**, or **Drafts** folder:

- edit
- erase
- dial or save a number included in the message
- connect to a URL included in the message, or save it as a bookmark
- send an unsent message
- send a reply
- forward the message
- call or chat with the sender of an SMS message
- open, check, or save an object from an MMS message
- check a message that you sent or failed to send

### Find the Feature

-  > **Msg. center**
- > **Text messages/  
Multimedia msgsg.**
- > **Inbox/Outbox/Drafts**



## Editing an MMS Template

You can edit an MMS template and save it either on **Drafts** of **Multimedia msgs.** of **Msg. center**, or on **MMS template** of **Multimedia msgs.** of **Msg. center**.

### Find the Feature

-  > **Msg. center**
- > **Multimedia msgs.**
- > **MMS template**


## Setting a Voice Mail Service Number

Your service provider may set a voice mail service number before you receive your phone. To reset or set it, refer to the following procedures.



### Find the Feature

-  > **Msg. center**
- > **Voice mailbox**

Press	To
1 keypad keys	enter a voice mail service number your service provider provided
2 	save the setting

## Setting a Message Topics for Service Provider

You can set a topic message you want to receive from your service provider, such as traffic reports and today's news.


**Find the Feature**

 > **Msg. center**  
> **Cell broadcast**

## Setting a Service Command You Want Your Service Provider to Operate

**Find the Feature**

 > **Msg. center**  
> **Service command**

<b>Press</b>	<b>To</b>
1 keypad keys	enter the service command you want your service provider to operate
2 	send the service command to your service provider

## Opening a Chatroom












You can open up to 4 chatrooms and have an online chat.

**Find the Feature**



 > **Chatroom**













Press	To
1 	scroll to any chatroom box
2 <b>NAMES</b> 	select from your phonebook a person you want to have a chat with
3 	scroll to the desired entry
4 <b>OK</b> 	select the entry
5 	scroll to the desired phone number
6 <b>OK</b> 	select the phone number
7 <b>OK</b> 	save the setting
8 keypad keys	enter your nickname
9 <b>OK</b> 	save the setting
10 keypad keys	enter your message
11 <b>SEND</b> 	send your message

## Adding a Quick Note to Your Message



Press	To
1 	open the options menu
2 	scroll to <b>Insert quick note</b>

Press	To
3 	select <b>Insert quick note</b>
4 	scroll to the desired quick note
5 	add the selected quick note to your message



## ***Adding a Smiley Symbol to Your Message***

Press	To
1 	open the options menu
2 	scroll to <b>Insert smiley</b>
3 	select <b>Insert smiley</b>
4 	scroll to the desired smiley symbol
5 	add the selected smiley symbol to your message





## ***Editing Your Nickname.***

Press	To
1 	open the options menu
2 	scroll to <b>Nickname</b>






Press	To
3 	select <b>Nickname</b>
4 keypad keys	edit your nickname
5 	save the setting

## Editing a Chatroom Phone Number

Press	To
1 	open the options menu
2 	scroll to <b>Chat Numbers</b>
3 	select <b>Chat Numbers</b>
4 keypad keys	edit a chatroom phone number
5 	save the setting

## Checking Old Messages

Press	To
1 	open the options menu
2 	scroll to <b>View history</b>
3 	check old messages



## Setting ICQ

You can use ICQ and have an online chat. Your service provider may set an ICQ profile for you to use ICQ and have an online chat. You can reset it or create a new 1.

### Find the Feature

-  > OICQ > QQ setup
- > Set service number

## Turning On ICQ

You can select an ICQ profile and turn on ICQ.

### Find the Feature

-  > OICQ > QQ setup
- > Set service number

You can use the ICQ profile your service provider set and turn on ICQ.

### Find the Feature

-  > OICQ > QQ setup
- > Service status
- > Apply QQ service

## Turning Off ICQ

### Find the Feature

-  > OICQ > QQ setup
- > Service status
- > Quit QQ status

## Setting Your User Name and Password

### Find the Feature


-  > OICQ > QQ setup
- > Bind QQID



## Allowing or Rejecting Incoming Calls


You can allow or reject incoming calls when using ICQ.



### Find the Feature

-  > **OICQ** > **QQ setup**
- > **Call permission**
- > **Allow others to call me/**
- Forbid others to call me**

## Checking an Unread Message

### Find the Feature

-  > **OICQ** > **Unread message**

Press	To
1 	scroll to the desired message
2 	check the selected message

## Checking a Read Message

You can check the read messages from your service provider, friends, strangers, or sent by phone numbers.

### Find the Feature

-  > **OICQ** > **History**
- > **System messages/**
- Friends' messages/**
- Strangers' message/**
- From mobile phone**

## Deleting All Read Messages

### Find the Feature

-  > **OICQ** > **History** > **Delete all**



## **Checking a Received Message**

**Find the Feature**

 > OICQ > Check QQ inbox

## **Viewing an Online Friend List**

**Find the Feature**

 > OICQ > Friends on line  
> View on line list

## **Refreshing an Online Friend List**

**Find the Feature**

 > OICQ > Friends on line  
> Refresh on line list

## **Sending a Message**

You can send a QQ message either by a phone number or by ICQ:

**Find the Feature**

 > OICQ > Send QQ message

## **Managing a Buddy List**

You can create and manage a buddy list.

**Find the Feature**

 > OICQ > Buddy list



# Setting Up Your Phonebook

---

## Setting Phonebook to Use the SIM Card or Phone Memory

Find the Feature

 > Phonebook > Option  
> Memory



 Tip:  indicates a phonebook entry saved on your SIM card memory.

Tip:  indicates a phonebook entry saved on your phone memory.

## Creating a Phonebook Entry

Find the Feature

 > Phonebook > Add

	Press	To
1	keypad keys	enter the name
2		save the name
3	keypad keys	enter the phone number
4		save the phone number

---


---





# Phonebook Options

You can perform several functions on phonebook entries.



## Find the Feature

 > Phonebook > Search








**Note:** This option is available only when your phonebook entries are saved on the phone memory, with  attached. To switch your phone and SIM card memory, see page 66.





Press	To
1 keypad keys	enter the 1st letter(s) of the name
2 	open your phonebook
3 	scroll to the desired entry
4 	select the entry
5 	open the options menu

The phonebook options menu displays the following:

Option	Description
<b>Add number</b> 	add number(s) (up to 4) to phonebook entry and set number type
<b>Set as default</b> 	set number to be called by default when you place a call
<b>Change type</b>	change number type



Option	Description
<b>Add picture</b> 	create incoming call icon that displays when call received from selected phonebook entry
<b>Remove picture</b> 	remove the incoming call display icon from the selected phonebook entry
<b>Add text</b> 	create and add a note to the entry
 <b>Erase</b>	remove 1 or more phonebook entries (or phonebook note, if a note is selected)
<b>Copy</b>	copy phonebook entry to/from SIM card memory from/to phone memory
 <b>Copy all</b>	copy all phonebook entries to/from SIM card memory from/to phone memory
<b>Sort by</b>	select a method to sort phonebook entries
<b>Memory status</b>	<p>read information on both the SIM card and phone memory:</p> <p> <b>X/100</b>—Number (X) of phone numbers in SIM card memory. You can store up to 100 <b>phonebook entries</b> in SIM card memory. </p>

Option	Description
	 <b>X/300</b> —Number (X) of phone numbers in phone memory. You can store up to 300 <b>phonebook entries</b> in phone memory.   <b>X/100</b> —Number (X) of phonebook notes in phone memory. You can store up to 100 phonebook notes in phone memory. 
<b>Dialing number lookup</b>	locate and select phonebook entry to dial

## Setting 1-Touch Dialing Numbers



You can press and hold a key from **2 ABC** to **9 WXYZ** to make the phone call from the idle display. To turn on 1-touch dial:


### Find the Feature




 > **Settings** > **Call feature**  
> **Speed dialing** > **ON**

To create 1-touch dialing numbers:

### Find the Feature

 > **Phonebook** > **Speed dial**

Press	To
1 	scroll to the desired key

Press	To
2 	open your phonebook
3 	scroll to the desired entry
4 	assign the key for the selected phone number

## Checking 1-Touch Dialing Numbers





You can check the speed dial key of a phone number.

### Find the Feature



> Phonebook > Speed dial









Press	To
1 	scroll to the desired name
2 	open the options menu
<b>or</b>	<b>or</b>
<b>VIEW</b> 	check the selected phonebook entry
3 	check the selected phonebook entry

# Changing 1-Touch Dialing Numbers

You can change the phone number of a speed dial key.

## Find the Feature



 > Phonebook > Speed dial

	Press	To
1		scroll to the desired name
2		open the options menu
3		scroll to <b>Change</b>
4		select <b>Change</b>
5		scroll to the desired phonebook entry
6		assign the speed dial key to the selected phone number



# Erasing 1-Touch Dialing Numbers

## Find the Feature

 > Phonebook > Speed dial

	Press	To
1		scroll to the desired name
2		open the options menu



Press	To
3 	scroll to <b>Erase</b>
4 	erase the speed dial key from the selected phone number











## Setting Caller Groups

You can classify your phonebook entries into different caller groups.

### Find the Feature



> Phonebook > Search

Press	To
1 keypad keys	enter the 1st letter(s) of the name
2 	open your phonebook
3 	scroll to the desired entry
4 	select the entry
5 	open the options menu
6 	scroll to <b>Change group</b>
7 	select <b>Change group</b>
8 	scroll to the desired caller group
9 	select the caller group














## Changing Caller Groups

You can move your phonebook entry to another caller group.

### Find the Feature

 > Phonebook > Search

Press	To
1 keypad keys	enter the 1st letter(s) of the name
2 	open your phonebook
3 	scroll to the desired entry
4 	select the entry
5 	scroll to the caller group you want to change
6 <b>CHANGE</b> 	turn on <b>CHANGE</b>
7 	scroll to the desired caller group
8 	select the caller group





## Renaming Caller Groups

You can change the name of a caller group.

### Find the Feature

 > Phonebook > Caller group



Press	To
1 	scroll to the desired caller group
2 	select the caller group
3 	select <b>Rename</b>
4 keypad keys	enter the new name
5 	save the new name







## Setting a Caller Group Ring Tone

You can select a ring tone for a caller group to use. The ring tone plays when 1 of the caller group calls you.

### Find the Feature



> Phonebook > Caller group

Press	To
1 	scroll to the desired caller group
2 	select the caller group
3 	scroll to <b>Ring tone</b>
4 	select <b>Ring tone</b>
5 	scroll to the desired ring tone
6 	select the ring tone






# Setting a Caller Group Icon

You can select an icon for a caller group to use. The icon displays when 1 of the caller group calls you.





## Find the Feature

 > **Phonebook** > **Caller group**

Turn on **Graphic** 1st as follows:

Press	To
1 	scroll to the desired caller group
2 	select the caller group
3 	scroll to <b>Graphic</b>
4 	select <b>Graphic</b>
5 <b>ON</b> 	turn on <b>Graphic</b>

Then set caller group icons as follows:

Press	To
1 	scroll to <b>View</b>
2 	select <b>View</b>
3 	scroll to the desired icon
4 	select the icon








# Creating Your Caller Group Icon

You can set a photo, picture, or an animation as a caller group icon.





## Find the Feature








 > **Phonebook** > **Caller group**

To turn on **Graphic** 1st:







	<b>Press</b>	<b>To</b>
1		scroll to the desired caller group
2		select the caller group
3		scroll to <b>Graphic</b>
4		select <b>Graphic</b>
5	<b>ON</b> 	turn on <b>Graphic</b>

To set a caller group icon from **Photo album**:




	<b>Press</b>	<b>To</b>
1		scroll to <b>View</b>
2		select <b>View</b>
3		scroll to <b>Media center</b>
4		select <b>Media center</b>

Press	To
5 	scroll to <b>Photo album</b>
6 	select <b>Photo album</b>
7 	scroll to the desired folder
8 	select the folder
9 	scroll to the desired photo
10 	select the photo
11 	set your photo as the selected caller group icon










To set a caller group icon from **Picture**:

Press	To
1 	scroll to <b>View</b>
2 	select <b>View</b>
3 	scroll to <b>Media center</b>
4 	select <b>Media center</b>
5 	scroll to <b>Picture</b>
6 	select <b>Picture</b>



Press	To
7 	scroll to the desired picture
8 	select the picture
9 	set your picture as the selected caller group icon

To set a caller group icon from **Animation**:

Press	To
1 	scroll to <b>View</b>
2 	select <b>View</b>
3 	scroll to <b>Media center</b>
4 	select <b>Media center</b>
5 	scroll to <b>Animation</b>
6 	select <b>Animation</b>
7 	scroll to the desired animation
8 	select the animation
9 	set your animation as the selected caller group icon



# Setting Your Personal Phone Numbers

You can create  up to 2 personal phone numbers and names.



## Find the Feature







> **Phonebook**

> **Personal number**


To create the 1st set, including your name and number:

	<b>Press</b>	<b>To</b>
1	keypad keys	enter the name
2		save the name
3	keypad keys	enter the phone number
4		save the phone number

To create  the second set:

	<b>Press</b>	<b>To</b>
1		open the options menu
2		scroll to <b>Add</b>
3		select <b>Add</b>
4	keypad keys	enter the name
5		save the name
6	keypad keys	enter the phone number









Press	To
7 	save the phone number

## Editing Your Personal Phone Numbers

### Find the Feature

 > Phonebook  
> Personal number






Press	To
1 	scroll to the entry you want to edit
2 <b>EDIT</b> 	select the entry
or	
 > 	
3 keypad keys	enter the name
4 	save the name
5 keypad keys	enter the phone number
6 	save the phone number

## Erasing Your Personal Phone Numbers

### Find the Feature

 > Phonebook  
> Personal number



Press	To
1 	scroll to the entry you want to erase
2 	select the entry 
3 	scroll to <b>Erase</b>
4 	erase the selected entry

## Setting Fixed Dialing Numbers





You can restrict outgoing calls to the phone numbers that begin with the same digit(s) you set on the fixed dialing list.

**Tip:** You must enter the PIN2 code to set **Fixed dial number**.

### Find the Feature







-  > **Phonebook**
- > **Fixed dial number**

Turn on **Fixed dial number** first as follows:

Press	To
1 <b>ON</b> 	select <b>Enable fixed dialing</b>
2 keypad keys	enter the PIN2 code
3 	turn on <b>Fixed dial number</b>




Then set the 1st fixed dialing number as follows:

Press	To
1 	scroll to <b>Number list</b>
2 	select <b>Number list</b>
3 	select <b>Add</b>
4 keypad keys	enter the PIN2 code
5 	confirm the code
6 keypad keys	enter the name of the fixed dialing entry
7 	save the name
8 keypad keys	enter the phone number for the fixed dialing entry
9 	save the phone number







Set other fixed dialing numbers as follows:

### Find the Feature

 > **Phonebook**  
> **Fixed dial number**  
> **Number list**

Press	To
1 	scroll to any fixed dialing entry

**Note:** If there is only 1 fixed dialing entry, skip this step.

Press	To
2 	open the options menu
3 	scroll to <b>Add</b>
4 	select <b>Add</b>
5 keypad keys	enter the PIN2 code
6 	confirm the code
7 keypad keys	enter the name of the fixed dialing entry
8 	save the name
9 keypad keys	enter the phone number for the fixed dialing entry
10 	save the phone number




## Editing Fixed Dialing Numbers





You can change the name and/or phone number of a fixed dialing entry.

### Find the Feature

-  > **Phonebook**
- > **Fixed dial number**
- > **Number list**

Press	To
1 	scroll to the fixed dialing entry you want to edit

Press	To
2 <b>EDIT</b> 	select <b>Edit</b>
<b>or</b>	
 > <b>OK</b>	
3 keypad keys	enter the PIN2 code
4 <b>OK</b>	confirm the code
5 keypad keys	enter the name of the fixed dialing entry
6 <b>OK</b>	save the name
7 keypad keys	enter the phone number for the fixed dialing entry
8 <b>OK</b>	save the phone number




## Erasing a Fixed Dialing Number








You can erase an entry from the fixed dialing list.

### Find the Feature

-  > **Phonebook**
- > **Fixed dial number**
- > **Number list**

Press	To
1 	scroll to the fixed dialing entry you want to erase

Press	To
2 	open the options menu
3 	scroll to <b>Erase</b>
4 	select <b>Erase</b>
5 keypad keys	enter the PIN2 code
6 	confirm the code
7 	erase the selected fixed dialing entry




## Erasing All Fixed Dialing Numbers






You can erase all entries from the fixed dialing list.

### Find the Feature

-  > **Phonebook**
- > **Fixed dial number**
- > **Number list**

Press	To
1 	scroll to any fixed dialing entry
2 	open the options menu
3 	scroll to <b>Erase all</b>



Press	To
4 	select <b>Erase all</b>
5 keypad keys	enter the PIN2 code
6 	confirm the code
7 	erase all fixed dialing entries


## Setting Voice Dialing Numbers




You can create up to  tags attached to 4 different phone numbers for a phonebook entry saved on the phone memory.



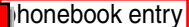


To dial by voice activation, press and hold the voice activation key from the idle display until **Please say name or command** displays; then say a name into the microphone.

### Find the Feature

 > **Phonebook** > **Search**

**Note:** This option is available only when you save a  on the phone memory.

Press	To
1 keypad keys	enter the 1st letter(s) of the name
2 	open your phonebook
3 	scroll to the desired entry
4 	select the entry

Press	To
5 	scroll to the desired phone number
6 	open the options menu
7 	scroll to <b>Add voice tag</b>
8 	select <b>Add voice tag</b>
9 	say a name into the microphone

**Tip:** Repeat this step until **Voice tag saved** displays.

## Playing Voice Dialing Number Commands

You can play voice tags attached to phonebook numbers.




### Find the Feature








> Phonebook >

Search



Press	To
1 keypad keys	enter the 1st letter(s) of the name
2 	open your phonebook
3 	scroll to the desired entry
4 	select the entry



Press	To
5 	scroll to the desired phone number with a voice tag attached
6 	open the options menu
7 	scroll to <b>Voice tags</b>
8 	select <b>Voice tags</b>
9 	play the selected voice tag

## Changing Voice Dialing Number Commands




You can change voice tags attached to phonebook numbers.

### Find the Feature









> Phonebook > Search



Press	To
1 keypad keys	enter the 1st letter(s) of the name
2 	open your phonebook
3 	scroll to the desired entry
4 	select the entry



Press	To
5 	scroll to the desired phone number with a voice tag attached
6 	open the options menu
7 	scroll to <b>Voice tags</b>
8 	select <b>Voice tags</b>
9 	scroll to <b>Change</b>
10 	say a name into the microphone

**Tip:** Repeat this step until **Voice tag saved** displays.

## Erasing Voice Dialing Number Commands

You can erase voice tags from phonebook numbers.



### Find the Feature










> Phonebook > Search

Search



Press	To
1 keypad keys	enter the 1st letter(s) of the name
2 	open your phonebook
3 	scroll to the desired entry



Press	To
4 	select the entry
5 	scroll to the desired phone number with a voice tag attached
6 	open the options menu
7 	scroll to <b>Voice tags</b>
8 	select <b>Voice tags</b>
9 	scroll to <b>Erase</b>
10 	erase the selected voice tag


## **Sending a Business Card as SMS**







You cannot edit a business card (which includes a selected phone book entry) when you send it as SMS.

### **Find the Feature**



 > **Phonebook** > **Search**

To turn on **Send as SMS:**

Press	To
1 keypad keys	enter the 1st letter(s) of the name
2 	open your phonebook






Press	To
3 	scroll to the desired entry
4 	select the entry
5 	open the options menu
6 	scroll to <b>Send business card</b>
7 	select <b>Send business card</b>
8 	scroll to <b>Send default number</b> if you want the business card to include only the default phone number and the name of the selected phonebook entry
	<b>or</b>
	scroll to <b>Send details</b> if you want the business card to include all phone numbers and the name of the selected phonebook entry
	<b>Note:</b> Skip this step if your phonebook entry is saved on the SIM card memory.





Press	To
9 	select <b>Send default number</b> or <b>Send details</b>
<b>Note:</b> Skip this step if your phonebook entry is saved on the SIM card memory.	
10 	select <b>Send as SMS</b>



To enter a main recipient in the **Send to** box:

Press	To
1 <b>NAMES</b> 	open your phonebook
2 	scroll to the desired entry
3 	select the entry
4 	scroll to the desired phone number
5 	select the phone number

To enter minor recipients in the **Copies to** box:

Press	To
1 	scroll to any blank <b>Copies to</b> box
2 <b>NAMES</b> 	open your phonebook



Press	To
-------	----

3



scroll to the desired entry

4



select the entry

5



scroll to the desired phone number

6



select the phone number

---

---

To send the business card:

Press	To
-------	----



send the business card

---

---

To end sending the business card:


Press	To
-------	----



end sending the business card

---

---

**Note:** If the business card fails to send, the phone number(s) of the recipient(s) display(s). Press  and contact your service provider.





## **Sending a Business Card as Text**







### **Find the Feature**



> **Phonebook** > **Search**

You can edit a business card (which includes a selected phone book entry) when you send it as text.

To turn on **Send as text**:

<b>Press</b>	<b>To</b>
1 keypad keys	enter the 1st letter(s) of the name
2 	open your phonebook
3 	scroll to the desired entry
4 	select the entry
5 	open the options menu
6 	scroll to <b>Send business card</b>
7 	select <b>Send business card</b>



**Press**

**To**

8



scroll to **Send default number** if you want the business card to include only the default phone number and the name of the selected phonebook entry

**or**

scroll to **Send details** if you want the business card to include all phone numbers and the name of the selected phonebook entry

**Note:** Skip this step if your phonebook entry is saved on the SIM card memory.

9



select **Send default number** or **Send details**

**Note:** Skip this step if your phonebook entry is saved on the SIM card memory.

10



scroll to **Send as text**

11



select **Send as text**











To edit the selected phonebook entry in the business card:

Press	To
keypad keys	enter the text

To enter a main recipient in the **Send to** box:

Press	To
1 <b>SEND</b> 	enter a main recipient
2 <b>NAMES</b> 	open your phonebook
3 	scroll to the desired entry
4 	select the entry
5 	scroll to the desired phone number
6 	select the phone number

To enter minor recipients in the **Copies to** box, see page 92.

To send the business card, see page 93.

To end sending the business card, see page 93.











## **Sending a Message with a Phonebook Entry**

### **Find the Feature**



> **Phonebook** > **Search**

To turn on **Send message**:

<b>Press</b>	<b>To</b>
1 keypad keys	enter the 1st letter(s) of the name
2 	open your phonebook
3 	scroll to the desired entry
4 	select the entry
5 	open the options menu
6 	scroll to <b>Send message</b>
7 	select <b>Send message</b>

To edit the message including the selected phonebook entry:

<b>Press</b>	<b>To</b>
keypad keys	enter the text


To enter a main recipient in the **Send to** box, see page 96.

To enter minor recipients in the **Copies to** box, see page 92.







To send the message:

Press	To
SEND 	send the message

To end sending the message:

Press	To
CANCEL 	end sending the message

**Note:** If the message fails to send, the phone number(s) of the recipient(s) display(s). Press  and contact your service provider.





## Creating Your Name Card

You can create your personal profile.

### Find the Feature

 > Phonebook > My Own Card  
> Edit

	Press	To
1		scroll to any blank box
2	keypad keys	enter the suitable words
3		save the settings

# Checking Your Name Card

## Find the Feature

 > Phonebook > My Own Card  
> View





# Sending Your Name Card

You can select information to display in your name card and send it as SMS ~~or text.~~

To display information in your name card:

## Find the Feature

 > Phonebook > My Own Card  
> Send my own > Info. setting

	Press	To
1		scroll to the desired item
2	<b>ON</b> 	display the item <b>Note:</b> Press <b>OFF</b> to hide the item.
3	<b>BACK</b> 	return to the last menu
4		save the settings



To send your name card as SMS:

## Find the Feature

 > Phonebook > My Own Card  
> Send my own  
> Send as SMS


To enter main recipients in the **Send to** box, see page 92.






To enter minor recipients in the **Copies to** box, see page 92.

To send your name card:

Press	To
SEND 	send your name card

To end sending your name card:

Press	To
CANCEL 	end sending your name card

**Note:** If your name card fails to send, the phone number(s) of the recipient(s) display(s). Press **OK** and contact your service provider.



To send your name card as text:

#### Find the Feature

 > **Phonebook** > **My Own Card**  
> **Send my own** > **Send as text**

To edit your name card:

Press	To
keypad keys	enter the text

To enter a main recipient in the **Send to** box, see page 96.

To enter minor recipients in the **Copies to** box, see page 92.

To send your name card, see page 100.

To end sending your name card, see page 100.

# Erasing Your Name Card

Find the Feature



> Phonebook > My Own Card  
> Erase

DRAFT



Setting Up Your Phonebook

# Personalizing Your Phone

---

## Setting a Language

Find the Feature

 > Settings > Language

## Replacing the Service Provider Name




You can replace the service provider name in the idle display with the standby logo you downloaded.



Find the Feature

 > Settings > Display  
> Standby logo > ON

## Setting Home Keys

You can set the navigation key , right soft key , and left soft key  as shortcuts to any of the menu options.

Find the Feature

 > Settings > Home key

# Restoring Factory Settings

Find the Feature

 > Settings  
> Restore factory settings

Note: You must enter your phone's unlock code to restore factory settings (see page 41).



## Setting a Menu Style




Find the Feature

 > Settings > Menu style

## Creating an Option Shortcut

Find the Feature

 > Quick access > Edit



	Press	To
1		scroll to the desired option
2		select the option
3	keypad keys	enter a number between 1 and 9
4	<b>SAVE</b> 	save the setting



# Using an Option Shortcut

Find the Feature

 > Quick access

	Press	To
1		scroll to the desired option shortcut
2		select the option shortcut

## Setting a Phone Profile

You can set a phone profile, which includes ring tone, key tone, and vibrator settings. You can select a phone profile and use the default, or you can customize and rename



### Using a Default Phone Profile

Find the Feature

 > Profile > Normal/Meeting/  
Outdoors/Car/Office  
> Activate

**Tip:** To use **Handsfree**, plug a handsfree kit in your phone's **TTA** port. Refer to the following section to customize it.

**Tip:** To use **Headset**, plug a headset kit in your phone's **TTA** port. Refer to the following section to customize it.



## Customizing a Phone Profile

### Find the Feature

 > Profile > Normal/Meeting/  
Outdoors/Car/ Customized/  
Office/Handsfree/Headset  
> Customize

You can customize the following options for a phone profile:

**Ringing volume** Select ring tone volume. Maximum is **Volume 5**.

**Ringing tone** Select a ring tone.

**Incoming call alert** Select how the ring tone works when your phone receives calls.

**Tip:** Scroll to **Off** to turn off **Ringing tone**.

**Vibrating** Turn vibrator on or off.

**Message alert tone** Select an alert tone when your phone receive messages.

**Tip:** Scroll to **Off** to turn off **Message alert tone**.

**Key tone volume** Select key tone volume. Maximum is **Volume 5**.


**Key tone type** Select a key tone.

**Tip:** Scroll to **Off** to turn off the key tone.

**Warning tones** Turn on or off **Warning tones**, which are played when the battery power is low or there is any operation error.



**Startup music** Turn on or turn off **Startup music**, which is played when you turn on or turn off your phone.

**Voice dial** Turn on or turn off **Voice dial**. To create voice dial tags, see page 86. 


**Note:** **Voice dial** is for **Handsfree/Headset** only.

**Auto answer** Turn on or turn off **Auto answer**.

**Note:** **Auto answer** is for **Handsfree/Headset** only.

## Renaming a Phone Profile


**Find the Feature**

 > **Profile** > **Meeting/Outdoors/Car/Customized/Office** > **Rename**

## Muting Your Phone

**Find the Feature**

 > **Profile** > **Silence** > **ON**


**Tip:** Press and hold  to turn on or turn off **Silence** from the idle display.



## Setting Ringers

You can turn on or turn off the vibrator, warning tones and startup music, and set ringers for a phone profile. You can select a ring tone and its volume, a key tone and its volume, an alert tone when your phone receives

messages, and set how a ring tone works with incoming calls (see page 105).

### Find the Feature

-  > Ringing style
- > Ringing volume/  
Ringing tone/  
Incoming call alert/  
Message alert tone/  
Key tone volume/Key tone type


Press	To
1 	scroll to the desired option
2 	select the option

## Setting the Vibrator, Warning Tones, and Startup Music

You can turn on or turn off the vibrator, warning tones (which play when the battery power is low or there is an operation error), and startup music (which plays when you turn on or turn off your phone).

### Find the Feature

-  > Ringing style
- > Vibrating/Warning tones/  
Startup music

Press	To
ON/OFF 	turn on/off Vibrating, Warning tones, or Startup music









# Getting More Out of Your Phone

## Deflecting a Call







When you have an incoming call, you can deflect it to another phone number.





	Press	To
	1 <b>OPTIONS</b> 	open the in-call operation menu
	2 	scroll to <b>Deflection</b>
	3 	select <b>Deflection</b>
	4 keypad keys	enter the phone number
	5 	save the phone number
	6 keypad keys	enter the name
	7 	save the name

## ***Sending DTMF Tones***



When you are on a call, you can send Dual Tone Multi-Frequency (DTMF) tones, for example, to enter the account number during a banking service call.

	<b>Press</b>	<b>To</b>
	1 <b>OPTIONS</b> 	open the in-call operation menu
	2 	scroll to <b>Send DTMF</b>
	3 	select <b>Send DTMF</b>
	4 keypad keys	enter the account number

## ***Making a Multi-Party Call***






	<b>Press</b>	<b>To</b>
	1 keypad keys	enter the phone number for the 1st call
	2 	make the 1st call
	3 keypad keys	enter the phone number for the second call
	4 	make the second call
		<b>Tip:</b> The 1st call is put on hold and the second call is active.
	5 <b>OPTIONS</b> 	open the in-call operation menu



Press	To
6 	scroll to <b>Conference</b>
7 	make a multi-party call



## Ending Calls on a Multi-Party Call

Press	To
1 <b>OPTIONS</b> 	open the in-call operation menu
2 	scroll to <b>End calls</b>
3 	select <b>End calls</b>
4 	scroll to the call you want to end
	<b>or</b>
	scroll to <b>All calls</b> (to end all calls at once)
5 	confirm your selection

## Diverting Calls



You can divert incoming calls to another phone number.

## Find the Feature

 > Settings > Call feature  
> Call divert

# Blocking Your Calls



You can block outgoing and/or incoming calls.

**Note:** You must set a password to turn **Call barring** on or off.

## Find the Feature

 > Settings > Call feature  
> Call barring

# Setting Fax, Data, and Voice Calls

In addition to voice calls, you can use your phone to receive fax and data calls.

## Find the Feature

 > Settings > Call feature  
> Next call

# Setting a Service Network

You can either set your phone to connect to a service network manually, including the service provider, baseband, and network connection, or set your phone to connect to a specific service network automatically and use this as the default when you turn your phone on.

## Find the Feature

 > Settings > Network



## Setting a **Service Network** Reminder



You can set a reminder to inform you of a successful **network** connection.



**Tip:** Scroll to **Off** to turn off the reminder.

### Find the Feature



> **Settings**

> **Connection indication**

## Setting a Call Time Reminder

You can set a reminder to inform you of a ~~successful network connection~~.



**Tip:** Scroll to **Off** to turn off the reminder.

### Find the Feature



> **Settings** > **Minute reminder**

## Checking Call Times

You can check the time you spent on the last received or dialed call, all received and dialed calls, all received calls, and on all dialed calls.

### Find the Feature



> **Recent calls** > **Call time**

> **Last call/All calls/**

**Received calls/Dialed calls**



# Resetting the Call Timer

## Find the Feature

 > Recent calls > Call time  
> Clear timer

# Setting the Call Cost Counter



Set the call cost counter to check the cost you spent on any call.

**Note:** You must enter the PIN2 code to set the call cost counter.

## Find the Feature

 > Recent calls > Call cost  
> Setting

# Resetting the Call Cost Counter



You can reset the call cost counter.

**Note:** You must enter the PIN2 code to reset the call cost counter.

## Find the Feature

 > Recent calls > Call cost  
> Clear cost

# Checking Call Cost



After setting the call cost counter, you can check the cost you spent on the last call or all calls.



## Find the Feature

 > Recent calls > Call cost  
> Last call/All calls

# Checking Call Credit



Check the call credit to check if you can make another phone call.

**Tip:** Try to reset the call credit if you exceed the credit limit and cannot make phone calls.

## Find the Feature

 > Recent calls > Call cost  
> Credit remaining

## Displaying Call Time after a Call

To set your phone to display the call time:

### Find the Feature

 > Recentcalls  
> Session information > ON

To select the call time:

### Find the Feature

 > Recent calls > In-call count  
> Call time

## Displaying Call Cost after a Call

You can set your phone to display the cost you spent on the call you just ended.





To set your phone to display the call cost:

### Find the Feature



> Recent calls

> Session Information > ON



To select the call cost:

### Find the Feature



> Recent calls

> In-call count > Call cost

## Using STK Services



You can use SIM Tool Kit (STK) services your service provider provides. For more details, contact your service provider.

### Find the Feature



> STK

	Press	To
1		scroll to the desired STK service
2		select the STK service

**Tip:** Press any of your phone's indicators to use STK services.










# Personal Organizer Features

## Turning On the Alarm Clock

Find the Feature



> Alarm clock > On

Press	To
1 keypad keys	enter the time
2  down	highlight the <b>Repeat type</b> box
3 	scroll to the desired option
4  down	highlight the <b>Vibrator</b> box
5  right	turn on or turn off the vibrator
6  down	highlight the <b>Alarm tone</b> box
7 	scroll to the desired tone
8 <b>SAVE</b> 	save the settings and turn on the alarm clock

# Turning Off the Alarm Clock

Find the Feature



 > Alarm clock > Off

# Creating a Calendar Note




## Selecting a Date

Find the Feature

 > Tools > Calendar  
> Month mode














Press	To
1 	scroll to the desired date  <b>Tip:</b> If you created a calendar note on a date, the date is highlighted. The bold-faced date is the current date.
2 	select the date

## Writing a Calendar Note






Press	To
1 	select <b>Add new</b>
2 keypad keys	enter the time
3  down	highlight the <b>Note type</b> box
4  right/left	scroll to the desired option





	Press	To
5	 down	highlight the <b>Content</b> box
6	keypad keys	enter the content
7	 down	highlight the <b>Name</b> box
8		open the options menu
9		scroll to <b>From phone book</b>
10		select <b>From phone book</b>
11		scroll to the desired phonebook entry
12		select the phonebook entry
13		scroll to the desired phone number
14		select the phone number
15		highlight the <b>Circulation type</b> box
16		scroll to the desired option
17		highlight the <b>Alarm</b> box
18		scroll to the desired option






**Tip:** Scroll to **Off** to make the following **Vibrator** and **Alarm tone** options unavailable.

Press	To
19  down	highlight the <b>Vibrator</b> box
20  right	turn on (put a check in) or turn off (delete a check from) the vibrator
21  down	highlight the <b>Alarm tone</b> box
22  right/left	scroll to the desired option
23 <b>SAVE</b> 	create a calendar note


## ***Moving or Copying a Calendar Note to Another Date***

### **Find the Feature**

 > **Tools** > **Calendar**  
> **View all notes**

Press	To
1 	scroll to the desired calendar note
2 	select the calendar note
3 	open the options menu
4 	scroll to <b>Move</b> or <b>Copy</b>
5 	select <b>Move</b> or <b>Copy</b>
6 keypad keys	enter a date














Press	To
7 	move or copy the calendar note to the selected date

## Sending a Calendar Note







### Find the Feature

 > **Tools** > **Calendar**  
> **View all notes**

To send a calendar note with your message:

Press	To
1 	scroll to the desired calendar note
2 	select the calendar note
3 	open the options menu
4 	scroll to <b>Send note</b>
5 	select <b>Send note</b>
6 	scroll to <b>Send as text</b>
7 	<b>select <b>Send as text</b></b> 
 8 keypad keys	edit the selected calendar note
9 <b>SEND</b> 	select a main recipient
10 <b>NAMES</b> 	open your phonebook







Press	To
11 	scroll to the desired entry
12 	select the entry
13 	scroll to the desired phone number
14 	select the phone number
15  down	to add a minor recipient, if necessary
	<b>Tip:</b> Repeat steps 10-15 to add minor recipients.
16 <b>SEND</b> 	send the selected calendar note with your message

## Making a Call from a Calendar Note

### Find the Feature

 > **Tools** > **Calendar**  
> **View all notes**

Press	To
1 	scroll to the desired calendar note
2 	select the calendar note
3 	open the options menu
4 	scroll to <b>Call</b>



**Press****To**

5



make a call

## Checking a Calendar Note

**Find the Feature**> **Tools** > **Calendar**  
> **View all notes****Press****To**scroll and check the desired  
calendar note

## Erasing a Calendar Note

To erase a calendar note:

**Find the Feature**> **Tools** > **Calendar**  
> **Erase notes** > **One by one****Press****To**

1






scroll to the desired calendar  
note

2

erase the selected calendar  
note

## Creating an Account Book

**Find the Feature**> **Tools** > **Calendar**  
> **Account book**  
> **Make accounts**

Press	To
1 keypad keys	enter a date
2  down	highlight the <b>Amount</b> box
3 keypad keys	enter an amount
4  down	highlight the <b>Item</b> box
5 keypad keys	describe an item
6  down	highlight the <b>In/Out</b> box
7  right/left	scroll to the desired option
8 <b>SAVE</b> 	create an account book

## **Editing an Account Book**

To select a month and edit an account book in the selected month:

### **Find the Feature**

 > **Tools** > **Calendar**  
 > **Account book**  
 > **Accounts list**

## **Checking Your Income**

To select a month and check your income in the selected month:


### **Find the Feature**

 > **Tools** > **Calendar**  
 > **Account book** > **Total count**

## Checking Your Expense

To select a month and check your expense in the selected month:


### Find the Feature

 > Tools > Calendar  
> Account book > Total count

## Checking Your Balance

To select a month and check your balance in the selected month:

### Find the Feature

 > Tools > Calendar  
> Account book > Total count



## Erasing an Account Book


To erase an account book:

### Find the Feature

 > Tools > Calendar  
> Account book  
> Erase accounts


To set your phone to automatically erase the account books you created 1/3/6 month(s) ago:

### Find the Feature

 > Tools > Calendar  
> Account book  
> Erase accounts  
> Auto erase  
> After 1 month/  
After 3 months/  
After 6 months

# Erasing All Account Books

## Find the Feature






-  > Tools > Calendar
- > Account book
- > Erase accounts
- > All at once

# Using the Calculator

## Find the Feature

-  > Tools > Calculator

To perform simple calculations:















Press	To
1	number keys
	enter a decimal point
 up	<b>Add</b>
 down	<b>Subtract</b>
 left	<b>Multiply</b>
 right	<b>Divide</b>
2	display the result

To convert currency:

## Find the Feature

-  > Tools > Calculator



	Press	To
1	<b>OPTIONS</b> 	open the options menu
2		scroll to <b>Exchange rate</b>
3	<b>OK</b> 	select <b>Exchange rate</b>
4	<b>OK</b> 	select <b>Foreign unit expressed in domestic units</b>
5	keypad keys	enter an exchange rate
6	<b>OK</b> 	save the setting
7		scroll to <b>Domestic unit expressed in foreign units</b>
8	<b>OK</b> 	select <b>Domestic unit expressed in foreign units</b>
9	keypad keys	enter an exchange rate 
10	<b>OK</b> 	save the setting
11	<b>BACK</b> 	return to the previous menu
12	<b>BACK</b> 	return to the previous menu
13	keypad keys	enter an amount of currency
14	<b>OPTIONS</b> 	open the options menu
15		scroll to <b>In foreign</b> or <b>In domestic</b>
16	<b>OK</b> 	display the result







# Using the Stopwatch

To use your phone's stopwatch to perform split or lap timing:





## Find the Feature

 > **Tools** > **Stopwatch**  
> **Split timing/Lap timing**

	Press	To
1	<b>START</b> 	start the operation
2	<b>SPLIT</b> 	end a current timing and continue to start a new 1
3	 <b>STOP</b> 	stop the operation

## Saving Records



To save records after you stop the operation:

	Press	To
1	<b>OPTIONS</b> 	open the options menu
2		scroll to <b>Save</b>
3		select <b>Save</b>
4	keypad keys	enter the name
5	<b>OK</b> 	save records






## Resuming Records

To resume the operation after you stop it:

	Press	To
1	<b>OPTIONS</b> 	open the options menu
2		resume the operation

## Resetting All Records

To reset all records after you stop the operation:

	Press	To
1	<b>OPTIONS</b> 	open the options menu
2		scroll to <b>Reset</b>
3		reset all records

## Viewing a Records File

To view a records file you saved:

**Find the Feature**

 > **Tools > Stopwatch**  
> **View times**

## Erasing a Records File

**Find the Feature**

 > **Tools > Stopwatch**  
> **Erase times > One By One**



## Erasing All Records Files

### Find the Feature


 > Tools > Stopwatch  
> Erase times > All at once





## Setting Voice Commands

To turn on a command using voice activation, press and hold the voice activation key from the idle display until **Please say name or command** displays; then say the name of the command into the microphone.

## Creating a Voice-Activated Command


### Find the Feature

 > Tools > Voice commands




	Press	To
1		select <b>Add command</b>
2		scroll to the desired command
3		select the command
4		say the name of the command into the microphone
		<b>Tip:</b> Repeat this step until <b>Voice command saved</b> displays.

## Playing a Voice-Activated Command

### Find the Feature

 > Tools > Voice commands







Press	To
1 	scroll to the desired voice-activated command
2 	select the voice-activated command
3 	play the selected voice-activated command

## Changing a Voice-Activated Command

Find the Feature



> Tools > Voice commands

Press	To
1 	scroll to the desired voice-activated command
2 	select the voice-activated command
3 	scroll to <b>Change</b>
4 	say the name of the command into the microphone






**Tip:** Repeat this step until **Voice command saved** displays.

## Erasing a Voice-Activated Command

Find the Feature



> Tools > Voice commands



Press	To
1 	scroll to the desired voice-activated command
2 	select the voice-activated command
3 	scroll to <b>Erase</b>
4 	select <b>Erase</b>
5 	erase the voice-activated command

## Displaying World Time

You can select a foreign place and display its time.

### Find the Feature

 > **Settings** > **Clock**  
> **World clock**

Press	To
1 	scroll to the desired place
2 	select the place and display its time



# Turning On Your Phone's Voice Recorder

You can use your phone's voice recorder to record up to 30 seconds of voice notes.

**Caution:** Obey the local law or regulations when you use your phone's voice recorder to record.

**Find the Feature**



> **Voice notes**

## Starting to Record

**Find the Feature**



> **Voice notes**

	<b>Press</b>	<b>To</b>
1		record
2	<b>STOP</b>	stop recording, if necessary
3	keypad keys	enter the name of the voice note
4	<b>OK</b>	save the voice note

## Playing a Voice Note




To turn on your phone's speaker:

**Find the Feature**



> **Voice notes**






	<b>Press</b>	<b>To</b>
1		scroll to any voice note

Press	To
2 	open the options menu
3 	scroll to <b>Speaker setting</b>
4 <b>ON</b> 	turn on your phone's speaker


To play a voice note:

### Find the Feature

 > **Voice notes**

Press	To
1 	scroll to the desired voice note
2 	open the options menu
3 	scroll to <b>Playback</b>
4 <b>OK</b> 	play the selected voice note
5 <b>STOP</b> 	stop playing the selected voice note, if necessary

## Turning Off Your Phone's Voice Recorder







Press	To
	turn off your phone's voice recorder



# Renaming a Voice Note

Find the Feature






 > Voice notes

	Press	To
1		scroll to the desired voice note
2		open the options menu
3		scroll to <b>Rename</b>
4		select <b>Rename</b>
5	keypad keys	enter a new name
6	 	save the setting

# Deleting a Voice Note

Find the Feature

 > Voice notes






	Press	To
1		scroll to the desired voice note
2		open the options menu
3		scroll to <b>Delete</b>
4		select <b>Delete</b>
5		delete the selected voice note



# Deleting All Voice Notes

Find the Feature

 > Voice notes








Press	To
1 	scroll to any voice note
2 	open the options menu
3 	scroll to <b>Delete all</b>
4 	select <b>Delete all</b>
5 	delete all voice notes

# Sending a Voice Note

Find the Feature











 > Voice notes

To send by a phone number:






Press	To
1 	scroll to the desired voice note
2 	open the options menu
3 	scroll to <b>Send in message</b> or <b>Send</b> 
4 	select <b>Send in message</b> or <b>Send</b> 
5 keypad keys	enter your message
6 <b>SEND</b> 	select <b>SEND</b>















Press	To
7 <b>P.BOOK</b> 	open your phonebook
8 	scroll to the desired entry
9 	select the entry
10 	scroll to the desired phone number
11 	select the phone number
12 <b>BACK</b> 	return to the previous menu
<b>Tip:</b> Repeat steps 8-12 to add other recipients.	
13 <b>BACK</b> 	return to the previous menu
14 	open the options menu
15 	scroll to <b>Send</b>
16 	send the selected voice note with your message

To send by an e-mail address:

Press	To
1 	scroll to the desired voice note
2 	open the options menu
3 	scroll to <b>Send in message</b>  <b>or Send</b> 





Press	To
4 	select <b>Send in message</b> or <b>Send</b> 
5 keypad keys	enter your message
6 <b>SEND</b> 	select <b>SEND</b>
7 	open the options menu
8 	scroll to <b>New e-mail address</b>
9 	select <b>New e-mail address</b>
10 keypad keys	enter the e-mail address
11 	add the e-mail address to the <b>Recipients</b> box
<b>Tip:</b> Repeat steps 7-11 to add other recipients.	
12 	open the options menu
13 	scroll to <b>Send</b>
14 	send the selected voice note with your message



## Checking a Voice Note

### Find the Feature

 > **Voice notes**







Press	To
1 	scroll to the desired voice note
2 	open the options menu



Press	To
3 	scroll to <b>Details</b>
4 	read the details about the selected voice note

## Sorting Voice Notes

Find the Feature  > **Media center** > **Voice notes**

Press	To
1 	scroll to any voice note
2 	open the options menu
3 	scroll to <b>Sort files</b>
4 	select <b>Sort files</b>
5 	scroll to the desired option
6 	sort voice notes by the selected option



# Security

---

## Locking and Unlocking the Keypads



You can lock and unlock the keypads, if necessary.

### Locking the Keypads Manually

**Find the Feature**



 > Settings > Key lock  
> Lock now

### Unlocking the Keypads

In the idle display:

**Press**

**To**

 and 

unlock the keypads

### Setting the Keypads to Lock Automatically

To lock the keypads when no activity occurs in 20 seconds:

**Find the Feature**

 > Settings > Key lock  
> Auto



## Setting Security Codes

You can block other people from using your phone.

### Find the Feature

 > **Settings** > **Security**  
> **Code status**

## Changing Security Codes

### Find the Feature

 > **Settings** > **Security**  
> **Change code**

## Setting a Closed User Group



You can set a user group that is able to call you and receive your calls.

**Tip:** Scroll to **Preset** to use the default user group you subscribed to your service

provider.

**Tip:** Scroll to **On** to set the number of the user group.

### Find the Feature

 > **Settings** > **Security**  
> **Closed user group**

# News and Entertainment

---

## Playing a Game

Find the Feature



> Games

## Managing Photo Folders

Find the Feature






> Media center

> Photo album

## Drawing a Picture



You can specify the following settings:




- background image (selected from **Photo Album**, **Picture**, or **Animation**)
- pen mode 
- pen color 
- pen size 
- pen step
- canvas size

Refer to the following procedures to draw a picture.



## Beginning a Picture



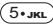

On a canvas:

	Press	To
1	 or number keys	move the cursor to the desired direction
2	 or 	draw or remove a dot/line







## Zooming In/Out on a Picture

On a canvas:

	Press	To
1	<b>OPTIONS</b>  or 	open the options menu
2		scroll to <b>Zoom in</b> or <b>Zoom out</b>
3		zoom in or zoom out on a picture






## Clearing a Canvas

On a canvas:

	Press	To
1	<b>OPTIONS</b>  or 	open the options menu
2		scroll to <b>Clear screen</b>
3		clear a canvas

## Saving a Picture

On a canvas:

	Press	To
1	<b>OPTIONS</b>  or 	open the options menu
2		scroll to <b>Save</b>
3		select <b>Save</b>
4	keypad keys	enter the name
5		save a picture on <b>Picture of Media center</b>












# Composing a Melody

You can change an existing melody or create a new one.

## Changing an Existing Melody


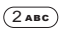





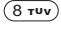
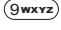
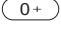





### Find the Feature

 > **Media center**  
> **Melody**

	Press	To
1		scroll to any melody
2		open the options menu
3		select <b>New</b>
4	<b>OPTIONS</b> 	open the options menu
5		select <b>Open</b>
6		scroll to a melody you want to change
7		select the melody
8		insert the selected melody to a staff
9	 right/left	move the pointer
10	keypad keys	compose a melody (see below)

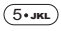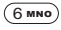

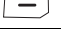Use the following keypad keys to change or create a melody.

Press	To
	insert a C sharp note
	insert a D sharp note
	insert an E sharp note
	insert an F sharp note
	insert a G sharp note
	insert an A sharp note
	insert a B sharp note
	increase the length of a note or rest
	move a note 1 octave up
	decrease the length of a note or rest
	move a note 1 octave down
	insert a rest
	remove a note or rest
 up	move a note up on the staff
 down	move a note down on the staff



## Creating a New Melody

### Find the Feature



> Media center > Melody


	Press	To
1		scroll to any melody
2		open the options menu
3		select <b>New</b>
4		move the pointer
5	keypad keys	compose a melody (see page



## Setting an Instrument






On a staff:

	Press	To
1	<b>OPTIONS</b>	open the options menu
2		scroll to <b>Instruments</b>
3		select <b>Instruments</b>
4		scroll to the desired instrument
5		select the instrument
6		scroll to the desired option

Press	To
7 	select the option




## Setting a Tempo

On a staff:

Press	To
1 <b>OPTIONS</b> 	open the options menu
2 	scroll to <b>Tempo</b>
3 	select <b>Tempo</b>
4 	scroll to the desired tempo
5 	select the tempo

## Playing a Melody





On a staff:

Press	To
1 <b>OPTIONS</b> 	open the options menu
2 	scroll to <b>Play</b>
3 	play a melody with a selected instrument and tempo



## Saving a Melody




On a staff:

	Press	To
1	<b>OPTIONS</b> 	open the options menu
2		scroll to <b>Save</b>
3		select <b>Save</b>
4	keypad keys	enter the name
5		save a melody on <b>Melody of Media center</b>



## Clearing a Staff

On a staff:

	Press	To
1	<b>OPTIONS</b> 	open the options menu
2		scroll to <b>Clear screen</b>
3		clear a staff

## Displaying a Multimedia Object

Multimedia objects include photos, pictures, animations, melodies, voice notes, and videos.

To play voice notes, see page [132](#).



To play videos, see page **177**.



### Find the Feature



> **Media center**

> **Photo album/**

**Picture/Animation/Melody**

	<b>Press</b>	<b>To</b>
1		scroll to the desired folder, if necessary
2		select the folder, if necessary
3		scroll to the desired object
4		select the object
5		display/play the selected object
6	up/down	zoom in/out on the selected object

**Note:** This step is for photos and pictures only.

## ***Deleting Multimedia Objects***

### Find the Feature









> **Media center**

> **Photo album/Picture/**

**Animation/Melody**

	<b>Press</b>	<b>To</b>
1		scroll to the desired folder, if necessary



	Press	To
2		select the folder, if necessary
3		scroll to the desired object
4		open the options menu
5		scroll to <b>Delete</b> or <b>Delete all</b>
6		select <b>Delete</b> or <b>Delete all</b>
7		confirm your selection

## ***Sending a Multimedia Object***








### **Find the Feature**















> **Media center**

> **Photo album/Picture/  
Animation/Melody**














To send by a phone number:

	Press	To
1		scroll to the desired folder, if necessary
2		select the folder, if necessary
3		scroll to the desired object
4		open the options menu
5		scroll to <b>Send</b>

Press	To
6 	select <b>Send</b>
7 keypad keys	enter your message
8 <b>SEND</b> 	select <b>SEND</b>
9 <b>P.BOOK</b> 	open your phonebook
10 	scroll to the desired entry
11 	select the entry
12 	scroll to the desired phone number
13 	select the phone number
14 <b>BACK</b> 	return to the previous menu <b>Tip:</b> Repeat steps 10-14 to add other recipients.
15 <b>BACK</b> 	return to the previous menu
16 	open the options menu
17 	scroll to <b>Send</b>
18 	send the selected object with your message




To send by an e-mail address:

	Press	To
1		scroll to the desired folder, if necessary
2		select the folder, if necessary
3		scroll to the desired object
4		open the options menu
5		scroll to <b>Send</b>
6		select <b>Send</b>
7	keypad keys	enter your message
8	<b>SEND</b> 	select <b>SEND</b>
9		open the options menu
10		scroll to <b>New e-mail address</b>
11		select <b>New e-mail address</b>
12	keypad keys	enter the e-mail address
13		add the e-mail address to the <b>Recipients</b> box
		<b>Tip:</b> Repeat steps 9-13 to add other recipients.
14		open the options menu
15		scroll to <b>Send</b>












Press	To
16 	send the selected object with your message

## Renaming a Multimedia Object

### Find the Feature

 > **Media center**  
> **Photo album/Picture/**  
**Animation/Melody**









Press	To
1 	scroll to the desired folder, if necessary
2 	select the folder, if necessary
3 	scroll to the desired object
4 	open the options menu
5 	scroll to <b>Rename</b>
6 	select <b>Rename</b>
7 keypad keys	enter the new name
8 	save the new name



# Moving a Photo or Picture to Any Photo Folder

## Find the Feature







 > **Media center**  
> **Photo album/Picture**

	<b>Press</b>	<b>To</b>
1		scroll to the desired folder, if necessary
2		select the folder, if necessary
3		scroll to the desired object
4		open the options menu
5		scroll to <b>Move to</b>
6		select <b>Move to</b>
7		scroll to the desired folder
8		move the object to the selected folder

## Checking a Multimedia Object

### Find the Feature







 > **Media center**  
> **Photo album/Picture/**  
**Animation/Melody**

Press	To
1 	scroll to the desired folder, if necessary
2 	select the folder, if necessary
3 	scroll to the desired object
4 	open the options menu
5 	scroll to <b>Details</b>
6 	check the selected object



## Sorting Multimedia Objects

### Find the Feature

 > **Media center**  
> **Photo album/Picture/**  
**Animation/Melody**

Press	To
1 	scroll to the desired folder, if necessary
2 	select the folder, if necessary
3 	scroll to any object
4 	open the options menu
5 	scroll to <b>Sort files</b>
6 	select <b>Sort files</b>



Press	To
7 	scroll to the desired option
8 	select the option



## **Editing a Multimedia Message**

Use the following touch-ups when editing a multimedia message you want to send or save.

### **Creating a Page Set**

A page set includes an image file (photo/picture/animation/video) and/or a sound file (melody/voice note), with or without text messages (quick note/phone number).



You can find the following types of image files:


photo at  > **Media center** > **Photo album**

picture at  > **Media center** > **Picture**

animation at  > **Media center** > **Animation**

video at  > **Media center** > **Video**

**or**

 > **V. Recorder**

You can find the following types of sound files:

melody at  > **Media center** > **Melody**



voice note at



> Media center > Voice notes

or






> Voice notes

## ***Adding a New Page Set***

After creating the 1st page set, you can add new page set(s) to it.

**Tip:** To add new page set(s), first create a page set (see page 156).


In a current page set:

<b>Press</b>	<b>To</b>
1 	open the options menu
2 	scroll to <b>Add new page</b>
3 	add a new page
	<b>Tip:</b> Repeat steps 1-3 to add new pages.

## ***Going to a Page Set***

You can go to a selected page set when you are in a current 1.

In a current page set:

<b>Press</b>	<b>To</b>
1 	open the options menu





	Press	To
2		scroll to <b>Go to...</b>
3		select <b>Go to...</b>
4		scroll to the desired option
5		select the option

## ***Displaying an Object or a Text Message***

You can display any object or text message for a current page set.

In a current page set:









	Press	To
1		open the options menu
2		scroll to <b>View object</b>
3		select <b>View object</b>
4		scroll to the desired object
5		select the object



## Deleting an Object or a Text Message




In a current page set:

Press	To
1 	open the options menu
2 	scroll to <b>Remove object</b>
3 	select <b>Remove object</b>
4 	scroll to the desired object
5 	select the object
6 	delete the selected object

## Deleting a Page Set

You can delete a page set, including all objects, text messages, and a page. If there is only 1 page set, you can delete all objects and text messages, not a page from it.




In a current page set (if it is not the only 1):

Press	To
1 	open the options menu
2 	scroll to <b>Delete page</b>
3 	delete the current page set including all objects, text messages, and a page









In a current page set (if it is the only 1):

Press	To
1 	open the options menu
2 	scroll to <b>Delete page</b>
3 	delete all objects and text messages, not a page from the current page set

## Previewing All Page Sets


In a current page set:

Press	To
1 	open the options menu
2 	scroll to <b>Preview</b>
3 	select <b>Preview</b>
4  right/left	preview the next/previous page set


## Playing a Java Game

Find the Feature



Press	To
1 	scroll to the desired Java game






Press	To
2 	play the selected Java game








## Checking a Java Game

Find the Feature  > Java

Press	To
1 	scroll to the desired Java game
2 	open the options menu
3 	check the selected Java game

## Deleting a Java Game

Find the Feature  > Java

Press	To
1 	scroll to the desired Java game
2 	open the options menu
3 	scroll to <b>Delete</b>
4 	select <b>Delete</b>
5 	delete the selected Java game



# Setting Java

You can read information on the Java software and set a network connection to play online Java games.



## Reading Information on the Java Software

### Find the Feature



> Settings > Java settings  
> System detail

## Setting a Network Connection

### Find the Feature



> Settings > Java settings  
> Network communication

## Setting an IP Address

### Find the Feature



> Settings > Java settings  
> DNS address



# Turning On Your Phone Camera

**Caution:** Obey the local law or regulations when you use your phone camera to capture images.

You can turn on your phone camera as follows:


### Find the Feature




> Camera





## Action





Press  right (the factory-set home key) from the idle display.

# Taking and Saving Pictures




**Tip:**  (The viewfinder) shows the image area you can capture.

**Tip:**  indicates you can save the picture you took on the default folder for **Photo album** of **Media center**. The picture is automatically named. To rename it, see page **164**. 


With your phone's flip open:

Press	To
1 	take pictures
2 	save pictures
	<b>Tip:</b> Press  >  to abort saving pictures.




With your phone's flip closed:

Action
1 Press and hold the camera key to take pictures.
2 Open your phone's flip.
3 Press  to save pictures.
<b>Tip:</b> Press  >  to abort saving pictures.

## Naming a New Picture

Press	To
1 	open the options menu



Press	To
2 	scroll to <b>Rename</b>
3 	select <b>Rename</b>
4 keypad keys	enter the name
5 	save the picture with the name you set

## Renaming Your Pictures








You can rename the pictures you took and saved on any folder of **Photo album** of **Media center**.

### Find the Feature











> **Media center** > **Photo album**



Press	To
1 	scroll to the desired folder
2 	select the folder
3 	scroll to the desired picture
4 	open the options menu
5 	scroll to <b>Rename</b>
6 	select <b>Rename</b>
7 keypad keys	enter the name
8 	save the name





## Rotating a New Picture

Press	To
1 	open the options menu
2 	scroll to <b>Rotate</b>
3 	select <b>Rotate</b>
4 	scroll to the desired option
5 	select the option
6 	save the picture




Tip: Press  >  to abort saving the picture.



## Using a New Picture as a Wallpaper Image







Press	To
1 	open the options menu
2 	scroll to <b>Apply as wallpaper</b>
3 	select <b>Apply as wallpaper</b>
4 	scroll to <b>Internal display</b> or <b>External display</b> where you want to display the picture




	Press	To
5		select <b>Internal display</b> or <b>External display</b>
6		scroll to any entry
7		apply the picture as a wallpaper image and save it on the default folder of <b>Photo album</b> of <b>Media center</b> and on <b>Wallpaper</b> of <b>Display</b> or <b>External Display</b> of <b>Settings</b>

## Using a New Picture as a Screen Saver












	Press	To
1		open the options menu
2		scroll to <b>Apply as screen saver</b>
3		select <b>Apply as screen saver</b>
4		scroll to <b>Internal display</b> or <b>External display</b> where you want to display the picture
5		select <b>Internal display</b> or <b>External display</b>
6		scroll to any entry

Press	To
7 	apply the picture as a screen saver image and save it on the default folder of <b>Photo album</b> of <b>Media center</b> and on <b>Screen saver</b> of <b>Display</b> or <b>External Display</b> of <b>Settings</b>





## ***Sending a New Picture***

To send a new picture to a phone number:









Press	To
1 	open the options menu
2 	select <b>Send</b>
3 keypad keys	enter your message
4 <b>SEND</b> 	select <b>SEND</b>
5 <b>P.BOOK</b> 	open your phonebook
6 	scroll to the desired entry
7 	select the entry
8 	scroll to the desired phone number
9 	select the phone number
10 <b>BACK</b> 	return to the previous menu

**Tip:** Repeat steps 6-10 to add other recipients.





Press	To
11 <b>BACK</b> 	return to the previous menu
12 	open the options menu
13 	scroll to <b>Send</b>
14 	send the picture with your message

To send by an e-mail address:


Press	To
1 	open the options menu
2 	select <b>Send</b>
3 keypad keys	enter your message
4 <b>SEND</b> 	select <b>SEND</b>
5 	open the options menu
6 	scroll to <b>New e-mail address</b>
7 	select <b>New e-mail address</b>
8 keypad keys	enter the e-mail address
9 	add the e-mail address to the <b>Recipients</b> box
	<b>Tip:</b> Repeat steps 5-9 to add other recipients.
10 	open the options menu





Press	To
11 	scroll to <b>Send</b>
12 	send the picture with your message


## Turning Off Your Phone Camera

Press	To
	turn off your phone camera


## Customizing Your Phone Camera

You can customize your phone camera to suit your needs.

### Using the Zoom Lens

Tip:  indicates the zoom lens control.

With your phone's flip open:


Press	To
 up/down	zoom in/out on your image


With your phone's flip closed:

Press	To
up/down camera key	zoom in/out on your image



## Using the Brightness Control


Tip:  indicates the brightness control.

Press	To
 right/left	increase/decrease brightness of your image

## Using the Flash

Tip:  and  indicate the flash is turned on.

Tip:  indicates the flash is turned off.

Press	To
ON/OFF 	turn on/off the flash



## Setting Your Picture Resolution

The better resolution your picture has, the more phone memory your picture uses. Your phone camera includes the following picture resolutions:

**160x120** This resolution supports

**Landscape**  mode. 

**320x240** This resolution supports



**Landscape**  mode. 



**640x480** This resolution supports

**Landscape**  mode. 

128x160

This resolution supports

Portrait  mode. 

	Press	To
1		open the options menu
2		select <b>Resolution</b>

## Setting Your Picture Quality

The better quality your picture has, the more phone memory your picture uses. Your phone camera includes the following picture qualities:

**Fine**




 provides best quality.

**Normal**

  provides regular quality.

**Basic**








  provides poor quality.

	Press	To
1		open the options menu
2		scroll to <b>Quality</b>
3		select <b>Quality</b>



## Framing Your Picture

Your phone camera provides picture frames for you to choose from.




	Press	To
1		open the options menu
2		scroll to <b>Frame</b>
3		select <b>Frame</b>
4		select <b>On</b>
5		scroll to the desired frame
6		select the frame
7		prepare to capture images




## Setting the Twilight Mode


You can turn on or turn off your phone camera's twilight mode.


Tip:  indicates the twilight mode is turned on.







	Press	To
1		open the options menu
2		scroll to <b>Twilight mode</b>
3	<b>ON/OFF</b> 	turn on/off the twilight mode

Press	To
4 	prepare to capture images

## Setting the Self Timer


You can turn on or turn off your phone camera's self timer. If you turn it on, your phone camera captures images 10 seconds after you press .

Tip:  indicates the self timer is turned on.




Press	To
1 	open the options menu
2 	scroll to <b>Self timer</b>
3 <b>ON/OFF</b> 	turn on/off the self timer
4 	prepare to capture images
5 	take pictures in 10 seconds
6 	save pictures

## Setting the Shutter Sound

You can turn on or turn off your phone camera's shutter sound.

Press	To
1 	open the options menu




Press	To
2 	scroll to <b>Shutter sound</b>
3 <b>ON/OFF</b> 	turn on/off the shutter sound
4 	prepare to capture images


## Setting the White Balance

Your phone camera includes 4 modes for taking pictures:


### Auto

 indicates your phone camera will adjust itself to the environment where you want to capture images.


### Sunlight




 indicates you want to capture images outdoors on a sunny day.




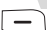
### Fluorescent

 indicates you want to capture images in a room with fluorescent lighting.

### Incandescent










 indicates you want to capture images under incandescent light.

Press	To
1 	open the options menu
2 	scroll to <b>White balance</b>
3 	select <b>White balance</b>

Press	To
4 	scroll to the desired mode
5 	select the mode
6 <b>BACK</b> 	return to the previous menu
7 <b>BACK</b> 	prepare to capture images





## **Checking Pictures**

You can check the pictures you took and saved on **Photo album** of **Media center**.

Press	To
1 	open the options menu
2 	scroll to <b>Photo album</b>
3 	select <b>Photo album</b>
4 	scroll to the desired folder
5 	select the folder
6 	scroll to the desired picture
7 	select the picture
8 	view the selected picture
9 <b>BACK</b> 	return to the previous menu





Press	To
10 <b>BACK</b> 	return to the previous menu
11 <b>BACK</b> 	return to the previous menu
12 <b>BACK</b> 	return to the previous menu
13 <b>BACK</b> 	prepare to capture images

## Turning On Your Phone's Video Recorder

You can use your phone's video recorder to record up to 30 seconds of video.



**Caution:** Obey the local law or regulations when you use your phone's video recorder to record.



You can turn on your phone's video recorder as follows:

**Find the Feature**





**Find the Feature**





## Beginning to Record

**Find the Feature**



Press	To
1 	record
2 	abort recording, if necessary



Press	To
3 	prepare to save the video
4 keypad keys	enter the name of the video
5 	save the video






## Playing a Video

Find the Feature




> **V. Recorder**



Press	To
1 	open the options menu
2 	select <b>Open</b>
3 	scroll to the desired video
4 	play the selected video
5 	stop playing the selected video, if necessary

## Turning Off Your Phone's Video Recorder

Press	To
	turn off your phone's video recorder



# Renaming a Video

Find the Feature



> V. Recorder



Press	To
1	open the options menu
2	select <b>Open</b>
3	scroll to the desired video
4	open the options menu
5	scroll to <b>Rename</b>
6	select <b>Rename</b>
7 keypad keys	enter the name
8	save the name



# Deleting Videos




Find the Feature



> V. Recorder



Press	To
1	open the options menu
2	select <b>Open</b>
3	scroll to the desired video
4	open the options menu







 


Press	To
5 	scroll to <b>Delete</b> or <b>Delete all</b>
6 	select <b>Delete</b> or <b>Delete all</b>
7 	confirm your selection

## ***Sending a Video***

### **Find the Feature**



To send by a phone number:

Press	To
1 	open the options menu
2 	select <b>Open</b>
3 	scroll to the desired video
4 	open the options menu
5 	scroll to <b>Send</b>
6 	select <b>Send</b>
7 keypad keys	enter your message
8 <b>SEND</b> 	select <b>SEND</b>
9 <b>P.BOOK</b> 	open your phonebook
10 	scroll to the desired entry














	Press	To
11		select the entry
12		scroll to the desired phone number
13		select the phone number
14	<b>BACK</b>	return to the previous menu
		<b>Tip:</b> Repeat steps 10-14 to add other recipients.
15	<b>BACK</b>	return to the previous menu
16		open the options menu
17		scroll to <b>Send</b>
18		send the selected video with your message

To send by an e-mail address:



	Press	To
1		open the options menu
2		select <b>Open</b>
3		scroll to the desired video
4		open the options menu
5		scroll to <b>Send</b>

Press	To
6 	select <b>Send</b>
7 keypad keys	enter your message
8 <b>SEND</b> 	select <b>SEND</b>
9 	open the options menu
10 	scroll to <b>New e-mail address</b>
11 	select <b>New e-mail address</b>
12 keypad keys	enter the e-mail address
13 	add the e-mail address to the <b>Recipients</b> box
<b>Tip:</b> Repeat steps 9-13 to add other recipients.	
14 	open the options menu
15 	scroll to <b>Send</b>
16 	send the selected video with your message





## Checking a Video

### Find the Feature



Press	To
1 	open the options menu
2 	select <b>Open</b>











Press	To
3 	scroll to the desired video
4 	open the options menu
5 	scroll to <b>Details</b>
6 	read the details about the selected video

## Sorting Videos

Find the Feature



Press	To
1 	open the options menu
2 	select <b>Open</b>
3 	scroll to any video
4 	open the options menu
5 	scroll to <b>Sort files</b>
6 	select <b>Sort files</b>
7 	scroll to the desired option
8 	sort videos by the selected option




## Setting a Network Profile

Your service provider may select a network profile, including the service provider and connection settings, before you receive your phone.

You can use the default network profile or customize it. You can also select another network profile and even create a new one.

### Find the Feature

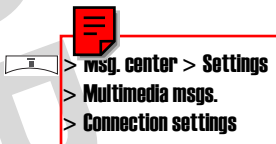





## Connecting to the Internet

You can set your phone to connect to a network profile's homepage, a bookmark, or a URL address.


After establishing a network connection, refer to the following instructions to select an option, return to the last page, and end the network connection.

To select an option:


Press	To
1 	scroll to the desired option
2 	select the option
or	
 > 	






To return to the last page:

Press	To
BACK 	return to the last page

To end the network connection:

Press	To
	end the network connection

Press	To
1 	open the options menu
2 	scroll to <b>Exit</b>
3 	end the network connection

## Connecting to a Network Profile's Homepage

After selecting and turning on a network profile, you can set your phone to connect to this network profile's homepage.

**Find the Feature**

 > **Browser** > **Home**






## Connecting to a Bookmark

You can set your phone to connect to a factory-set or self-created bookmark.

### Find the Feature


 > **Browser** > **Bookmark**

	<b>Press</b>	<b>To</b>
1		scroll to the desired bookmark
2		select the bookmark
3		connect to the selected bookmark

## Connecting to a URL Address

### Find the Feature

 > **Browser** > **Go to address**

	<b>Press</b>	<b>To</b>
1	keypad keys	enter the URL address
2		connect to the URL address

## Setting a Bookmark

You can create, edit, and erase a bookmark.

**Note:** To connect to a bookmark, see page **185**.

### Find the Feature

 > **Browser** > **Bookmark**



# Downloading Multimedia Objects

You can download multimedia objects, such as pictures, ring tones, and animations from the Internet.

**Find the Feature**



> Media center  
> Download media

# Setting Display Style

**Find the Feature**



> Browser  
> Appearance settings

# Allowing or Rejecting Cookies



**Find the Feature**



> Browser  
> Download settings

# Removing Files from Your Phone's Cache Memory

**Find the Feature**





> Browser > Clear the cache

# Reading Your Service Provider's Messages

**Find the Feature**



> Browser > Service Inbox

Press	To
1 	scroll to the desired message
2 	read the selected message

## **Reading Certificates**

**Find the Feature**




> **Browser** > **Certificates**



# Troubleshooting


Check these questions first if your phone does not seem to work properly. If you need additional help, contact the Motorola Customer Call Center at 1-800-331-6456 (USA) or 1-800-461-4575 (Canada).



Question	Answer
Is your battery charged?	The battery level indicator should have at least 1 segment showing. If it does not, recharge your battery (see page 23).
Have you installed a valid SIM card?	If necessary, turn off your phone and make sure that you have inserted a valid SIM card (see page 22).
Does the phone have a signal?	The signal strength indicator should have at least 1 segment showing. If it does not, move to an area with a stronger signal.
Is the other party unable to hear you?	Your phone may be muted. If necessary, press <b>OPTIONS</b>  <b>&gt;</b> <b>Unmute</b> to unmute the phone.  Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.




Question	Answer
Has the phone been damaged, dropped, or gotten wet?	Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover these types of damages.
Was a non-Motorola battery or battery charger used?	




The following refer to specific symptoms:

Symptom	Solution
My phone was stolen. To whom should I report this?	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
I forgot my password.	Contact your service provider.
I pressed the power key, but nothing happened.	Be sure to press and hold  (the power key) until you see the welcome display and an alert sounds. This could take several seconds. If nothing happens, check that a charged battery is installed (see page 22).








Symptom	Solution
<p>The display shows: <b>Insert SIM Card or Check SIM Card</b> even though I have inserted my SIM card in the phone.</p>	<p>The SIM card may be incorrectly inserted. Check the SIM card to make sure that it is inserted properly (see page <a href="#">22</a>). </p>
<p>The display shows: <b>SIM Blocked. How do I unblock my SIM card?</b></p>	<p>Call your service provider (the company that sends you your monthly wireless service bill) to obtain the PIN Unlocking Key (PUK) code (<a href="#">see page 41</a>). </p>
<p>The display shows: <b>Enter Unlock Code. How do I unlock my phone?</b></p>	<p>Enter the factory-preset unlock code (1234), or the last 4 digits of your phone number. If this fails, call your service provider (the company that sends you your monthly wireless service bill).</p>
<p>My phone prompts for an unlock code when I try to open a feature.</p>	<p>The feature you want is locked. If you do not know the unlock code, <a href="#">see page 41</a>. </p>


Symptom	Solution
My phone does not ring.	The ringer may be set to <b>Silence</b> even though your phone is set to an audible ring style. To turn off <b>Silence</b> , press  from the idle display. To set an audible ring style, see page <a href="#">105</a> . 
I tried to place a call and heard an alternating high/low tone.	Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display shows the name of your service provider before placing a call.
I cannot send/receive calls.	Make sure that you have a phone signal (the signal strength indicator should have at least one segment showing). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings.  Your phone also may have the <b>Call barring</b> feature turned on. If you know the unlock code, you can change this setting in the call barring menu (  > <b>Settings</b> > <b>Call feature</b> > <b>Call barring</b> ).  Also, check to be sure your SIM card is installed and working.





Symptom	Solution
My phone has poor reception and drops calls.	<p>Make sure that your antenna is not bent or damaged.</p> <p>Also, make sure you have a phone signal (the signal strength indicator should have at least one segment showing). Stay clear of any obstructions such as bridges, parking garages, or tall buildings.</p>
I cannot hear others on my phone.	<p>While on a call, press the up in-call volume key. Your phone display should show the volume increasing.</p> <p>Also, make sure that your phone's earpiece is not blocked by its carrying case.</p>
How do I see the calls I sent or received?	<p>To see the most recent calls you dialed or received:</p> <ul style="list-style-type: none"> <li> &gt; <b>Recent calls</b></li> <li>&gt; <b>Received calls</b> or <b>Dialed calls</b></li> </ul>
My phone's display is too dark.	<p>Use the <b>Adjust contrast</b> feature to change the level of contrast in your display (see page 43). </p> <p>You can also use the <b>Backlight</b> feature to change the length of time that the display backlight stays on (see page 43). </p>



Symptom	Solution
My phone's battery charge doesn't last as long as I expected. What can I do to extend battery life?	Battery performance is affected by charge time, feature use, temperature changes, backlight use, and other factors. For tips on extending battery life, see page 24. 
I am unable to record a voice note, voice name, or voice shortcut	Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.
I launched the micro-browser but the display shows: <b>Network Not Available.</b>	You may be in an area without service, or you may be connected to a network that does not support Internet access.
I launched the micro-browser but the display shows: <b>Server Not Responding.</b>	Try again in a few minutes. The servers may be temporarily busy.




## ***Specific Absorption Rate Data***

---

**This model phone meets the international standards for exposure to radio waves.**

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.<sup>1</sup> Tests for SAR are conducted in accordance with CENELEC<sup>2</sup> testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is  W/kg.<sup>3</sup> 

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this

product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

1. The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
2. CENELEC is a European Union standards body.
3. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

**A**

- accessories 21
- alert
  - defined 26, 33, 35, 41, 46, 49, 69, 102, 103, 110, 111, 112, 140, 162
  - turning off 28, 48, 108, 110
- animation
  - screen saver 33, 41, 45, 46, 102, 103, 111, 139, 140
  - wallpaper 45
- answering a call 27, 47, 109

**B**

- backlight 43
- battery
  - charging 23
  - extending battery life 24, 43, 45
  - installing 22
  - level indicator 23, 25
- block cursor 33

**C**

- call
  - alert, turning off 28, 48, 108, 110
  - answering 27, 47, 109
  - barring password, changing 42
  - dialing 27
  - ending 28, 47, 48, 108, 109, 110
  - making 27
  - receiving 27, 47, 109
- clock
  - setting 43, 44, 131
- codes

- changing 41
- default 25, 41
- forgetting 42
- color, setting 44
- contrast, setting 43
- cursor 32

**D**

- date, setting 43, 44, 131
- dialing a number 27
- display
  - backlight 43
  - color 44

- contrast 43
- description 29
- idle display 31
- idle display, defined 29

## E

- earpiece volume 26
- end key 28, 47, 48, 108, 109, 110
- ending a call 28, 47, 48, 108, 109, 110
- Enter Unlock Code** message 40, 42
- external display 39

## F

- flashing cursor 32
- flip
  - activating 26, 28
  - external display 39
  - screen saver 33, 35, 45, 102, 139

## I

- idle display 29
- idle display, defined 31
- indicators
  - battery level 23, 25

## K

- key

- end 28, 47, 48, 108, 109, 110
- left soft key 29
- menu 32
- power 25
- right soft key 29
- send 27, 28, 47, 48, 108, 109, 110

- keypad

- backlight 43

## L

- left soft key
  - functions 29
- lock
  - phone 40

## M

- making a call 27
- menu
  - entering text 32, 33
  - lists 32
  - navigating 31
  - using features 32
- menu key 32
- my telephone number 28, 48, 49, 50, 51, 52, 53, 55, 56, 59, 60, 61, 62, 63, 102, 103, 104, 107, 108, 110, 112, 113, 114, 115, 116, 117, 141, 149,

150, 153, 154, 155,  
160, 161

## N

### number

storing your number 49,  
50, 51, 52, 53, 55,  
56, 59, 60, 61, 62,  
63, 102, 103, 104,  
107, 112, 113,  
114, 115, 116,  
117, 141, 149,  
150, 153, 154,  
155, 160, 161

viewing your number 28,  
48, 108, 110

numeric text entry method  
33

## O

optional accessory, defined  
21

optional feature, defined 21

## P

passwords. *See* codes

### phone

alert, turning off 28, 48,  
108, 110

codes 41

date, setting 43, 44, 131

flip 26, 28

locking 40

security code 41

time, setting 43, 44, 131

turning on/off 25

unlock code 41

unlocking 25, 40, 42

### phone number

storing your number 49,  
50, 51, 52, 53, 55,  
56, 59, 60, 61, 62,  
63, 102, 103, 104,  
107, 112, 113,  
114, 115, 116,  
117, 141, 149,  
150, 153, 154,  
155, 160, 161

viewing your number 28,  
48, 108, 110

### picture

screen saver 33, 41, 45,  
46, 102, 103, 111,  
139, 140

wallpaper 45

### PIN code

changing 42

### PIN2 code

changing 42

power key 25

predictive text entry 35

## R

- right soft key
  - functions 29
- ring alert
  - turning off 28, 48, 108, 110
- ring style
  - setting 26, 33, 35, 41, 46, 49, 69, 102, 103, 110, 111, 112, 140, 162

## S

- screen saver 33, 41, 45, 46, 102, 103, 111, 139, 140
- security code
  - changing 41
  - default 41
  - forgetting 42
- send key 27, 28, 47, 48, 108, 109, 110
- shortcuts 5
- silent ring alert, setting 26, 33, 35, 41, 46, 49, 69, 102, 103, 110, 111, 112, 140, 162

**SIM Blocked** message 25

### SIM card

- defined 22
- installing 22

PIN code entry 25

PIN code, changing 42

PIN2 code, changing 42

precautions 22

**SIM Blocked** message 25

### SIM PIN code

changing 42

### SIM PIN2 code

changing 42

### soft keys

functions 29

standby time, increasing

43, 45

symbol text entry method

38

## T

tap method text entry 34

telephone number

storing your number 49,

50, 51, 52, 53, 55,

56, 59, 60, 61, 62,

63, 102, 103, 104,

107, 112, 113,

114, 115, 116,

117, 141, 149,

150, 153, 154,

155, 160, 161

viewing your number 28,

48, 108, 110

### text

block cursor 33

entering 33  
entry method, changing  
    33  
flashing cursor 32  
iTAP software predictive  
    text entry 35  
tap method 34  
text entry method  
    iTAP software 35  
    numeric 33  
    symbol 38  
text entry method, changing  
    33  
time, setting 43, 44, 131  
travel charger 23

## U

unlock  
    phone 40  
unlock code  
    bypassing 42  
    changing 41  
    default 25, 41  
    entering 25, 39, 40  
    forgetting 42

## V

vibrate alert  
    turning off 28, 48, 108,  
        110  
vibrate ring alert, setting 26,  
    33, 35, 41, 46, 49,

69, 102, 103, 110,  
111, 112, 140, 162  
volume  
    earpiece 26

## W

wallpaper 45