

Electronic user's guide released subject to "Nokia User's Guides Terms and Conditions, 7th June, 1998"

User's Guide



9353822

Issue 1

DECLARATION OF CONFORMITY

We, NOKIA CORPORATION, declare under our sole responsibility that the product NHM-4NX is in conformity with the provisions of the following Council Directive: 1999/5/EC.

A copy of the Declaration of Conformity can be found from http://www.nokia.com/phones/declaration_of_conformity/.

Copyright © Nokia Corporation 2002. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a trademark of Nokia Corporation.

Bantumi is a trademark of Nokia Corporation.

US Patent No 5818437 and other pending patents. T9 text input software Copyright (C) 1997-2002. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

9353822 / Issue 1

Contents

Contents	4
FOR YOUR SAFETY	9
Quick and easy	12
Making a call	12
Call functions	12
Sending a text message	13
Phone book functions	14
Locking and unlocking the keypad	15
Accessing a menu function by scrolling	15
List of menu functions	16
1. General information	18
Stickers in the sales package	18
Access codes	18
2. Getting started	20
Keys and connectors	20
Standby mode	20
Installing the SIM card and the battery	21
Charging the battery	23
Switching the phone on and off	24
3. Additional call functions	26
Making a conference call	26
Options during a call	26
4. Additional phone book functions	28

Saving multiple numbers and text items per name	28
Changing the default number.....	29
Copying phone books.....	29
Sending and receiving a business card.....	29
Speed dialling.....	30
Voice dialling.....	31
Adding a voice tag	31
Making a call by using a voice tag.....	32
Replaying, changing or erasing a voice tag	32
Service numbers	32
My numbers.....	33
Caller groups	33
5. Menu functions	34
Messages (Menu 1).....	34
Writing text.....	34
Setting predictive text input on or off.....	34
Using predictive text input.....	35
Using traditional text input	36
Tips for writing text.....	36
Options for sending a message.....	37
Text and picture templates.....	38
Reading and replying to a message	39
Inbox and outbox folders	40
Erasing the messages	40
Chat.....	40
Archive folder and My folders.....	41
Voice messages	41
Info messages	42
Service command editor.....	42

Message settings.....	42
Call register (Menu 2).....	43
Recent calls lists.....	43
Call counters and call timers.....	44
Profiles (Menu 3).....	45
Settings (Menu 4).....	46
Alarm clock.....	46
Time settings.....	47
Clock.....	47
Auto update of date and time.....	47
Call settings.....	47
Call divert.....	47
Speed dialling.....	48
Call waiting service.....	48
Summary after call.....	48
My number sending.....	49
Line for outgoing calls.....	49
Phone settings.....	49
Language.....	49
Cell info display.....	49
Welcome note.....	50
Network selection.....	50
Confirm SIM service actions.....	50
Help text activation.....	50
Screen saver.....	50
Display contrast.....	50
Start-up tone.....	51
Tone settings.....	51
Accessory settings.....	52

GPRS modem settings.....	52
Security settings.....	53
Restore factory settings.....	54
Games (Menu 5).....	54
Starting a game.....	55
Game services and game settings.....	55
Calculator (Menu 6).....	55
Making a currency conversion.....	56
To-do list (Menu 7).....	57
Calendar (Menu 8).....	57
Making a calendar note.....	58
When the phone alarm activates for a note.....	59
Infrared (Menu 9).....	59
Bluetooth (Menu 10).....	60
Using Bluetooth.....	61
Bluetooth settings.....	62
Pairing settings.....	62
Extras (Menu 11).....	63
Voice recorder.....	63
Recording.....	63
List of recordings.....	64
Voice commands.....	64
Countdown timer.....	65
Stopwatch.....	65
Time observation and time splitting.....	65
Lap times.....	66
Viewing and erasing times.....	66
Mobile Internet services, WAP (Menu 12).....	67

Using WAP services	67
WAP settings	68
Keying in the service settings manually.....	68
Appearance settings of the WAP browser.....	71
Download settings.....	71
Browsing the pages of a WAP service.....	71
General guidelines for using the phone keys.....	72
WAP connection security.....	72
Security indicator	72
Security module	73
Bookmarks.....	75
Receiving a bookmark	76
Service inbox	76
SIM services (Menu 13)	76
6. Data and fax communication	78
Communication applications and modem drivers.....	78
PC Suite.....	78
Modem setup.....	79
GPRS - General Packet Radio Service.....	79
HSCSD - High-Speed Circuit Switched Data	79
Using data communications applications.....	79
7. Battery statements.....	81
Charging and Discharging.....	81
CARE AND MAINTENANCE	83
IMPORTANT SAFETY INFORMATION	84

FOR YOUR SAFETY

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.



Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Don't use a hand-held phone while driving.



INTERFERENCE

All wireless phones may get interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELLING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

**USE SENSIBLY**

Use only in the normal position. Don't touch the antenna unnecessarily.

**QUALIFIED SERVICE**

Only qualified personnel may install or repair phone equipment.

**ACCESSORIES AND BATTERIES**

Use only approved accessories and batteries. Do not connect incompatible products.

**WATER-RESISTANCE**

Your phone is not water-resistant. Keep it dry.

**BACKUP COPIES**

Remember to make backup copies of all important data.

**CONNECTING TO OTHER DEVICES**

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

**CALLING**

Ensure the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call, press . To answer a call, press .

**EMERGENCY CALLS**

Ensure the phone is switched on and in service. Press as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display. Enter the emergency number, then press . Give your location. Do not end the call until told to do so.

■ Network services and accessories

The wireless phone described in this guide is approved for use on the EGSM 900 and GSM 1800 network.

Dualband is a network dependent feature. Check with your local service provider if you can subscribe to and use this feature.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.



Note: Some networks may not support all language-dependent characters and/or services.

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-7, ACP-8, ACP-12 and LCH-9.



Warning: Use only batteries, chargers and accessories approved by the phone manufacturer for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.



For availability of approved accessories, please check with your dealer.

When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.





Quick and easy



This Quick Guide explains the basic functions of your 8910 mobile phone. Information on other functions is given in Chapters 3-6.

■ Making a call

- Before you can make your first call, see Installing the SIM card and the battery to learn how to insert the SIM card, install and charge the battery, and switch on your phone.
1. Key in the area code and phone number and press 
 2. Press  to end the call.

■ Call functions

- **Answering a call:** Press  or open the grip.
- **Ending/rejecting a call:** Press  or close the grip. Note that after opening the grip you have about 1 second to press , or **Silence** to make the ringing silent without answering the call.
- **Adjusting earpiece volume:** During a call, press the scroll keys.
- **Calling your voice mailbox:** Press and hold **100**. If the phone asks for the voice mailbox number, key it in and press OK.
- **Speed dialling:** First assign a phone number to a speed dialling key (see page 30). Then press the speed dialling key you want and .

- **Answering a waiting call:** First activate *Call waiting service* (see page 26). Then you can answer a waiting call by pressing . The first call is put on hold. Press  to end the active call.

For more information, see Additional call functions on page 26.

■ Sending a text message

You can write and edit text messages of up to 160 characters.



1. Press **Menu**, and select *Messages* and *Write message*
2. Key in a message. See Writing text on page 34.
See also Text and picture templates on page 38.
3. To send the message, press **Options**, and select *Send*.
4. Enter the recipient's phone number and press **OK** to send the message, or search for the phone number in the phone book. Press **OK** to send the message.



Note: When sending messages via the SMS network service, your phone may display the words "*Message Sent*". This is an indication that the message has been sent by your phone to the message centre number programmed into your phone. This is not an indication that the message has been received at the intended destination. For more details about SMS services, check with your service provider.

For more information, see Messages (Menu 1) on page 34.


■ Phone book functions

 
- **Saving names and phone numbers:** In standby mode, key in the phone number. Press **Options**, and select **Save**. Key in the name and press **OK**.
 - The internal phone book can save several hundred names with numbers and textual notes. The total amount of names that can be saved depends on the length of the names, numbers and text items.
 - The phone supports SIM cards that can save up to 250 names and phone numbers. Names and numbers saved in the SIM card's memory are indicated by .
- **Searching for a name:** Press  and key in the first character(s) of the name you are searching for. Scroll to the name you want, and press **Details**. Scroll to view the details of the selected name.
- **Editing a name, number or a text item:** Search for the name (and number) you want to edit and press **Details**. Scroll to the name, number or text item you want to edit, and press **Options**. Select **Edit name**, **Edit number**, or **Edit info**, and edit the name, number, or text and press **OK**.
- **Erasing names and numbers:** Press **Names** and select **Erase**. Choose **One by one** to delete the names and numbers one by one, or **Erase all** to delete all the names and numbers from the phone book. If you choose **Erase all**, you must confirm the erasure with the security code.
- **Selecting the phone book settings:** Press **Names** and select **Settings**.
 - Select **Memory in use** to select which phone book will be used: **Phone and SIM**, **Phone** or **SIM card**. Note that in **Phone and SIM**, the names and numbers will be saved in the phone's memory.
 - Select **Phone book view** to choose how the phone book information will be shown.
 - Select **Memory status** if you want to see how many names can still be saved in the selected phone book.


■ Locking and unlocking the keypad

- Locking and unlocking the keypad

In standby mode, press **Menu** or **Unlock** and then *** +** within 1 second to lock or unlock the keypad.

When the keypad is locked,  appears at the top of the display.

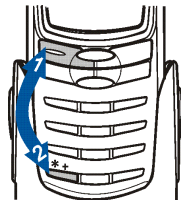

Note: When Keyguard is on, calls may be possible to the emergency number programmed into your phone (e.g. 112 or other official emergency number). Key in the emergency number and press . The number is displayed only after you have keyed in its last digit.

■ Accessing a menu function by scrolling

1. Press **Menu**. Scroll to the desired menu and select, for example, *Settings* by pressing **Select**.
2. If a menu contains submenus, select the one you want, for example *Call settings*, in the same way.
3. Select the desired setting.
4. Press **Back** to return to the previous menu level, and **Exit** to exit the menu.

List of menu functions

1. Messages



1. *Write message*
2. *Inbox*
3. *Chat*
4. *Outbox*
5. *Archive*
6. *Templates*
7. *My folders*
8. *Erase messages*
9. *Voice messages*
10. *Info messages*
11. *Service command editor*
12. *Message settings*

2. Call register



1. *Missed calls*
2. *Received calls*
3. *Dialled numbers*
4. *Erase recent call lists*

5. *Call duration*

6. *Call costs*

7. *GPRS data counter*

8. *GPRS connection timer*

3. Profiles



1. *General*

2. *Silent*

3. *Meeting*

4. *Outdoor*

5. *Pager*

4. Settings



1. *Alarm clock*

2. *Time settings*

3. *Call settings*

4. *Phone settings*

5. *Tone settings*

6. *Accessory settings¹*

7. *GPRS modem settings*

1. Shown only when an accessory has been used.

- 8. *Security settings*
- 9. *Restore factory settings*
- 5. **Games**
- 6. **Calculator**
- 7. **To-do list**
- 8. **Calendar**
- 9. **Infrared**
- 10. **Bluetooth**
- 11. **Extras**
 - 1. *Voice recorder*
 - 2. *Voice commands*



- 3. *Countdown timer*
- 4. *Stopwatch*
- 12. **Services**
 - 1. *Home*
 - 2. *Bookmarks*
 - 3. *Service inbox*
 - 4. *Settings*
 - 5. *Go to address*
 - 6. *Clear the cache*
- 13. **SIM services**¹



1. Shown only if supported by your SIM card.

1. General information

■ Stickers in the sales package

The stickers contain important information for service and customer support purposes.

Attach the **B** sticker to your warranty card.

Attach the **A** sticker to the Nokia Club Invitation Card supplied in the sales package.

■ Access codes






- **Security code (5 digits):** The security code protects your phone against unauthorised use, and is supplied with the phone. The preset code is 12345. Change the code and set the phone to request it, see Security settings on page 53. Keep the new code secret and in a safe place separate from your phone.
- **PIN code (4 to 8 digits):** The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card.
Set the phone to request the PIN code each time the phone is switched on, see Security settings on page 53.
- **PIN2 code (4 to 8 digits):** The PIN2 code may be supplied with the SIM card and is required to access some functions, such as charging unit counters.
- **PUK and PUK2 codes (8 digits):** The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK2 code is required to change a blocked PIN2 code.
If the codes are not supplied with the SIM card, contact your local service provider for the codes.

 
- **Barring password:** The barring password is needed when using the *Call barring service*, see Security settings on page 53. The password is obtained from your service provider.

2. Getting started


■ Keys and connectors

The basic functions of the phone keys are described below. More information is given throughout this user's guide.

The **power key**  (on top of the phone) switches the phone on or off when pressed and held. The scroll keys  and  browse through the names and phone numbers saved in the phone book. The function of the selection keys  and  depends on the text shown above it.

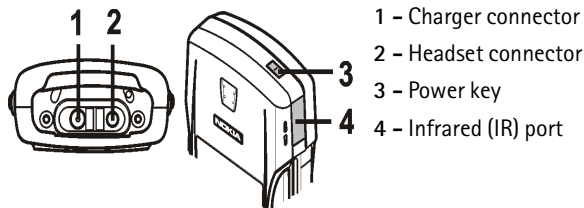

■ Standby mode

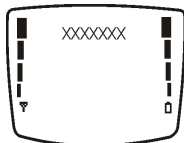 

When the phone is ready for use, and no characters have been entered by the user, the phone is in standby mode.

Selection keys in standby mode are **Menu** and **Names**.

xxxxIndicates the cellular network in which the phone is currently being used.

☞ Shows the signal strength of the cellular network at your current location. The higher the bar, the stronger the signal.

🔋 Shows the battery charge level. The higher the bar, the more power in the battery.

 
Other indicators are described throughout this User's Guide.

■ Installing the SIM card and the battery


- Keep all miniature SIM cards out of the reach of small children.
- The SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting or removing the card.
- Before installing the SIM card, always make sure that the phone is switched off and then remove the battery.

1. Press the release buttons on both sides of the phone to open the grip.


Note that you should always close the phone gently.

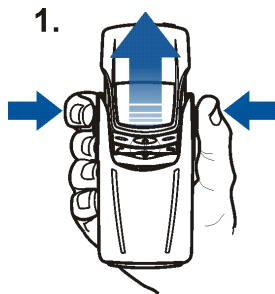

 
2. With the back of the phone facing you, press the release button with a suitable instrument. Make sure the instrument is not so sharp that it will damage the phone. Slide the back cover off the phone in the direction of the arrow.

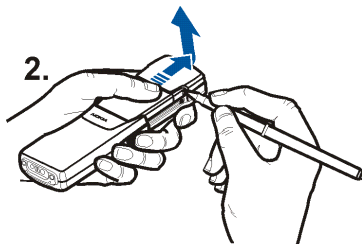

 
3. Lift the battery out of the phone.

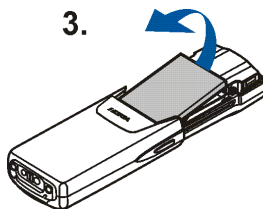

 
4. Release the SIM card holder by first sliding it to the right and then lifting it. Insert the SIM card into the phone. Make sure that the SIM card is inserted properly and that the golden contact area on the card is facing downwards.

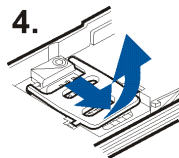

 5. Lock the SIM card in its place by first putting the card holder cover down over the SIM card and then sliding it to the left.

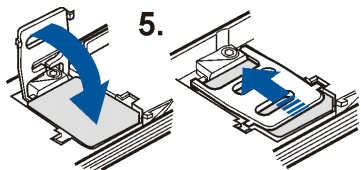

 6. Replace the battery, and close the back cover by sliding it back over the phone until it locks into place.

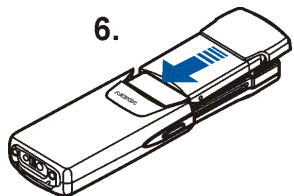


■ Charging the battery

1. Connect the lead of the charger to the socket on the bottom of your phone.
2. Connect the charger to an AC wall socket.


The text *Charging* is displayed briefly if the phone is switched on. If the battery is completely flat, it may take a few minutes before the charging indicator appears on the display or any calls can be made.

You can use the phone while the charger is connected.

 The charging time depends on the charger and the battery used. For example, charging a BLB-2 battery with the ACP-8 charger takes about 2 hours and 30 minutes.

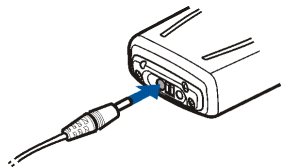

■ Switching the phone on and off

Press and hold the power key, .

Note that if the phone displays *Insert SIM* even though the SIM card is properly inserted, contact your network operator or service provider. Your phone does not support 5 Volt SIM cards and the card may need to be changed.

- If the phone asks for a PIN code, key in the PIN code (displayed as ****), and press **OK**.

See also *PIN code request* in Security settings on page 53 and Access codes on page 18.

- If the phone asks for a security code, key in the security code (displayed as ****), and press **OK**.

 
 
See also Access codes on page 18.



Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



TIPS ON EFFICIENT OPERATION: Your phone has a built-in antenna. As with any other radio transmitting device, do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Not touching the antenna area during a phone call optimises the antenna performance and the talktime of your phone.

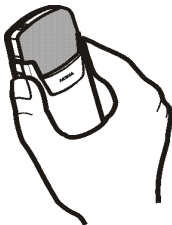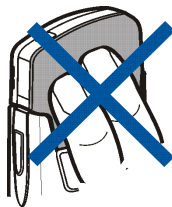


Getting started

3. Additional call functions

The basic call functions are explained in Quick and easy on page 12.

■ Making a conference call

Conference calling is a network service that allows up to six people to take part in a conference call.

1. Make a call to the first participant.
2. To make a call to a new participant, press **Options** and select *New call*.
3. Key in or search the memory for the phone number of the new participant and press **Call**. The first call is put on hold.
4. When the new call has been answered, join the first participant in the conference call. Press **Options** and select *Conference*.
5. To add a new participant to the call, repeat steps 2 to 4.
6. To have a private conversation with one of the participants:
Press **Options** and select *Private*. Scroll to the desired participant and press **OK**. Join the conference call as described in step 4.
7. To end the conference call, press .

■ Options during a call

Press **Options** during a call for some of the following network service options (if they are available from your service provider and operator for the current call):

Mute or *Unmute*, *End call*, *End all calls*, *Phone book*, *Menu* and *Hold* or *Unhold*, *New call*, *Conference*, *Private*, *Answer* and *Reject*.

Send DTMF is used to send DTMF tone strings, for example, passwords or bank account numbers. Key in the DTMF string or search for it in the phone book and press **OK**. Note that you can key in the wait character w and the pause character p by repeatedly pressing * +.


Swap is used to switch between the active call and the call on hold, *Transfer* to connect a call on hold to an active call and disconnect yourself from the calls and *Record* to start the voice recording.


 









4. Additional phone book functions

The basic phone book functions are explained in Quick and easy on page 12.



■ Saving multiple numbers and text items per name

You can save up to five phone numbers and four brief text items in the phone's internal phone book for each name.

The first number saved under a name is automatically set as the default number, and is indicated with . When you select a name from the phone book, for example, to make a call, the default number is used unless you select another number.

1. Make sure that the memory in use is either *Phone* or *Phone and SIM*.
2. Press  or  in standby mode, and scroll to the name saved in the phone's internal phone book, to which you want to add a new number or text item and press **Details**.
3. Press **Options** and select *Add number* or *Add info*.
4. Select one of the following number or text types:
 -  *General* is the default type used when no other number type is set as the default number. Other number types are  *Mobile*,  *Home*,  *Office* and  *Fax*.
 - Text types are  *E-mail*,  *Web address*,  *Postal addr.* and  *Note*.To change the number or text type, select *Change type* in the options list.
5. Key in the number or text item and press **OK** to save it.
6. Press **Back** and then **Exit** to return to standby mode.

Changing the default number

Press  or  in standby mode, scroll to the name you want and press **Details**. Scroll to the number you want to set as the default. Press **Options** and select *Set as default*.

■ Copying phone books

You can copy names and phone numbers from the phone's memory to your SIM card's memory and vice versa.

1. Press **Names** and select *Copy*.
2. Select the copying direction, *From phone to SIM card* or *From SIM card to phone*.
3. Select *One by one*, *All* or *Default nos.*
 - If you select *One by one*, scroll to the name you want to copy and press **Copy**.
 - *Default nos.* is shown if you copy from the phone to the SIM card. Only the default numbers will be copied.
4. To select whether you want to keep or erase the original names and numbers, choose *Keep original* or *Move original*.
 - If you select *All* or *Default nos.*, press **OK** when *Start copying?* or *Moving* is displayed.

■ Sending and receiving a business card

You can send and receive a person's contact information as a business card via IR or as an Over The Air (OTA) message, if supported by the network.

- **Receiving a business card**

Make sure that your phone is ready to receive data through its IR port, see **Infrared** (Menu 9) on page 59. The user of the other phone can now send the name and phone number via the same medium.

When you have received a business card via IR or as an Over The Air (OTA) message, press **Show**. Press **Options** and select *Save* or *Discard*.

- **Sending a business card**

Using your phone's infrared (IR) port, you can send a person's contact info as a business card to a compatible phone or other hand-held device which supports the vCard standard.

1. Search for the name and phone number you want to send in the phone book, press **Options** and select *Send bus. card*.
2. To send the business card via IR, make sure that the other phone or the PC is set up to receive data via its IR port and select *Via infrared*.

To send the business card as an OTA message, select *Via text msg.*.

■ **Speed dialling**

To make a call using the speed dialling keys, see **Quick and easy**.

Assigning a number to a speed dialling key

Press **Names** and select *Speed dials*. Scroll to the speed dialling key number you want, and press **Assign**. If a number is already assigned to that key, press **Options**, and you can view, change or erase the assigned number.

Press **Search**, and select first the name and then the number you want to assign.

■ Voice dialling

You can make a phone call by saying a voice tag that has been added to a phone number. You can add up to ten voice tags. Any spoken word(s), such as a person's name(s), can be a voice tag.

Before using voice dialling, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- When recording a voice tag or making a call by saying a voice tag, hold the phone in the normal position near to your ear.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.






Note: You must say the name exactly as you said it when you recorded it. This may be difficult in, for example, a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

Adding a voice tag

Save or copy the names and phone numbers to which you want to add a voice tag in the phone's memory.

You can also add voice tags to the names in the SIM card, but if you replace your SIM card with a new one, you first need to delete the old voice tags before you can add new ones.

1. In standby mode, press  or .
2. Scroll to the name to which you want to add a voice tag and press **Details**. Scroll to the phone number you want and press **Options**.
3. Select *Add voice tag*.

4. Press **Start**, and clearly say the word(s) you want to record as a voice tag. After recording, the phone plays the recorded tag.
5. When the voice tag has been successfully saved, *Voice tag saved* is displayed, a beep sounds and a symbol  appears after the phone number with the voice tag.

Making a call by using a voice tag

When an application using the GPRS connection is sending or receiving data, you cannot make a call using voice dialling. To make a call using a voice tag, end the application using the GPRS connection.

1. In standby mode, press and hold **Names**. A short tone is heard and *Speak now* is displayed.
2. Say the voice tag clearly.
3. The phone plays the recognised voice tag and then dials the phone number of the voice tag after 1.5 seconds.


If you are using a headset, press and hold the headset key to start the voice dialling.

Replaying, changing or erasing a voice tag

Press **Names** and select *Voice tags*. Scroll to the name with the voice tag you want, and press **Options**. The options are replaying, erasing or changing the voice tag.

■ Service numbers

You can call the service numbers of your service provider if they are included on your SIM card.

Press **Names**, and select *Service Nos*. Scroll to a service number and press  to call the number.

■ My numbers

The phone numbers assigned to your SIM card are saved in *My numbers*, if this is allowed by the card. To view the numbers press **Names** and select *My numbers*. Scroll to the desired name or number, and press **View**.

■ Caller groups

You can arrange the names and phone numbers saved in the phone book into caller groups. For each caller group, you can set the phone to sound a specific ringing tone and show a selected graphic on the display when you receive a call from a phone number in the group, see below. To set the phone to ring only upon calls from phone numbers belonging to a selected caller group, see *Alert for* in Tone settings on page 51.

Press **Names**, select *Caller groups* and select the caller group you want. Select

- *Group name*, key in a new name for the caller group and press **OK**.
- *Group ringing tone* and select the ringing tone you want. *Default* is the ringing tone selected for the currently active profile.
- *Group logo* and select *On* to set the phone to display the group logo. You can also view the logo (*View*), or send it as an Over the Air message (*Send logo*).
- *Group members*. To add a name to the caller group, press **OK** at *Add name*. If you have already added names and numbers to the group, press **Options**, scroll to *Add name* and press **OK**. Scroll to the name you want to add to the group and press **Add**.

To remove a name from a caller group, scroll to the name you want to remove, and press **Options**. Press **OK** at *Remove name*.

5. Menu functions

You can find a list of menu functions on page 16.

■ Messages (Menu 1)


 


You can read, write and send text and picture messages or save your messages. All the messages in your phone's message memory are organised in folders.



Before you can send any text or picture messages, you need to save your message centre number, see Message settings on page 42.

Writing text

You can key in text, for example, when writing messages, in two different ways, using the traditional method, or another method called predictive text input.

When you are writing text, the predictive text input is indicated by  and the traditional text input by  at the top left of the display. The character case is indicated by **Abc**, **abc**, or **ABC** next to the text input indicator, and you can change the character case by pressing **#** . The number mode is indicated by **123**, and you can change between the letter and number mode by pressing and holding **#** .

Setting predictive text input on or off

When writing text, press **Options** and select *Dictionary*.

- To set the predictive text input on, select a language in the dictionary options list. Predictive text input is only available for the languages in the list.

- To change back to the traditional text input, select *Dictionary off*.



Tip: To quickly set the predictive text input on or off, press **#** **Home** twice when writing text.

Using predictive text input

You can key in any letter with a single keypress. The predictive text input is based on a built-in dictionary to which you can also add new words.

- Start writing a word by using the keys **2 abc** to **9 wxyz**. Press each key only once for one letter. The word changes after each keystroke.

For example, to write **Nokia** when the English dictionary is selected, press **6 mno** once for N, **6 mno** once for o, **5 jkl** once for k, **4 ghi** once for i and **2 abc** once for a:



To insert a number while in letter mode, press and hold the desired number key.

For more instructions on writing text, see *Tips for writing text* below.

- When you have finished writing the word and it is correct, confirm it by pressing **Enter** or adding a space with **0**.




If the word is not correct, you have the following options:

- Press *** +** repeatedly until the word you want appears and confirm it.
- Press **Options** and select *Matches*.



If the ? character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, press **Spell**, key in the word (traditional text input is used) and press **Save**. When the dictionary becomes full, the new word replaces the oldest one that was added.

3. Start writing the next word.




Writing compound words

Key in the first part of the word and confirm it by pressing . Write the last part of the word and confirm it by pressing **0**  or .

Using traditional text input

Press a number key, **1**  to **9** , repeatedly until the character you want appears. Not all characters available under a number key are printed on the key. The characters available depend on the language selected in the *Language* menu, see Language on page 49.




To insert a number while in letter mode, press and hold the desired number key.

- If the next letter you want is located on the same key as the present one, wait until the cursor appears, or press  or  and then key in the letter.
- The most common punctuation marks and special characters are available under the number key **1** .

For more instructions on writing text, see Tips for writing text below.

Tips for writing text

You can use also the following keys for writing text:

- To insert a space, press **0** .
- To move the cursor to the right or left, press  or , respectively.

- To delete a character to the left of the cursor, press **Clear**. Press and hold **Clear** to delete the characters more quickly.
- To insert a special character when using traditional text input, press *** +** or when using the predictive text input, press and hold *** +**, or press **Options** and select *Insert symbol*. Scroll through the list of characters and press **Use** to select a character.
To scroll through the list more quickly, press **2abc**, **4ghi**, **6mno** or **8tuv**, and press **5jkl** to select a character.
- To insert a number while in letter mode, press **Options** and select *Insert number*. Key in the numbers you want and press **OK**.
- To insert a name or a phone number by searching for it in the phone book, press **Options** and select *Insert name* or *Insert number*.
- To insert a word when using predictive text input, press **Options** and select *Insert word*. Write the word using the traditional text input and press **Save**. The word is also added to the dictionary.

Options for sending a message



After you have written a message, press **Options**, and select *Send* or *Sending opt's* for the following options:

- *Send to many*. When you have sent the message to everyone you want to send it to, press **Done**.
- To send a message using a message profile, select *Sending profile* and then the message profile you want to use.

For example, if you select a profile you have defined as an e-mail transmission, key in or search the phone book for the recipient's e-mail address and press **OK**. Key in the e-mail service number, select *Accept* to send the message.

To define a message profile, see Message settings on page 42.

Text and picture templates

Press **Menu**, select *Messages* and *Templates*. The list of text templates, indicated with , and picture templates, indicated with , is displayed.

Your phone offers you 10 picture message templates. You can also save new pictures into the *Templates* folder. More pictures can be found on the Nokia website, <http://www.club.nokia.com>.




Note: This function can be used only if it is supported by your network operator or service provider. Only phones that offer picture message features can receive and display picture messages.

Each picture message is made up of several text messages. Therefore, sending one picture message may cost more than sending one text message.

Since picture messages are saved in the phone's memory, you cannot view them if you use your SIM card with another phone.


You can insert a text or picture template when you are writing or replying to a message:


- **Inserting a text template:** Press **Options**. Select *Use template* and select the template you want to insert.
- **Inserting a picture template:** Press **Options**. Select *Attach picture* and select a picture to view. Press **Attach** to insert the picture into your message.

The  indicator on the header of the message indicates that a picture has been attached. The number of characters that you can enter in a message depends on the size of the picture.

To view the text and the picture together before sending the message, press **Options** and select *Preview*.



Reading and replying to a message

When you have received a text or picture message, the indicator  and the number of new messages followed by *messages received* will appear on the display.

The blinking  indicates that the message memory is full. Before you can receive or send new messages, delete some of your old messages.

1. Press **Show** to view the message, or press **Exit** to view it later.

Reading the message later: Press **Menu**, select *Messages* and *Inbox*.

2. If more than one message is received, select the message you want to read. An unread text message is indicated by  in front of it and an unviewed picture message is indicated by .
3. While reading or viewing the message, press **Options**.

You can select an option to erase, forward, edit, move, and rename the message you are reading. You can also change the font size of the message. Select *Copy to calend.* to copy the message to your phone's calendar as a reminder note for the current day.

Select *Details* to view, for example, the sender's name and phone number, the message centre used, the date and time when the message was sent.

Select *Use number* to extract numbers from the current message.

Select *Save picture* to save the picture in the *Templates* folder.

Select *Reply* or *Reply (text)* to reply to a message. Select *Original text* to include the original message in the reply, or select standard answers, for example, *Thank you* or *Congrats* or *Template* to be included in the reply, or select *Empty screen*.

You can also select *Chat* to start a conversation with another person. See Chat on page 40.

4. Write your reply message.

5. Press **Options**, select *Send*, and press **OK** to send the message to the displayed number.

Inbox and outbox folders

After you have read an incoming text or picture message, the phone saves the message in the *Inbox* folder of the *Messages* menu.

You can save a message that you want to send later in the *Outbox* or *Archive* folder.

Erasing the messages

Press **Menu**, select *Messages* and *Erase messages*.

To delete all the messages in a folder, scroll to the folder and press **OK**. Then press **OK** when *Erase all read messages from folder?* is displayed.

To delete all read messages from all the folders, scroll to *All read* and press **OK**. Then press **OK** when *Erase read messages from all folders?* is displayed.

Chat

You can have a conversation with other people using this faster text message service. Messages sent or received during a chat session, are not saved.

1. To start a chat, press **Menu**, select *Messages* and *Chat*. Key in or search the phone book for the phone number of the person with whom you want to start the chat session and press **OK**.

Another way to start a chat: When you have received a message, press **Show** to read it. To start a chat, press **Options** and select *Chat*.

2. Key in your nickname for the chat and press **OK**.

3. Write your chat message, see Writing text on page 34.
4. To send the message, press **Options** and select *Send*.
5. The reply message from the other person is shown above your original message. To reply to the message, press **OK** and repeat step 3.

To view the latest messages sent and received during the current chat session, press **Options** and select *Chat history*. The messages that you sent are indicated by "<" and your nickname, and the messages that you received by ">" and the sender's nickname. Press **Back** to return to the message you are writing.

To edit your nickname, select the option *Chat name*.

Archive folder and My folders

To organise your messages, you can move some of them to the *Archive* folder, or add new folders for your messages.

While reading a message, press **Options**. Select *Move*, scroll to the folder to where you want to move the message and press **OK**.

To add or delete a folder, press **Menu**, select *Messages* and *My folders*.

- Press **Options** and select *Add folder*.
- Scroll to the folder you want to delete, press **Options** and select *Delete folder*.

Voice messages


Voice mailbox is a network service and you may need to subscribe to it first. For more information and for the voice mailbox number, contact your service provider.

Press **Menu**, select *Messages* and *Voice messages*. Select

- *Listen to voice messages* to call your voice mailbox at the phone number you have saved within the *Voice mailbox number* menu.

Each phone line may have its own voice mailbox number, see Line for outgoing calls on page 49.

- *Voice mailbox number* to key in or edit your voice mailbox number and press **OK** to save it.

If supported by the network, the indicator  will indicate new voice messages. Press **Listen** to call your voice mailbox number.

Info messages

With the info message network service, you can receive messages on various topics, for example weather or traffic conditions, from your service provider. For available topics and relevant topic numbers, contact your service provider.

If the *GPRS connection* is set to *Always online*, the info messages may not be received. In that case, set the *GPRS connection* to *When needed*, see Using WAP services on page 67.

Service command editor

Press **Menu**, select *Messages* and *Service command editor*. Key in and send service requests (also known as USSD commands), such as activation commands for network services, to your service provider.

Message settings

The message settings affect the sending of messages.

Press **Menu**, select *Messages* and *Message settings*.

If more than one message profile set is supported by your SIM card, select the set you want to change.

Select *Message centre number* to save the phone number of the message centre. You need the message centre number to send text and picture messages. You receive the number from your service provider. Select *Messages sent as* to select the message format, or *Message validity*. Select *Default recipient number* to save a default number to send messages for this message profile, *Delivery reports* to request the network to send delivery reports on your messages (network service), and *Use GPRS* to set GPRS as the preferred SMS bearer. Select *Reply via same centre* to allow the recipient of your message to send you a reply via your message centre (network service), and *Rename sending profile* to change the name of the selected message profile. The message profile sets are displayed only if your SIM card supports more than one set.

■ Call register (Menu 2)



The phone registers the phone numbers of missed, received and dialled calls, and the approximate length and cost of your calls.

The phone registers missed and received calls only if the network supports these functions, the phone is switched on and within the network's service area.

Recent calls lists

Press **Menu**, select *Call register* and

- *Missed calls* to view the last ten phone numbers from which somebody has tried to call you (network service)

- *Received calls* to view the last ten phone numbers from which you have most recently accepted calls (network service)
- *Dialled numbers* to view the 20 phone numbers that you have most recently called or attempted to call
- *Erase recent call lists* to erase the recent call lists. Select whether you want to delete all the phone numbers in the recent calls lists, or only the numbers in the missed calls, received calls or dialled numbers lists. You cannot undo the operation.

Call counters and call timers



Note: The actual invoice for calls and services from your service provider may vary, depending upon network features, rounding-off for billing, taxes and so forth.

Press *Menu* and select *Call register*. Select

- *Call duration* and scroll to view the approximate duration of your incoming and outgoing calls in hours, minutes and seconds. To clear the timers, the security code is needed. Each phone line has its own call timers and the timers of the selected line are displayed. See Line for outgoing calls on page 49.
- *Call costs* (network service) and select *Last call units* or *All calls' units* to check the cost of your last call or all calls.

Select *Call cost settings* and then select *Clear counters*, or select *Show costs in* to set the phone to show the remaining talk time in terms of charging units, *Units*, or units of currency, *Currency*. Contact your service provider for charging unit prices. Select *Call cost limit* to limit the cost of your

calls to a certain amount of charging units or units of currency. The PIN2 code is needed for the call cost settings.



Note: When no more charging units or currency units are left, calls may only be possible to the emergency number programmed into your phone (e.g. 112 or other official emergency numbers).

- *GPRS data counter* and scroll to check the amounts of data that were last sent and last received, data sent and received in total, and to clear the counters. The counter unit is a byte.
- *GPRS connection timer* and scroll to check the duration of the last GPRS connection or the total GPRS connection. You can also clear the timers.

■ Profiles (Menu 3)



Your phone has various setting groups, or profiles, for which you can customise the phone tones for different events and environments. When you first use your phone, personalise the profiles to your liking and then you only need to activate a profile to use it.

Available profiles are *General*, *Silent*, *Meeting*, *Outdoor*, and *Pager*.

Press **Menu** and select *Profiles*. Scroll to a profile and press **Select**.

- To activate the profile, select *Activate*.



Tip: To quickly change the profile in standby mode, press the power key **[I]**, scroll to the profile you want to activate and press **Select**.

- To set the profile to be active for a certain amount of time, up to 24 hours, select *Timed* and set the time. When the time set for the profile expires, the previous profile that was not timed, becomes active.
- To personalise the profile, select *Personalise*. Select the setting you want to change and make the changes.


For the active profile, the tone settings can also be changed in the *Tone settings* menu, see Tone settings on page 51. In addition, you can rename a profile, *Profile name*. The *General* profile cannot be renamed.

■ Settings (Menu 4)



Alarm clock

The alarm clock uses the time format set for the clock. The alarm clock works even when the phone is switched off.

Press **Menu**, select *Settings* and *Alarm clock*. Key in the alarm time and press **OK**. The indicator  is shown. To change the time when the alarm time is set, select *On*.

When the alarm time expires

The phone will sound an alert tone, and flash *Alarm!* and the alarm time on the display.

Press **Stop** to stop the alarm. If you let the alarm continue for a minute or press **Snooze**, the alarm stops for a few minutes and then resumes.

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you press **Stop**, the phone asks whether you want to activate the phone for calls. Press **No** to switch off the phone or **Yes** to make and receive calls.



Note: Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.

Time settings

Clock

Press **Menu**, select *Settings*, *Time settings* and *Clock*.

Select *Show clock* (*Hide clock*) and the time is shown on the top right of the display when the phone is in standby mode. Select *Set the time*, key to the correct time and press **OK**. Select *Time format* and set the 12-hour or 24-hour time format.

The clock also serves the functions *Messages*, *Call register*, *Alarm clock*, timed *Profiles* and *Calendar*.

If the battery is removed from the phone for a long time, you may need to set the time again.

Auto update of date and time

Press **Menu**, select *Settings*, *Time settings* and *Auto update of date and time* (network service). To set the phone to automatically update the time and date according to the current time zone, select *On*. To set the phone to ask for a confirmation before the update, select *Confirm first*.

Updating the date and time affects the alarm clock, calendar and voice recorder, and the alarm notes you have set are now set to the local time. Updating may cause some calendar notes to expire.

Call settings

Call divert




Press **Menu**, select *Settings*, *Call settings* and *Call divert* (network service). With call divert, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details,

contact your service provider. Divert options not supported by your SIM card or your network operator may not be shown.

Select the divert option you want, for example, select *Divert if busy* to divert the voice calls when your number is busy or when you reject an incoming call.

To turn the divert setting on, select *Activate*, to turn the divert setting off, select *Cancel*, or *Check status* to check whether the divert is activated or not. To change the timeout when the call is diverted, first select *Set delay* if this is available for the divert option, and then select *Activate* to turn the divert setting on.

To cancel all the active call divers at once, select the option *Cancel all divers*.

When all your calls are diverted to another number, the indicator  is shown. If you have two phone lines, the divert indicator for the first line is  and for the second line .

Speed dialling

Press *Menu*, select *Settings*, *Call settings* and *Speed dialling*. Select *On* and the names and phone numbers assigned to the speed dialling keys, from **2abc** to **9wxyz**, can be dialled by pressing and holding the corresponding number key.

Call waiting service

Press *Menu*, select *Settings*, *Call settings* and *Call waiting service*. Select *Activate* and the network will notify you of an incoming call while you have a call in progress (network service). See Quick and easy on page 12.

Summary after call

Press *Menu*, select *Settings*, *Call settings* and *Summary after call*. Select *On* and the phone will briefly display the duration and cost (network service) of the last call.

My number sending

Press **Menu**, select *Settings*, *Call settings* and *My number sending*. Select *On* and your phone number will be displayed to the person you are calling (network service). Select *Set by network* to reset the phone to the setting that you have agreed upon with your service provider.

Line for outgoing calls

Line for outgoing calls is a network service to select the phone line (that is, subscriber number) 1 or 2 for making calls.

Press **Menu**, select *Settings*, *Call settings* and *Line for outgoing calls*. If you select *Line 2* and have not subscribed to this network service, you will not be able to make calls. However, calls on both lines can be answered regardless of the selected line.

If supported by your SIM card, you can prevent the line selection by selecting the option *Lock*.

For more information on availability, contact your network operator or service provider.



Tip: In standby mode, you can switch from one line to the other by pressing and holding **#** **↕**.

Phone settings

Language

Press **Menu**, select *Settings*, *Phone settings* and *Language*. Select the language for the display texts. If *Automatic* is selected, the phone selects the language according to the information on the SIM card.

Cell info display

Press **Menu**, select *Settings*, *Phone settings* and *Cell info display*. Select *On* to set the phone to indicate when it is used in a cellular network based on Micro Cellular Network (MCN) technology.

Welcome note

Press **Menu**, select *Settings, Phone settings* and *Welcome note*. Key in the note you would like to be shown briefly when the phone is switched on. To save the note, press **Options**, and select *Save*.

Network selection

Press **Menu**, select *Settings, Phone settings* and *Network selection*. Select *Automatic* and the phone automatically selects one of the cellular networks available in your area.

If you select *Manual*, the phone shows a list of the available networks and you can select a network that has a roaming agreement with your home network operator. Otherwise, *No access* will be displayed and you must select another network. The phone stays in manual mode until the automatic mode is selected or another SIM card is inserted into the phone.

Confirm SIM service actions

See SIM services (Menu 13) on page 76.

Help text activation

To set the phone to show or not to show the help texts, press **Menu**, select *Settings, Phone settings* and *Help text activation*.

Screen saver

Activate the screen saver by pressing **Menu**, *Settings, Phone settings* and *Screen saver* and then selecting on. You can also set the screen saver to off, or to activate after a certain time. You can also select whether you want the screen saver to show digital or analog clock.

Display contrast

You can choose the display contrast by pressing **Menu**, *Settings, Phone settings* and *Display contrast*. Select the level you want.


Start-up tone

To set the phone to play or not to play a start-up tone when the phone is switched on, press **Menu**, select *Settings*, *Phone settings* and *Start-up tone*.

If you have set a welcome note, the start-up tone will not be played, see Welcome note on page 50.

Tone settings

Press **Menu**, select *Settings* and then *Tone settings*. You can find the same settings in the *Profiles* menu, see Profiles (Menu 3) on page 45.

Select *Incoming call alert* to choose how the phone notifies you of an incoming voice call. The options are *Ring*, *Ascending*, *Ring once*, *Beep once* and *Off*. The phone does not ring at an incoming call or a text message when *Incoming call alert* is set to *Off* and *Message alert tone* is set to *Off*. The indicator  is displayed.

Select *Ring*, *Ring volume* and *Vibrating alert* for an incoming voice call and an incoming message. The vibrating alert does not work when the phone is connected to a charger, desktop stand, or a car kit.



Tip: If you receive a ringing tone via IR or OTA, you can save ten ringing tones at a time in the ringing tone list.

Select *Message alert tone* to set the alert tone for the incoming messages, *Keypad tones*, or *Warning tones* to set the phone to sound tones, for example, when the battery is running out of power.

Select *Alert for* to set the phone to ring only for calls from phone numbers that belong to a selected caller group. Scroll to the caller group you want or *All calls* and press **Mark**.

Accessory settings

The accessory settings menu is shown only if the phone is or has been connected to an accessory such as the headsets HDD-1 or HDW-1, mobile inductive loopset LPS-3 or car kit CARK112.

Press **Menu**, select *Settings* and *Accessory settings*. Select *Headset*, *Handsfree* or *Loopset*.

- Select *Default profile* to select the profile you want to be automatically activated when you connect the selected accessory. You can select another profile while the accessory is connected.
- Select *Automatic answer* to set the phone to automatically answer an incoming call after five seconds. If the *Incoming call alert* is set to *Beep once* or *Off*, automatic answer will not be used.
- Select *Lights* to set the lights permanently on, choose *On*. Select *Automatic* to set the lights on for 15 seconds after a keypress. The *Lights* option is available only when *Handsfree* is selected.
- Select *Use loopset*, to activate the loopset instead of the headset, choose *Yes*. *Use loopset* is available only when *Loopset* is selected.




GPRS modem settings

GPRS is a technology that allows mobile phones to be used for sending and receiving data over the mobile network. GPRS is a data bearer that enables wireless access to data networks such as the Internet. The applications that use GPRS are WAP, SMS messaging and GPRS dial-up (for example, Internet and e-mail).

You can connect the phone via IR or Bluetooth to a compatible PC and use the phone as a modem to enable GPRS connectivity from the PC.

Press **Menu**, select *Settings* and *GPRS modem settings*. Select *Active access point* and activate the access point you want to use. Select *Edit active access point* to change the access point settings.

- Scroll to *Alias for access point* and press **Rename**. Key in the name you would like for the activated access point and press **OK**.
- Scroll to *GPRS access point* and press **Edit**. Key in the Access Point Name (APN) and press **OK**.
An Access Point Name is needed to establish a connection to the GPRS network. You can obtain the Access Point Name from your network operator or service provider.

When a GPRS modem connection is established, the indicator  is shown. The  is replaced with the indicator  if there is an incoming or outgoing call during a GPRS modem connection, and the GPRS connection is suspended.

You can also set the GPRS modem service settings (Access Point Name) on your PC by using the Nokia Modem Options software, see Modem setup on page 79. If you have set the settings on your PC and your phone, note that the settings made on the PC will be used.


Security settings



Note: When security features, which restrict calls, are in use (call barring, closed user group and fixed dialling), calls may be possible to certain emergency numbers in some networks (e.g. 112 or other official emergency number).

Press **Menu**, select *Settings* and *Security settings*. Select

- *PIN code request* to set the phone to ask for your PIN code every time the phone is switched on. Some SIM cards do not allow the PIN code request to be turned off.
- *Call barring service* (network service) to restrict incoming calls to and outgoing calls from your phone. A barring password is required.
- *Fixed dialling* to restrict your outgoing calls to selected phone numbers, if this function is supported by your SIM card. The PIN2 code is required.

- **Closed user group.** Closed user group is a network service that specifies the group of people whom you can call and who can call you. The indicator  is shown when the service is being used. For more information, contact your network operator or service provider.
- **Security level.** Select *Phone* and the phone will ask for the security code whenever a new SIM card is inserted into the phone.

Select *Memory* and the phone will ask for the security code whenever you want to select the phone's internal memory or to copy from one memory to another. See Phone book functions on page 14 and Copying phone books on page 29.

- **Change of access codes** and you can change the security code, PIN code, PIN2 code or barring password. Codes can only include numbers from 0 to 9.

Note that you should avoid using access codes similar to the emergency numbers, such as 112, to prevent accidental dialling of the emergency number.

Restore factory settings

To reset some of the menu settings to their original values, press *Menu*, select *Settings* and *Restore factory settings*. Key in the security code and press *OK*. The names and phone numbers saved in the phone book are not deleted.

■ Games (Menu 5)



Note: The phone must be switched on to use this function. Do not switch on the phone when the use of a wireless phone is prohibited or when it may cause interference or danger.

Starting a game

Press **Menu**, select *Games* and *Select game*. Select the game you would like to play, *Snowboarding*, *Snake II*, *Bantumi* or *Pairs II*. If available for the game, select the game type or *1 player* and then *New game*.

Game services and game settings

Press **Menu**, select *Games* and *Game services* or *Settings*. Select

- *Game services* and the phone tries to connect to the WAP pages of Club Nokia by using the currently active set of service settings.

If the connection fails, you may not be able to access Club Nokia from the WAP service whose connection settings are currently active. In this case, enter the *Services* menu, activate another set of service settings, see WAP settings on page 68. Try again to connect to Club Nokia.

For the availability of different WAP services, pricing and tariffs, contact your network operator and/or the WAP service provider.

- *Settings* to set sounds, lights and vibrator, *Shakes*, for the game. The vibrator can be activated only if *Vibrating alert* is set on, see Tone settings on page 51.
You can save your Club Nokia membership number, *Club Nokia ID*. For more information on Club Nokia and the game services, visit www.club.nokia.com. Availability may vary by country.

■ Calculator (Menu 6)



The calculator on your phone adds, subtracts, multiplies, divides, calculates the square and the square root and converts currency values.



Note: The phone must be switched on to use this function. Do not switch on the phone when the use of a wireless phone is prohibited or when it may cause interference or danger.

This calculator has a limited accuracy and rounding errors may occur, especially in long divisions.

1. Press **Menu** and select *Calculator*.
2. When '0' is displayed on the screen, key in the first number of the calculation, press **#** **↵** for a decimal point.
3. Press **Options** and select *Add, Subtract, Multiply, Divide, Square, Square root* or *Change sign*.
4. Key in the second number.
5. For the total, press **Options** and select *Equals*. Repeat steps 3 to 5 as many times as is necessary.
6. To start a new calculation, first press and hold **Clear**.

Making a currency conversion

1. Press **Menu** and select *Calculator*.
2. To save the exchange rate, press **Options** and select *Exchange rate*. Select either of the displayed options. Key in the exchange rate, press **#** **↵** for a decimal point, and press **OK**. The exchange rate remains in the memory until you replace it with another one.
3. To make the currency conversion, key in the amount to be converted, press **Options** and select *In domestic* or *In foreign*.

You can also make the currency conversion in standby mode. Key in the amount to be converted, press **Options** and select *In domestic* or *In foreign*.

■ To-do list (Menu 7)



You can save a note for a task you have to do. The notes can be saved in priority order. You may be able to save up to 30 notes, but this depends on how long the notes are.



Note: The phone must be switched on to use this function. Do not switch on the phone when the use of a wireless phone is prohibited or when it may cause interference or danger.

Press **Menu** and select *To-do list*. Press **Options**, or scroll to the note you want and then press **Options**.

- Select *Add* to add a new note. Key in the subject for the note, press **Options** and select *Save*. Select the priority for the note, *High (1)*, *Medium (2)*, or *Low (3)*. The notes are listed first in priority order and then in alphabetical order.

Dictionary, refer to Setting predictive text input on or off on page 34.

- The other options are erasing, editing, changing the priority level of the note (*Edit priority*), viewing, saving the note to the calendar or sending it as a text message. *Go to priority* lets you view the notes of a certain priority level.

■ Calendar (Menu 8)



The calendar helps you to keep track of reminders, calls that you need to make, meetings, and birthdays.



Note: The phone must be switched on to use this function. Do not switch on the phone when the use of a wireless phone is prohibited or when it may cause interference or danger.

Press **Menu** and select *Calendar*. Scroll to the day you want. If there are any notes set for the day, the corresponding note type indicator is shown. If you want to see the day's notes, press **Options** and

select *Day notes*. You can view a single note by scrolling to it in day view, then pressing **Options** and *View*.

The other options for the calendar views may include:




- Options for making a note, for sending a note via IR, or directly to another phone's calendar or as a text message.
- Options for erasing, editing, moving and repeating a note and for copying a note to another day.
- *Settings* to set, for example, the date, time, date format or time format. In the *Auto erase* option, you can set the phone to delete old notes automatically after a specified time. However, the repeat notes, for example, birthday notes, will not be deleted.

Making a calendar note


For keying in letters and numbers, see Writing text on page 34.

Press **Menu** and select *Calendar*. Scroll to the date you want, press **Options** and select *Make a note*.

Select one of the following note types:



-  *Meeting* - Key in the note, or search for the name in the phone book, and press **OK**. Then key in the time for the meeting and press **OK**. If you wish, select *Alarm on* and then the alarm time for the note.
-  *Call* - Key in the phone number you want, press **OK**, key in the name and press **OK**, or search for them in the phone book. Then key in the time for the call and press **OK**. If you wish, select *Alarm on* and then the alarm time for the note.
-  *Birthday* - Key in the person's name (or search for it in the phone book), and press **OK**. Then key in the date of birth, and press **OK**. Key in the year of birth (optional), and press **OK**. If you key in the

year, the note shows you the person's age after the name. If you like, select *Alarm on* and then the alarm time for the note.

-  *Memo* – Key in the note and press **OK**.

When a tone alert is set, the indicator  is displayed when you view the notes.

When the phone alarm activates for a note

The phone beeps, and displays the note. With a call note  on the display, you can call the displayed number by pressing . To stop the alarm and view the note, press **View**. To stop the alarm without viewing the note, press **Exit**.

■ Infrared (Menu 9)



You can set up the phone to receive data through its infrared (IR) port. To use an IR connection, the device with which you want to establish a connection must be IrDA compliant. You can send or receive data such as business cards and calendar notes to or from a compatible phone or data device (for example, a computer) via the IR port of your phone.

Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a Class 1 Laser product.



Note: The phone must be switched on to use this function. Do not switch on the phone when the use of a wireless phone is prohibited or when it may cause interference or danger.



Sending and receiving data via IR

- Ensure that the IR ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices. The preferable distance between the two devices in an infrared connection is one metre at most.

- To activate the IR port of your phone to receive data via IR, press **Menu** and select *Infrared*.
- The user of the sending phone selects the desired IR function to start data transfer.

If data transfer is not started within two minutes after the activation of the IR port, the connection is cancelled and has to be started again.

IR connection indicator

- When  is shown continuously, the IR connection is activated and your phone is ready to send or receive data via its IR port.
- When  blinks, your phone is trying to connect to the other device or a connection has been lost.

■ Bluetooth (Menu 10)



Bluetooth technology allows wireless connections between electronic devices. Since Bluetooth devices communicate using radio waves, your phone and the other Bluetooth device do not need to be in line of sight. The two devices only need to be within a maximum of 10 meters of each other, although the connection can be subject to interference from obstructions such as walls or other electronic devices.

In some countries, there may be restrictions on using Bluetooth devices. Check with your local authorities.



Note: The phone must be switched on to use this function. Do not switch on the phone when the use of a wireless phone is prohibited or when it may cause interference or danger.

A Bluetooth connection can be used to send faxes or to connect wirelessly to compatible Bluetooth accessories or to compatible computers. In the Bluetooth menu, you can manage connections and define settings.

Using Bluetooth

1. To activate Bluetooth, press **Menu**, select *Bluetooth* and *On*. The indicator (📶) is displayed.
Using Bluetooth consumes the battery and the phone's operating time will be reduced. Take this into account when performing other operations with your phone.
2. The phone asks for a Bluetooth device name. Accept the default name or change it. The name helps you to distinguish one Bluetooth device or accessory from another. Note that if you have already given a name before the first Bluetooth activation, the phone will not ask you for it.
3. Press **Menu**, select *Bluetooth* and *Search for audio accessories* to start looking for a Bluetooth accessory to connect to. Compatible devices, which are found, appear on a list of Bluetooth accessories one by one starting from the device which was found first. To end the inquiry, press **Stop**.
 - You may need to create a pairing with the Bluetooth device you want to connect to. Your phone will request a pairing when it is needed. Accessories, as well as data and fax connections to a compatible computer, require a pairing, which is done by using a passcode. Nokia accessories have fixed passcodes that are supplied with the accessory. If you do not have a fixed passcode, you can create one yourself, which the other Bluetooth device must also use. For example Nokia phones do not have a fixed passcode. You can create a new passcode each time you make a connection.
4. Scroll to the device you want and press **Select**. When the connection has been established, the device shows *Connected to* followed by the device's name, and the indicator (📶).
Note that you can have only one active Bluetooth connection at a time.
5. To view the currently active device and close the connection to it, press **Menu**, select *Bluetooth* and *View active device*.

Bluetooth settings

The settings are for changing the phone's own Bluetooth-related settings. Press **Menu**, select *Bluetooth* and *Bluetooth settings*. You have the following options:

My phone's visibility, to change the way the phone is visible to other Bluetooth devices. The options are as follows:

- *Shown to all*, which is the default mode
- *Hidden* to make the device non-discoverable, responding only to devices that it has been paired with.

My phone's name to change your phone's Bluetooth device name, which is shown to other Bluetooth equipment.

Pairing settings

To view the list of paired devices, press **Menu**, select *Bluetooth* and *View paired devices*. The oldest pairing is at the top of the list. When you press **Options**, some of the following options may be available, depending on the status of the device or connection:

- *Establish Bluetooth connection* to connect to the indicated accessory.
- *Assign short name*, to give a name (visible to you only) to the paired device.
- *Delete pairing* to remove the selected device from the list.
- *Request conn. authorisation* to define whether the connection from the paired device is established automatically (*No*) or whether the phone asks permission before connecting (*Yes*).

■ Extras (Menu 11)



Note: The phone must be switched on to use each of the functions in this menu. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Voice recorder

You can record items of speech, sound or an active call for three minutes. For example, this is useful when recording a name and phone number for writing them down later.



Note: Obey all local laws governing recording of calls. Do not use this feature illegally.

Recording

1. Press **Menu**, select **Extras** and **Voice recorder**.
2. To start the recording, select **Record**. To start the recording during a call, press **Options**, and select **Record**.

When recording, hold the phone in the normal position near to your ear.

3. To end the recording, press **Stop**.
4. Key in a new name for the recording and press **OK** to save it.

If you do not want to save the recording, press **Clear** to erase the preset name. Then press **Back** and **OK**.

If you record an active call, the phone automatically saves the recording under the name **Recording**.

List of recordings

Press **Menu**, select **Extras** and **Voice recorder**. Select **Recordings list**, scroll to the recording you want and press **Options**.


- Select **Playback** to listen to the selected recording.
- Select **Edit title**. Key in a new name for the recording and press **OK**.
- Select **Erase** to erase the recording. Press **OK** to confirm.
- Select **Add alarm**. Key in the date for the alarm and press **OK**. Key in the time for the alarm and press **OK**.

Alarm replaces **Add alarm** when the alarm is set on. Select **Alarm** and the name of the recording, and the date and the time for the alarm are displayed. To remove the alarm, press **Erase** and then press **OK**.

When the alarm time expires, the phone will sound an alert tone. **Recording!**, the alarm time and the name of the recording are displayed. Press **Stop** to stop the alarm, and then press **Play** to play the recording.


Voice commands

You have a list of phone functions which can be activated by saying a voice tag. Voice tags can be added for the voice commands.

Press **Menu**, select **Extras** and **Voice commands**. Select the command folder you want, scroll to the command to which you want to add a voice tag and press **Options**. If the command already has a voice tag, the indicator  is shown.

When an application using the GPRS connection is sending or receiving data, you cannot activate a voice command. To activate a voice command, end the application using the GPRS connection (WAP, Dial-up).

Countdown timer

Press **Menu**, select *Extras* and *Countdown timer*. Key in the alarm time in hours and minutes and press **OK** to start the countdown timer. If you like, write your own note, which is displayed when the time expires, and press **OK**. When the timer is running, the indicator  is shown in standby mode.

If the alarm time is reached when the phone is in standby mode, the phone sounds a tone and flashes the note, if it is set, or else *Countdown time up*. Stop the alarm by pressing any key. If no key is pressed, the alarm stops automatically within 30 seconds. Press **OK** to erase the note.

To stop the countdown timer or to change the countdown time:

Press **Menu**, select *Extras* and *Countdown timer*. Select *Change time* to set the timer again, or *Stop timer* to stop the timer.

Stopwatch

You can measure time, take intermediate times or lap times by using the stopwatch. During timing, the other functions of the phone can be used.

Using the stopwatch consumes the battery and the phone's operating time will be reduced. Be careful not to let it run in the background when performing other operations with your phone.

Time observation and time splitting

1. Press **Menu**, select *Extras*, *Stopwatch* and *Split timing*.

You can select *Continue* if the timing was set in the background, for example, because of an incoming call.

2. Press **Start** to start the time observation. Press **Split** every time you want to take an intermediate time. The intermediate times are listed below the running time on the display. Scroll to view the times.
3. Press **Stop** to stop the time observation.
4. Press **Options** and select
Start to start the time observation again. The new time is added to the previous time.
Save to save the time. Key in a name for the measured time and press **OK**. If no name is keyed in, the total time is used as a title.
Reset to reset the time without saving it.

Lap times

Press **Menu**, select *Extras*, *Stopwatch* and *Lap timing*. Press **Start** to start the time observation and **Lap** to take a lap time. Press **Stop** to stop the lap timing. Press **Options** and you can save or reset the lap times. Refer to Time observation and time splitting above.

Viewing and erasing times

Press **Menu**, select *Extras*, and *Stopwatch*.

If the stopwatch is not reset, you can select *Show last* to view the most recently measured time. Select *View times* and a list of names or final times of the time sets is shown, select the time set you want to view.

To delete the saved times, press **Options** and select *Erase times*. Select *All at once* and press **OK**, or select *One by one* and scroll to the times you want to delete. Press **Erase** and press **OK**.

■ Mobile Internet services, WAP (Menu 12)



You can access various WAP services such as banking, news, weather reports and flight times. These services are specially designed for mobile phones and they are maintained by WAP service providers.

The WAP services use Wireless Mark-Up Language (WML) on their WAP pages. Web pages using the Hyper Text Mark-Up Language (HTML) cannot be viewed on your phone.


More information on WAP is available on CD-ROM and the Web.



Note: The phone must be switched on to use this function. Do not switch on the phone when the use of a wireless phone is prohibited or when it may cause interference or danger.

Using WAP services

1. Service settings are required to use a WAP service. You may have to save the service settings onto the phone before using WAP services.
 - If you have received the service settings from the network operator or service provider directly onto your phone, *Service settings received* is displayed. Press **Options** and select **Save**. You can also discard and view the settings.
 - If you have not received the service settings as a text message, you must key in the settings manually. See Keying in the service settings manually on page 68.
2. Connect to a WAP service. There are three ways to do this:
 - Open the homepage of the WAP service by pressing **Menu**, **Services** and **Home**. Or alternatively press and hold **0**.

- Select a bookmark of the WAP service by pressing **Menu**, **Services**, and **Bookmarks**. Then select a bookmark. Note that with some service settings the bookmarks may not work.
 - Key in the address of the WAP service by pressing **Menu**, **Services** and **Go to address**. Key in the address of the WAP service, press *** +** for special characters, and press **OK**. Note that it is not necessary to add the prefix `http://` in front of the address since it will be added automatically.
3. Start browsing the pages of a WAP service. See General guidelines for using the phone keys on page 72.
 4. End the connection to the WAP service by pressing **Options** and **Quit**. Confirm the action. Alternatively, press . The phone terminates the connection to the WAP service.
 5. If you have used a service that required some personal information, and do not want anyone else accessing the information, you may need to clear the cache memory by selecting **Menu**, **Services**, and **Clear the cache**. If you want to clear the cache memory when a WAP connection is in progress, select **Options** and **Clear the cache**.



Note: The information or services you have accessed are stored in the cache of your phone. A cache is a buffer memory, which is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords (for example, your bank account), empty the cache of your phone after each use.

WAP settings

Keying in the service settings manually

You get the appropriate settings from your network operator or service provider.

1. Press **Menu**, **Services**, **Settings** and **Active service settings**.

2. You need to activate the set where you want to save the service settings by scrolling to the set you want and pressing **Activate**. A set is a collection of settings which are needed for making a connection to a WAP service.
3. Select *Edit active service settings*.
4. Select each of the service settings one by one and key in all the required settings.
 - *Settings name* - Key in the new name for the settings set and press **OK**.
 - *Homepage* - Key in the homepage address of the WAP service that you want to use, press **100** for a period, and press **OK**.
 - *Session mode* - Select *Permanent* or *Temporary*.
 - *Connection security* - Select *On* or *Off*.

When the connection security is *On*, the phone tries to use a secure connection to the WAP service. If a secure connection is not available, the connection will not be made. If you wish to connect anyway, with a non-secure connection, you must set the connection security to *Off*.

- *Data bearer* - Select *GSM data* or *GPRS*. For pricing, connection speed and other information, contact your network operator or service provider.

The following options depend on the selected data bearer:

- When GSM data is the selected data bearer: *Dial-up number* - Key in the phone number and press **OK**.
- When GPRS is the selected data bearer:
 - *GPRS connection* - Select *Always online* or *When needed*.

If you select *Always online*, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application creates the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.

If you select *When needed*, the GPRS connection is established when you connect to a WAP service and closed when you end the WAP connection.

- *GPRS access point* - Key in the access point name and press **OK**.

An access point name is needed to establish a connection to a GPRS network. You obtain the access point name from your network operator or service provider.

- *IP address* - Key in the address, press *** +** for a period, and press **OK**.
- *Authentication type* - Select *Secure* or *Normal*.
- When GSM data is the selected data bearer:
 - *Data call type* - Select *Analogue* or *ISDN*.
 - *Data call speed* - Select the speed you want to use, or select *Automatic*. *Automatic* is available only if the currently selected data call type is *Analogue*. The actual data call speed depends on the service provider.
- *Login type* - Select *Manual* or *Automatic*. If you select *Automatic*, the login type uses the user name and password keyed into the following settings. If you select *Manual*, the login information is required when establishing a connection.

Note that GPRS *Always online* requires the login type to be *Automatic*.

- *User name* - Key in the user name and press **OK**.
- *Password* - Key in the password and press **OK**.

Appearance settings of the WAP browser

Select the *Appearance settings* from the *Settings* menu, or if a WAP connection is in progress, press *Options* and *Appear. sett.* Select

- *Text wrapping* so that if the text cannot be shown on one line, it will continue on the next line.
- *Show images* to show or hide the pictures appearing on the WAP page. If you choose *No*, this can speed up the browsing of WAP pages that contain a lot of pictures.

Download settings

You can set the phone to allow or prevent the receiving of cookies.



A cookie is data that a WAP site saves in your phone's browser cache memory. The data can be, for example, your user information or your browsing preferences. Cookies will be saved until you clear the cache memory, see step 5 on page 67.

Select *Download settings* from the *Settings* menu. Then select *Cookies* and select *Allow* or *Reject* to allow or prevent the phone receiving cookies.





Browsing the pages of a WAP service

Service settings are required to use a WAP service. You may have to save the service settings onto the phone before using WAP services. You obtain the service settings from your service provider or network operator.

The function of the phone keys may vary in different WAP services. Follow the text guides on the phone's display. For more information, contact your WAP service provider.


Note that if GPRS is selected as the data bearer, the indicator  is shown on the top left of the display during browsing. If there is an incoming (or outgoing) call during a GPRS connection, the indicator  will be shown on the top right of the display. The GPRS connection is suspended.

General guidelines for using the phone keys

- Use the scroll keys  or  to scroll the WAP page.
- To select a highlighted item, press .
- To enter letters and numbers, press the keys **0**  - **9wxyz**, and to enter special characters, press the key *** +**.
- Other options available to you by pressing **Options** while a WAP connection is in progress:
 - Edit/Open row/Open link/Open list* - to key in text or select a highlighted item on the WAP page.
 - Go to address* - to key in the address of the WAP service you want.
 - Service inbox* - the list of service messages is displayed, see Service inbox on page 76.
 - Use number* - to copy a number from the current WAP page for saving or calling (this ends the WAP connection). If the WAP page contains several numbers, you may select the desired one.
 - Reload* - to reload and update the current WAP page.
 - Security info* - to view security information about the current WAP connection and the server.

WAP connection security

Security indicator

If the security indicator  is displayed during a WAP connection, the data transmission between the phone and the WAP gateway or WAP server (identified by the *IP address* in the *Edit active service settings*) is encrypted.


However, the security indicator does not indicate that the data transmission between the gateway and the content server (the location where the requested resource is stored) is secure. It is up to the service provider to secure the data transmission between the gateway and the content server.

Security module

The security module provides security services for WAP-related applications and enables digital signing. If present, the security module is in the SIM card as an optional service of your service provider. The security module helps to prevent the card content from being maliciously read or modified. (It can contain certificates, as well as private and public keys to operate the certificates. The certificates are stored in the security module by the SIM card issuer or the service provider.)

Digital signature

You can sign, for example, a bill or a financial contract digitally while using WAP. Note that the signature can be traced back to you via the private key and the associated certificate that was used to perform the signature, so signing using the digital signature is the same as signing your name to a paper bill, contract or other document.

When you select a link, for example, the title of the book you want to buy and its price, the digital signature procedure starts and shows the text to be signed. At this point the header text is *Read* and the digital signature icon  is shown.



Note: If the digital signature icon does not appear, this means that there is a security breach, and you should not enter any personal data such as your signing PIN.

To sign the displayed text, select **Sign**, after you have read all of the text.



Note: The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before signing.

Select the user certificate you want to use in the signing. Key in the signing PIN (supplied by the service provider) and press **OK**. Since the PIN code will not be sent outside the phone, it will remain

secret. The phone shows a confirmation of your purchase, the digital signature icon will disappear, and you can continue browsing or end the WAP connection.

Certificates

There are three kinds of certificates:

- Server certificates

A server certificate is sent from the server to the phone and its validity is checked using the authority certificates stored in the phone or the security module. This process helps to determine whether a WAP gateway or a WAP server is the one it claims to be.

You will see a note on the phone display if the identity of the WAP server or WAP gateway cannot be verified, if the WAP server or WAP gateway certificate is not authentic or if you do not have the right authority certificate on your phone.

- Authority certificates

Authority certificates are used by some WAP services, such as banking services, for checking signatures, server certificates or other authority certificates.

You can download the certificate from a WAP page, if the WAP service supports the use of authority certificates. After the download, you can view the certificate and then save or delete it. If you save the certificate, it is added to the certificate list on the phone. Authority certificates may also be available in the security module.

- User certificates

User certificates are issued to users by a Certifying Authority, for example, a bank. They associate a user with a specific private key in a security module, and they are stored in the module by the SIM card issuer or the service provider.

Security module settings

Press **Menu**, select *Services*, *Settings* and *Security module settings*. If there is no security module in the phone, *Insert security module* is displayed.

In the *Security module settings* menu you have the following options:

- *Security module details* show the security module label, its status, manufacturer and serial number.
- *Module PIN request*: The phone asks you for the module PIN code, which is supplied with the SIM card. Key in the code, and select **On** to set the security module to ask for the module PIN code.
- *Change module PIN*: Key in the current module PIN code. Press **Change** and key in the new code twice.
- *Change signing PIN* shows a list of signing PINs in alphabetical order, if you have more than one signing PIN on your phone. The signing PIN is supplied with the SIM card. Select the signing PIN you want to change. Key in the current signing PIN code. Press **Change** and key in the new code twice.

If you key in a wrong PIN code several times, the phone may display *PIN code blocked* and ask you to key in the PUK code. Contact your service provider to get the PUK code, and key it in. To key in the PUK code later, you must first try to use the PIN, and you will then be asked for the PUK code.

Bookmarks

You can save up to 50 WAP page addresses as bookmarks in the phone's memory. Select *Bookmarks* from the *Services* menu, or when the WAP connection is in progress, select **Options** and *Bookmarks*. Then scroll to the bookmark you want and press **Options**. You can edit or erase bookmarks, send bookmarks to another phone, create a bookmark or select *Go to* to make a connection to the bookmark page.



Note that your phone may have some pre-installed bookmarks for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any site.

Receiving a bookmark

When you have received a bookmark as a message, press **Options** and select **View** to view the bookmark, **Save** to save the bookmark, or **Discard** to discard it.

Service inbox

The phone is able to receive service messages (pushed messages) sent by your service provider. Service messages are notifications of, for example, news headlines, and they may contain a text message or the address of a WAP service.

You can access the service inbox by selecting **Menu**, **Services**, and **Service inbox**, or if a WAP connection is in progress, press **Options** and select **Service inbox**. Scroll to the service message you want, press **Options** and you can download the contents of the message, view the detailed information in the message or erase the message.

To set the phone to receive service messages, select **Menu**, **Services**, **Settings**, **Service inbox settings**, **Service messages** and **On**.

■ SIM services (Menu 13)



In addition to the functions available on the phone, your SIM card may provide additional services that you can access in menu 13. Menu 13 is shown only if it is supported by your SIM card. The name and contents of the menu depend entirely on the service available.



Note: For availability, rates and information on using SIM services, contact your SIM card vendor, e.g. network operator, service provider or other vendor.

You can set the phone to show the confirmation messages sent between your phone and the network when you are using the SIM services by selecting the option *Yes* within the menu 4-4-5, *Confirm SIM service actions*.

Note that accessing these services may involve sending a text message (SMS) or making a phone call for which you may be charged.

6. Data and fax communication

You can transfer data to other compatible devices when your Nokia 8910 phone is connected to a compatible PC via an IR connection or Bluetooth.

To send and receive e-mail and faxes, and to connect to computers and access the Internet, you also need the appropriate data and fax communications software installed on your computer. You can use the Nokia 8910 with a variety of commercially available data and fax communications applications.

To use your phone as a modem, you first need to install it as a modem.

■ Communication applications and modem drivers

On the Nokia website, www.nokia.com/phones/productsupport/8910, you can find the required system files for data communication and also the instructions for installation. You can also find instructional documents that advise you on how to set up devices and applications for use with the Nokia 8910.

PC Suite

PC Suite contains applications which help you

- to conveniently manage various phone functions from your PC, for example, writing SMS messages
- to synchronise contacts and calendar items between your phone and your PC Personal Information Manager.
- to draw and edit caller group graphics and picture messages.
- to create new ringing tones for your phone.

- to select the connection type used when connecting your PC and your phone.
- to back up and restore personal information from phone to PC or to another phone.

Modem setup

Modem setup installs the following components on your PC:

- N8910 data and fax modem adapters which enable you to use your phone as a modem in data and fax calls.
- Nokia Modem Options software to set options for the data calls you make. The settings for HSCSD and GPRS are contained here.

GPRS – General Packet Radio Service

See also GPRS modem settings on page 52.

HSCSD – High-Speed Circuit Switched Data

With the GSM high-speed data service, you can use the Internet and other services more quickly than usual. For example, Internet connection and sending or receiving e-mail is faster. You can use high-speed functionality when your phone is connected to a computer via an IR connection or Bluetooth, and when the modem drivers supporting high-speed data software are installed on your computer and selected as an active modem.

Note that sending data in HSCSD mode drains the phone's battery faster than normal voice or data calls as the phone is sending data more quickly. For continuous usage, connect the phone to a charger.

Using data communications applications

- Activate the IR connection (Menu 9) or Bluetooth connection (Menu 10) on your phone.

- If you are using the IR connection, make sure that the infrared port of the phone faces the infrared port of the PC.
- Start using the data communications application on the PC.

For information on the use of the application, refer to the documentation for the application.

Note that making or answering phone calls during a PC connection is not recommended as it might disrupt the operation.

For better performance during data calls, place the phone on a stationary surface with the keypad facing downward. Do not move the phone by holding it in your hand during a data call.

7. Battery statements

■ Charging and Discharging

Your phone is powered by a rechargeable battery.

Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15 °C and 25 °C . A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose of as household waste.

CARE AND MAINTENANCE

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not attempt to open the phone. Non-expert handling may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility. The personnel there will assist you and, if necessary, arrange for service.

IMPORTANT SAFETY INFORMATION

■ Traffic Safety

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

■ Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic. Metallic materials may be attracted to the phone, and persons with a hearing aid should not hold the phone to the ear with the hearing aid. Always secure the phone in its holder, because metallic materials may be attracted by the earpiece. Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

■ Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimise the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air-bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch your phone off in any facility where posted notices so require.

■ Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquified petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

■ Vehicles

Only qualified personnel should service the phone, or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your phone while in the air is prohibited. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, or legal action or both.

■ Emergency calls





Important:

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions. Because of this, connections in all conditions can not be guaranteed. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on. Check for adequate signal strength.
Some networks may require that a valid SIM card is properly inserted in the phone.
2. Press  as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display and ready the phone for calls.
3. Key in the emergency number for your present location (e.g. 112 or other official emergency number).
Emergency numbers vary by location.
4. Press the  key

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident - do not cut off the call until given permission to do so.

■ Certification information (SAR)

THIS MODEL PHONE MEETS THE EU REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radiofrequency (RF) energy recommended by The Council of the European Union. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by The Council of the European Union is 2.0 W/kg.* Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person. The highest SAR value for this model phone when tested for compliance against the standard was 0.52 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.

* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at www.nokia.com.

LIMITED MANUFACTURER'S WARRANTY

PART OF EUROPE & AFRICA REGION

This limited warranty shall apply in part of Nokia Mobile Phones' Europe & Africa Region unless a local warranty exists. Nokia Corporation, Nokia Mobile Phones ("Nokia") warrants that this NOKIA product ("Product") is at the time of its original purchase free of defects in materials, design and workmanship subject to the following terms and conditions:

1. This limited warranty is given to the end-purchaser of the Product ("Customer"). It shall neither exclude nor limit i) any mandatory statutory rights of the Customer or ii) any of the Customer's rights against the seller/dealer of the Product.
2. The warranty period is twelve (12) months from the date on which the first Customer purchased the Product. In case of a subsequent purchase or other change of owner/user, such warranty period shall continue for the remaining part of the twelve (12) month period and otherwise remain unaffected. This limited warranty is only valid and enforceable in the following countries: Bosnia, Bulgaria, Croatia, Cyprus, the Czech Republic, Estonia, any member state of the European Union, Hungary, Iceland, Israel, Latvia, Lithuania, Macedonia, Malta, Norway, Poland, Romania, the Slovak Republic, Slovenia, Switzerland and Turkey.
3. During the warranty period Nokia or its authorized service company will repair or replace, at Nokia's sole discretion, a defective Product. Nokia will return the repaired Product or another Product to the Customer in good working condition. All parts or other equipment for which replacements have been provided shall become the property of Nokia.
4. A repaired or replaced Product will not be given a prolonged or renewed warranty period.
5. This limited warranty will not cover painted covers or other similar personalized parts. In all cases that require unlocking or locking of an operator SIM-lock, Nokia will first direct the Customer to such operator for unlocking or locking of the operator SIM-lock before repairing or replacing the Product.
6. This limited warranty shall not apply to deterioration due to normal wear and tear. This limited warranty shall further not apply if:

(i) the defect was caused by the fact that the Product has been subjected to: use in contradiction with the owner's/user manual, rough handling, exposure to moisture, dampness or extreme thermal or environmental conditions or rapid changes in such conditions, corrosion, oxidation, unauthorized modifications or connections, unauthorized opening or repair, repair by use of unauthorized spare parts, misuse, improper installation, accident, forces of nature, spillage of food or liquid, influence from chemical products or other acts beyond the reasonable control of Nokia (including but not limited to deficiencies in consumable parts, such as batteries

which all by their nature have a limited lifetime, and breakage or damage to antennas) unless the defect was caused directly by defects in materials, design or workmanship;

- (ii) Nokia or its authorized service company was not notified by the Customer of the defect within thirty (30) days after the appearance of the defect within the warranty period;
 - (iii) the Product was not returned to Nokia or its authorized service company within thirty (30) days after the appearance of the defect within the warranty period;
 - (iv) the Product serial number, the accessory date code or the IMEI number has been removed, erased, defaced, altered or is illegible;
 - (v) the defect was caused by a defective function of the cellular network;
 - (vi) the defect was caused by the fact that the Product was used with or connected to an accessory not manufactured and supplied by Nokia or used in other than its intended use;
 - (vii) the defect was caused by the fact that the battery was short-circuited or seals of the battery enclosure or cells were broken or show evidence of tampering or the battery was used in equipment other than for which it has been specified; or
 - (viii) the Product software needs to be upgraded due to changes in cellular network parameters.
7. To claim this limited warranty the Customer shall present either i) a legible and non-modified original warranty card which clearly indicates the name and address of the seller, the date and place of purchase, the product type and the IMEI or other serial number or alternatively ii) a legible and non-modified original purchase receipt which contains the same information, if such purchase receipt is presented to the seller/dealer of the Product.
 8. This limited warranty is the Customer's sole and exclusive remedy against Nokia and Nokia's sole and exclusive liability against the Customer for defects or malfunctions of the Product. This limited warranty replaces all other warranties and liabilities, whether oral, written, (non-mandatory) statutory, contractual, in tort or otherwise. Nokia is in no event liable for any incidental, consequential or indirect damage, costs or expenses. Neither is Nokia in any event liable for any direct damage, costs or expenses, if the Customer is a legal person.
 9. Any change or amendment to this limited warranty requires Nokia's prior written consent.

