

Panasonic

Operating Instructions Digital Cellular Telephone

EB-G600 Main Kit



Before operating this equipment please read these instructions completely.

Contents

Before You Start	1	Additional Features	20
Symbols Used, Safety Information, Fitting/Removing the SIM, Fitting/Removing the Battery		Key Guard, Phonebook, Messages, Call Service, Call Divert, Security, Network, Personalise	
Your Telephone	4	Battery Information	26
Location of Controls, Display		Low Battery, Charging the Battery	
Basic Operation	6	Care and Maintenance	27
Power on/off, Making a Call, Ending a Call, Answering a Call, Adjusting Volume, Vibration Alert, Automatic Redial		Other Information	28
Advanced Operation	10	Glossary of Terms, Trouble Shooting, Important Error Messages	
Concept of Operation, Voice Memo, DTMF Tones, Call Hold/Call Waiting		Specifications	33
Stored Numbers	14	Notes	34
Note Pad, Recent Numbers , Phonebook, Fixed Dial			
Alpha Entry	19		
Editing Alpha Entry			

Before You Start

Thank you for purchasing this Panasonic G600 digital cellular telephone. This telephone is designed to operate on the Global System for Mobile Communications (GSM).

These operating instructions detail use of the equipment contained in the Main Kit.

Some services are network dependant or may only be available on a subscription basis. Some functions are SIM dependent. For more information contact your Service Provider.

Symbols Used

 Shows that you should press the following key(s).

Safety Information



This equipment is intended for use when supplied with power from the built-in charger or dual charger (EB-CR600) through the AC Adaptor (EB-CA600). Other usage will invalidate any approval given to this apparatus and may be dangerous.



Switch off your cellular telephone when in an aircraft. The use of cellular telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the cellular network and may be illegal. Failure to observe this instruction may lead to the suspension or denial of cellular telephone services to the offender, or legal action or both.



You are advised not to use the equipment at a refuelling point. You are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress.

Never expose the battery pack to extreme temperatures (in excess of 60°C) or charge the battery pack for much longer than recommended.



You **MUST** exercise proper control of your vehicle at all times. Do not use a hand-held telephone or microphone while you are driving. Find a safe place to stop first. Do not speak into a hands-free microphone if it will take your mind off the road. Acquaint yourself thoroughly with restrictions concerning the use of cellular telephones within the country you are driving and observe them at all times.




Care must be taken when using the telephone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Fitting/Removing the SIM

The SIM is fitted into a holder at the back of the telephone underneath the battery.

Fitting the SIM

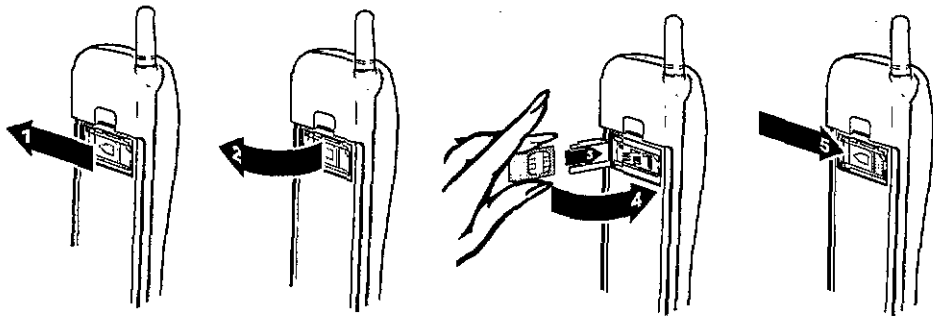

Removing the SIM


To remove the SIM follow the above steps in reverse.

Fitting/Removing the Battery


Fit a fully charged battery pack. If the battery pack is not fully charged then it must be charged as shown in "Charging the Battery" – see page 26.

Switch off the telephone and turn face downwards.

Fitting the Battery

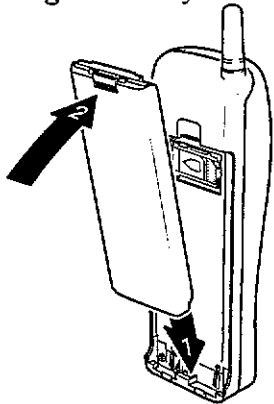



Removing the Battery

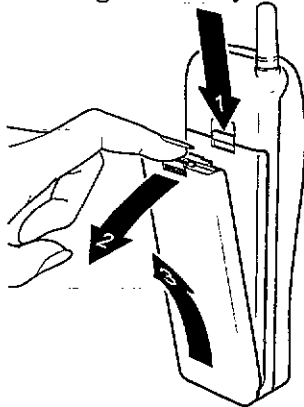



Your Telephone

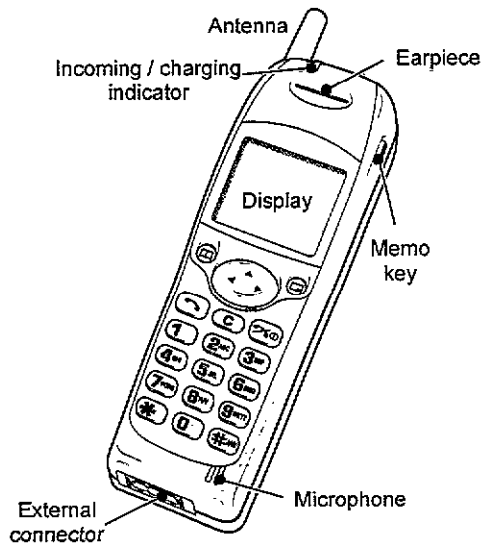
Location of Controls





 Navigation key – pressing up/down scrolls through options in the main area of the display or adjusts the volume. Pressing left/right scrolls through options in option area of the display (see Display below)

 Select key – selects an option in option area of the display (see Display below)


 – accesses Phonebook or switches character types

 – makes a call or recalls recently dialed telephone numbers


 – clears the last digit entered, clears all digits when pressed and held or returns to the previous display

 – ends a call or switches the telephone on/off when pressed and held


Digit keys 0 to 9, * and # – where appropriate the 0 key will enter the international access code +, "wild" numbers or pauses and the # key will switch on and off vibration alert

 – records a conversation during a call or plays it back during standby

Display

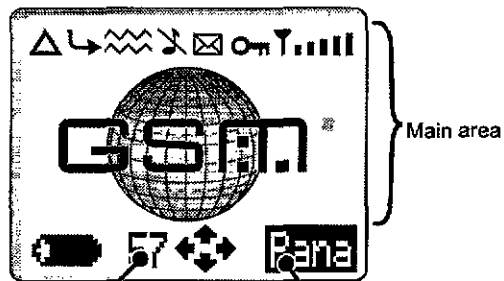

Location area - indicates menu number, location number, or alpha mode


Option area - shows options that can be selected by  key

 lights when you are registered to a non-home network - roaming

 lights when call divert is enabled

 lights when vibration alert is enabled




 lights when all tones or ring volume is off

 flashes when an unread message is stored or lights when message area is full

 lights when phone lock is enabled

 indicates that it is possible to make emergency calls

 Indicates received signal strength -  weak signal,  strong signal

 indicates the battery level -  full,  low battery



 indicates that the Navigation key () can be pressed



Following some operations the display will automatically clear after three seconds or after pressing any key.

Basic Operation

Power on/off




  and hold to switch power on
A greeting will be displayed.

  and hold to switch power off




Making a Call

Make sure that the telephone is switched on and the signal strength meter is displayed.

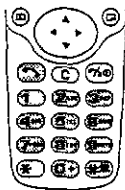

1  area code and telephone number

2  

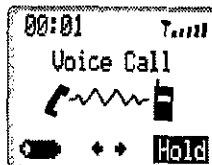

Emergency Calls

To make an emergency call the antenna symbol (↑) must be present.

     or press  when "SOS" is displayed in the option area of the display

International Dialling



Using the Automatic International Access Code "+" you will be able to dial international number without having to know the code for the international exchange.

- 1 and hold until a "+" appears
- 2 country code or to scroll through the abbreviated international names
- 3 area code and telephone number
- 4




NOTE: Many countries include an initial "0" in the area code. This should, in most cases, be left out when dialling international numbers. If you have difficulties making international calls, contact your Service Provider.

Ending a Call



Answering a Call

To receive a call the telephone must be switched on and the signal strength meter must be displayed.

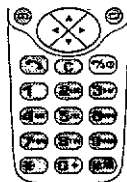

- any key except or
 - to reject the call
- If a call is not answered the number of unanswered calls will be displayed.
- any key to clear the display



Calling Line Identification

This feature allows you to identify incoming calls and accept or reject them. The caller's telephone number, and name if stored in Phonebook, will be displayed.



Adjusting Volume



Earpiece Volume


Four levels of earpiece volume are available.

During a call:


to decrease to increase

Ring and Key Volume

See "Ring Volume" – page 25 – and "Key Volume" – " page 25.

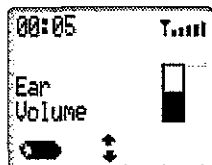


Vibration Alert

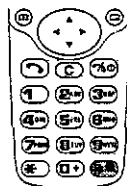

When vibration alert is switched on the telephone will vibrate when a call is received. Switching on vibration alert will silence the ring volume. However, when the ring volume is adjusted after the vibration alert is switched on, the telephone will ring and vibrate when a call is received.

During standby:

 and hold to switch on or off



Automatic Redial



When a call is unsuccessful the telephone will ask if you want to redial the telephone number again automatically.

  when "OK" is displayed in the option area.

To stop redialling,   when "Cancel" is displayed in the option area






If a call is repeatedly unsuccessful you will not be able to automatically redial the telephone number. In this case you must redial the telephone number manually.


Advanced Operation

Concept of Operation

There is a close relationship between the select key, navigation key and the display.

Pressing  scrolls through the main area of the display.

Pressing  scrolls through options at the bottom right of the display. To choose the option, press .

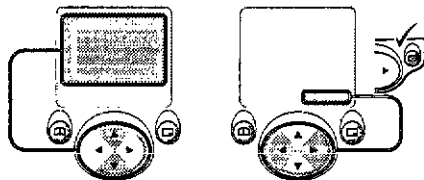



Voice Memo

You can record a conversation for approximately 50 seconds during a call. If a different SIM is installed any recorded message will be lost.

CAUTION: Security of a recorded message is under your responsibility. You **MUST** ask for the other party's consent before recording.

Record

  during a call

Two tones will sound when recording starts. Another two tones will sound, to the other party, every 15 seconds. When the recording stops a tone will sound to you.

  while recording to restart

Recording cannot be stopped once started.




Play Back

 **(MEMO)** during standby

If there is no recording two tones will sound.

To stop playing, press **(END)**


Erase

 **(END)** twice during playing

DTMF Tones

DTMF tones can be sent during conversation. These are often used to access voice mail, paging and computerised home banking.





Send DTMF Tones During a Call

 digits (0 to 9, # and *)


Pause Dial



Using pauses allows you to send DTMF tones automatically.

- 1  telephone number
 - 2  **(*)** and hold until a "P" appears
 - 3  DTMF digits after the pause
- Repeat 2 for more pauses.
- 4  **(END)**





When the call is successful DTMF tones will be sent every 3 seconds or when  is pressed


Call Hold/Call Waiting

Holding/Resuming a Call

  when "Hold" is displayed in the option area

  when "Resume" is displayed in the option area

Making a Second Call

1  telephone number, or recall from Phonebook



2  

The first call will be placed on hold.

Receiving a Second Call

A second call can be received, if call waiting is switched on – see "Call Service" page 22. It is not possible to have more than one fax or data call. All voice calls must be ended before you can make or receive a fax or data call.

Accept a Second Call

  when "Accept" is displayed in the option area

The current call will be placed on hold.



Reject a Second Call


1   to display "Reject" in the option area

2  

End Current Call and Receive Second Call

1   with a waiting call

2  any key except 

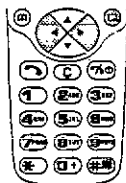



Operation During Two Calls

Swap Between Calls

  when "Swap" is displayed in the option area

End Current Call


1   to display "End" in the option area

2  

The held call will remain held.

End Both Calls

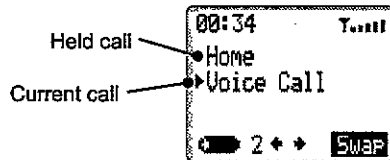


Stored Numbers


Note Pad

During a call you can enter numbers which you may wish to dial when the call has ended.

During a call:

 telephone number

When the call has ended press 

To store in Phonebook, press  while the number is displayed - see "Phonebook" page 20.

Recent Numbers

Recently dialled telephone numbers will be stored in "Last Dialled".

If Calling Line Identification is available the caller's telephone number for an answered call will be stored in "Answered" and an unanswered call will be stored in "Unanswered".



When the store is full the next telephone number will overwrite the oldest.



1  

2   to point at "Last Dialled", "Answered" or "Unanswered"

3  

4   to point at the telephone number (or name) you wish to dial

You can store these telephone numbers into the Phonebook by pressing .

5  

You can edit the telephone number before dialling – see "Phonebook/Recall" page 20 – or delete it – see "Phonebook/Deleting" page 20.

Quick Tip for Calling Last Dialed Number

To redial your last called telephone number   

Quick Tip for Returning an Unanswered Call

When the display shows that you have received calls but not answered them.

1  

The last caller's telephone number will be displayed.


2   to point at the telephone number you wish to dial

3  

Phonebook

Telephone numbers are stored on your SIM. Therefore, the number of locations, length of name and number of telephone numbers that can be stored are dependant on your SIM.

Storing a Telephone Number

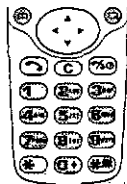


1  telephone number


2  

The telephone number entered in step 1 will be displayed.

3 Edit the displayed number if necessary

4   to enter the telephone number

5  name – see "Alpha Entry" page 19


6   to enter the name

7  location number

Automatic Location


The telephone number can be stored automatically at the first available location. This can be done instead of entering a location number.

  when "Any" is displayed in the option area of the display

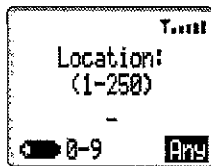


Overwrite Protection

If a location is occupied you will be asked if you wish to overwrite the current information.

  to overwrite the selected location

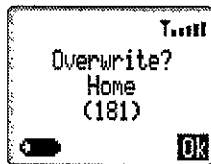

  to choose another location number



Retrieving a Telephone Number



1  



2   to browse through the Phonebook

You can browse through the Phonebook in the order that was last used by "Phonebook/Browse" – see page 20.

The pointed telephone number or name can be sent, recalled, edited or deleted.

View

This is used to review the telephone number and name together or just the name.

  when "View" is displayed in the option area

Recall

1   to display "Recall" in the option area



2  

Dialling

When the desired telephone number or name is displayed

Editing

1   to display "Edit" in the option area

2  

3  new telephone number

4  


5  new name

6  






Deleting

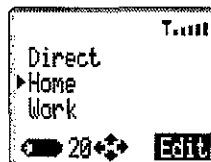1   to display "Delete" in the option area

2   twice



Speed Dial

- 1  location number – leading zeros may be left out
- 2  
- 3  

Fixed Dial

The Fixed Dial Store is part of Phonebook, but with additional security. When the security feature Fixed Dial is switched on it is only possible to make calls with telephone numbers that are in the Fixed Dial Store.

When Fixed Dial is switched on any manually dialled telephone numbers must match a telephone number in the Fixed Dial Store.


To store, edit or delete a telephone number in the Fixed Dial Store “Fixed Dial” must be switched on – see “Security” page 23. With Fixed Dial switched on, all telephone numbers can be added, edited or deleted as normal, but you will be asked for PIN2.

“Wild” Numbers

“Wild” numbers are spaces that can be stored in a telephone number. The “wild” numbers must be filled before the telephone number is dialled. In this way a call can be restricted to a specific area by storing the area code of a telephone and when recalled the remainder can be added. The “wild” numbers can be anywhere within a stored telephone number.

  and hold until “_” appears to enter a wild number

When the telephone number is recalled pressing a numeric key will fill in a “wild” number.

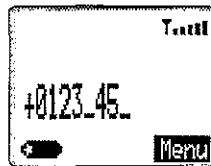

Alpha Entry

Alpha Entry is used to enter alphanumeric characters into Phonebook, Short Messages, Price Per Unit and the Greeting Message.

Key	Character entry type		
	Normal (ABC)	Greek (ΑΒΓ)	Extended (ΑΑΆ)
1 Space	@,.,:;!;?_{}'&%+./<>=£\$¥#§		
2 ABC	abc	ΑΒΓ	ΑΑΆÆΒCÇαάάæâabc
3 DEF	def	ΔΕΖ	ΔΕΈFdeééf
4 GHI	ghi	ΗΘΙ	GHIghi
5 JKL	kl	ΚΛΜ	JKLkl

Key	Characters entry type		
	Normal (ABC)	Greek (ΑΒΓ)	Extended (ΑΑΆ)
6 MNO	mno	ΝΕΟ	MNŃOŃŃmññoñðð
7 PQR	pqr	ΠΡΣ	PQRSpqrsß
8 TUV	tuv	ΤΥΦ	TUŪVtuūv
9 WXYZ	wxyz	ΧΨΩ	WXYZwxyz

Each time a key is pressed it will display the next character. When another key is pressed or no key is pressed for a short time the cursor will move to the next position.

To cycle between normal characters (ABC), numerals (0-9), Greek characters (ΑΒΓ) and extended characters (ΑΑΆ) press **0**.




Editing Alpha Entry

Pressing **↑** will move you up or down one line. Pressing **←** will move you left or right one character.

When the cursor is moved over a character and another key pressed this will insert the new character.

Pressing **C** will delete the character to the left of the cursor or delete the current line when pressed and held.

Additional Features

 
When the word "Menu" is in the option area of the display pressing the  will display a menu of telephone features. To select a feature press  so that the pointer is showing next to the feature that you require then press .

A quick way of selecting a feature is to press the menu number shown in the bottom left of the display.

To leave the menu press  repeatedly.

During a call a restricted menu will be available.

Key Guard





Key Guard will prevent any keys from being accidentally pressed e.g. when the telephone being carried.

When a call is received Key Guard will be temporarily disabled allowing you to press any key to answer the call.

 
When the telephone is connected to the optional Car Mount Kit or Easy Fit Hands-free Kit Key Guard will be disabled.

Emergency calls can still be made.


Quick Tip to Disable Key Guard

  twice when "Free" is displayed in the option area of the display.

Phonebook




Most common use of the Phonebook is covered in "Phonebook" – see page 15.

When pointing to *Browse* pressing  will show "Loc'ns" to browse through Phonebook by location number or "Name" to browse by name in alphabetical order. When browsing by name pressing a lettered key will take you to the first entry starting with that letter.

Review shows how many locations are available in the Phonebook. Occupied locations are shown with "■".

My Numbers is a convenient part of Phonebook where your voice, fax and data telephone number(s) can be stored and viewed.

Messages

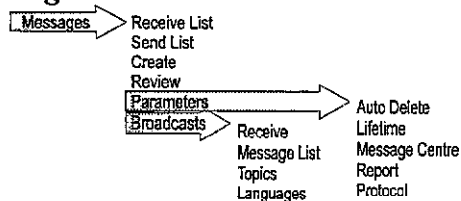

You can receive, display, edit and/or send short text messages, of up to 160 characters.

Before you can send a message you must enter the Message Centre number into the parameters. The Message Centre number will be supplied by your Service Provider.

When new messages are received, the message indicator (☒) flashes and they are automatically stored in the message area of your SIM. When all the messages are read, the ☒ disappears. If the message area is full the ☒ lights and a new message will be rejected. To receive new messages you will have to erase unwanted messages.

Received messages will be stored in the *Receive List*. Unread messages will be indicated by flashing "•". Once the message is selected, you can read, delete, edit and

reply. With the word "Sender" displayed or a telephone number in quotation marks (" "), pressing dials the telephone number or pressing stores the telephone number in the Phonebook.

When a message has been sent or edited it will be stored in the *Send List*.

Create will create a new message and send or store it in the *Send List*.

Review allows you to review how much of the message area is available.

The *Parameters* are useful settings for receiving or sending messages.

Auto Delete will erase messages automatically. When "Received Read" is selected, a new message will overwrite the oldest read message. When "Received Any" is selected, a new message will overwrite the oldest message even though it may not have been read.

Lifetime is the duration that your message is stored at the Message Centre. Delivery attempts will be repeated until the message has been delivered or the Life Time expires.

The *Message Centre* is where messages are sent before they are forwarded on to their destination. The Message Centre number may be pre-programmed into your SIM or supplied by your Service Provider.

When your message has been delivered a confirmation can be received if *Report* is set to "Yes".

The Message Centre may be able to convert the message to the format specified by *Protocol*.

Broadcast Messages can display information about your current area such as traffic or weather information.

The *Message List* will display the last received broadcast messages.


By specifying the required subjects in the *Topics List* the telephone will receive related messages. If the required topic is not displayed, enter its topic code provided by your Service Provider.

The preferred *Language* in which broadcast messages are displayed can be changed.

Quick Tip to Read a Newly Received Message

  when "Read" is displayed in the option area of the display.

Call Service

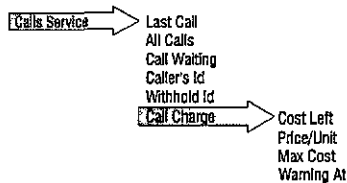

Last Call will display the duration and call charge, if available, of the last call during standby or the current call during a call. Times are indicated as: hours (0-99), minutes (0-59), second (0-59) - HH:MM:SS.

All Calls displays the accumulated duration and call charge, if available, of incoming and outgoing calls. The lock code is required to reset the timer and PIN2 is required to reset the timer and call charge.

Call Waiting allows you to receive a second call during your current call. When updating or checking the status of call waiting the telephone must be registered with a network.

Caller's ID allows you to check the status of Calling Line Identification. The telephone must be registered with a network.

Using *Withhold ID* it is possible to check if you send Calling Line Identification information when you make a call.


When checking the Status of Withhold ID the telephone must be registered with a network.

Call Charge will set the cost of each unit for call charge information and the required currency in which call charge is displayed.

Using *Max. Cost* can restrict use of the telephone to a specified number of units.

NOTE: The duration of one unit may vary during the day, peak and off-peak times. Therefore, the call charge can be calculated accordingly. However, Call charge information may not give an accurate reflection of the tariffs charged by your Service Provider.

Call Divert

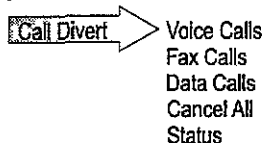


When Call Divert is enabled the divert icon (L→) is displayed.

You can divert voice, fax and data calls using different circumstances and to different telephone numbers.

When updating or checking the *Status* of Call Divert the telephone must be registered with a network.

Security

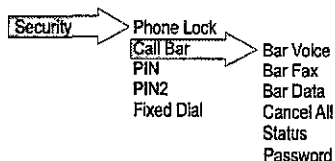

There are three types of security code for your telephone:

Lock Code: Controls telephone security – Phone Lock. Factory-set to “0000”.

PIN: Controls SIM security.

PIN2: Controls security for Fixed Dial Store and Call Charge metering.

It is recommended that you memorise your security codes. If you forget them contact your dealer for the lock code or your Service Provider for PIN and PIN2.

Phone Lock will prohibit normal operation of the telephone. Only emergency calls can be made and received calls answered. Once the Phone Lock is enabled the lock icon (🔒) is displayed. *To restore normal operation, enter your lock code.*

Call Bar is used to restrict certain outgoing and/or incoming calls. Call Bar is controlled by a security *Password* that is supplied by your Service Provider. When

 
updating or checking the *Status* of Call Bar the telephone must be registered with a network. Different Call Bar restrictions can be used for voice, fax and data calls. Any combination of call restrictions can be set.

When the *PIN* is enabled you will be asked to enter the PIN every time the telephone is switched on. If asked, enter the PIN followed by \ominus . The PIN can be changed by pressing \ominus when "Change" is displayed in the option area of the display.

The *PIN2* can be changed by pressing \ominus when "Change" is displayed in the option area of the display.

With *Fixed Dial* switched on you can only make calls with the telephone numbers stored in Fixed Dial area of the Phonebook. Emergency calls can be made at any time. To use this function PIN2 is required.

Network



When not in your home country you may use a network that you do not directly subscribe to, this is called ROAMING. National Law may not permit roaming in your home country.


New Network is used to manually select a network that is available in your current location.

When the *Search Mode* is set to "Automatic" the telephone will search through the preferred network list and select a new network automatically. While, the Search Mode is set to "Manual" the telephone will display network(s) that are available in your current location to ask you to select one.

The *Preferred Network List* is used when the Search Mode has been set to "Automatic". The location numbers in the Preferred Network List show the search priority.

Selecting "Insert" stores a new network in the currently displayed location and then moves other networks down, "Edit" overwrites the old network with a new one, and "Add" stores a new network at the end of the list.

Personalise

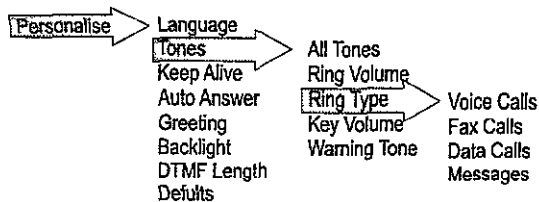

The *Language* that the telephone will use for display messages can be changed.

The key, ring and warning tones, except low battery warning, can be switched off. When *All Tones* are switched off the silent indicator (🔇) is displayed.

When the *Ring Volume* is switched off the silent indicator (🔇) is displayed. An escalating ring tone can be set by increasing the volume level above maximum.

A different *Ring Type* can be used for voice, fax, data and messages.

The *Keep Alive* timer will delay switching off the telephone, when the telephone is mounted in the optional Car Mount Kit or Easy Fit Hands-free Kit and the vehicle ignition is turned off. If the ignition is turned off during a call the call will be maintained. When the call ends the timer will start. If the telephone is removed from the Car

Mount Kit or Easy Fit Hands-free Kit during the specified delay time, the timer will be cancelled and the telephone will not be turned off.

When *Automatic Answer* is switched on, and the telephone is mounted in the optional Car Mount Kit or Easy Fit Hands-free Kit, a call will be answered without pressing any keys.

A personalised *Greeting Message* can be programmed for when the telephone is switched on – see “Alpha Entry” page 19.

The brightness of the *Backlight* can be changed.


Defaults will return your Personal Settings to their factory default, except the lock code and language.

Battery Information


Low Battery

When the battery power is low a warning tone will sound and a LOW BATTERY message will flash. The power will automatically shut off shortly after the warning tone. Fully charge the battery pack or replace it with a fully charged one.

During conversation finish your call immediately.

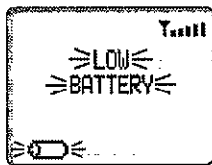

Operation of Battery Level Indicator

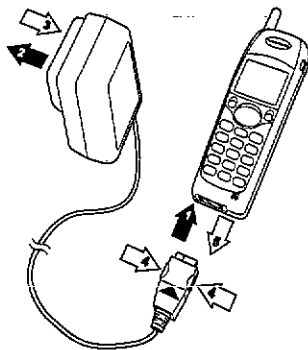

Charging the Battery

The battery pack must be attached to the telephone before the AC Adaptor or charging will not start.

NOTE: DO NOT force the connector as this may damage the telephone and/or the AC Adaptor.

When charging is complete remove the AC Adaptor.

To maintain maximum performance of Ni-MH Battery Packs always use until the Low Battery Warning and then fully recharge.

	While charging	Charging complete
Telephone on		
Telephone off		Indicator off

Care and Maintenance



Pressing any of the keys may produce a loud tone. Avoid holding the telephone close to the ear while pressing the keys.



Extreme temperatures may have a temporary effect on the operation of your telephone. This is normal and does not indicate a fault.



Do not disassemble the equipment. There are no user-serviceable parts.



Do not subject the equipment to excessive vibration or shock.



Avoid contact with liquids. If the equipment becomes wet immediately remove the power and contact your dealer.



Always use approved accessories in order to maintain optimum performance and avoid damage.



The equipment may be cleaned with a soft cloth dampened with a mild detergent and water. Petroleum based cleaners may damage the equipment.



Do not leave the equipment in direct sunlight or a humid, dusty or hot area.



Keep metallic items that may accidentally touch the terminals away from the equipment.



Always charge the Battery Pack in a well ventilated area, not in direct sunlight, between +5°C and +35°C. It is not possible to recharge the battery pack if it is outside this temperature range.



Avoid recharging battery packs for longer than recommended.



Do not incinerate or dispose of the battery packs as ordinary rubbish. The battery packs must be disposed of in accordance with local legislation and may be recycled.



When disposing of any packing materials or old equipment check with your local authorities for information on recycling.

Other Information

Glossary of Terms

GSM	Global System for Mobile Communications. The name given to the advanced digital technology that your telephone uses.
Home country	The country where your home network operates.
Home network	The GSM network on which your subscription details are held.
Network Operator	The organisation responsible for operating a GSM network. Each country will have a different network operator.
Password	Used for the control of the Call Bar. Supplied by your Service Provider.
PIN	Personal Identification Number used for SIM security. Supplied by your Service Provider. If the PIN is entered incorrectly 3 times, the PIN is blocked.
PIN2	Personal Identification Number used for the control of Fixed Dial Store and Call Charge metering. Supplied by your Service Provider. If the PIN2 is entered incorrectly 3 times, the PIN2 is blocked.
PUK/PUK2	PIN/PIN2 Unblocking Key. Used to unblock the PIN/PIN2. Supplied by your Service Provider. If the PUK/PUK2 is entered incorrectly 10 times, the PUK/PUK2 is blocked.


Registration	The act of locking on to a GSM network. This is usually performed automatically by your telephone.
Roaming	The ability to use your telephone on networks other than your Home network.
Service Provider	The organisation responsible for providing access to the GSM network.
SIM	Subscriber Identity Module. A small smart-card which stores unique subscriber and user-entered information such as Phonebook and Short Messages. Supplied by your Service Provider.

Trouble Shooting

Should any problem persist contact your dealer.

Problem	Cause	Remedy
Telephone will not switch on.		Check that the battery pack is fully charged and correctly connected to the telephone.
Extremely short battery life for a new battery pack.	The network you are using and the condition of the battery pack can affect battery life.	
Short battery life for an old battery pack.	The battery pack was worn out.	Replace with a new one.

Problem	Cause	Remedy
Short battery life for Ni-MH battery pack.	The life of the battery pack is affected by improper charging, this is inherent in all Ni-MH batteries.	To maintain maximum performance always use until the Low Battery Warning and then fully recharge the battery pack. To revive the Battery Pack use the telephone until the Low Battery Warning and then fully recharge three times. However, if the battery life still is short, the battery pack has eventually worn out. Replace with a new one.
	The telephone is locked.	Unlock the telephone (Menu: Security: Phone Lock)
Calls cannot be made.	Outgoing calls are barred.	Disable the outgoing call barring (Menu: Security: Call Bar)
	The telephone is not registered to a network.	Move to a coverage area and operate your telephone after it has registered with a network.
Calls cannot be made from Fixed Dial Store.		Check your SIM supports Fixed Dial. Check if the Fixed Dial is switched on (Menu: Security: Fixed Dial). Check the telephone number is stored in the Fixed Dial.
	The telephone is not switched on.	Switch the telephone on.
Calls cannot be received.	Incoming calls are barred.	Disable the incoming call barring (Menu: Security: Call Bar)
	The telephone is not registered to a network.	Move to a coverage area and operate your telephone after it has registered with a network.

Problem	Cause	Remedy
Emergency calls cannot be made	You are not in a GSM coverage area.	Check that the antenna symbol  is displayed. Move to a coverage area and operate your telephone when the antenna symbol is displayed.
Telephone numbers cannot be recalled.	The telephone is locked.	Unlock the telephone (Menu: Security: Phone Lock)
	Fixed Dial is switched on.	Switch off Fixed Dial (Menu: Security: Fixed Dial)

Important Error Messages

Area not Allowed	Roaming in the selected area is not allowed.
Network not Allowed	Roaming with the selected network is not allowed.
Security Failure	The network has detected authentication failure because your SIM is not registered with that network. Contact your Service Provider.
SIM Blocked	The SIM is blocked because the wrong PUK has been entered ten times. Contact your Service Provider.
SIM Error	The telephone has detected a problem with the SIM. Switch the telephone off and then back on. If the message does not disappear contact your Service Provider.

Message
Rejected
Store Full

A message has been received but the message store is full. To receive messages, delete some of the currently stored messages or set messages to automatically clear (Menu: Messages: Parameters: Auto Delete)

PIN2
Invalidated

The PIN2 is blocked permanently because the wrong PUK2 has been entered 10 times. Services controlled by PIN2 cannot be used. Contact your Service Provider.

Warning
Store Full
Continue?

The message area is full. Your messages cannot be stored until some of the currently stored messages are deleted.

Auto Redial
List Full

Redial list of unsuccessfully dialed numbers is full. Switch the telephone off and then on again.

Specifications

Telephone

Type	GSM Class 4
Temperature range	
Charging	+5°C to +35°C
Storage	-20°C to +60°C

Battery – Attached to telephone

	Battery Pack (EB-BS600)	Battery Pack (EB-BM600)	Battery Pack (EB-BL600)
Weight	129g	155g	183g
Dimensions			
Height x Width x Depth	132 x 45.5 x 18.6mm	132 x 45.5 x 22.6mm	132 x 45.5 x 28mm
Supply Voltage	7.2V DC, 400mAh Li-Ion	4.8V DC, 650mAh Ni-MH	7.2V DC, 1200mAh Li-Ion
Standby time (h)	Up to 80	Up to 100	Up to 240
Talk Time (h)	3	4	10
Charge Time (min)	90	160	240

NOTE:

Charge time will be longer when the telephone is turned on.

Battery life is affected by the network you are using and the condition of the battery pack.

Notes

The Serial Number can be found on the outside of the telephone under the battery. For your convenience we recommend that you note the following details as a record of your purchase.

Part Number	
Serial Number	
Dealer Name	
Purchase Date	

BULL CP8 PATENT

© Matsushita Communication Industrial UK Limited

581



Printed in UK



ZD71991A

PANASONIC GSM MOBILE TELEPHONE

WARRANTY TERMS

1. This warranty is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. This warranty applies to the United Kingdom, Isle of Man & Channel Islands only, for users in Eire, please contact your retailer or supplier. The warranty period is 12 months from date of purchase (except in respect of rechargeable batteries - see clause 8) and is applicable to the original purchaser only.
2. The product is approved for use on GSM mobile telephone system and should only be used for normal purposes and in accordance with the standard operating instructions.
3. The warranty covers breakdowns due to manufacturing or design faults; it does not apply to damage, however caused, wear and tear, neglect, incorrect adjustment or repair, or to any items of a limited natural life.
4. In the event of failure, please take the following action:
 - Refer to the instruction book in order to identify and possibly correct the problem.
 - If the problem is due to coverage, reception or billing, please contact your air time retailer or service provider whose number can be found from your monthly invoice.
 - If you cannot resolve the problem, contact the Panasonic Helpline on 0990 159159. Before you telephone have the following information to hand:
 - o The model and serial number of your telephone, and its phone number
 - o Your full address and post code
 - o A copy of your original invoice, receipt or bill of sale for the purchase of the telephone.
5. If the problem cannot be resolved over the telephone, arrangements will be made to collect the phone for repair. Please pack the telephone suitable for transit. Including in the packing:
 - The mobile telephone
 - The rechargeable battery
 - AC adaptor
 - A copy of your invoice, receipt or bill of sale. (Note; it is the customers responsibility to provide proof of warranty)
6. Panasonic will use reasonable endeavours to ensure your telephone is returned to you within a maximum of 5 working days from reporting the fault to the Helpline. Please note that delays in transit may be encountered for Channel Islands, Northern Ireland, Isle of Man, Scottish Islands and other islands.
7. Your sole and exclusive remedy under this guarantee against us is for the repair, or at our option the replacement, of the product, or any defective part or parts. No other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
8. Rechargeable batteries have a limited natural life and are warranted for 3 months from date of purchase. Replacement batteries can be purchased from your retailer.

IMPORTANT

Write your mobile telephone number and lock code here:

Telephone number

Lock code

Your Panasonic GSM mobile telephone has a warranty for 12 months from date of purchase.

If you feel your phone is faulty and your service provider or air time retailer cannot resolve the problem, please contact the Panasonic Helpline on:

0990 159159

The Helpline operates

9:00 AM - 6:00 PM Monday - Friday

9:00 AM - 1:00 PM Saturday (excluding Bank Holidays)

If faulty, your phone will be collected by carrier, repaired, and returned to you. We will use reasonable endeavours to ensure this is within a maximum of 5 working days.

See over for full terms and conditions
KEEP THIS CARD IN A SAFE PLACE

Quick Start




6600


GSM




Menu Structure

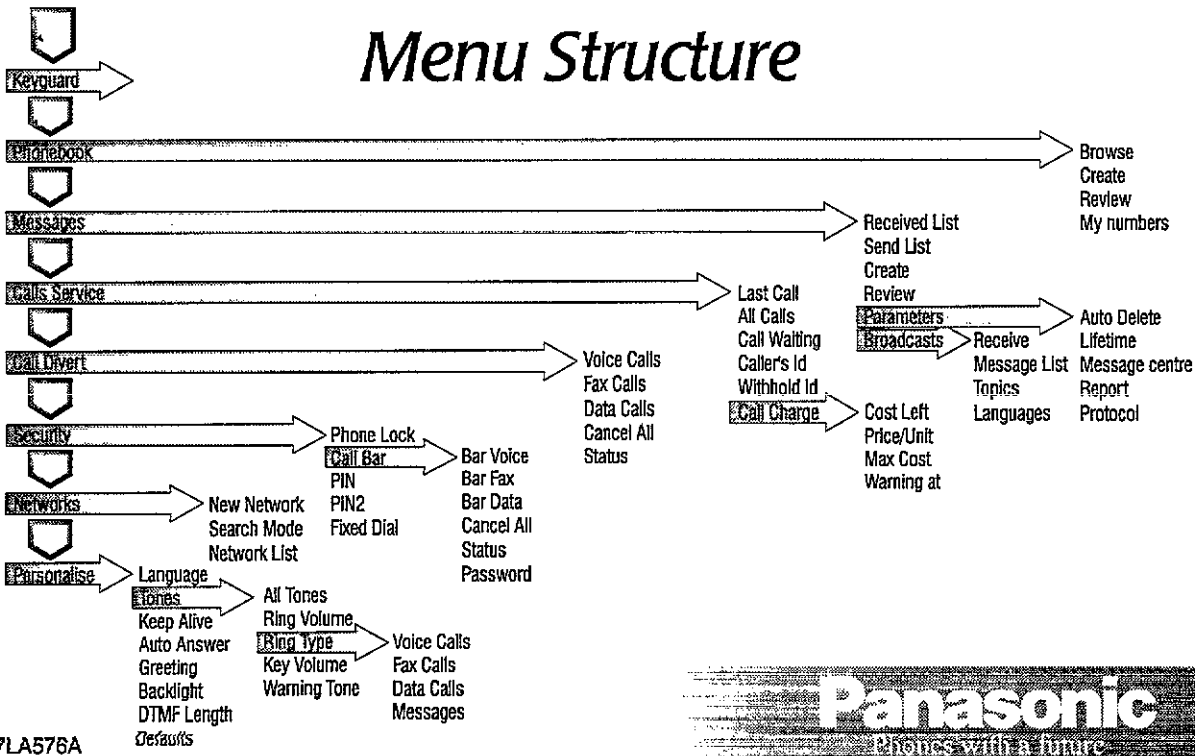

Inserting SIM


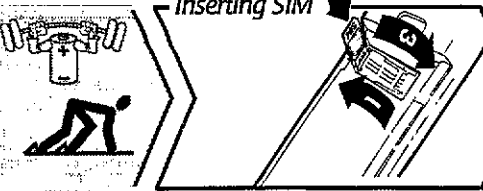


Fitting Battery

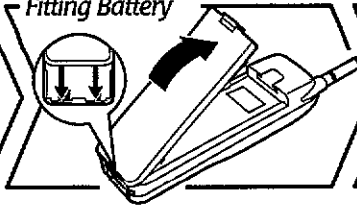


Battery Charge

 Use telephone until the low battery warning

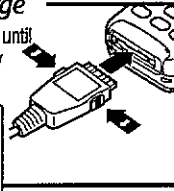

Power on/off

and hold

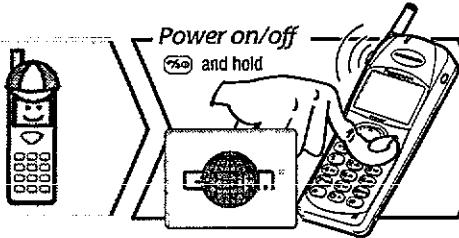


PIN Code

PIN Supplied by your Service Provider

Enter PIN

0-9

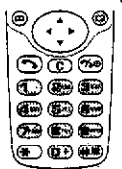

Lock Code

Lock Code Factory default is "0000"

GSM 001

0-9



Making a Call

area code and telephone number



Correct an Error – Ending a Call – International Dialling

12345 use
123456


12345

and



and Hold for + for International name

+0123

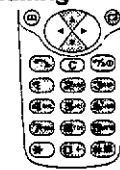

Answer a Call

 
any key except

Incoming



Ear Volume

during a call



Emergency Call

Emergency

Calling Emergency



Phonebook Entry

telephone number

+0123456

name


Name: Home

ABC

location number

Location: (1-250)

0-9

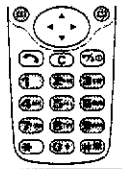


Phonebook Recall

Home

+01234567890

57

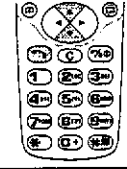


Key Guard

"Menu" Keys Guarded

GSM 001


Free

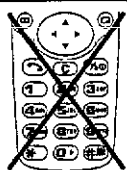

Automatic Redial

Auto redial: 0:05

Cancel

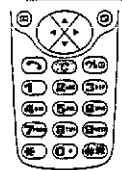

Last Called Number

Last Called Number

