



# Personalising Your Phone


 

## Add a Start-up Greeting

A personalised greeting can be programmed for when the phone is switched on.

- 1 From **Idle** mode press  **5**JKL **3**DEF **1** to enter the **Greeting** menu
- 2 Use the text entry facility to add your greeting and press  - see "Text Entry" page 42

## Displaying Animations

Animations can be displayed when the phone is switched on.

- 1 From **Idle** mode press  **5**JKL **3**DEF **4**GHI to enter the **Animation** menu
- 2 Use  to cycle through the animated themes available
- 3 Press  to select either the desired theme, or disable the animation



## Changing the Ring Tone


 

The ring tones of the phone can be changed to one of many pre-defined sounds or to a voice ringer (a voice recording used as a ring tone).

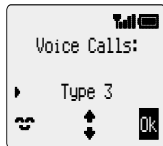 
Each of voice, fax, data and message can have a different ring tone.

Alternatively you can use the **Melody Composer** to generate your own ring tone.



### Setting up a Pre-defined Ring Tone

You can choose from a selection of tones and melodies.

- 1 From **Idle** mode press  **5**JKL **2**ABC **3**DEF to enter the **Ring Type** menu
- 2 Use  to cycle through the ring types
- 3 Press  to select the desired ring tone




 




### Recording a Voice Ringer

- 1 From **Idle** mode press  **5**JKL **2**ABC **5**JKL to enter the **Voice Ringer** menu
- 2 Press **1** and start speaking into the microphone to record your voice. The recording will stop automatically after 5 seconds, or before if  is pressed.
- 3 To playback the recording press **2**ABC

## Personalising Your Phone

### Composing a Melody

 
 
 

 
 
 


 
 



Up to 3 user-defined melodies can be created.

- 1 From **Idle** mode press  **5**  **2**  **4**  to enter the **Melody Composer** menu
- 2 Use  to cycle through the melodies
- 3 Press  to edit the chosen melody

Using the following table as reference, enter the notes (from the choice of low, middle and high), rests, and the durations of each, to generate your composition.

At any time during composing press  to play back the current melody.


Once the composition is complete press  to save it.

Key	1st press	2nd press	3rd press	4th press	5th press	6th press
	C	C#	low C	low C#	high C	high C#
	D	D#	low D	low D#	high D	high D#
	E	low E	high E			
	F	F#	low F	low F#	high F	high F#
	G	G#	low G	low G#	high G	high G#
	A	A#	low A	low A#	high A	high A#
	B	low B				
						
						
	rest					
  (duration)	1/8	1/16	1/1	1/2	1/4	
  (duration)	1/2	1/1	1/16	1/8	1/4	

### Editing your Melody

Once the melody has been saved the following operations can be used for re-editing purposes:

Press  to delete the character to the left of the cursor

Use  to navigate the cursor around the screen

Use the relevant keys to insert new notes/rests