

Ozeo



PHILIPS



Overview of menus

- Names**
- Messages**
 - Send SMS or Reply**
 - Read SMS**
 - SMS settings**
 - SMS centre
 - Signature
 - Validity period
 - Reply path
 - Delivery report
 - Auto save SMS
 - Broadcast SMS**
 - Mailboxes**
 - Call list**

- Display**
 - Zoom
 - Backlight
 - Animation
 - Contrast
- Security**
 - Keypad lock
 - Public names
 - Call barring
 - Change codes
 - PIN protection
- Time and date**
 - Clock display
 - Set date
 - Set time
- Language**

- Organiser**
 - Events**
 - Day view**
 - Week view**
 - Month view**

- Menu type**
 - Simple menu
 - Advanced menu
- Hotkeys**
- Voice command**

- Extras**
 - Call counters**
 - Accumulated call timers
 - Accumulated cost
 - Info at call end
 - Last call information
 - > Euro***
 - <- Euro***

- Network**
 - Register again
 - Preferred list
- Call settings**
 - Call forward
 - Autoredial
 - Any key answer
 - Call waiting
 - Caller ID

- Brick Game**
- Calculator**
- Alarm clock**
- Voice memo**

- Quick settings**
 - Personal**
 - Silence**
 - Autonomy**
 - Outdoors**
 - Meeting**
 - Car**
 - Headset**

- Settings**
 - Sounds**
 - Ringer volume
 - Ringer
 - Key tones
 - Minute beep
 - Organiser alerts
 - Battery low alert
 - New SMS tone
 - Vibrator

Visit us on <http://www.pcc.philips.com>

Table of contents



| | | | |
|---|-----------|--|-----------|
| Table of contents | 1 | Flash dial | 20 |
| Before first use | 3 | During a call... | 20 |
| Your very first call | 3 | Adjusting the earpiece volume | 20 |
| Using the carousel | 5 | Mute the microphone | 20 |
| To adjust the contrast | 6 | Unmute the microphone | 21 |
| Using the Names and other lists | 7 | Writing in the notepad | 21 |
| Glossary | 8 | Consulting the Names list | 21 |
| Your phone | 10 | Locking the keypad | 21 |
| Description of the phone | 10 | Unlocking the keypad | 22 |
| Screen | 11 | Activate/deactivate the silent mode | 22 |
| Initial start up procedure | 12 | Activate/deactivate the Vibrator | 23 |
| The micro-SIM card | 12 | Reading your GSM phone number | 23 |
| Inserting your subscriber card (micro SIM card) | 12 | Text Input | 23 |
| Your PIN code and PUK code | 12 | T9™ Text Input | 23 |
| Your PIN2 code and PUK2 code | 12 | How to use T9™ Text Input | 24 |
| The battery | 13 | Basic text input | 25 |
| Clipping on the battery | 13 | Using the menus | 26 |
| Removing the battery | 13 | Overview of menus | 26 |
| Charging the battery | 14 | Names | 28 |
| Making an emergency call | 15 | <New> | 28 |
| Using your phone | 16 | Select a name | 28 |
| Switching on | 16 | Emergency | 29 |
| Idle screen | 16 | Own number | 29 |
| How to enter a text or a number | 16 | Messages | 29 |
| Events in idle screen | 17 | Send SMS or Reply | 29 |
| Making a call | 17 | Read SMS | 31 |
| Answering and Ending a call | 18 | SMS settings | 31 |
| Redial and reply | 19 | Broadcast SMS | 32 |
| Voice dial | 19 | Mailboxes | 32 |
| | | Call list | 33 |
| | | Organiser | 33 |
| | | Events | 33 |
| | | Day view, Week view and Month view | 34 |
| | | Extras | 35 |
| | | Call counters | 35 |
| | | -> Euro | 36 |
| | | <- Euro | 36 |



| | | | |
|---|-----------|--------------------------------------|-----------|
| Brick Game | 36 | Maintenance | 60 |
| Calculator | 37 | Looking after your phone | 60 |
| Alarm clock | 38 | Efficient use of your phone | 60 |
| Voice memo | 38 | Troubleshooting | 61 |
| Settings | 38 | Philips Authentic Accessories | 63 |
| Sounds | 39 | Batteries | 63 |
| Display | 41 | Chargers | 63 |
| Security | 41 | Hands-free kit | 64 |
| Time and date | 43 | Carry pouch with belt clip | 64 |
| Language | 44 | Data Connect | 64 |
| Menu type | 45 | Index | 65 |
| Hotkeys | 45 | | |
| Voice command | 47 | | |
| Network | 47 | | |
| Call settings | 48 | | |
| Quick settings | 50 | | |
| Use of network services | 52 | | |
| Additional GSM network services (GSM strings) | 52 | | |
| Query a voice server, a voice mailbox, a messaging service, etc. (DTMF tones) | 52 | | |
| Making a second call | 53 | | |
| Answering a second call | 54 | | |
| Answering a third call | 54 | | |
| Conference Call | 55 | | |
| Explicit Call Transfer | 55 | | |
| In-call symbols | 56 | | |
| Precautions | 57 | | |
| Radio wave safety | 57 | | |
| Your phone and its environment | 57 | | |
| Efficient use of your phone | 57 | | |
| Battery safety | 58 | | |
| Safety and security | 58 | | |
| Responsibility | 58 | | |
| Respect of local laws and regulations | 58 | | |
| Use while driving | 59 | | |
| Environmental care | 59 | | |






Your very first call

Turn the phone face down

1 Insert the micro-SIM card.


Remove the micro-SIM card from the Sim card.

Push the metal retaining the clip to the bottom and lift the cardholder. Slide in the SIM card between the retaining clip and the plastic tongue with the cut corner of the card as shown on the drawing. Close the cardholder and push the metal retaining the clip to the top.

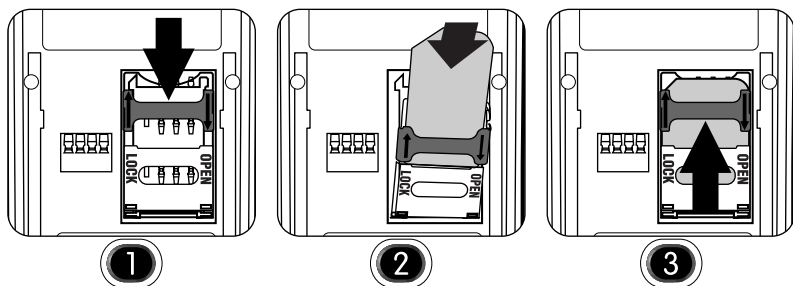

2 Insert the battery

For optimum performance follow the instructions on page 13. Place the battery on the back of the phone (battery connectors downward). Then push the battery into place in the direction of the antenna.

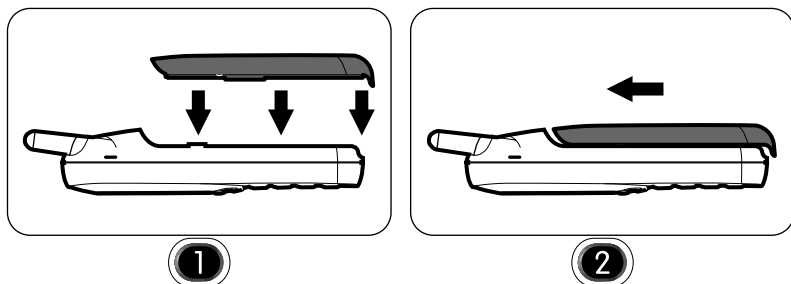


NOTE:


A new battery is not completely charged, see "Charging the battery" on page 14.





Turn the phone face up


3 To switch on the phone.

Press and hold the  key .

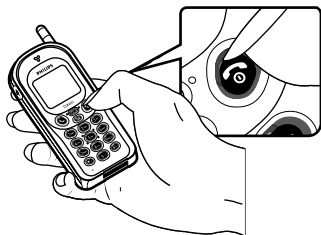

 4 Enter your PIN code if asked (see page 12).

Then confirm by pressing the Pilot Key  or the  key.

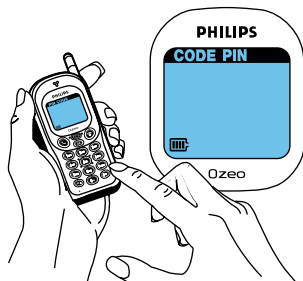


NOTE :

For the Pilot Key, see page 5 and see "Description of the phone" on page 10.

5 Wait for the 2 beeps.

The connection with the network is established.

The screen looks like this:

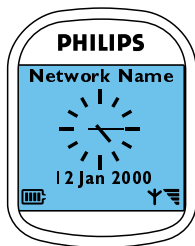

To set the time and date, see page 43.

6 Enter the phone number.

If you make a mistake press  .





7 Press .

Once connected, your phone emits two beeps.

8 After the call press .

Using the carousel

The carousel is a circular loop of icons displayed on the screen. These icons provide access to the different menus and sub menus used to operate your phone.

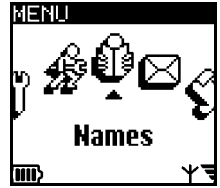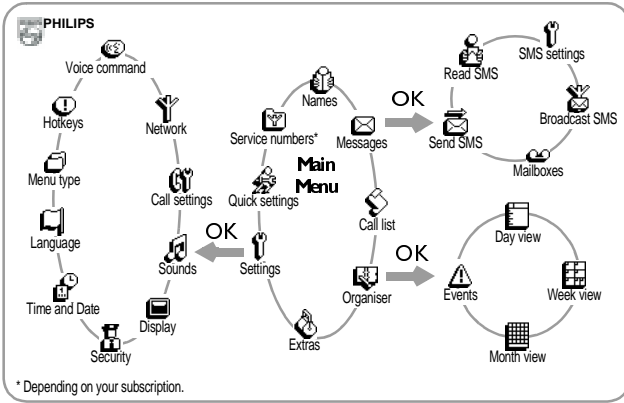


You can use the Pilot Key in 3 ways:

- by moving it upwards ↑↵
- by moving it downwards ↓↵
- by pressing it in →↵

When you switch on your phone, the idle screen appears. To access the main menu, press the Pilot Key →↵.

When you move the Pilot Key the carousel moves across the screen:

- upwards ↑↵ the icons scroll clockwise.
- downwards ↓↵ the icons scroll anti clockwise.

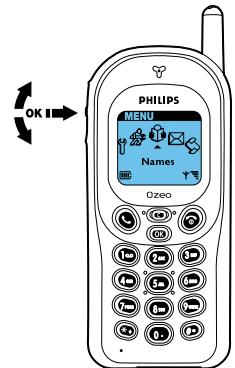

The Pilot Key →↵ provides access to all the menus used to operate your phone. To select a function, place the icon above the cursor ▲ and press the Pilot Key →↵.

With the Pilot Key →↵ you can select or adjust all the functions of your phone (see Menu Memory Jogger cards and see the manual for details of menu pages 26 and 27).

NOTE:


You may use the OK key in the same way as the press on the Pilot Key →↵.

Examples

To adjust the contrast


After switching the phone on, press the Pilot Key →↵ to access the main Menu:




Move the Pilot Key up ↑↵ or down ↓↵ and position the icon  Settings above the cursor.

Then confirm by pressing the Pilot Key →↵.

This gives you access to the **Settings** sub menu:

Move the Pilot Key up ↑↵ or down ↓↵ and position the  Display icon above the cursor. Then confirm by pressing the Pilot Key →↵.

You enter the **Display** menu.

Move the Pilot Key up ↑↵ or down ↓↵ and position the  Contrast icon above the cursor. Then confirm by pressing the Pilot Key →↵.

You enter the **Contrast** menu:



The active parameter appears underlined on the screen. In the above example it is **Level 3**.

Adjust the contrast by moving the Pilot Key up ↑↵ or down ↓↵ and confirm by pressing the Pilot Key →↵.

- To return to the previous menu, press **C** or press and hold the Pilot Key →↵.
- To return to the idle screen, press and hold **C**.



Activate/deactivate a function

Under the **Display** menu go to **Animation** menu, select it and then, using the Pilot Key →↵, you can activate or deactivate some functions.



Move the Pilot Key up ↑↵ or down ↓↵ to select **On** or **Off**, then confirm by pressing the Pilot Key →↵.

Using the Names and other lists

You can also use your Names list using the Pilot Key.

In idle screen move the Pilot Key downwards ↓↵ to access the Names list. By moving the Pilot Key down, you move down into the Names list. Turning it upwards moves up the Names list. Confirm your selection by pressing on the Pilot Key →↵.





| | |
|----------------------|---|
| DTMF | Dual Tone Multi Frequency. The tones are transmitted by the phone to the network. They are used to interrogate answering machines, transmit codes, ... |
| EFR | Enhanced Full Rate. Standard for high quality sound GSM900. Your phone will switch on EFR if the GSM network supports this function and asks for it. |
| FDN | Fixed Dialling Numbers. See also Public Names. |
| GSM 900 | GSM Standard using 900 MHz frequency band (see page 57). |
| GSM 1800 | GSM Standard using 1800 MHz frequency band (see page 57). Also called DCS 1800 (Digital Cellular System) or PCN 1800 (Personal Communication Network). |
| GSM network | Global System for Mobile communications. One of the two digital cellular telephone standards used by your mobile phone. |
| Home network | The network on which your SIM card is registered. |
| Home Zone | A particular area within your home network. If this feature is provided by your home network, the home zone symbol is displayed indicating that you are currently within the home zone. |
| Idle screen | This is the screen which is displayed when your phone is on and ready to be used. |
| Local network | The network where you are making a call. This may be your home network or another GSM network. |
| Multi-call | Two calls are in progress, one active and one on hold. |
| PIN code | Personal Identification Number. The secret code of the SIM card. |
| PIN2 code | Secret code that allows you to access certain SIM card dependent features. |
| Public Names | Function that allows you to restrict dialling to selected numbers |
| PUK code | Secret code used to unblock your SIM card if you, or someone else, enters the wrong PIN code three times. |
| PUK2 code | Secret code used to unblock your SIM card if you, or someone else, enters the wrong PIN2 code three times. |
| Roaming | Using your phone in a network other than your home network. |



SIM card

Subscriber Identification Module.

The card which allows you to make phone calls with your GSM phone.

SMS

Short Message Service.

This service provided by the operator allows you to send and receive short written messages.


T9™ Text Input

Very efficient method of text input that requires just one key press per letter.





Description of the phone

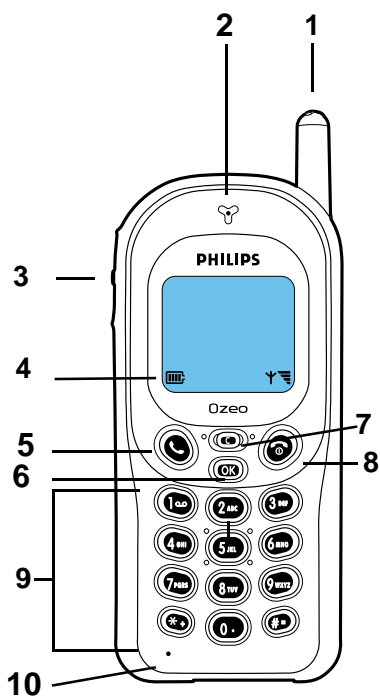

1 Antenna

2 Earpiece

3 Pilot Key

It allows fast and easy access to the different menus and confirms your choice →].

- During a call, it controls the volume.
- In the Names list, menus or lists, it scrolls up or down.

- When entering a name or number, it is used to move the cursor left or right.
- To return to the previous menu by pressing and holding it.

4 Graphic display

5 Green “Pick up” key ☎ symbol

Press to accept a call or dial a number.

6 OK key OK

Acts as the Pilot Key →]; access to the menu and confirm the choice.

7 Cancel key C

Navigation mode:

- Press this key to return to the previous menu.
- Press and hold it to return to the idle screen.

Edition mode:

- Press this key to delete a character.
- Press and hold it to delete all the characters.

8 Red “Hang up” ☎ and “On / Off” key symbol

Press to switch your phone on, press and hold to turn your phone off.
Press to end a call.

9 Alphanumeric keypad

Standard phone keypad. It can also be used for entering alphabetic characters and activating hotkeys.

10 Microphone

It allows you to talk.

11 Battery and micro SIM card

From the rear of the phone.

- Slide the SIM card in place.
- Fit the battery (see page 3).



Carousel:

A loop of icons on your display which provides access to the menu of your choice.

Date and time

Displayed in idle screen. To set the date and time, see pages 38 and 43.

Indicators



Alarm clock

Indicates that the alarm is activated.



Silent

Indicates that the ringer is turned off. The phone will not ring when receiving calls.



Keypad Lock

Protects the keys from being pressed accidentally.




Call forward unconditional to number

Indicates that the **Call forward unconditional to a number** is set.



Call forward unconditional to voice mailbox

Indicates that the **Call forward unconditional to a voice mailbox number** is set.

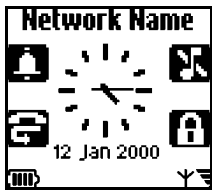

Symbols



Battery charge

If the first block is dark, the battery holds a 25% charge. Each bar represents approximately 25% of the maximum charge.



SMS message

- *Symbol only* - You have received a new message.
- *Flashing symbol* - The message memory is full and cannot hold more messages. Delete one or more message(s) to liberate the memory.



Voice mail

Indicates that you have received at least one new voice mail (Network dependent).



Roaming

Indicates that you are using a network other than your home network.



Network

The phone is connected to a network. If the icon flashes the phone is trying to connect.



Reception quality

4 reception bars indicate optimum quality.



Home zone

Indicates that you are currently within the home zone. It is displayed depending on the network you have subscribed.



The micro-SIM card

To use your phone, you must insert a valid SIM card that is supplied by your GSM service provider.

Your phone requires a micro-SIM card.

The SIM card contains your subscription number and your GSM phone number. It also contains a memory in which you can store phone numbers and messages. If you use your SIM card on another phone, your phone number and your Names list remain the same.

Inserting your subscriber card (micro SIM card)


See page 3.

Your PIN code and PUK code

When you switch on the phone, it asks you for the PIN code. The PIN code is the 4 to 8-digit secret code of the SIM card.



If you enter a wrong PIN code, you can try again. If you enter a wrong PIN code 3 times, your SIM card is blocked.

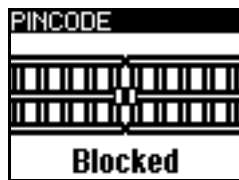

You must then enter your PUK code to unblock the phone. This code will be given to you by your service provider. If you enter an incorrect PUK code ten times in a row the card will completely be blocked and unusable. If this happens contact your service provider.

Your PIN2 code and PUK2 code


Depending on your SIM card, you may have some features on your phone that require you to enter a PIN2 code. This is a secret 4 to 8-digit code given to you by your service provider.

If you enter a wrong PIN2 code 3 times, your SIM card is blocked and you must enter the PIN2 unblocking code (PUK2) given to you by your service provider.



The battery

Your phone is powered by a rechargeable battery. A new battery is not fully charged. Charge it by following the procedure on page 14.

The  icon shows the level of charge in the battery. Each bar represents approximately 25% of the maximum charge.

If the phone emits a warning signal (see page 40), the display shows **Battery low**, you should re-charge the battery.

The battery, attached to the phone or not, should not be exposed to temperatures exceeding 60°C (e.g. behind glass in direct sunlight).

We advise you to keep the battery attached to the phone, even when discharged. The backup battery for the clock (inside the phone) will last longer.

We do not recommend to remove the battery when the phone is switched on: you may lose all your personal settings.

NOTE:

Please refer to the information on battery safety, page 58.


A battery is only fully charged after having been charged and then totally discharged two or three times.

Clipping on the battery

See page 3.

Removing the battery

- **Press the locking button located on the battery cover, press it while pushing the battery in the direction of the arrow as shown on the drawing.**

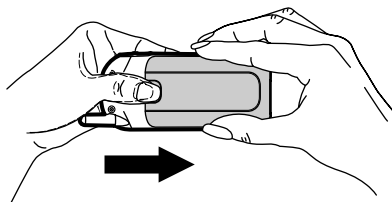


- **Remove the battery.**


Charging the battery

A charger is supplied with the phone, in the box.

- **Clip the battery on the phone.**
- **Plug the charger into the phone connector.**

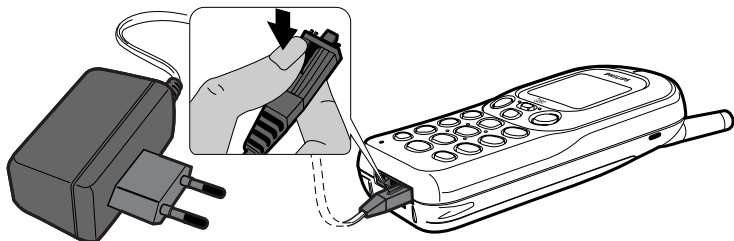

- **Plug the transformer unit into a mains AC power socket with easy access.**

The  symbol indicates the state of charge:

- During charging the 4 charge indicators change. If the first bar is dark, the battery already has a 25% charge.
- The bars darken one after another during charging.
- When all 4 bars are dark the battery is fully charged. A minimum of 2 hours charging is required to obtain a 90% charge with the provided battery. For the maximum charge continue charging.
- When the battery is charged, remove the connector by pressing the release button on top of the connector.
- Recharge the battery before it is totally flat.

NOTES:

1. You can turn your phone on and use it while it is charging.
2. The only way to turn the battery charger off is to unplug it from the mains outlet; **for this reason use a mains outlet with easy access.**
3. You can connect the charger to an IT supply (Belgium only).
4. If the battery is completely flat, the battery icon will only reappear after 2 or 3 minutes of charging.





Making an emergency call


112: European emergency call

Key in the emergency number for your present location (e.g. 112 or other official emergency number). Emergency numbers vary depending on the location.

- **Switch on the phone.**

The display shows the welcome screen.

Even if you are asked for your PIN code, your phone will function without it.

- **Enter the emergency number (112) or press  if pin code is asked.**

- **Press .**

The phone dials the number.

- **To hang up, press .**



 **NOTE:**

1. Some networks may require a SIM card for emergency calls. Check with your service provider.
2. You can also enter the emergency number using the keypad, even when the keypad is locked.





Switching on

- Press and hold the  key.
- Enter your PIN code if asked and press the Pilot Key \rightarrow .



NOTE:

The PIN code requirement is a security feature that you can switch on and off using the "PIN protection*" menu (see page 43).




Idle screen

After switching on (and entering the PIN code), your phone displays the idle screen which means that the phone is ready to use. At the same time:

- the  icon is displayed, this indicates that the phone is connected to the network. The network name appears on the screen.
- the  symbol is displayed, indicating the quality of reception (when all 4 bars appear, the audio quality is at its best).


 




If the  symbol and the network name are not displayed, the network is not currently available. You may be in a bad reception area (perhaps in a tunnel or between tall buildings). If possible, move to a different location.

If you navigate into the menus or the Names list, the phone automatically returns to idle screen if a key is not pressed for 2 minutes. During this period of time you can still receive a call.

How to enter a text or a number

Characters and numbers are located on each keys as follow:

| Key Label | Upper case alphanumeric | Lower case alphanumeric |
|---|---|---|
|  | space 1 @ _ # = < > () & £ \$ ¥ | space 1 @ _ # = < > () & £ \$ ¥ |
| 2ABC | A B C 2 A Ä Å Æ Ç | a b c 2 à ä å æ ç |
| 3DEF | D E F 3 É Ê Ë Æ | d e f 3 é è ê ë |
| 4GHI | G H I 4 Γ I | g h i 4 γ ì |
| 5JKL | J K L 5 Λ | j k l 5 λ |
| 6MNO | M N O 6 Ñ Ò Ó | m n o 6 ñ ò ó |
| 7PQRS | P Q R S 7 β Π Θ Σ | p q r s 7 β π θ σ |
| 8TUV | T U V 8 Ü Û | t u v 8 ü ù |
| 9WXYZ | W X Y Z 9 Ω Ξ Ψ Ø | w x y z 9 ω ξ ψ ø |
|  | .0"?! , ; ; j ÿ * + - / % | .0"?! , ; ; j ÿ * + - / % |
|  | Toggles between the different Text Input mode | Toggles between the different Text Input mode |
|  | Upper case | Lower case |



For example, when using the basic text input, to enter "Love", you have to press (5) thrice, press (6) thrice, press (8) thrice and press (3) twice. The word "Love" will appear on the screen. For more details, see pages 24 and 25.

NOTES:

1. A number can contain a maximum of 40 digits, depending on your SIM card.
2. It is a good idea to enter all numbers, even local ones, with their international prefix, country code and area code. Thus you can dial all numbers from any location.
3. The '+' character can only be inserted at the beginning of a number.
4. To correct mistakes, press (C) and release to delete one digit.
5. For an efficient text editing you may use the T9™ Text Input (see page 24).

Events in idle screen

Some events may modify the idle screen (missed call, new message, reminder from the organiser, etc.). In this context, press the Pilot Key →↵ to access a contextual menu or press on the (C) key to go back to idle.



Making a call

In idle screen :

- **Enter the phone number using the keypad.**

To correct an error, press (C). To move through numbers move the Pilot Key upwards ↑↵ or downwards ↓↵.

For an international call, you can enter the "+" key instead of the usual international prefix. To do this press and hold (*).

- **Press (☎).**

The phone dials the number.

 
- **After the call, press (☎) to hang up.**

NOTE:

1. You can also make a call from the **Names** list (see page 28).
2. If a number has been programmed on a direct access key, you can call this number by pressing and holding the key (see "Flash dial" on page 20).
3. If the called number is in the Names list, the corresponding name will be displayed instead of the number.




Answering and Ending a call


When receiving a call, the phone rings, the  animation and **Incoming call** appear on the display. Depending on your subscription, the caller's number may be displayed, if your correspondent has enabled this information to be transmitted. If this number is in the Names list, the corresponding name shall be displayed instead of the number.


- **To answer the call you can either:**

- Press .
- Press the Pilot Key \rightarrow , the carousel with the following option appears:



- Silent ringer 

The ringer volume of this incoming call is set to silent and the phone returns to the incoming call screen.

- Accept call 

- Reject call 

- **To hang up a call you can either:**

- Press .
- Press the Pilot Key \rightarrow , a carousel appears:



- Select  and confirm.

- **If you want to reject the call, press .**

The phone returns to idle screen and the caller hears the busy tone.

If you have activated "Call forward when busy" (see page 48), the call is diverted to the selected number (your voice mailbox, for example).

NOTES:

1. The phone will not ring if the ringer is deactivated (see page 22).
2. If you have selected Any Key Answer (see page 49), you can accept a call by pressing any key (except ) or by pressing the Pilot Key \rightarrow .



Redial and reply

The phone stores internally the last 30 numbers (called or received). You can redial or reply to any of these numbers and dial it directly. The most recent is displayed first.

In idle screen:

- **Press the Pilot Key → [Pilot Key] to access the main Menu.**

Select **Call list**. This displays a chronological list of the last calls either received or dialled.

If a number is in your Names list, the corresponding name is displayed.

- **Move the Pilot Key up or down (↑ [Pilot Key] & ↓ [Pilot Key]) to select the number you want to redial or reply.**
- **Press [Pick up Key].**
The phone dials the number. Wait for your correspondent to answer.
- **After the call, press [End Call] to hang up.**

NOTE:

You can directly access the Call list by moving up the Pilot Key. You can directly access the last dialling number by pressing the Pick up Key [Pick up Key].

Voice dial

You can automatically dial a number by saying your correspondent's name.

In idle screen:

- **To program a voice tag :**
In the Names menu, choose the Name you want to add a Voice dial to. Press the Pilot Key → [Pilot Key] twice then select Voice dial then Add Voice tag?.

Follow the instructions displayed on the screen which invite you to say, then to repeat the voice tag.

- **To dial a number associated with a voice tag:**
Press and hold the Pilot key → [Pilot Key] and say the voice tag of the number to dial.
If the phone recognises the voice tag, it repeats it then immediately dials the number associated with it.

NOTES:

1. The duration of a voice tag is 2 seconds.
2. Up to 10 voice tags can be defined and shared between voice dial and voice command.

Flash dial

You can associate any of the keys ② to ⑨ with a Names list entry to give you direct access, through a single long key press, to a frequently used phone number (see page 28). Key ① and ⑩ are defined and cannot be changed. (See page 45).

In idle screen:

- **Press and hold a key between ② and ⑨ to dial the associated entry.**
The connection is established.
- **After the call press ⑥ to hang up.**

You can use your ⑤ as a redialling key, indeed, a first press on this key displays the last number dialled (or name if the number is in the Names list), a second press on the same key dials the number. The hotkey option is still available to redial the last number (see page 45).

During a call...

You can:

- Adjust the earpiece volume (see page 20)
- Mute or unmute the microphone (see page 20)
- Write a number on the notepad (see page 21)
- Consult the Names list (see page 21)
- Add a name to the Names list (see page 28)
- Write and send a message via the Names list (see page 28) or the Notepad (see page 21)
- Check a voice mailbox or access a voice server via the Notepad (see page 21)
- Make a second call (see page 53)
- Consult your Organiser (see page 33)
- Consult your Call list (see page 33)
- Transmit DTMF tones to answering machines and other devices (see page 52).

Adjusting the earpiece volume

During a call:

- **Move the Pilot Key up ↑ to increase the volume or down ↓ to decrease it.**

Mute the microphone

You can mute the microphone so that your correspondent cannot hear you.

During a call:

- **Press the Pilot Key → and select Mute.**
Confirm by pressing the Pilot Key →.
The microphone is muted.



Unmute the microphone

If the microphone is muted.

- **Press the Pilot Key → [] and move the Pilot Key until **Unmute** is displayed. Confirm by pressing the Pilot Key → [].**

The microphone is unmuted.

Writing in the notepad

The notepad is a temporary memory in which you can note down a number during a call.

During a call:

- **Press the Pilot Key → []**
- **Move the Pilot Key up ↑ [] or down ↓ [] to select **notepad**, then press the Pilot Key → [].**
- **Enter the number that you want to note.**

After a while, without any key pressed, your entry is stored in the notepad memory and the phone returns to the call options screen. When the call ends, the number reappears ; you can complete it, dial it, or store it in the Names list.

On the contrary, if you press the Pilot Key → [] just after having entered the number you will be able to:

- Store this number in memory
- Phone this number
- Send a SMS to this number (see page 28)

NOTE:

You can also just enter the number during the call and it will reappear when the call ends.

Consulting the Names list

During a call:

- **Press the Pilot Key → [].**
- **Move the Pilot Key to select **Names**, then confirm by pressing the Pilot Key → [].**
- **In the **NAMES** menu, scroll through the entries by moving the Pilot Key.**
- **Press **(C)** to return to the In-call screen.**



Locking the keypad

You can lock the keypad to protect the keys from being pressed accidentally (for example, when the phone is in your pocket).

In idle screen:

- **In the **Settings** menu, select **Security**, **Keypad lock**. Move the Pilot Key to select **immediate** or **delayed lock**.**
- **Or with a long press on the **(C)** key, you can activate the keypad lock.**




A  will appear on your screen when keypad lock is activated.

NOTES:



1. The emergency number is available even when the keypad is locked (dial 112) and you can still receive calls.
2. To switch the phone off, you must first unlock the keypad.
3. Immediate keypad lock can be assigned to a corresponding Hotkey (see page 45).

Unlocking the keypad

With the keypad locked:

 
- **Move the Pilot Key upwards**  **then downwards** .
- **Or with a long press on the**  **key, you can deactivate the keypad lock.**

NOTES:



1. It is possible to accept or reject a call even when the keypad is locked. The keypad is unlocked automatically when the phone receives a call, and then re-locks again once the call is finished.
2. If you choose to lock the keypad with a delay, it will be permanently locked (after that delay). If you unlock the keypad by moving the Pilot key upwards  then downwards , it will be temporarily unlocked while you use your phone. The keypad will be locked again after the delay you previously selected.

Activate/deactivate the silent mode

If you do not want your phone to ring when you receive a call, activate the silent ringer.

If you receive a call while the silent mode is activated,  the symbol flashes, and the display shows **Incoming call**, but the phone does not ring.

In idle screen:

- **Press the Pilot Key** , **select the Settings menu, Sounds, Ringer volume and move the Pilot Key to silent.**
- **Press the Pilot Key**  **to confirm.**

The ringer is deactivated. To reactivate the ringer, repeat the above sequence and select the required volume.

NOTE

Silent mode can be assigned to a hotkey (see page 45).






Activate/deactivate the Vibrator

If you have set the function, your phone vibrates when you receive an incoming call.

Using the Vibrator doesn't mute the ringer. If you want to mute it and keep only the vibrator function active, set the quick setting **Silence**.

In idle screen:

- **Press the Pilot Key** → , select **Settings**. Select **Sounds (confirm)** then select **Vibrator**.

Move the Pilot Key up  or down  to select **On** or **Off** and press the Pilot Key →  to confirm.

NOTE:


The Vibra Setting is independent from the ringer. You can activate both at the same time.



Reading your GSM phone number

In idle screen:

- **Press the Pilot Key** → .
- **In the Names menu, move the Pilot Key until you reach Own Number.**

Your phone number is displayed if it is present on your SIM card. If not, then enter the number, then press the Pilot Key →  to save it.

NOTE:

If your own number has been stored in the Names list, you can read it during a call. See "Consulting the Names list" page 21.



Text Input

The phone provides you four different modes for the text input:

- the T9™ Text Input,
- a Basic text input,
- a mode for numbers,
- a mode for punctuation marks and symbols.



To access one of these modes press .

Depending on the selected language, the T9™ Text Input is proposed by default to write SMS and names in the Names list.


T9™ Text Input

T9™ Text Input is an intelligent input for SMS & phonebook that analyses keystrokes to come up with the right word. It is a fast and simple way to enter information on the phone. It is a very efficient method of text input that requires just one key press per letter; other methods (Multi-Tap) requires the user to press a key the number of times corresponding to the ordinal position of the character on the key.

For example, entering the English word "easy" requires only 4 key presses with T9™ Text Input, but as many as 10 key presses with using a Multi-Tap technology, therefore, a significant productivity advantage exists with T9™ Text Input.

How to use T9™ Text Input

Please select T9™ Text Input using the key (*). While in this mode, the alphabet and symbols represented by each key are:

| | | | |
|--|---------------|----------|---------|
|  | ① Confirm | ② ABC | ③ DEF |
| | ④ GHI | ⑤ JKL | ⑥ MNO |
| | ⑦ PQRS | ⑧ TUV | ⑨ WXYZ |
| | * Typing mode | 0 Scroll | # Shift |

The sequence for T9™ Text Input is:

- 1 **Key in alphabet using** ② to ⑨, ③ to clear
- 2 **Select word using** ①
- 3 **Confirm word** ①

Please follow the above sequence. You need to press the key for the corresponding alphabet only once. You do not have to consider the order of the alphabet indicated on the keys, as the T9™ Text Input will form the words automatically and all possible word combinations of the key presses will be available for your selection.

After you have entered all the alphabet, the screen will show the most probable and most commonly used English word for your consideration. If that is not the desired word, you can press ① to select the next English word, until the desired word appears on screen. Press ① to confirm, the desired word will be entered and a space will appear automatically after the word to facilitate your entering of the next word.

For example, to enter "Home", please key in ④ ⑥ ⑥ ③.

The screen will first show the word "Good", to select "Home" press ① to scroll to the word and then press ① to confirm your selection.

You can also use ① to key in punctuation as shown in the above sequence.

You may also have the punctuation keys by pressing (*) three times. Then on your screen you see all the punctuation mark you may enter. Press then one key, and your punctuation mark will be automatically added to the text you were typing. To return to alphanumeric entry, press (*) once, and you will be able to continue on typing with T9™ Text Input.

After you have edited the names for the telephone book or short messages, press the Pilot Key →] to confirm the completion of the editing.



Basic text input

Please select "ABC" basic text input. While in this mode, the alphabet and symbols associated to each key are presented in the table page 16.

Please follow the sequence and press the key with the required alphabet, press once to select the first alphabet of the key, twice to select the second alphabet of the key . . . , so on and so forth.

Take the example of (2), press once to select A. If this is not the desired alphabet, press again quickly to select B, press again the third time to select C.

For example, to enter "Love", you have to press (5) thrice, press (6) thrice, press (8) thrice and press (3) twice. The word "Love" will appear on the screen.
























After you have edited the names for the telephone book or the short messages, press the Pilot Key →  to confirm the completion of the editing.






















Easy to find and simple to use in either Advanced menu or Simple menu mode via the Pilot Key →], the menus contain all your GSM phone functions. All the menus have icons with scrollable lists and are used in the same way. The messages displayed on the screen explain what you have to do.

Overview of menus

| | | | |
|---|-----------|--|-----------|
|  Names | 28 |  Extras | 35 |
|  Messages | 29 |  Call counters | 35 |
|  Send SMS or Reply | 29 | Accumulated call timers | |
|  Read SMS | 31 | Accumulated cost | |
|  SMS settings | 31 | Info at call end | |
| SMS centre | | Last call information | |
| Signature | | | |
| Validity period | | | |
| Reply path | | | |
| Delivery report | | | |
| Auto save SMS | | | |
|  Broadcast SMS | 32 |  -> Euro** | 36 |
|  Mailboxes | 32 |  <- Euro** | 36 |
|  Call list | 33 |  Brick Game | 36 |
|  Organiser | 33 |  Calculator | 37 |
|  Events | 33 |  Alarm clock | 38 |
|  Day view | 34 |  Voice memo | 38 |
|  Week view | 34 |  Settings | 38 |
|  Month view | 34 |  Sounds | 39 |
| | | Ringer volume | |
| | | Ringer | |
| | | Key tones | |
| | | Minute beep | |
| | | Organiser alerts | |
| | | Battery low alert | |
| | | New SMS tone | |
| | | Vibrator | |




| | | | |
|---|-----------|---|-----------|
|  Display | 41 |  Network | 47 |
| Zoom | | Register again | |
| Backlight | | Preferred list | |
| Animation* | | | |
| Contrast | | | |
|  Security | 41 |  Call settings | 48 |
| Keypad lock | | Call forward | |
| Public names* | | Autoreodial* | |
| Call barring* | | Any key answer* | |
| Change codes | | Call waiting | |
| PIN protection | | Caller ID | |
|  Time and date | 43 |  Quick settings | 50 |
| Clock display | |  Personal | 50 |
| Set date | |  Silence | 50 |
| Set time | |  Autonomy | 50 |
|  Language | 44 |  Headset | 50 |
|  Menu type | 45 |  Car | 50 |
| Simple menu | |  Outdoors | 50 |
| Advanced menu | |  Meeting | 50 |
|  Hotkeys* | 45 | | |
|  Voice command | 47 | | |

 **NOTES:**

* In advanced mode only.

** Depending on your subscription

Names

The  menu allows you to consult the list of your correspondents, add new names, write and send messages. The names are listed in alphabetical order. You can scroll through the list using the Pilot Key → [] or by entering the first letter of the name. In the list you can choose from the following:

<New>


This menu allows you to enter the name and phone number of a new correspondent. In Advanced mode, you can select the type of number allocated to the name: **phone**, **fax** or **data**.



Select a name

By selecting a name, you display the associated number. A second press on the Pilot Key → [] allows you to:

- call
- flash dial
- send message
- delete
- associate a voice dial
- change

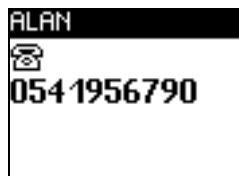

You can directly access the first letter of your correspondent's name in the Names List by pressing the right alphanumeric key. For example, if you want to access the letter 'U', just press the key number '8' twice.


NOTE:

In idle mode, you can directly access the names list by moving the Pilot Key downwards ↓ [].

Send SMS

See page 29 and 30 to: Send now, Add icon and Save.


Voice Dial

The  allows you to automatically dial the number of your correspondent by saying the associated tag (see page 19).

You can either associate a new voice tag to a number in the Names list or manage the existing voice tags through the following options: delete, play voice and change.



Flash dial


The  menu provides you with direct access to the phone numbers that you use most frequently. This is done by linking them to the keys from (2) to (9).




Delete

The  menu allows you to delete the number and selected name.

Change

The  menu allows you to modify the selected name, number and determine whether it is a fax, phone or data transmission number.


Emergency

The selection displays the emergency call number. Press  to dial.

Own number


Depending on your subscription, selecting **Own num.** displays your own phone number(s). If your SIM card does not contain your phone number(s), an editing screen allows you to store them.

Messages

The  menu allows you to manage the messages in your voice mailbox, messages to be sent, messages to be read, your message settings and broadcast messages.



Send SMS or Reply

The  allows you to:

- send it to a correspondent in your Names list,
- write a new message or select a standard one.


The Standard SMS messages are displayed one after another:

- **Please call me back at** for example allows you to compose automatically a message including your own number.


Once your text is written, you can link an emotion icon to it, send the message and save it.
































 




















Send now

The  option allows you to send the current message.

Add icon


The  option allows you to send an emotion icon together with your message. To see the image, the receiver needs a GSM mobile phone which supports emotion icons (Philips Savvy or Xenium for example). Otherwise the equivalent Internet translation code will be displayed at the end of the receiver's message.

| Image | Code sent | Image | Code sent |
|---|------------------|---|---------------|
| Emoticon | | Events | |
|  | Smile :-) |  | Party o<I |
|  | Wink ;-) |  | Cake iii |
|  | Cool B-) |  | Gift I E |
|  | Tongue :-P |  | Drink >-I |
|  | Sad :-) |  | Coffee I D |
|  | Angry :-/ |  | Holidays -Y- |
|  | Heart (0) |  | Cloudy ;; |
|  | Broken heart (X) |  | Sunny >o< |
|  | Yo! Yo! |  | Flower @>- |
|  | Well done! ==b |  | Money \$\$\$ |
|  | BOOM! >*< |  | Snowman <:7 |
|  | Deadly %-I |  | Music Σ-) |
|  | Magic =:I |  | Shopping \$-) |
|  | Hugging Ω Ω |  | Lunch (|
|  | Kiss :-x | Sports | |
|  | Idea ?-) |  | Ball (I) |
|  | Sleep Zzz |  | Shoot O-/- |
|  | Trapped :-I |  | Goal! (!) |
|  | Failed ==p |  | Victory :-> |
|  | Police :-! |  | Red card II ! |
|  | Smell! &@* |  | Racquet o-- |
| Animals | |  | Boarding o-o |
|  | Meow! :-* |  | Golf o-) |
|  | Woof! :-># | | |
|  | Teddy 8<) | | |
|  | Monkey 8:) | | |
|  | Fish <-< | | |
|  | Bug (x) | | |
|  | Dragon :->> | | |


 
 
 
Save

The  option allows you to store the current message and its associated icon if there is any.

Read SMS

The  **Read SMS** menu allows you to consult the list of SMS you have saved, and received. By using carousel items, you can also delete, reply, re-send or forward these messages.

Saved Messages

The messages you sent are labelled with  in normal mode or with  in Auto save SMS mode (page 32). Select the message you want and press the Pilot Key \rightarrow  to read it. When displayed, press the Pilot Key \rightarrow  to access the following options:




Send SMS




Allows you to modify the content and the addressee of the message, add or change the icon, send it and save it (see also above to: Send SMS, Add icon and Save).

Delete

Allows you to delete the selected message.

Received Messages selection

The messages you received and already read are labelled with .

The messages you received but not yet read are labelled with . Select the message you want and press the Pilot Key \rightarrow  to read it. When displayed, press the Pilot Key \rightarrow  to access the following options :



Reply

Allows you to reply to the sender. You can either write a new message or select a standard one. Once the message is defined, you can link it with an emotion icon, send it and save it.

Forward to

Allows you to forward the selected message. You can either choose the addressee in the Names list or enter his phone number manually.


Delete

Allows you to delete the selected message.

SMS settings


The  **Settings** menu allows you to customise your SMS via the following options:

SMS centre


The  **SMS centre** option allows you to select your default SMS centre. If not available on your SIM card, you can enter your SMS centre number.



Signature


The  **Signature** option allows you to send a signature together with your SMS. This signature consists of a series of characters showing your default account number and name. This forms a signature that is transmitted at the end of your message. The length of the message is consequently reduced. You can edit this signature, modify it and save it.

Validity period

The  Validity period option allows you to select the length of time your message is to be stored in your SMS centre. This is useful when your correspondent is not connected to the network.


Reply path

Depending on your network.

You can activate or deactivate the  Reply path option (in Advanced menu mode only). This option transmits your SMS message centre number with the message. Your correspondent can then reply using your own SMS centre and not his. This speeds up the rate of transmission.

Delivery report


Depending on your network.

You can activate or deactivate the  Delivery report option which informs you via a written message that your SMS was received or not (Advanced menu mode only).


Auto save SMS


The  Auto save SMS option activates or deactivates the automatic saving of messages sent.

Broadcast SMS

The  Broadcast SMS menu allows you to activate or deactivate the reception of SMS broadcast by the network to all subscribers.

Cell Broadcast is a service which, when activated, causes the mobile to listen to messages which are regularly transmitted to all subscribers on the network.





The  Reception menu allows you to activate or deactivate the reception of cell broadcast messages.

The  Topics menu allows you to define the type of messages you want to receive.


To define a new type, select **<New>**, enter the code, and, if desired, associate a name.

If you select an existing type in the list, you can change or delete it.

It is possible to enter up to 15 different types in the list. To obtain the codes corresponding to the different types, contact your operator.


 
The  District Code menu allows you to select the type of messages you would like to be permanently displayed on the idle screen. As a result, for this special handling of the message, you must enter the type in both the  District Code menu and the  Topics menu. The corresponding type will then be recognised in the Topics list with a .


Mailboxes

The  Mailboxes menu allows you to call your voice mailbox. If not available on your SIM card, you can enter your voice mailbox numbers.





Call list

The  **Call list** menu provides you with the list of calls you have received and given, as well as attempts at auto redial and details of voice messages. The calls are displayed in chronological order with the most recent first. When the Call List is empty the screen displays **List empty**. Otherwise for any selected call you can, by pressing the Pilot Key \rightarrow , consult the date, time, number, call status and whether it was sent or received.


A second press on the Pilot Key \rightarrow  gives access to this following carousel which allows to send a SMS, delete the selected call, phone this number or store this number by entering the associated name (if not present in your phonebook).



NOTE:

You can directly access the Call list by moving the Pilot Key upwards \uparrow . You can also select a record in the Call list and press  to dial the corresponding number.


Organiser

The  **Organiser** menu allows you to manage up to 40 events.

Those events appear in the lists in a chronological order, using start times and dates, with the most recent one on top. When memory is full the message "Memory full" appears. Before being able to add a new event you have to delete in past day view, week view or month view.



Events


The  **Events** menu is a list which enables you to consult, modify and add new events.

Add a New event


This provides access to four different types of events: Meeting, To Do, Quick Settings, Holidays. Select one to create a new event.




Meeting

The  **Meeting** menu allows you to enter a date, a start and end time, the main details, and an alert. The event may be repeated (in Advanced mode only).


To Do

The  **To do** menu allows you to enter a date, a time, general details, and an alert. The event may be repeated (in Advanced mode only).

Quick Settings

The  **Quick Settings** menu allows you to program the activation of a specific Quick Setting. Select a date and time, and the Quick Setting to be activated (see page 50). The event may be repeated (in Advanced mode only).

Holiday


The  **Holiday** menu allows you to enter events relating to your Holidays, with start and end dates. The event may be repeated (in Advanced mode only).

Select an event

By selecting an event, you can be reminded of the details of an event existing in the list. You may change its details, set a reminder, repeat it at a selected frequency. You can also delete it.




Set reminder

The  **Set reminder** menu reminds you of events via alerts triggered at times you have chosen in the carousel (in Advanced mode). Only for "Meeting" and "To do" events.




Repeat events


The  **Repeat event** menu allows you to repeat events at a frequency you have chosen in the carousel.









Change

The  **Change** menu allows you to modify dates, times and the type of event. In advanced mode you can also modify the reminder and repeat option.

Delete

The  **Delete** menu allows you to delete the event. It is better to remove the past events.

Day view, Week view and Month view

In each organiser view  **Day view**,  **Week view**,  **Month view** moving the Pilot Key upwards  or downwards  allows you to display the next or the previous day, week and month. Once you have selected the day, the week or the month, press the Pilot Key  to display the list of corresponding events.

Extras

The **Extras** menu enables you to manage the Call counters, Euro converter, Voice memo, Alarm clock, Calculator and game.

Call counters

The **Call counters** menu allows you to handle the cost and duration of your calls.



Accumulated call timers

The **Accum. call timers** menu allows you to check the duration of both incoming and outgoing calls and to set the counters to zero.



Accumulated cost

(Subscription dependent)

The **Accum. cost** menu allows you to display the accumulated cost and to set the counter to zero. It may be protected by PIN or PIN2 codes.



Show

The **Show** menu shows you how much has been spent after having established the charge rate.

Reset

The **Reset** menu allows you to reset the current accumulated cost to 0; requires your PIN2 code.

Show balance

The **Show balance** menu allows you to check the remaining credit (compared with your previously set limit).

Cancel cost limit

The **Cancel cost limit** menu allows you to cancel the cost limit. It may be protected by PIN or PIN2 codes (depending on your subscription).

Cost limit

The **Cost limit** menu allows you to enter the cost limit used in the **Show balance** menu.

Charge rate

The **Charge rate** menu allows you to set or change the rate per unit. First enter the currency used (three characters maximum) then enter the cost per unit.

Info at call end



The **Info at call end** menu enables you to activate or deactivate the systematic display of the length and/or cost of each call (depending on your subscription).

Last call information



The **Last call info** menu allows you to display the duration and/or cost (depending on your subscription) of your last calls.

→ **Euro***



The **→ Euro** menu enables you to convert a sum into Euros by entering the amount and pressing the Pilot Key → **↓**.

<← **Euro***



The **<← Euro** menu enables you to convert a sum from Euros by entering the amount and pressing the Pilot Key → **↓**.

NOTE:

The currency used for the conversion is determined by the country where you have subscribed. The Euro converter is only available in countries using Euro.

** Subscription dependent.*

Brick Game




The **Brick Game** consists in breaking a complete set of bricks with a ball and a racket. When you have broken all of them, you play with a new set of bricks (new level).



Game principle:

- the ball is moving through the screen, rebounding on different elements. When it hits a brick, the brick disappears and your performance increases.
- the racket moves horizontally at the bottom of the screen. When the ball reaches the bottom of the screen, you must hit it.
- into the second level, some special bricks need to be hit twice to be broken (the black ones), and some other are indestructible (the empty ones).
- if the ball hits the floor, you lose a credit.
- when you have lost all your credits, the 3 best scores and the corresponding players' names are displayed on the screen. If your score is greater than the last one ranked, you are asked to enter your name.
- You score extra credit every three levels.

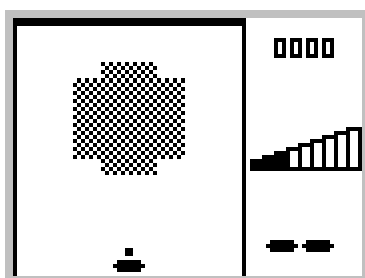


Keys used:

- (4) and (6) to go left or right
(*) and (#) to throw the ball left or right
(0) to pause the game ; the pause time is limited to 2 minutes after which the screen will return to the idle mode and the game will be lost

Calculator


The  menu provides the following functions:

- Addition by pressing the (*) key
Subtraction by pressing the (*) key twice
Multiplication by pressing the (*) key three times
Division by pressing the (*) key four times
Equals by pressing the (#) key

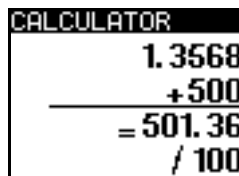



The figures are entered using the keypad. Calculator accuracy is to 2 decimal places and is rounded up to the higher decimal figure. Press (C) to correct the numbers. Press and hold 0 to get the dot. Press and hold twice (C) to return to the idle screen.


Alarm clock


The  **Alarm clock** menu allows you to activate, deactivate and set the alarm function of your phone.





 **Once** : activates the alarm at a set hour on a set day.

 **Every day** : activates the alarm at a set hour every day of the week.

 **On weekday** : activates the alarm at a set hour on weekdays only.


To stop the alarm when ringing press the Pilot Key → .


Voice memo


The  **Voice memo** menu allows you to record a memo of 20 seconds maximum. You can stop the recording at any time by pressing the Pilot Key → . Once your memo is recorded, you can play it back or delete it.





Settings


The  **Settings** menu allows you to customise your phone.

 **Sounds** To select the different ringer melodies and alert beeps.


 **Display** To set the display parameters: contrast, animation, backlighting and zoom


 **Security** To manage security: PIN codes, keypad lock, restrictions, etc.


 **Time and date** To set the time and date, change the clock display mode.

 **Language** To set the language used by your phone.

 **Menu type** To select the Navigation mode: Simple or Advanced.

 **Hotkeys** To program direct access to a function via a single long key press.


 **Voice command** To set a direct access to several functions by saying the associated word.

 **Network** To handle the connection between the phone and the network.

 **Call settings** To set the call options (Call Forward, call Waiting, Caller Identifier, ...).




Sounds



The  **Sounds** menu allows you to select the different ringer melodies and alert.



 







 

Ringer volume

The  **Ringer volume** option allows you to set the volume of your ringer: it may be Increasing, High, Medium, Low or Silent. You can use a Hotkey to activate the silent mode (see page 22). By default the ringer volume is set to 'Medium'.

Ringer

The  **Ringer** option enables you to select the ringer type from among 19 melodies. Scroll through the list and wait for two seconds to hear the highlighted melody played. Confirm your choice of melody by pressing the Pilot Key → . This menu also enables you to create the 20th melody.

Creating a 20th melody: Own melody

This option allows you to compose a melody with up to 32 notes. You select the required notes on the keys from  to  and the rests with  and . The default note is B. By moving the Pilot Key upwards  or downwards  you can change the notes up or down in semitones. You can change notes to flats by the  key or to sharps by the  key. Each time you press another key than a digital one, you will hear the note and the corresponding effect. Press other digital keys from  to  to obtain new notes with the following values:

| TYPES | LENGTH/SHARP | KEYS |
|---------------|--------------|------|
| Semi quaver | 1/4 | 1 |
| Quaver | 1/2 | 2 |
| Dotted quaver | 3/4 | 3 |
| Sharp | 1 | 4 |
| Dotted sharp | 3/2 | 5 |
| Minim | 2 | 6 |
| Dotted minim | 3 | 7 |
| Whole note | 4 | 8 |
| Quaver rest | 1/2 | 9 |
| Crotchet rest | 1 | 0 |


Example



How to obtain such a melody


| NOTES | LENGTHS | | HEIGHTS | | |
|----------------------|---------------|-----|---------|---------|---------------|
| | TYPE | KEY | VALUE | ↓↑ | ↑↓ |
| 1 st note | Minim | 6 | E | 4 times | |
| 2 nd note | Dotted minim | 7 | B | 3 times | |
| 3 rd note | Sharp | 4 | B-flat | | 7 times and * |
| 4 th note | Dotted quaver | 3 | B-sharp | | 6 times |

Key tones


This  **Key tones** menu allows you to activate or deactivate the key tones.

Even if key tones are set Off, DTMF are "played" during calls (DTMF see pages 8 and 52).


Minute beep

The  **Minute beep** menu allows you to activate or deactivate a beep every minute during a call. It is only available in Advanced menu mode (the beep cannot be heard by your correspondent). Each beep is emitted 15 seconds before the end of each minute of communication. This allows you to manage as efficiently as possible the duration of your calls.


Organiser alerts

The  **Organiser alert** menu allows you to activate or deactivate an alert when an event is due.


Battery low alert

The  **Battery low alert** menu allows you to activate or deactivate an alert which informs you that the battery is low and requires recharging.

New SMS tone


The  **New SMS tone** menu allows you to activate or deactivate an alert tone each time you receive a SMS.

Vibrator


The  **Vibrator** function allows you to activate or deactivate the vibrating alert when receiving a call.



Display

The  **Display** menu allows you to set the zoom, the backlight, the contrast and screen animation (only in Advanced mode).

Zoom

The  **Zoom** menu allows you to activate or deactivate the zoom function. It enlarges the size of text used in the menus, the Names list, and the dialling number.




Backlight

The  **Backlight** menu allows you to select the backlight duration:


- no backlight
- 10 seconds backlight
- 30 seconds backlight
- 1 minute backlight

The backlight will be activated when receiving incoming calls, messages, etc.

Animation


The  **Animation** menu allows you to activate or deactivate the animation in different menus (only in Advanced menu). Deactivating this function increases the autonomy of your phone.

Contrast

The  **Contrast** menu allows you to choose among 5 levels of contrast.


 




Security

The  **Security** menu ensures the security of your phone by locking the keypad, limiting calls to public numbers, prohibiting specific incoming and outgoing calls, activating security via PIN codes and changing those PIN codes.




Keypad lock

The  **Keypad lock** menu allows you to activate or deactivate the keypad lock. When your keypad is locked, you can unlock it by moving the Pilot Key up  and down  or via a long press on the  key. The keypad automatically unlocks when you receive a call.

NOTE:


You can still place an emergency call by dialling '112'.

Public names


The  **Public names** menu allows you to lend your phone with your subscriber card. It allows you to restrict calls to numbers that you have previously defined in your Public Names list. This function may depend on your subscription (in Advanced mode only).



Call restriction

The  **Call restriction** menu allows you to activate or deactivate the call restriction to the Public Names list. In both cases you must enter your PIN2 code.


Public names

The  **Public names** menu allows you to consult your Public Names list. You can also enter a new name, modify or delete a name in the list via PIN2 code.

• <New>


This menu allows you to enter the name and phone number of a new correspondent. In Advanced mode, you can select the type of number allocated to the name: **phone**, **fax** or **data**.

Change


The  **Change** menu allows you to modify the selected name, number and determine whether it is a fax, phone or data transmission number.



Delete

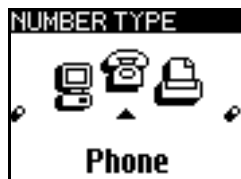The  **Delete** menu allows you to delete the number and selected name.








Call barring

The  **Call barring** menu allows you to limit the use of your phone to specific calls. This function is network dependent and requires a call barring password supplied by your service provider.

This carousel allows you to bar  **Incoming** and  **Outgoing** calls.



Outgoing

The  **Outgoing** menu allows you to select between ,  **International** calls and  **Inter. except/home** (the latter allowing you to call your home country when you are abroad). You can also  **Cancel** the bans on outgoing calls.









The ,  **International** and  **Inter. except/home** menus enable you to bar , ,  **Data calls** or  **Fax calls**.



Incoming


The  **Incoming** menu allows you to select  **All** or  **When Roaming**. It also provides access to the  **Cancel** menu that removes bans on incoming calls.

The  **When Roaming** menu and the  **All** menu, allow you to select  **All calls**,  **Voice calls**,  **Data calls** and  **Fax calls**.

Status


The  **Status** menu allows you to know whether a type of call is barred or not.

Change codes


The  **Change codes** menu allows you to change your PIN codes and call barring password. Select "Change PIN" or "Change PIN2" or "Call barring". The modification process is similar for these items. Once one of these items is selected, follow instruction on the screen.



PIN protection


The  **Pin Protection** menu allows you to activate or deactivate the PIN protection when switching on your phone. This is carried out via the PIN code that puts your phone in service. If your PIN code is deactivated, you cannot change it.

Time and date

The  **Time and date** menu allows you to set the time and date and choose the clock display format.




Clock display


The  **Clock display** option allows you to select analogue or digital time formats.






Analogue

The  **Analogue** option allows you to display the time on the idle screen using an analogue format. Depending on the activated services, the clock display may automatically switch to the digital format.

Digital




The  **Digital** option allows you to display the time on the idle screen using a digital format.

Set date

The  **Set date** option allows you to set the date by pressing the respective keys. You can set the date by moving the Pilot Key up  or down .


 


Set time

The  **Set time** option allows you to set the time. You can set the time by keying it in the keypad. Moving up  or down  the Pilot Key increases or decreases the time minute by minute.



Language


The  **Language** menu allows you to select a language for the texts displayed in the menus. A long press on  when in the idle screen, provides you with a shortcut to this menu.




Menu type

This menu allows you to choose between the following navigation modes:

Simple menu


The  Simple menu mode provides you with a simplified access to the basic functions of your phone. You can make and receive calls, make emergency calls, consult the Names list, swap to Advanced mode etc.

Advanced menu

The  Advanced menu mode provides you with access to all the features of your phone (see page 27).

Depending on your subscription, one of these menus is set by default.

Hotkeys











The  Hotkeys menu allows to set a direct access to several functions through a simple long key press (in Advanced mode only).




 
 











To program a Hotkey, select a key in the list (from ② to ⑨), then select a function from the carousel displayed on the screen. The ① key is reserved for direct access to the language menu and the ⑩ key to call your voice mailbox.

You can reprogram each key.

You can associate the Hotkeys to the following functions:

 -  Flash dial Quick dialling of a number stored in the Names list.
-  Keypad lock Immediate access to keypad lock.
-  Activ. Silence Immediate access for the silent feature (vibrator on, ringer volume off, etc.).
-  Activate Car Immediate access to the car quick setting (ringer volume high, zoom on and any key answer on).
-  Activ. Headset Immediate access to the headset quick setting (ringer volume is set to medium and any key answer on).
-  Meeting Activates the meeting quick setting (vibrator on, ringer and all keys set to silent).
-  Activ. Outdoors Immediate access to the outdoors quick setting. The ringer volume is high and keypad lock is on with 1 minute delay.
-  Activ. Personal Immediate access to the personal quick setting.
-  Activ. Autonomy Immediate access to the autonomy quick setting. This extends the usable time of the phone's battery (animation off, Vibra on, backlight off, ringer volume medium).
-  Calculator Direct access to the calculator.

-  Redial last num. Redials the last number dialled.
-  Reply last num. Redials the number of the last incoming call.
-  Zoom on/off Immediate access to the zoom feature.
-  SOS call Dials the emergency call number.
-  Send SMS Sends a message selected from the messages list.
-  Read SMS Direct access to read the messages list.
-  Show balance Displays the remaining credit balance.
-  Accum. cost Displays the accumulated cost of outgoing calls.
-  Add organiser event Creates an event in the organiser menu.
-  Show events Displays the event list in the menu.
-  Record voice memo Records a voice memo.
-  Play voice memo Plays the voice back.
-  Call forward Forwards all calls to the voice mailbox.
-  Brick Game Direct access to Brick game.

 **NOTE:**

Depending on your subscription provider some Hotkeys, in addition to **0** and **1**, can be predefined and locked, preventing reprogramming by the user.



Voice command



The **Voice command** allows you to set a direct access to several functions by saying the associated word (in Advanced mode only). Using your Hotkeys for the Quick settings, you can activate or deactivate the corresponding function. To program a Voice command, select in the list the function to program, then follow the on-screen instructions. Press and hold the Pilot key → [] to use your Voice command.

You can associate the Voice command to the functions supported by the Hotkeys (see page 45).

Network



The **Network** menu allows manual registering of available networks and the management of your preferred networks.



Register again



The **Register again** menu provides you with a list of the networks available in the area. Select the network you want to register on and press to confirm.

Preferred list



The **Preferred list** menu allows you to build a network list in order of your preference.


Once defined, the phone will try to register on a network, according to your preferences.

The following settings are available:

- show the list of preferred networks and:
 - either delete a network from the list,
 - or move a network to a different position in the list,
- add a network to the preferred list from the list of available networks,
- add a network to the preferred list from the list of known networks,
- add a network to the preferred list by entering the network code. This is a 5-digit code: 3 digits for the country followed by 2 digits for the network (67844 for example).














Call settings

The  **Call settings** menu allows you to set all the parameters linked to the calls (Call forward, Call waiting, etc.).



Call forward

The  **Call forward** menu allows you to divert incoming voice, fax or data calls either to a number in your Names list or to your mailbox. Before activating the **Call forward** option, please enter your voice mailbox's number(s) (see "Mailboxes" on page 32).

| | | SIMPLE MODE  Simple menu | ADVANCED MODE  Advanced menu |
|-----------------------|--|--|--|
| CALL TYPE |  Voice calls | X | X |
| |  Fax calls | | X |
| |  Data calls | | X |
| FORWARD OPTION |  Unconditional | X | X |
| |  Conditional no reply or not reachable or busy | X | |
| |  If no reply | | X |
| |  If not reachable | | X |
| |  If busy | | X |

The « conditional call forward » option, in Simple mode, will divert incoming calls if you don't reply, if you are not reachable or if you are busy. In Advanced mode, you can set any of these options independently.

- **Deactivate**


The  **Deactivate** option allows you to deactivate the status of all call forwarding.

- **Status**

The  **Status** option allows you to display the status of all call forwarding.





Autoredial

The  Autoredial menu allows you to activate or deactivate the Autoredial feature (in Advanced mode only).


If Autoredial is switched on and if the line is busy, your phone automatically continues to redial this number until a successful connection is made, or until the maximum number of attempts is reached (10). The time between the attempts increases in order to be more successful.

The phone shall emit one beep at the beginning of each attempt and one special beep if the connection is successful.

Any key answer


The  Any key answer menu allows you to accept a call by pressing any key, except the  ; this key is used to reject a call (in Advanced mode only).

Call waiting

The  Call waiting menu allows you to activate or deactivate an alert beep informing you that you have another incoming call (in Advanced mode only).




All calls

Sets the alert beep for  All calls


Voice calls

Sets the alert beep for  Voice calls


Fax calls

Sets the alert beep for  Fax calls


Data calls

Sets the alert beep for  Data calls

Caller ID






The  Caller ID menu allows you to choose whether you want to show or hide your identity to your correspondent. The status option will inform you if this function is activated or not. This feature is only available if both the network and your subscription allow it.

Quick settings

The  Quick settings menu allows you to access a group of predefined settings. You can use these quick settings to adapt your phone to your environment. You can also associate a quick setting with a Hotkey (see Hotkeys, page 45).

 


The Quick settings:

| |  Personal ** |  Silence |  Autonomy |  Outdoors |  Meeting |
|--------------------------|---|---|--|--|---|
| Vibrator | Active | Active | Inactive | ☒ | Active |
| Ring volume | Medium | Silent | Medium | Loud | Silent |
| Key tones | Active | Inactive | ☒ | ☒ | Inactive |
| Organiser alerts | Active | Inactive | ☒ | ☒ | ☒ |
| Battery low alert | Active | Inactive | ☒ | ☒ | ☒ |
| New SMS tone | Active | Inactive | ☒ | ☒ | ☒ |
| Backlight | 10 seconds | ☒ | Inactive | ☒ | ☒ |
| Zoom | Inactive | ☒ | ☒ | ☒ | ☒ |
| Any key answers | Inactive | ☒ | ☒ | ☒ | ☒ |
| Animation | Active | ☒ | Inactive | ☒ | ☒ |

The table above highlights the specificities of the Quick settings referred to.

NOTES:


 Setting identical to the one memorised in Quick Setting Personal.

** There are settings for the parameters when you first switch on the phone. You can update these parameters as all are user programmable

When using a headset or a car kit accessory the settings are modified in the following way:

| |  Headset |  Car |
|--------------------------|--|--|
| Vibrator | ☒ | Inactive |
| Ring volume | Medium | Loud |
| Key tones | ☒ | Active |
| Organiser alerts | ☒ | ☒ |
| Battery low alert | ☒ | ☒ |
| New SMS tone | ☒ | ☒ |
| Backlight | ☒ | Permanent |
| Zoom | ☒ | Active |
| Any key answers | Active | Active |
| Animation | ☒ | ☒ |

 **NOTE:**

 Setting identical to the one memorised in Quick Setting Personal.



Additional GSM network services (GSM strings)

The phone supports standard GSM strings. These can be sent from the keypad to the network. They are used to activate all supplementary services provided by the network (see your service provider).

Example n°1: press * 4 3 # then press ☎ , to activate the Call Waiting service.

Example n°2: press * # 3 1 # then press ☎ , to know if the mobile identification has been sent.

Example n°3: press * 6 1 # then press ☎ , to activate the feature call forward if no reply.

Example n°4: press * 6 2 # then press ☎ , to activate the feature call forward if unreachable.

Please contact your network operator for any further information on GSM strings.



Query a voice server, a voice mailbox, a messaging service, etc. (DTMF tones)

Some phone services (such as phone answering machines and pagers) require your phone to transmit DTMF tones (Dual Tone MultiFrequency), also known as “touch tones”. These are used to communicate passwords, callback numbers, caller choices, and so on.

You can send DTMF tones at any time during a call by pressing any of the keys 0 to 9, * and #.

You can also append a DTMF sequence to a phone number before dialling it (or storing it in the Names list). The phone number and the DTMF part must be separated by a wait character.

Pause and wait characters

To obtain a pause or wait character, press and hold #. The display shows w for a wait and p for a pause. The phone always interprets the first pause character as a wait character.

When you dial a number containing a wait character, your phone dials the first part (the phone number) and then waits for the call to be connected before sending the rest of the digits as DTMF tones.

Any subsequent pause character is an ordinary pause that generates a delay of 2.5 seconds.



Interrogating your answering machine (example):

To hear all messages (code 3, say) on your answering machine (password 8421) at phone number 12345678, you could call: **12345678w8421p3**.

The phone dials 12345678 and waits for the call to connect. When connected, the phone transmits 8421 (the password), pauses 2.5 seconds, and then sends the last digit.

If you find that 2.5 seconds is not long enough for your needs, you can enter several pause characters one after the other to increase the pause time.



Making a second call

You can make a second call during an active call or during a call on hold. You can switch between the two calls.

- **Dial a number then press** .

The first call is placed on hold and the number is displayed at the bottom of the screen. The second number is then dialled.



- **To toggle between the two calls, press the Pilot Key**  **then select** **Switch calls**.

Each time that you toggle from one call to another, the active call is placed on hold and the call which was on hold is activated.



 
- **To hang up the active line, press** .

The active line is hung up and the call on hold remains on hold.

- **To end the call on hold, use Switch calls to reach it, then press** .

NOTES:

The second number can be dialled either from the keypad or from:

- the Names list, by pressing the Pilot Key  then **Names** .
- the Call list, by pressing the Pilot Key , then selecting **Call list**.

Depending on the subscriber's card.

* Depending on the country (see "Charge rate" on page 35).



Answering a second call

You are able to receive another call when already in communication (if this feature is available on your network). When you receive a second call the phone emits an alert beep and the screen displays **Call waiting** (see Call waiting menu, page 49).

• **If you receive a second call, press the Pilot Key → [] , then you can:**

- accept the second call, the first one is put on hold, the second one is active. If you want to toggle between the two calls, press the Pilot Key → [] then select **Switch calls**. Each time you toggle from one call to another, the active call is put on hold and the call which was on hold is then activated.
- reject the second call.
- end the active call, then your incoming call is ringing.



NOTES:

1. If you wish also to answer the incoming call, press ☺ , to reject the incoming call, press ☹ .
2. If you have activated call forwarding 'If Busy' (see page 48), you will never receive second calls since they are always forwarded when the line is busy.



Answering a third call

(Subscription dependent)


While in communication and one call being on hold, you may receive a third call.

The phone emits an alert beep. You must end one of the communications before being able to answer the third, or introduce the calling party into a conference (see "Conference Call" on page 55). This service is limited to two current communications (one active and one on hold).






Conference Call



(Subscription dependent)

The user can activate the conference call by making consecutive outgoing calls, or create it from a multiparty call context. The user may have up to five members at the same time. He can end the conference with . At this point all calls are disconnected.

When making consecutive outgoing calls, initiate a normal call with the first number of the conference. Then when the first member is on line, initiate a second call as described in making a second call paragraph page 53.

When the second call is engaged, press the Pilot Key \rightarrow  and select  Conference. Repeat the above process up to five members.



If there is an incoming call during the conference call, and if there is less than the five members, this last correspondant is introduced to the conference by pressing the Pilot Key \rightarrow .

You can accept the second call as described in paragraph answering a second call page 54, and by pressing the Pilot Key \rightarrow  and selecting  Conference you can also add this member to the conference call.

If there is an incoming call during a conference with five members already connected, you can answer this new incoming call, but not add it to the conference.

Explicit Call Transfer




 

(Subscription dependent)

You can connect an active call and a call on hold. You are disconnected when the transfer is complete. During a call press the Pilot Key \rightarrow , select **Transfer** and confirm by pressing the Pilot Key \rightarrow .



In-call symbols

During calls, you have the following symbols:

| | |
|---|-----------------------------------|
|  | Mute |
|  | Call underway |
|  | Active call placed on hold |
|  | Incoming call |
|  | Outgoing call |





Radio wave safety

Your cellular phone is a radio transmitter/receiver. When it is switched on, it transmits and receives radio waves in the frequency range of 880MHz to 960MHz and 1710MHz to 1885MHz. The GSM network controls the power at which the phone transmits. This varies between 0.01 watt and 2 watts.

Public concern has been focused for some time on the possible health hazards for users of cellular phones. The current research on radio wave technology, including the GSM technology, has been reviewed and safety standards have been drawn up to ensure the protection from exposure to radio wave energy. Your cellular phone complies with all safety standards that are defined for it.

The CE mark affixed to your cellular phone means that it is compliant with the European directive on electromagnetic compatibility 89/336/EEC and the low voltage directive 73/23/EEC.

Your phone and its environment


Inadequately protected or sensitive electronic equipment may be affected by radio energy. This interference can lead to accidents. Do not hesitate to ask whether or not your phone can affect surrounding equipment.

NOTE:

To avoid damaging your phone, it must not come in contact with sand or high levels of dust.

Efficient use of your phone

Using your phone in the most efficient manner will improve the performance of your phone, reduce radio energy emission (see "Radio wave safety" on page 57), and reduce battery consumption.

- For your own safety as well as for the optimal operation of the phone, it is advisable to use it only in the normal operating position: place the antenna up over your shoulder while holding the earpiece to your ear.
- For best performance, avoid touching the antenna while a call is in progress.
- Do not use your phone with a damaged antenna. If you touch a damaged antenna, you may suffer a minor skin burn. Have a damaged antenna replaced by a qualified technician. Make sure it is replaced with a genuine manufacturer's replacement part.
- Avoid low reception areas (in a tunnel or between tall buildings for example). In low reception areas the  symbol on the phone display shows less than the maximum of 4 bars. If possible, move to a different location.
- You should use only your phone manufacturer's accessories. The use of any other accessories makes all guarantees null and void. Your phone manufacturer will not be held liable for any damage resulting from the use of accessories, other than your phone manufacturer's accessories.
- Do not use battery chargers other than those specified in the manufacturer's catalogue. The use of another charger may be dangerous and will invalidate any type approval given to the phone.
- Under no circumstances should the removal plug section of the travel charger be connected to a main supply without the transformer attached. This applies to the travel charger bought as an accessory.

Battery safety

- Use only batteries specified in your phone manufacturer's catalogue. The use of any other accessories makes all guarantees null and void. Your phone manufacturer will not be held liable for any damage resulting from the use of accessories, other than your phone manufacturer's accessories, with your phone.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Do not deform or open the battery.
- Do not immerse the battery in water or dispose of the battery in a fire.
- Keep your battery attached to the phone even when discharged to avoid losing your personal settings, and your back up battery for the clock in the phone will last longer.
- The battery should be recharged at or near room temperature. If the temperature is lower than 0°C (32° F) or higher than 45°C (113° F), the battery icon flashes which means that the battery cannot be recharged.

Safety and security

Responsibility

You are responsible for your GSM. Careless handling of the phone can result in harm to others and damage to the phone itself. To avoid such problems, read and follow all the security instructions presented here and make them known to anyone borrowing your phone.

To prevent unauthorised use of your phone:

- Keep your phone in a safe place and keep it out of small children's reach.
- Avoid writing down your PIN code. Try to remember it instead.
- Switch off the phone if you are going to leave it unused for a long time.
- Use the Security menu (see page 41) to change the security code after purchasing the phone and to activate call restriction options.

Children

Your cellular phone is not a toy. Keep your phone in a safe place and keep it out of small children's reach. Children could hurt themselves or others and they may damage the phone.

Respect of local laws and regulations

Cellular phones can interfere with their environment. Consequently, safety rules and regulations have been created. You should enquire about local regulations when you acquire a cellular phone, and if you wish to use your phone while travelling, you should find out what regulations apply in the state or country you are visiting.

NOTE:

Regulations concerning vehicles and aircrafts are particularly stringent.

Do not switch on your GSM phone in states or countries where no GSM network is available.

Use while driving

Using your phone and driving at the same time can be dangerous as it lowers your concentration.

- Avoid using your phone while driving, except in an emergency.
- In all cases, you should give your full attention to driving. Pull off the road and park before using the phone whenever possible.
- If you are allowed to use your phone while driving a vehicle, install the hands-free car kit which is designed for that purpose.
- Respect the local regulations in countries where you drive and use your cellular phone.
- Check with your car manufacturer that the electronic equipment used in your car will not be affected by the radio energy emitted by your phone.

IMPORTANT NOTE:


The use of an alarm system to operate a vehicle's light or horn to indicate incoming phone calls is prohibited on public roads in some countries. Check the local regulations.

Environmental care




Please remember to observe the local regulations regarding the disposal of your packaging materials, exhausted batteries and old phone and where possible promote their recycling.

Philips has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.

Battery :

-  the crossed-out dustbin signifies that the battery should not be disposed of with general household waste.

Packaging:

-  the mobius loop symbol signifies the labelled packaging material is recyclable.
-  the green point symbol signifies that a financial contribution has been made to the associated national packaging recovery and recycling system (e.g. EcoEmballage in France).
-  the chasing arrows symbol on the plastic tray and plastic bag indicates that the materials are recyclable and also identifies the plastic material.



Your phone will give you years of trouble-free service if you give it a little care and attention.

Look after it carefully, keep it clean and dry.



Looking after your phone

Your phone is a highly sophisticated electronic device. Treat it with care.

- Store it in a clean, dust free place. Its moving parts can be damaged by dust.
- Keep it out of hot areas. High temperatures can shorten the life of electronic components, or batteries, and warp or melt certain plastics.
- Do not try to open the phone. If it is not working properly, call the Helpline.
- Use only the recommended battery chargers.
- Only use the manufacturer's genuine accessories, batteries and chargers.
- Treat the phone gently and avoid dropping, knocking or shaking it.
- Keep the phone and accessories out of the reach of small children.
- Keep the phone dry and do not use harsh chemicals (such as solvents or detergents) to clean it. To clean the phone, wipe it with a soft cloth slightly dampened with a mild soap-and-water solution.
- In order to save battery capacity you shouldn't wait for an flat battery capacity to charge it again.
- If your mobile is damp, switch it off, remove the battery (see page 13) and let them dry during 24hrs before using it again.



Efficient use of your phone












 

Your phone has been developed to provide you with outstanding battery performance, from 120 up to 300 minutes of talk time and approximately 300 hours of standby time with the Standard 670mAh battery.












Placing and receiving calls consumes the same amount of battery energy. However, the mobile consumes less energy in the idle screen when kept in the same place. When in idle screen and while you are moving, your phone consumes energy to transmit updated location information to the network. Setting the backlight for a shorter period of time as well as efficiently navigating (or avoiding unnecessary navigating) in the menus will also help to save the battery's energy for longer phoning and stand-by performances.

Fixed bars indicate an approximate level of usable energy already charged in the battery. The remaining bars that are not fully charged continue scrolling during the charge process.



Troubleshooting

| Problem |  | Solution |
|--|---|--|
| The display shows BLOCKED when you switch on. |  | Somebody tried to use your phone but didn't know the PIN code nor the unblocking code (PUK). Contact your service provider. |
| The  and  symbols are not displayed. |  | The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside the network coverage area. Try from another place or contact your network operator for assistance or information about the network. |
| The display doesn't respond (or responds slowly) to key presses. |  | The display responds more slowly at very low temperatures. This is normal and does not affect the operating of the phone. Take the phone to a warmer place and try again. |
| Your phone does not go to idle screen. |  | <ul style="list-style-type: none">• Either press and hold .• Or switch off the phone, check that the SIM card and the battery are installed correctly, and switch it on again. |
| When charging your mobile phone, the battery icon is empty and flashing. |  | When your battery is too low or when the temperature is out of the range (0 to 45°C), the battery cannot be charged. Move your phone to a place where the temperature is in the range and wait a few minutes before re-charging. Clean up gently the contacts with a soft cloth. |
| After switching on your phone, either NCK code or permanently blocked is displayed. |  | Your phone is configured to work only with your service provider's SIM card. Please contact your service provider to get further informations. |
| Difference between a long press and a short press on numeric keypad. |  | A short press displays the number written on the key. A long press (at least one second) could either activate a Hotkey (See Hotkeys page 45) or a special character (such as + for a long press on the  key). |
| The time and the date are reset. |  | Your mobile phone contains a small battery called the « back up battery » which is charged by your main battery. If you unplug the main battery, the back-up battery can supply the clock with enough energy for approximately 7 hours, if it is fully charged. To set time and date, see page 43. |

| Problem |  | Solution |
|--|---|---|
| Your phone does not display the phone number of incoming calls. |  | This feature is subscription dependent. The network, therefore, may not send the caller's number to your mobile and the phone will display Call 1 . The caller may also decide to enable or not this information to be transmitted. Please note that this feature is network or subscription dependent. Please contact your operator to get further information. |
| When attempting to use a feature in the menu, the mobile displays not allowed . |  | Many features are network dependent. They are only available, therefore, if the network or your subscription supports them. Please contact your subscription provider for more information. |
| You can't succeed in sending your message. |  | Some networks do not allow message exchanges with other networks. Please contact your subscription provider for more information. |
| Your phone does not switch on. |  | Remove the battery (see page 13). Check that both the contacts of the phone and those of the battery are not damaged. Replug the battery, making sure that it is fitted securely (see page 3). Charge the mobile until the battery icon has stopped flashing. Then unplug from the charger and try to switch the mobile on. |
| You are uncertain that you are properly receiving calls on your mobile. |  | Make sure that none of the features « conditional call forward » or « unconditional call forward » as described on page 48 is activated if you wish to receive your calls. This network and subscription dependent feature may display the following icons in « unconditional call forward » mode:  Call forward unconditional to number,  Call forward unconditional to voice mailbox. |
| The display shows SIM FAILURE . |  | Your SIM card may be damaged. Please contact your network operator. |
| The display shows IMSI FAILURE . |  | This problem is related to your subscription. Please contact your network operator. |
| The display shows insert SIM card . |  | Check that the SIM card has been inserted in the right position (see page 3). If the problem remains, your SIM card might be damaged. Please contact your network operator. |



**"When Performance Counts ...
Philips Authentic Accessories are Designed to Maximize the
Performance of Your Philips Phone."**

Batteries

Battery:

- A light weight power pack-easy to insert and go.
- Powerful NiMH battery delivers from 120 to 300 mins of talk time depending on the network and the battery type.
- The standby time is from 5 to 12 days whatever the mode you are.

BHK 207/P
991 | 240 32045



NOTE:

Approximate times depending upon battery type and usage.

Chargers

Cigarette Lighter Adapter 12-24V

- Charges the battery while you use the phone.
- Plugs into virtually any vehicle power outlet.

CKLC 12/P
991 | 240 34121

CKLR 12/P
991 | 240 34118



Fast Travel Charger 90-240V

- Charges your battery wherever there is an AC outlet.
- Small enough to carry in a briefcase or handbag.
- Charging time between 75 and 120 minutes.

Europe:
ACSR 12/P
991 | 240 30042

Taiwan/USA:
ACTR 12/P
991 | 240 30043

UK:
ACUB 12/P
991 | 240 30044

Australia:
ACAR 12/P
991 | 240 30045



China:
ACCR 12/P
991 | 240 30054



Hands-free kit

Compact Car Kit

CKSK 20/P
9911 241 34306

- This very compact hands free solution offers incredibly high audio quality at a good price, while also charging your mobile .

NOTE:

In certain countries, telephoning while driving is prohibited. For safe and trouble free installation, we recommend that specialized technicians install Hands-Free Car Kits.



Hands-Free Headset

HSLB 12/P
9911 241 30023

- Use your phone under almost any condition with this hands-free very mobile solution.
- You can talk hands-free whether you're at home, in the office or on the move.



Deluxe Hands-Free Headset

HSLD 15/P
9911 241 30024

- Provides the same features as the Hands-Free Headset.
- Additional In line answer button offers you a simplified alternative to searching for the phone keypad : you answer an incoming call just by pressing the button and in idle mode a long press on it activates the voice dial.

Carry pouch with belt clip

- Protects your phone from nicks and scratches.
- Click-Lock belt clip makes your phone secure and easy to carry.

LBBK 20/P
9911 240 37027



Data Connect

- Easy data connection to your phone. You don't need a PCMCIA card as the modem is contained in your handset. Just connect your phone to your computer via the Data cable. You can send faxes and SMS messages, access data communication facilities on mobile phone networks and connect to Internet.

DCAK 20/P
9911 240 39214



To maximize the performance of your phone and not void the warranty, always purchase Philips Authentic Accessories that are specially designed for use with your phone. Philips Consumer Communications cannot be held liable for any damage due to use with non authorised accessories.

Ask for Philips Authentic Accessories where you purchased your Philips Phone.



A

activating network services 47
alarm clock 11
animation 41
answering a call 18
answering a second call 54
answering a third call 54, 55
antenna 10
any key answer 49
auto redial option 49
auto save option 32
autonomy quick setting 50

B

backlight setting 41
battery 63
 charging 14
 fitting 3
 low alert 40
 removing 13
 safety 58
blasting areas 60
broadcast messages 26, 32
broadcast reception option 32

C

C key 4, 10
calculator 38
call barring 42
call counters 35
call forwarding 48
call restriction 42
call waiting 49
caller identification option 27, 49
calling
 from the Call list 33
 from the keypad 17
 from the Names list 7
car 27
car quick setting 51
carry pouch 64
cell broadcast messages 32
changing a Names list entry 29
character entry 10, 24
character table 16

charge rate 35
cigarette lighter adapter 63
compact car kit 64
convert from Euro 36
convert into Euro 36

D

date setting 4, 44
day view 34
deleting a message 31
deleting Names list entries 29
deluxe headset 64
dialling restrictions (call restriction) 42
diverting calls (call forward) 48
driving a vehicle 59
DTMF tones 8, 52

E

earpiece 10
earpiece volume 20
emergency call 15
emotion icons 30
ending a call 18
entering characters 10, 24
entering phone numbers 4
extra options menu 35

F

FDN 8
flash dialling 28
forwarding calls (call forward) 48

G

game 36
GSM strings 52

H

headset 27
headset quick setting 51
holding a call 53
home network 8
hotkeys
 functions 45
 programming 45
how to enter a text or a number 16, 24, 25

I

icons 11, 30
idle screen 16



in-call options 20, 56
in-call symbols 56
incoming call 18
inserting SIM card 3
international dialling 17

K

key tones setting 40
keypad description 10
keypad lock 21
keypad unlock 22

L

language setting 44
last call info 26, 36
leather pouch 64
local laws and regulations 58
locking the keypad 21
low battery alert 26, 40
lower case 16

M

mailbox number 32, 52
maintenance 60
making a call 17
making a second call 53
medical equipment 57
meeting quick setting 50
menu type
 advanced 45
 simple 45
messages (SMS)
 add icon 30
 auto save 32
 cell broadcast 32
 centre 31
 delivery report 32
 forward 31
 reading 31
 replying 29
 save 30
 sending 29
 signature 31
 standard 29
 storing 32
 storing your centre number 31
 validity period 32
 writing 29
microphone 10
missed call 17
mobile number (own number) 29

modifying the PIN code 41
modifying the PIN2 code 41
month view 34
muting a call 20

N

Names list

 add a flash dial 28
 add a voice tag 19
 adding an entry (New) 28
 calling from 7
 changing an entry 29
 consulting 28
 copying from the call list 33
 deleting an entry 29
 finding an entry 29
 sending a SMS from 28

network menu 47
network registration 47
New Name 28
notepad 21

O

on/off button 10
organiser
 adding events 33
 day 34
 deleting an entry 34
 events 33
 modifying events 34
 month 34
 week 34
outdoors quick setting 50
own number 23

P

pause characters 53
personal quick setting 50
personalise your phone (settings) 38
Pilot Key 5
PIN code 4
PIN code modifying 41
PIN code protection option 43
PIN2 code 8
PIN2 code modifying 41
preferred networks list 47
programming Hotkeys 45
public names option 42
PUK code 8
PUK2 code 8

Q



quick settings

autonomy 50

car 51

headset 51

meeting 50

outdoors 50

personal 50

silence 50

R

radio wave safety 57

reading your messages 31

redial from Call list 19

redialling last number 19

reminder 34

repeat option 34

reply from Call list 19

replying to a message 31

restricted dialling 42

Ringer 22

ringer type setting 39

ringer volume setting 39

roaming 8

S

safety information 58

screen animation 41

security in general 58

security menu 41

semitones 39

sending a message 29

settings menu 38

shortcuts

to the Names list 28

silence quick setting 50

silent ringer 22

SIM card 3

SMS 9, 29

SOS call 15, 29

storing a message 32

storing a name 28

storing a number 28

storing a number from the Call list 33

switching on/off 4

symbols 11

T

T9™ Text Input 24

table of characters 16

table of emotion icons 30

text entry 16, 24

time and date 4, 43

time setting 38, 44

timers 35

to do 33

troubleshooting 61

U

unlocking the keypad 22

unmuting a call 21

upper case 16

V

voice command 47

voice dialling 19

voice mail messages 32

voice memo 38

voice tag

assigning 47

changing 47

deleting 47

volume control

earpiece 20

ringer 39

volume keys 10

W

wait characters 52

week view 34

writing a message 23, 29

Z

zoom 38



Tegic Euro. Pat. App. 0842463