

# SIEMENS



For more comfort and efficiency, use Siemens Original Accessories, these also enable safe use whilst driving. Non Original Accessories can damage your phone.

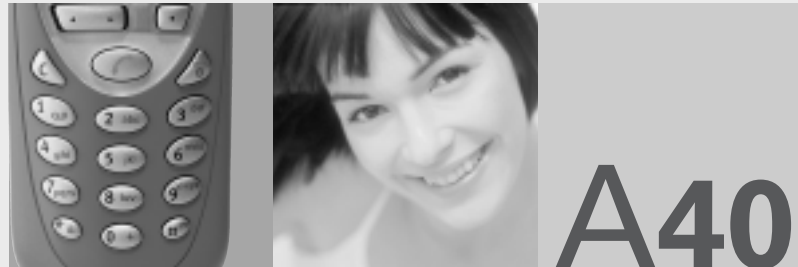 
Issued by  
Information and Communication mobile  
Haidenauplatz 1  
81667 München

© Siemens AG 2001  
All rights reserved. Subject to availability.  
Rights of modification reserved.

Siemens Aktiengesellschaft  
<http://www.my-siemens.com>

Ref.No.: A31008-H4400-A1-1-7619

## Be inspired



## User Guide



<b>Overview</b> .....	<b>2</b>	<b>CB Cell Broadcast</b> .....	<b>20</b>
<b>Safety</b> .....	<b>3</b>	CB Setup .....	20
<b>Introduction</b> .....	<b>4</b>	Reading Cell Broadcast Messages .....	20
Icons Used .....	4	<b>Voice Mail</b> .....	<b>21</b>
Icons on the Display .....	4	Configuring Voice Mail .....	21
<b>Menu Control</b> .....	<b>5</b>	Hearing Voice Mail .....	22
<b>Getting Started</b> .....	<b>6</b>	<b>Applications</b> .....	<b>23</b>
1. Insert CLIPit Folio .....	6	<b>Missed Calls</b> .....	<b>24</b>
2. Insert SIM Card .....	6	<b>Ringers/Melodies</b> .....	<b>25</b>
3. Insert and Charge Battery .....	7	Switching the Ringer On/Off .....	25
4. Switch Telephone On .....	7	Setting the Ringer Volume .....	25
5. Emergency Call .....	7	Setting the Melody .....	25
6. Enter PIN .....	8	Switching Service Tones On/Off ...	25
7. Standby Mode .....	8	Switching CB Tones On/Off .....	25
8. Switch Telephone Off .....	8	Key Sound .....	25
<b>Making Calls</b> .....	<b>9</b>	Switching All Tones On/Off .....	26
Dialling with the Keypad .....	9	Switching the	
Ending Calls .....	9	Silent (Vibrating) Alert On/Off .....	26
International Number .....	9	<b>Setup</b> .....	<b>27</b>
Redialling .....	10	Language .....	27
Answering Calls .....	10	Time .....	27
Unwanted Calls .....	10	Charges .....	27
Active Number .....	10	Divert .....	28
<b>Phonebook</b> .....	<b>11</b>	Security .....	29
Saving Numbers .....	11	GSM Services .....	30
Calling from Phonebook .....	12	Car Use .....	31
Phonebook Menu .....	12	<b>Troubleshooting</b> .....	<b>32</b>
Saving the Tone Sequence .....	13	<b>Data</b> .....	<b>34</b>
<b>Fast access dialling</b> .....	<b>14</b>	Licensing .....	34
<b>During a Call</b> .....	<b>15</b>	Technical Data .....	34
Changing the Volume .....	15	Care of Phone .....	34
Time/Units .....	15	Care of Your SIM Card .....	34
Call Waiting .....	15	<b>Accessories</b> .....	<b>35</b>
Answering Calls .....	15	Basics .....	35
Rejecting Calls .....	15	Car Solution .....	35
Conducting a Second Call .....	15	Further information .....	36
<b>Text Messages (SMS)</b> .....	<b>16</b>	<b>GSM Network Control Codes</b> .....	<b>37</b>
Reading New Messages .....	16	<b>International Service</b>	
Writing and Sending Messages .....	17	<b>Numbers (Hotline)</b> .....	<b>38</b>
Message Lists .....	18	<b>Index</b> .....	<b>39</b>
Replying to Messages .....	19		
Displaying Capacity .....	19		
Setting the Service No. ....	19		

## Reception strength

## Navigation key

Scroll through menus and lists.  
Open the Phonebook in standby.  
Adjust volume during call.

## Call key

Answer calls.  
Dial displayed number or name.

## Correction key

Delete characters or words.

## Ringer On/Off

**Hold down:**  
Switch ringer on/off.

## International code

(→ p. 9)

## Battery level

## Menu

Set the telephone and network functions.

## Softkey

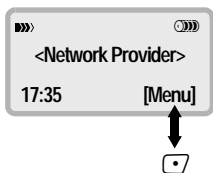 
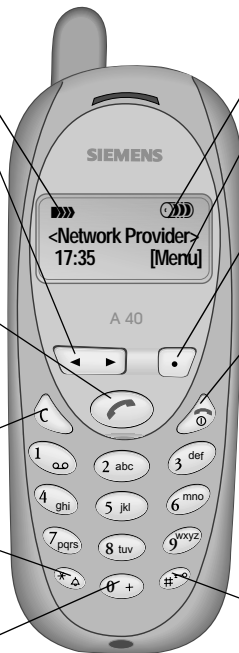 
Execute the function shown on the display (see note below).

## On, Off, Disconnect key


- **Long press:**  
Switch telephone on/off (from standby).  
Skip back to standby.
- **Short press:**  
End call,  
Return to a higher menu level as far as standby.


## Key lock

**Hold down:** Lock on/off.  
Protects the keys from being activated inadvertently.



## Note: Softkeys

The function currently active is indicated by a text on the display. In order to execute the function displayed, you must press the so-called softkey  on the keypad.

To call up the Main Menu in this example, press .

All radio transmitters are subject to restrictions such as:



Switch off in hospitals and in the vicinity of medical devices, e.g. pacemakers or hearing aids. Mobile phones can interfere with the function of these devices.



Always use the handsfree kit for calls while driving (Accessories, → p. 35).



Mobile phones must be switched off at all times in an aircraft. Prevent accidental activation.



Switch off near petrol stations, fuel depots, chemical plants or blasting operations. Mobile phones can interfere with the operation of technical installations.



The ring tone is reproduced through the earpiece. To avoid damage to hearing, first accept the call, then hold the phone to the ear.



SIM card may be removed. Caution: small parts could be swallowed by children.



The mains voltage specified on the power supply unit must not be exceeded.



We recommend you use only original Siemens batteries (100% mercury-free) and charging devices. Otherwise considerable health risks and damage to the product cannot be excluded.



Neither the phone nor the battery (100% mercury-free) may be opened under any circumstances. Changes to this device are strictly prohibited, as they will invalidate the type approval criteria required for operation of the unit.

Please note:



Dispose of used batteries according to the legal regulations.



Mobile phones can interfere with the operation of nearby TVs, radios, PCs.



We recommend you use only original Siemens accessories to avoid possible damage and to comply with the existing regulations.


 






Improper use invalidates the warranty!

## Package Contents

- A40 telephone
- User guide
- NiMH battery
- Power supply unit
- CLIPit folio set











 
 





 


## Icons Used

The following icons appear in the User Guide:

	Use the keypad to write numbers or letters.
	Navigation key
	To scroll, press the key at the right or left as indicated.
	Use the softkey for the function displayed above.
	Correction key: Press briefly to clear the last character, hold down to clear the word or the number.
	Call key
	On/Off/Disconnect key
	Network-dependent feature. Not available from all network providers.
<b>[OK]</b>	Bold text indicates a displayed function which is executed using the corresponding key.
<Text>	Variable text
→	Operating step performed by the user, e.g. scroll through the menu, select a menu item.


## Icons on the Display

 
The most important display icons:

Status/Events	
	Local network area
	New text message, new voice mail, new missed call.
	All calls diverted.
	Ringer off
	Key lock
	Set up connection
	Connection set up
	Incoming call
	Network access barred
	Restricted network connection - emergency calls OK
	No encryption (network-dependent)
✓	Action successfully executed, On
✗	Action not executed, Off
	Active line (number)
Menu Icons	
	Event
	SIM applications
	Phonebook
	Text messages
	Missed calls
	Voice mails
	Ringers/melodies
	Extras

 
## Example: Setting the Language in standby

### Step 1: Open the menu

Press  to call up the [Menu].



### Step 2: Scroll through menu

 
Use the  key to scroll between the main menu items (e.g. to **Setup**).

 


### Step 3: Confirm selection

Select the **Setup** main menu item by pressing the  key.

 
### Step 4: Scroll through submenu

Press  to scroll to **Language** submenu.



 
### Step 5: Confirm selection

Select the **Language** sub-menu item with the  key.

 


### Step 6: Open the menu

Select the **Language** sub-menu item with the  key.




### Step 7: Scroll through submenu

Press  to scroll between the menu items (e.g. to **English**).



### Step 8: Confirm selection

Confirm your selection by pressing the  key.

### Step 9: Back



**Holding** this key **down** brings you to standby mode.



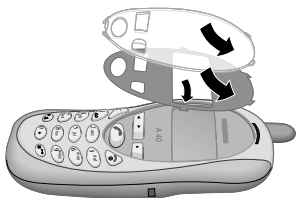 
**Pressing briefly** takes you back one menu level.

## 1. Insert CLIPit Folio

- Remove transparent CLIPit as shown.



- Insert CLIPit folio as shown. Make sure the retaining clips are correctly positioned.



- Then replace transparent CLIPit.

Additional folio designs are available on the Internet (please refer to the attached CLIPit folios for the address).

## 2. Insert SIM Card

Your service provider will supply you with a SIM card, which stores information regarding your connection and billing details.

"Care of Your SIM Card", → p. 34.

Older SIM cards are only compatible if they are 3 V mini SIM cards. Contact your service provider if you have any questions or problems.

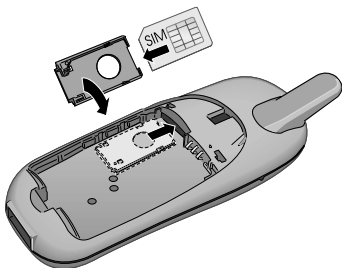 
If a credit card sized SIM was delivered snap the smaller section out.

Switch the phone off before removing the battery.

- Unlock and remove the battery cover.



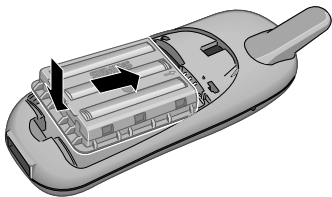 
- Remove the SIM card holder.
- Insert the SIM card into the holder. Ensure that the angled corners and contact surfaces are correctly positioned.
- Turn the card and holder over (the SIM card contacts are face down) and insert into the device as indicated by the arrow.



## 3. Insert and Charge Battery

### To Insert the Battery

- Insert the battery as indicated below (contacts on top end).





- Refit the cover, ensure the top end is flush before pressing it closed (until it clicks).

### To Charge the Battery:

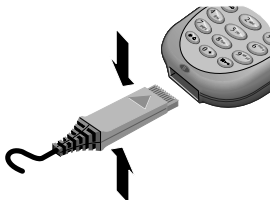 
Your new battery will not be fully charged:

- Insert the plug into the socket in the phone (see illustration below).
- Plug the charging unit into the mains power socket (first checking the rated voltage of the charging unit).

 The charging progress is shown on your display. You may use your phone whilst charging.

 Charging complete. Battery is fully charged.

- To release, squeeze the arrows on the plug together and remove.



### Charging Time

Allow at least 3 hours for your first few charges. 1.5 - 2 hours are enough after this.

### Usage Time

A full charge can provide from 60 to 150 hours standby, or from 90 to 240 minutes talk time (depending on use and network conditions).

A beep sounds when the battery needs charging.

## 4. Switch Telephone On



Hold down to switch on.

If **Insert SIM Card** is displayed, check that the SIM card is correctly inserted (→ p. 32).

## 5. Emergency Call

You can contact the emergency services at any time even without a SIM card. Simply dial 112 (999 in the UK).



## 6. Enter PIN

Your SIM card is provided with a PIN to prevent misuse:



Enter the PIN.  
The display is suppressed  
(You can correct mistakes  
using ).



Press .

It may take a few seconds to register your phone with the network.

 
### PIN

The SIM card will be blocked after the third incorrect PIN entry (→ p. 32).

To switch on/off PIN control or to change your PIN number (→ p. 29).

## 7. Standby Mode

If the name of the network provider is displayed, the telephone is on standby:



You can now make calls, answer calls and use the other telephone functions.

If the Date/Time function is on (→ p. 27), you will see the time displayed.

- Strong reception signal.
- If the signal is weak, call quality or continuity may be impaired.

You can normally improve reception by moving to a window or open space.

If you are outside your "home" network (→ p. 30) or abroad, your phone will automatically select another GSM network (→ p. 30). Your network provider may restrict the selection of another network (→ p. 30).

## Key Lock

Activating the key lock prevents keys being pressed inadvertently.

- Hold down.

The key lock is activated. Any key can now be pressed without a function being executed.

Deactivating the key lock:

- Hold down.

## 8. Switch Telephone Off

- Hold down  
(in standby mode).

## Dialling with the Keypad

The telephone must be switched on (standby).



Always enter the number with the area code (where applicable with the international code).



You can use the  key to correct any mistakes.



Press. The number displayed is dialled.

You can use the **[Save]** function to store the number in your Phonebook (→ p. 11).

## Ending Calls



Press.

Press this key even if the other party hangs up first. The call is ended.

For easier, quicker, error-free use you can:

- Redial numbers.
- Use the Phonebook (→ p. 12).
- Use speed dialling (→ p. 14).
- Dial numbers in messages (→ p. 16).

## International Number

An international number comprises the international prefix, the country code (e.g. 49 for Germany) and the national number (often without the first digit):



Hold down until "+" appears.



Enter the country code and number.



Press.

## Redialling



The last numbers dialled are stored (max. ten, depending on your SIM card).



Press.

A list is opened of the last numbers dialled.



Scroll to the required number.



Press. The number displayed is dialled.

## Processing Lists

You can save an entry to a list or delete the list.



Press.



Scroll to the required entry.

[Options]

Press.



Scroll to the required option.

[Select]

Press to save an entry to a list or delete the list.

## Answering Calls

In certain cases, the caller's name or number is displayed (→ p. 11).



Press.

## Unwanted Calls

You can reject unwanted calls. If you receive a call:



Press. The caller hears the busy tone.

or

[Busy]

Press.

**Divert is on** appears if call diversion is activated (→ p. 28).

## Active Number



When an alternative number is registered for the telephone it is possible to switch between numbers in standby mode:



Press.

Line **2/1** Press to switch the line.

You can enter frequently dialled numbers along with the associated names in the Phonebook, enabling you to dial quickly and without errors.

If caller number transmission is activated, the name of the caller is shown on the display, providing there is a corresponding entry in the Phonebook.

## Saving Numbers

When you are in standby mode you can make a new entry:



Always enter the number with the area code.

For frequent travel abroad, enter the international code (→ p. 9).


[Save]



Save entry.

Enter the name that belongs to the number (see below).



Press  to confirm your entry.



Return to standby mode to enter another number.

or



Dial the number.

A number can consist of up to 20 characters.

Up to 250 Phonebook entries can be made, depending on the SIM card.

## Writing Names

Press the digit keys repeatedly until the character you want appears. The cursor advances after a short delay.



Press once briefly for A, twice for B, etc.



Press briefly to erase the character preceding the cursor, hold down to erase the whole word.



Press to switch between upper and lower case letters (only applies to the adjacent character). The first character is written in upper case as standard.



Press to create a space.



Numbers and letters with accents appear after letters.



Press briefly to move the cursor from character to character. Hold down to move from word to word.

## Entering Other Characters



These keys are used for punctuation, common icons and Greek characters.

Available characters (→ p. 18).

You may enter a range of numbers for the same person, e.g.:

- Ann O (Office)
- Ann H (Home)

The entries are sorted alphabetically, however only the first six letters of each name are taken into account.

## Calling from Phonebook

You can access the Phonebook directly from standby mode (→ p. 5):



Press to open the Phonebook.



Select a name by entering the first letter and/or scrolling.



Press.

## Phonebook Menu

### Own Number

The first entry in the Phonebook is reserved for your own phone number. This means that you can display your own number at any time. You cannot dial this number. If your number is not already entered, you can do this as follows:

[Menu] → Phonebook → <Own number>

[Set] Press.



Enter the number.

[OK] Confirm entry.

### Alternative Line



If your SIM provides an alternative line (Line 2), you can view or set the second number.

## New Entry

[Menu] → Phonebook → <New entry>



Always enter the number with the area code. For frequent travel abroad, enter the international code (→ p. 9).

[OK] Confirm entry.



Enter the name.

[OK] Confirm entry.

## Edit Phonebook Entry

Several options are available for each displayed entry:

[Menu] → Phonebook → <Entry> → [Options]

### View entry

### Edit entry

The number is displayed with a flashing cursor:



Alter the number.

[OK] Confirm changes and repeat for entering the name.

### Delete entry

### Clear Phonebook

### Capacity

The memory available on the SIM card is displayed.

## Saving the Tone Sequence

You can save your numbers in your Phonebook together with tone sequences (digits), e.g. for remote reply of an answering machine.



Enter the number.



Hold down until a “+” appears (pause during connection setup).



Enter the digits.



If necessary insert more pauses to ensure that the numbers are processed securely on the receiver side.

## Sending a Tone Sequence

A tone sequence can be entered manually after a connection has been set up:



Enter the numbers for the tone sequence.

## Service numbers



Your service provider can equip your SIM card with service numbers. If this case, you will see **<Service numbers>** as an entry in your Phonebook.

[Menu] → Phonebook → **<Service numbers>**



Scroll to the required service number.



Press. The number is dialled.

## Information Numbers



Your service provider can equip your SIM card with information numbers. These numbers can be stored together in directories (e.g. hotels, weather). The numbers or directories are automatically available as entries in the Phonebook.

If appears beside an entry, it can only be dialled in the local network.

### Dialling Information Numbers

[Menu] → Phonebook → **<Info Numbers>**



Scroll to the required directory.



Press to open the directory.



Scroll to the required entry.



 
Press. The number is dialled.

## Active Line



 
[Menu] → Phonebook → **<Active Line>**

The line is active in the following example. You can switch to **Line 2**.




 
Press to switch to **[Line 2]** in this example.

To accelerate dialling, you can define speed dialling numbers for the entries in your Phonebook. You can use the digit keys 2 - 9 for this purpose.

The number for checking the mailbox is assigned to the digit key .

 
## Assigning Speed Dialling Numbers

This is how to allocate a speed dialling number (in this case 3):

-  Press.
- [Set]** Press to open the Phonebook.
-  Scroll to the required entry.
- [Select]** Confirm.


The speed dialling number (in this case 3) is linked with the selected Phonebook entry.

## Making Calls using Speed Dialling Numbers

-  Enter the speed dialling number.

The Phonebook entry corresponding to the speed dialling number is displayed.



-  Press. The number is dialled and the connection is set up.

Only the first six characters of a name can be displayed.

## Next Speed Dialling Number



Press .



Scroll to the required speed dialling number.



Press. The number is dialled and the connection is set up.

## Changing Speed Dialling Numbers

You can change a speed dialling number.



Press .

The Phonebook entry and corresponding speed dialling number are displayed.

Twice in succession:

- [Reset]** Press.

Assign a new speed dialling number (see above).

## Changing the Volume

You can set the handset volume while a call is in progress. There are five volume settings.



Press to change the volume.

## Time/Units



The call duration or the units are displayed during and after a call (→ p. 27).

## Call Waiting



If someone calls you while you are on a call, you will hear a Call Waiting signal.

If may be necessary to apply to your service provider to have this function enable. To activate/deactivate Call Waiting or to check the status of the function (→ p. 37).


## Answering Calls



Press.

The first call is placed on hold and the new call is answered. You can now toggle back and forth between the two calls (swap).



Press  to swap.

## Rejecting Calls

You can reject a new call:



Press.

If you have activated Divert to the mailbox, then the call is diverted.

## Conducting a Second Call



You are on a call and make a call to a second subscriber.



Enter the number.

or

[Menu]


Press and select entry from Phonebook.



Press. The connection is set up.

In both cases the current call is put on hold and the new call is set up. You can swap between the two calls.



Press  to swap.

## Ending a Connection



Press.


[OK]

Confirm the prompt. You return to the call on hold.



Your phone can receive and send text messages (Short Message Service, SMS). Your service provider will advise you concerning service availability and operation.

## Reading New Messages

A new text message is indicated by the following icon :



To read the message:

**[Menu]** → **Events** → **New Message**

The display indicates the date and time at which the message was received.



Scroll to read the number and the message.

The end of the message is indicated by a mark.

When you have read the message you will be asked if you want to delete this message. You should delete messages regularly as the capacity of your SIM card is limited (see below).



Once you have read the message scroll to the next one.



Press to dial a selected number in the text message (▶08998765432◀).

## Options While Reading

You can access the following functions when reading a message:

**[Options]** Press.



Scroll to the required function and then:

**[Select]** Press to execute a function.

**Call active no.**

**Save active no.**

Saves the number in your Phonebook.

**Reply to sender**

Sends a reply to the originator.

**Edit Message**

Edits the received message.

Can also be used to enter a new address.

**Delete Message**



Flashes when the message memory is full. You cannot receive any more messages when the memory is full.

**[Delete]** Press to confirm the security prompt.

## Writing and Sending Messages

You can create text message containing up to 160 characters.

To send a text message, this must first be forwarded to the Service Centre. The number of your Service Centre is usually preset. Otherwise you must enter this manually (→ p. 19). The Service Centre number is available from your service provider.

[Menu] → Messages → Create Message



Enter the message text.  
(See the box below for writing text).

After entering the message text:

[Options] Select.

[Select] Confirm the prompt for sending the text message.



Enter the number or dial from the Phonebook.

Send Message Confirm.

or



Press to send.

You are advised when your message has been sent, then you can save it. It will appear in your sent message list.

### Writing Text

Press the digit keys repeatedly until the character you want appears. The cursor advances after a short delay.

**2 abc** Press once briefly for A, twice for B, etc.

**C** Press briefly to erase the character preceding the cursor, hold down to erase the whole word.

**\* Δ** Press to switch between upper case and lower case letters. The first character is written in upper case as standard.

**1 □** Press to create a space.

**1/Ä** Numbers and letters with accents appear after letters.

**← →** Press briefly to move the cursor from character to character. Hold down to move from word to word.

**1 □** Space 1 € £ \$ ¥

**2 abc** Aa Bb Cc 2 Ää Çç

**3 def** Dd Ee Ff 3 Éé è

**4 ghi** Gg Hh Ii 4 ì

**5 jkl** Jj Kk Ll 5

**6 mno** Mm Nn Oo 6 Öö ñ ò

**7 pqrs** Pp Qq Rr Ss 7 ß

**8 tuv** Tt Uu Vv 8 Üü ù

**9 wxyz** Ww Xx Yy Zz 9 Ææ Øø Åå

**\* Δ** A - a \* / ( ) < = >  
% □

**0 +** + 0 - . , : ? ;

! " ' ; \_

**#** # @ & § Γ Δ θ Λ

≡ ∏ ∑ Φ Ψ Ω

## Options While Writing

When writing a message, other functions are available in addition to the send function:

### Save message

Saves the message.

### Insert from:

Opens the Phonebook to select a number.

 
### Insert new line

Begins a new paragraph.

### Discard message

Delete the text input.

[Options] Press.

 Scroll to the required function and then:

[Select] Press to execute the required function.

### Info

If the message could not be sent, you are given the option of repeating the action. If the send action fails again, check that your Service Centre number is correctly set (→ p. 19).

Note that "Message sent!" means that the message has only been received by your Service Centre. It will then try to send it on to the recipient within a certain period of time.

## Message Lists

Your messages are saved in an incoming or outgoing list.


### Inbox

In the incoming list, there are several options when a message is displayed:

#### New Message

[Menu] → Messages → Incoming List →  
<Select Message> →  
Read Message

Read **new** message.

 Scroll through the message.


For editing options when reading (→ p. 16).

#### Old Messages

[Menu] → Messages → Incoming List →  
<Select Message> → [Options]

#### Read Message

Read **old** message.

 Scroll through the message.

For editing options when reading (→ p. 16).

#### Edit Message

For information on procedure, see the section on "Options While Writing", → p. 18.

#### Delete Message

[Delete] Press.  
Confirm security prompt.

## Outbox

If you select a sent message in the outgoing list, the text is displayed.


If you select an unsent message which contains a number, the number is displayed.

The following options are available:

[Menu] → Messages → Outgoing List →  
<Select Messages> → [Options]

### Read Message

Read message.

 Scroll through the message.

### Edit Message

For information on procedure, see "Options While Writing" (→ p. 18).

 
### Delete Message

(→ p. 16)

[Delete] Press.  
Confirm security prompt.

You have the following options when reading a text message:

[Options] Press.

 Scroll to the required function and then:

[Select] Press to execute a function.

Call active no.

Save active no.

Send Message

 
Edit Message

Delete Message

## Replying to Messages

A received message can be read as follows:

[Options] Press.

 Scroll to the **Reply to sender** option.

[Select] Press.

Here you can edit a message and then send it (→ p. 17).

## Displaying Capacity


[Menu] → Messages → Capacity

The amount of occupied and free storage space for messages on the SIM card is displayed.

## Setting the Service No.

This is where you enter the number of the Service Center. If this number is not already contained on the SIM card, you can obtain it from your service provider.

[Menu] → Messages → Set Serv. Center

 Enter the number.

[OK] Confirm entry.

Some service providers offer information services for local areas (Cell Broadcast, CB), e.g. display of the local area code. Service availability depends on the network where you are registered.

If "Cell Broadcast" is activated, you will receive cell broadcast messages. For more information on this, contact your service provider.

## CB Setup

### CB On/Off

[Menu] → Messages → Setup → Messages

[Change] Press.  
Cell Broadcast is switched on/off.

Note that operating times are reduced if Cell Broadcast is activated.

### Setting the CB Channel

The numbers for the available CB channels can be obtained from your service provider. You can only set one CB channel.

[Menu] → Messages → Setup → <Channel ID>

[Change] Press.  
The last active channel number is displayed if available.



Where necessary, delete the old channel number and enter the new CB channel.

[OK] Confirm entry.

## Reading Cell Broadcast Messages

In standby mode, a new **CB** message is indicated by an icon in the last display line:



### Reading New Broadcasts



Press to read the message or scroll through it.

### Rereading Broadcasts

[Menu] → Messages → Message List



Press to read messages.

Scroll to read broadcasts (arranged in chronological order). If the message memory is full, the oldest messages are overwritten.

The service provider can provide you with an external answering machine (mailbox). Calls that you fail to answer because:

- your telephone is switched off
  - you do not answer the call
  - you are on another call
- can be forwarded to this mailbox. The caller can then leave you a voice message.

The following descriptions may vary somewhat depending on the service provider.

## Configuring Voice Mail

Your network provider will supply a mailbox number as well as a number for call forwarding.

### Configuring a Mailbox Number

 
This number is used in order to hear the voice mail you have received.

 
[Menu] → Voice Mail → Mailbox Number → [Set]



Enter the Mailbox number.

[OK] Confirm.

On some SIM cards  is automatically assigned the mailbox number when the mailbox is set up.

If your SIM card does not have this function, you should assign  as the speed dial key for the mailbox (→ p. 14).

### Change Mailbox Number

[Menu] → Voice Mail → Mailbox Number → [Change]



Delete old number.



Enter the new number.

[OK] Confirm new number.

### Divert to Mailbox

Unanswered calls are diverted to this Service Center number (Mailbox) for recording. This can be set as follows:

[Menu] → Voice Mail → Divert

[Check] Press. The current setting is checked (This option is only available once the SIM card has been inserted).

[Change] Switch on divert (if switched off).

The last divert number used is displayed.



Press to delete the number.




Enter the new divert number.

[OK] Confirm.

**Divert On** appears after each call as a reminder.

## Hearing Voice Mail

A new voice mail is indicated by the following icon :



The Event menu indicates whether the call in question is a voice mail. A text message or a call with an automatic announcement can also indicate the arrival of a new voice mail (see below).

**[Menu] → Events → Voice Mail**

Options for hearing voice mails:

**[Menu] → Voice Mail → Call Mailbox**

or

calling using the speed dial key:



Press.



Call the mailbox.

## Messages via SMS

You receive a text message (SMS) informing you that a new voice mail has been received. The text message contains the mailbox number which is marked and which you can call directly (→ p. 16).

## Messages via automatic announcements

You receive a call with an automatic announcement informing you that a new voice mail has been received. You may be connected to your mailbox automatically.



Your service provider can provide you with additional services via the SIM card, such as banking, stock market news, etc. (SIM Application). Such services are controlled by the SIM card, so that your telephone has no control over the procedure.

If you are registered for such a service, the service name will appear as the first entry in the main menu.

SIM services enable any future additions to the service provided by the service provider, to be integrated to your telephone.



This callback list stores the numbers of the last five calls that were not answered. This requires that the number has been identified.



Display when a new missed call has been stored.


**[Menu] → Events → Missed calls**

**[Select]** Display missed calls.



Scroll to the required entry.

The number or the name of the caller is displayed. If Time/Date is activated (→ p. 27) then the time and date of the call are displayed alternately.

Now press  to dial the number.

## Editing the List

You can save a list entry or delete it from the list.

**[Menu] → Missed Calls**

**[Select]** Display missed calls.



Scroll to required entry.

**[Options]** Press.



Scroll to required option.

**[Select]** Press to save list entry or to delete the list.

## Switching the Ringer On/Off

You can switch the ringer on/off or set a short beep.


[Menu] → Ringer/Tones

[Change] Press to switch the ringer on/off or to set a short beep.

## Setting the Ringer Volume

[Menu] → Ringer/Tones → Volume

[Change] Start change.

 
 Set volume at one of four levels.

[OK] Confirm required volume.

 
## Setting the Melody

You can set the ringer melody.

[Menu] → Ringer/Tones → Melody

 Select ringer melody.

[Change] Start change.

 Choose from 15 melodies.

[OK] Confirm selection.

## Switching Service Tones On/Off

You can switch on/off the audible signals for the following:

- Connection to the network.
- Message/**CB** message.
- Connection set up.

The "Low Battery" warning tone cannot be deactivated.

[Menu] → Ringer/Tones → Service Tones

[Change] Press.  
The service tones are switched on/off.

## Switching **CB** Tones On/Off

You can switch on/off the signal announcing a new **CB** message.

[Menu] → Ringer/Tones → Tones

[Change] Press to switch **CB** tones on/off.

## Key Sound

You can set the signal that sounds at a keystroke (off, click or tone).

[Menu] → Ringer/Tones → Key Sound

[Change] Press to switch the key sound or click on/off.


## Switching All Tones On/Off

[Menu] → Ringer/Tones → All Tones

[Change] Press to switch all tones on/off.

or To switch on/off in standby mode:

 Hold down.

 appears in the first display line as a reminder.

## Switching the Silent (Vibrating) Alert On/Off

You can use the silent alert to signal a call even when the ringer is switched off.

[Menu] → Ringer/Tones → Silent alert

[Change] Press to activate the silent alert vibrating function.

In the Setup menu, you can configure, for example, language, unit metering, call diversions and security. You can also enable GSM services for your telephone.

## Language

You can set the display language. The setting "Automatic" sets the language predefined by your service provider.

[Menu] → Setup → Language

[Change] Press.



Select the required language or **Automatic**.

## Time

### Set Time/Date

[Menu] → Setup → Clock →  
Set Time & Date

The time is entered in hh:mm format and the date in DD/MM/YYYY format.

Depending on the language selected, the date format can vary to read MM/DD/YYYY.

The existing values are overwritten when a new time or date is entered.

Invalid entries are not accepted (e.g. 32 as the date value).



Enter the time and date.

[OK] Confirm your entry.

## Switch Time Display On/Off

[Menu] → Setup → Clock →  
Auto Display

[Change] Press. The time/date display is switched on/off.

Displaying the time increases the power consumption of the mobile phone.

## Charges



A unit limit can be set by the service provider on so-called prepaid cards. After this limit has been reached the telephone is locked to outgoing calls.

For more information on prepaid services, please contact your service provider.

You can check how many units have been used and how many are remaining.

[Menu] → Setup → Charges

The number of units used is displayed.

[OK] Press.

The number of units still remaining is displayed.

## Divert



This network feature diverts unanswered calls to another phone or to your mailbox.

[Menu] → Setup → Divert

For how to set a simple divert for unanswered calls (→ p. 21).

For other ways to implement a divert (→ p. 37).

### Setting Divert

[Menu] → Setup → Divert → All unanswered

[Check] Press; the current setting is checked.

or

[Change] Switch divert on/off.

If a destination number is stored, this is displayed.

If you wish to retain the destination number:

[OK] Confirm.

If you wish to enter a new destination number:



Delete the old number.



Enter the new destination number or dial from the Phonebook.

[OK] Confirm entry.

**Divert On** appears after each call as a reminder (dependent upon the service provider).

## Clearing Divert

[Menu] → Setup → Divert → All unanswered

[Check] Press (if offered). The current setting is checked.

or

[Change] Switch Divert off.

### Check Divert

Divert network functions may not always match your display (e.g. if you change the SIM card).

[Menu] → Setup → Divert → Check Status

[Select] Press. The current network status is displayed.

### Clear all Diverts

[Menu] → Setup → Divert → Clear Diverts

[Select] Press.

#### Active Line:

If the SIM card or service provider supports an alternative line, then separate settings can be made for each number (e.g. ringers, call divert, etc.). The relevant call number must be activated for this purpose (→ p. 10).

## Security

### Security Codes

Use of your SIM card is controlled by the PIN (Personal Identification Number) you received from your service provider.

A super pin (PUK) is also provided for unlocking the SIM card after the third incorrect PIN entry.

The phone is protected by the phone code (4 - 8 characters in length) which you enter with the first security setting.



It is important to keep these codes carefully. The phone will be locked after three incorrect entries (your network provider may charge for unlocking).

### SOS

Emergency 112 (999 in UK) calls can always be made.

### PIN Setup

#### PIN Control

The PIN must be entered each time the phone is switched on. This PIN control can be deactivated. The SIM card is then no longer protected against misuse by unauthorized persons. As a result, some SIM cards do not support PIN control deactivation.

[Menu] → Setup → Security →  
PIN Control

### Change PIN

You can change the current PIN to another 4 - 8 digit number that is easier to remember:

[Menu] → Setup → Security →  
Change PIN



Enter the current PIN.

[OK]

Confirm entry.



Enter the new PIN.

[OK]

Confirm entry.



Repeat new PIN.

[OK]

Confirm entry.

### Protection Against Theft

The telephone can be linked to your SIM card using the phone code. If this feature is activated, the phone cannot be operated with a different SIM card. If you lose your phone, your SIM card can be disabled and protected against misuse (→ p. 34).

### Change Phone Code



Enter current phone code.  
The default is 0000.

[OK]

Confirm entry.



Enter the new phone code.

[OK]

Confirm entry.



Repeat new phone code.

[OK]

Confirm entry.

The phone does not support services requiring the use of PIN 2.

## GSM Services

### Network Info

[Menu] → Setup → GSM Service →  
Network Info

A list of GSM service providers are displayed.



Marks the service providers that are barred by your SIM card.



Scroll through the list of GSM service providers.

### Select New Network

You can manually switch service providers when outside your home network. This setting only applies until the next time the telephone is switched off.

[Menu] → Setup → GSM Service →  
Change Network

If the **Auto Network** option is activated, the preferred network is now selected automatically (→ p. 31).

If the **Auto Network** option is deactivated, the available networks are located.



Scroll to the required service provider.

[Select] Press.

The required service provider is selected.

### Auto Network

Automatic service provider selection is implemented according to the sequence of the "Preferred Networks" list.

[Menu] → Setup → GSM Service →  
Auto Network

[Change] Press.  
Auto Network is switched on/off.

If **Auto Network** is switched off, you must select another network manually.

### Operator list

A list of known GSM service providers is displayed.

[Menu] → Setup → GSM Service →  
Operator list



Scroll through the list of service providers.

[Network Info]  
Press to obtain more information.

### Add New Network Provider



Scroll to the option  
**Add new Network.**

[Select] Press.



[OK] Enter the national (MCC) code and network (MNC) code as well as the name of the network provider.

If the name is already in the list, it is automatically displayed.

## Processing the Preferred Network


This list contains your preferred network providers after your home network provider. You can delete entries or add new ones.

### New Network Provider

[Menu] → Setup → GSM Service → Preferred Netw.

 
Your home network provider is displayed.

[OK] Press.

 Scroll to the required entry

and confirm with

[Set] service providers can be preassigned, depending on the SIM card.

 Select the required entry from the list of network providers.


[Select] Confirm.

### Delete Network Provider

[Menu] → Setup → GSM Service → Preferred Netw.

Your home network provider is displayed.

[OK] Press.

 Scroll to the required entry.

[Change] Press.

[Delete] Confirm.

### Conc.ID/Incogn.



[Menu] → Setup → GSM Service → Conc.ID/Incogn.

Activate **Conc.ID/Incogn.** to prevent your number being transmitted for all subsequent calls.



## Car Use

[Menu] → Setup → Car Use → Auto Answer

Calls are answered after the third ring if the telephone is connected to the "Car Kit Portable", → p. 35.




Problem	Possible Cause	Possible Corrective Measures
Unable to switch on phone	Empty battery.	Charge battery. Check charging indication on display.
	Battery contacts dirty.	Clean contacts carefully. Repeat switching on and off.
No charge icon	Battery deeply discharged.	Continue to charge device. The charge icon appears after max. 2 hours.
	Battery defective.	Replace battery. After several years' average use a gradual decline may be expected.
	Contact problem.	Check power supply and connection to telephone.
Charge icon is flashing	Temperature exceeds 0 °C to + 45 °C range.	Ensure correct temperature, allow time, then re-charge.
SIM error	SIM contacts dirty.	Clean SIM contacts with a dry cloth.
	Damaged SIM card.	Make visual check. Return SIM card to your service provider.
	SIM card not correctly orientated.	Ensure SIM is correctly orientated.
	Old SIM card.	Only 3 volt SIM cards may be used. If you are using a 5 volt SIM card, please contact your service provider.
PIN error	3 incorrect inputs.	Enter super PIN (PUK) supplied with your SIM as instructed. If your super PIN or PIN are lost, contact your service provider.
No connection to network	Weak signal.	Move to a higher location, or to a window or open space.
	Outside GSM network.	Check service provider coverage map. Check network information for the device.
	SIM not valid.	Contact your service provider.
	New network not authorized.	Try selecting manually, or try other network (→ p. 30).
Phone loses network	Weak signal.	Reconnection, or connection to another service provider is automatic; AutoNetwork (→ p. 30). Switching off and on may accelerate this.
Calls not possible	Dialling error.	Check the telephone number (correct international and area code).
	New SIM fitted.	Check for new restrictions.
	Charge limit reached.	Contact your network provider.

Problem	Possible Cause	Possible Corrective Measures
Cannot write in PhoneBook	Call restriction set. PhoneBook is full.	Check PhoneBook restrictions. Delete PhoneBook entries.
Cannot find Phone-Book	SIM has been changed.	Refit original SIM.
Voice Mail not working	Divert not set.	Set Divert (→ p. 21).
 flashes continuously	Message store full.	Delete a message to make room (→ p. 18).
Cannot send a message	Service provider does not support this service. Service Centre not configured. Destination does not have compatible phone.	Contact your service provider. Configure Service Centre (→ p. 19). Check.
Cannot set a function	Not supported by service provider or registration required. 	Contact service provider (→ p. 38).
Network provider CODE error	Not authorized for this service.	Contact network provider.

## Accidents

Severe impact damage	Internal damage could result.	Remove and refit battery and SIM card (→ p. 6). Do not dismantle phone.
Immersion in water	Internal damage could result.	Remove battery and SIM. Dry immediately with a cloth, do not heat. Dry connector contacts thoroughly. Stand unit upright in airstream. Do not dismantle phone.

## Reset all phone settings to their original condition

Enter **\*#9999#** and press . The phone code and the settings for the SIM card and the network will not be affected.

## Siemens Service

Worldwide assistance is provided by Siemens Partners - a simple phone call away. See service numbers (→ p. 38) or visit our Internet site.

**Internet:** <http://www.my-siemens.com>

If your phone appears faulty, first check the section → "Troubleshooting", p. 32. If the problem persists contact your service provider or specialist dealer. Incorrect use will render the warranty invalid.

## Licensing

Siemens Information and Communication mobile hereby declares that the mobile A40 is in conformity with the essential requirements and other relevant provisions of Directive 99/5/EC.

A copy of the original declaration of conformity can be found at the following Internet address:

<http://www.siemens.com/a40>

Complies with SAR values as per ICNIRP.

## Technical Data

- GSM Class 4 (2 watts)  
Frequency range  
880 - 960 MHz
- GSM Class 1 (1 watt)  
Frequency range  
1710 - 1880 MHz
- Length x Width x Thickness  
approx. 118 x 46 x 27 mm  
(without antenna)
- Weight: approx. 122 g
- Battery voltage: 3.6 V
- Charging voltage: 3.3 - 5.5 V
- Max. power consumption with  
standard charging unit: 500 mA
- Charging times: 3 h (first time),  
then 1.5 - 2 h
- Standby time: 60 h to 150 h
- Talk time: 90 mins to 240 mins
- Innovatron Patent

## Care of Phone

- Clean the phone with a damp cloth or an antistatic wipe. Do not use chemical cleaning agents.
- Protect your phone from impact and moisture. Do not expose your phone to direct sunlight.

## Care of Your SIM Card

- The SIM card must be treated with the same care as a bank card.
- Do not bend, scratch or expose to static electricity.

### Phone Identification

The following information is important if you lose your phone or SIM card. Please enter:

No. of the SIM card (on the card)

.....

15-digit serial number of the  
phone (beneath the battery):

.....

Service provider's customer service  
number

.....

### In the Event of Loss

If your phone and/or SIM card are lost or stolen, call the service provider immediately to prevent misuse.

## Basics

### NiMh Battery 600 mAh

L36880-N4301-A100

### Travel Charger

L36880-N4001-A103 (EU)

L36880-N4001-A104 (UK)

### Headset PTT

L36880-N4001-A123

Offers optimum freedom of movement with excellent call quality. You can accept calls with the activation key (PTT key).

### Car Charger

L36880-N4001-A108

### Belt Clip

L36880-N4301-A102

Features a belt clip for discrete attachment of mobile phone to clothing or in bags.

### Basic Car Pack

L36880-N4501-A107

Allows handsfree talking and simultaneously charges the mobile phone in the car.

### Talk & Carry Pack

L36880-N4301-A105

Features a belt clip and a headset for convenient handsfree operation.

## Mobility Pack

L36880-N4001-A127

Guarantees mobility, features a headset and a Car Charger.

## Starter Pack

L36880-N4301-A104

Complete handsfree kit for optimum mobility, includes a headset, a belt clip and a car charger.

## Leather Case

L36880-N4001-A118

## Leather Holster

L36880-N4001-A154

## Neoprene Case

L36880-N4001-A155

## Active Bag

L36880-N4001-A120

## Car Solution

### Car Kit Portable

L36880-N3015-A117

Handsfree kit with integral loudspeaker, microphone and auto talk feature. Simply plug in to the cigarette lighter socket; makes mobility between vehicles easy.

## Further information

All products are available from your specialist dealer or from our online shop.

	Original Siemens accessories
Internet address <a href="http://www.siemens.com/mobilestore">http://www.siemens.com/mobilestore</a>	
Telephone:	
France	01 70 20 00 06
Ireland	18 90 26 07 60
Sweden	0 87 52 65 27
Great Britain	0 20 77 44 14 47
→ "International Service Numbers (Hotline)", page 38	

You can implement functions via the GSM network using control codes.
























 





 

Key to the following functions:



Number

t Time (from 5 to 30 seconds) before diversion

ts Teleservice (see below)

Function	Setup	Deactivation	Status query
Number display			
Suppress number for next call	#31#  	*31#  	*#31# 
Divert			
Divert when not available	**62*  * ts # 	##62* ts # 	*#62# 
Divert if no reply	**61*  * ts * t # 	##61* ts # 	*#61# 
Divert all calls	**21*  * ts # 	##21* ts # 	*#21# 
Divert if busy	**67*  * ts # 	##67* ts # 	*#67# 
All divers (if available in the network) 		##002# 	
Restricted divert (if available in the network) 	**004*  * ts # 	##004* ts # 	*#004# 
Call Waiting	*43* ts # 	#43* ts # 	*#43# 

Coding for teleservice ts:

Functionality	All teleservices	Language	Data	Fax	SMS	All except SMS
ts	10	11	12	13	16	19

# 38 International Service Numbers (Hotline)

Worldwide support from Siemens Partners is only a phone call away or available on the Internet at:

**Internet:** <http://www.my-siemens.com>

Abu Dhabi	Siemens Service Center	0 26 42 38 00
Australia	Siemens	18 00 62 24 14
Argentina	Siemens	0 80 08 88 98 78
Austria*	Siemens	05 17 07 50 04
Bahrain	Siemens	40 42 34
Bangladesh	Siemens	0 17 52 74 47
Belgium	Siemens	0 78 15 22 21
Brunei	incomm	02 43 08 01
Bulgaria	Omnitel	02 73 94 88
Cambodia	Siemens	12 80 05 00
Canada	Siemens	1 88 87 77 02 11
China	Siemens	0 21 50 31 81 49
Croatia	Siemens	0 16 10 53 81
Czech Republic	Siemens	02 33 03 27 27
Denmark*	Siemens	35 25 86 00
Dubai*	Siemens	0 43 55 99 88
Egypt	Siemens	0 13 31 31 44
Estonia	Siemens	6 30 47 35
Finland*	Siemens	09 22 94 37 00
France*	Siemens	01 56 38 42 00
Germany*	Siemens	0 18 05 33 32 26
Greece	Siemens	0 16 86 43 89
Hong Kong	Siemens	22 58 36 36
Hungary	Siemens	06 14 71 24 44
Iceland	Smith & Norland	5 11 30 00
India	Siemens	01 16 92 39 88
Indonesia	Dian Graha Elektr.	02 14 61 50 81
Ireland*	Siemens	18 50 77 72 77
Italy	Siemens	02 69 89 36 91
Ivory Coast	Siemens	0 20 21 50 17
Jordan	Siemens	0 79 55 96 63
Kuwait	NGEECO	4 81 87 49
Latvia	Siemens	7 50 11 14
Lebanon*	F.A. Kettaneh	01 44 30 43
Libya	Siemens	02 13 35 02 31
Lithuania	UAB Skaidula	2 39 77 79
Luxembourg	Siemens	43 84 33 99
Malaysia	Siemens	03 79 52 51 84
Mauritius	Ireland Blyth	2 11 62 13
Morocco	Setel S.A.	22 66 92 32
Netherlands*	Siemens	07 03 33 31 00

Norway*	Siemens	22 70 84 00
Oman	Siemens	79 10 12
Pakistan	Siemens	02 15 67 35 65
Philippines	Siemens	28 14 98 88
Poland	Siemens	08 00 22 09 90
Portugal*	Siemens	8 00 85 32 04
Qatar	Siemens	00 97 44 69 67 00
Russia	Siemens	09 57 37 29 51
Saudi Arabia	Siemens	0 26 51 50 94
Sharjah	Siemens	0 65 33 66 42
Singapore	Siemens	8 45 48 18
Slovak Republic	Siemens	07 59 68 22 66
Slovenia	Siemens	0 14 74 63 36
South Africa	Siemens	08 60 10 11 57
Spain	Siemens	9 02 11 50 61
Sweden*	Siemens	0 87 50 99 11
Switzerland	Siemens	0 12 12 00 90
Taiwan	Siemens	02 25 18 65 04
Thailand	Siemens	0 27 15 51 00
Tunisia	Siemens	01 86 19 02
Turkey	Simko	0 21 65 71 89 89
United Kingdom*	Siemens	09 90 33 44 11
Vietnam	Opticom	45 63 22 44
Zimbabwe	Siemens	04 36 94 24



Original Siemens accessories

You can buy original Siemens accessories at <http://www.my-siemens.com>; in countries marked with an asterisk \*, you can call the phone number shown; → p. 36.

**A**

- Accessories
  - battery ..... 7, 35
  - belt clip ..... 35
  - charging unit ..... 7
  - handsfree headset.. 35
  - travel charger ..... 35
- Activating ..... 7
- Active line ..... 13
- Alternative
  - line ..... 10, 12, 13
- Answering machine
  - Mailbox
- Applications
  - SIM services ..... 23
- Audible signals
  - Warning tones

**B**

- Battery
  - charging ..... 7
  - charging time ..... 7, 34
  - inserting ..... 7
  - reserve battery ..... 35
  - standby ..... 7
  - standby time ..... 7, 34
  - talk time ..... 7, 34
  - usage time ..... 7, 34
  - warning tones ..... 25
- Belt clip ..... 35

**C**

- Call duration
  - displaying ..... 15
- Call key ..... 2
- Call waiting
  - second call ..... 15
- Callback ..... 24

**Calls**

- answering ..... 10
- answering a
  - second call ..... 15
- automatic answer ... 31
- ending ..... 9
- missed ..... 24
- rejecting ..... 15
- rejecting a
  - second call ..... 15
- second ..... 15
- unwanted ..... 10
- Car use ..... 31
- Care of ..... 34
  - SIM card ..... 34
  - telephone ..... 34
- CB → Information
  - services
- Cell Broadcast
  - Information services
- Charges
  - display ..... 27
- Charging time
  - battery ..... 7, 34
- Charging unit
  - connecting ..... 7
- Cleaning ..... 34
- CLIPit Folio ..... 6
- Control codes
  - GSM network ..... 37
- Correction key ..... 2
- Country codes ..... 9
- Customer service
  - service provider ..... 34
  - Siemens ..... 38

**D**

- Date
  - format ..... 27
  - setting ..... 27
- Deactivating ..... 7, 8
- Dialling ..... 9
- Dialling with the
  - keypad ..... 9
- Digit keys
  - assigning ..... 14
- Display
  - features ..... 2
  - setting the
    - language ..... 27
- Divert
  - activating ..... 28
  - alternative line ..... 28
  - checking ..... 28
  - deactivating ..... 28
  - deleting ..... 28
  - GSM code ..... 37
  - mailbox ..... 21
- DTMF
  - saving ..... 13
  - sending ..... 13
- During a call ..... 15

**E**

- Emergency calls ..... 7

**G**

- Getting started ..... 6
- GSM
  - adding network
    - providers ..... 30
    - class ..... 34
    - network
      - control codes ..... 37
      - operators ..... 30
      - services ..... 30



**H**

- Headset..... 35
- Help
  - technical (hotline) ... 38
- Hotline..... 38

**I**

- Icons on the display .... 4
- Icons used..... 4
- Inbox
  - text messages..... 18
- Incognito ..... 31
- Information numbers. 13
- Information services
  - reading messages .. 20
  - rereading
    - messages ..... 20
    - setting the channel . 20
    - setup ..... 20
- International numbers . 9
- Introduction ..... 4

**K**

- Key lock..... 2
  - activating ..... 9
  - deactivating ..... 8
- Key sounds ..... 25
- Keypad ..... 9
- Keys
  - call key..... 2
  - correction key..... 2
  - key lock ..... 2
  - navigation key..... 2
  - on, off,
    - disconnect key ..... 2
    - soft key..... 2

**L**

- Language
  - date format ..... 27
  - display ..... 27
  - setting ..... 5
- Licensing ..... 34
- Line
  - active..... 13

**M**

- Mailbox ..... 21
  - changing number ... 21
  - checking..... 22
  - configuring ..... 21
  - configuring a divert . 21
  - listening to
    - contents ..... 14
  - messages via
    - automatic
      - announcements ..... 22
      - messages via SMS . 22
      - number ..... 21
      - speed dial key ..... 21
- Making calls ..... 9
  - speed dialling
    - numbers..... 14
- Menus
  - back ..... 5
  - scrolling..... 5
- Message lists ..... 18
- Missed calls
  - calling back..... 24
  - displaying number... 24

**N**

- Names
  - entering..... 11
- Navigation key ..... 2

**Network**

- adding network
    - providers ..... 30
  - automatic selection. 30
  - deleting network
    - providers ..... 31
  - information..... 30
  - list ..... 30
  - manual selection .... 30
  - preferred ..... 31
- Numbers**
- active..... 10
  - entering..... 9
  - international ..... 9
  - missed calls ..... 24
  - preventing
    - transmission..... 31
  - saving..... 9, 11
  - second ..... 10, 12
  - suppressing the
    - display (GSM code) . 37

**O**

- On, off, disconnect key 2
- Outbox
  - text messages ..... 19
- Own number ..... 12

**P**

- Package contents ..... 3
- Personal Identification
  - Number → PIN
- Phone code
  - changing..... 29
- Phonebook..... 9, 11
  - allocating an entry ... 14
  - calling from ..... 12
  - capacity ..... 12
  - changing speed dialling
    - numbers..... 14

- deleting speed dialling numbers ..... 14
- edit entry ..... 12
- entering speed dialling numbers ..... 14
- information
- numbers ..... 13
- new entry ..... 12
- number of entries... 12
- own number ..... 12
- saving a
  - tone sequence..... 13
- scrolling ..... 14
- sending a tone
  - sequence ..... 13
- service numbers.... 13
- speed dialling..... 14
- PIN ..... 29
  - changing ..... 29
  - entering ..... 8
  - error ..... 32
- Prefix
  - country codes ..... 9
- Protection against theft ..... 29
- PUK → PIN
- R**
- Reception signal
  - strength ..... 8
- Redial ..... 9, 10
- Replying
  - text messages ..... 19
- Ring → Ringer
- Ringer
  - activating..... 25
  - changing..... 25
  - deactivating..... 25
  - setting the melody .. 25
  - setting the volume .. 25
  - silent (vibrating) alert ..... 26
- S**
- Safety ..... 3
- Saving
  - numbers..... 9
- Scrolling
  - menus ..... 5
  - submenus ..... 5
- Second call
  - answering ..... 15
  - conducting ..... 15
  - rejecting ..... 15
  - tooggling ..... 15
- Selecting a new network..... 30
- Selection
  - confirming ..... 5
- Serial number
  - telephone ..... 34
- Service ..... 33
  - hotline ..... 38
- Service number
  - hotline ..... 38
  - Service Center ..... 19
- Service numbers..... 13
- Service tones
  - Warning tones
- Setting the volume .... 15
- Short beep
  - Warning tones
- Silent (vibrating) alert
  - activating..... 26
  - deactivating..... 26
- SIM card ..... 34
  - additional applications ..... 23
  - inserting ..... 6
  - memory capacity.... 12
  - number..... 34
  - service number ..... 19
- SMS
  - new voice mail message ..... 22
- SMS → Text messages
- Soft key ..... 2
- Special characters
  - text messages ..... 17
- Speed dial key
  - mailbox..... 21
- Speed dialling numbers
  - assigning ..... 14
  - changing..... 14
  - deleting ..... 14
  - entering..... 14
  - scrolling..... 14
- Standby..... 7
  - back ..... 5
- Standby mode ..... 8
- Standby time ..... 34
- Submenus
  - scrolling..... 5
- Super PIN → PIN
- Support
  - hotline ..... 38
- T**
- Talk time ..... 7
  - battery..... 34
- Technical data..... 34

- Telephone
  - activating ..... 7, 8
  - care of ..... 34
  - deactivating ..... 7
  - serial number ..... 34
  - talk time ..... 34
- Text
  - special characters... 11
- Text messages
  - capacity ..... 19
  - deleting ..... 16
  - editing ..... 16
  - end of
  - message mark ..... 16
  - inbox ..... 18
  - message lists ..... 18
  - outbox ..... 19
  - reading ..... 16
  - reading the next message ..... 16
  - replying ..... 16, 19
  - saving ..... 18
  - sending ..... 17
  - special characters... 17
  - successful
  - transmission ..... 18
  - time received ..... 16
  - writing ..... 17
- Time ..... 8, 15
  - activating the display ..... 27
  - deactivating the display ..... 27
  - setting ..... 27
- Time → Call duration
- Toggling → Second call
- Tone sequence
  - saving ..... 13
  - sending ..... 13
- Travel charger ..... 35
- Troubleshooting ..... 32
- U**
- Units
  - display ..... 27
  - used ..... 15
- Usage time
  - battery ..... 7
- V**
- Voice mail → Mailbox
- W**
- Warning tones
  - activating the
    - CB tone ..... 25
    - connection set up ... 25
    - connection to the network ..... 25
  - deactivating
    - all tones ..... 26
    - deactivating the
      - CB tone ..... 25
      - information services 25
      - key sounds ..... 25
      - low battery ..... 25
- Writing names ..... 11