

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2004
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.siemens-mobile.com



CFX65

Safety precautions	2	Voice message/CB	37
Overview of phone (schematic)	4	Surf & fun	38
Display symbols	6	Setup	41
Getting started	7	Fast access function	49
Switch on/off, PIN entry	10	Organiser	50
General information	12	Extras	52
Standard functions	14	My stuff	54
Security	15	Customer Care	55
Text entry	17	Accessories	56
Calling	19	Care and maintenance	57
Default book	21	Product data	58
Addressbook	22	Guarantee certificate (UK)	59
Phonebook	24	Guarantee certificate (IRL)	61
Call records	26	SAR – European Union (RTTE)	63
Camera	27	SAR – International (ICNIRP)	65
Messages	29	Menu tree	66
SMS	30	Index	73
MMS	32		
E-mail	36		

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content to your children and the hazards associated with using the phone.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Ringtones (p. 43), info tones (p. 45) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it is ringing or when you have switched on the handsfree function (p. 19). Otherwise you risk serious, permanent damage to your hearing.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



Only use original Siemens batteries (100 % mercury-free) and charging devices. Otherwise you risk serious damage to health and property: the battery could explode, for instance.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (volt) must not be exceeded. Otherwise the charging device may be destroyed.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.

Important



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!
These safety instructions also apply to Siemens original accessories.

Enhanced Data Transmission

Your phone requires a quality connection to the network in order to transmit data at enhanced speed. Transmission of data may be delayed until such a connection is made. To maintain compliance with RF exposure guidelines, you should keep the phone 1.5 centimeters from your body during such data transmission.

Overview of phone (schematic)

① Call key

Dial phone numbers/names displayed/highlighted, take calls. In standby mode, show last phone numbers dialed.


② On/Off/End key

- Switched off: press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: press **briefly** to go back a level. Press and **hold** to go back to standby mode.
- In standby mode: press and **hold** to switch off phone.


③ Center key

Press vertically down on the center key to start an application or function.

- In standby mode:


 Open main menu.

④ Navi key


 Open user profiles.


 Open Phonebook/Addressbook.

 Open Inbox.

 Start the camera.

- In lists, messages and menus:

 Scroll up and down.

 Back one level.

 
- During a call:

 Set volume.

- Call options:



⑤ Soft keys

The current functions of this key are shown in the bottom line of the display as **Text**/symbol (e.g. )

- ⑥ Additional key for WAP access (if required, and no other default setting is made).

① **Integrated antenna**

Do not obstruct the integrated antenna unnecessarily. This reduces the signal quality.

② **Loudspeaker**

③ **Display**

④ **External display**

⑤ **Infrared interface (IrDA)**

⑥ **Input keys**

⑦  **Ringtone**

- Press and **hold** in standby mode: switch all audible signals on/off (except alarm).
- Press and **hold** on incoming call: Switch off ringtone for this call only.

⑧  **Key lock**

Press and **hold** in standby mode: switch key lock on/off.

⑨ **Connection socket**

For charger, headset, etc.

⑩ **Flash/Torch light**


⑪ **Camera lens**

⑫ **Ringer**

⑬ **Microphone**

⑭ **Plus/minus side key**

- During a call: volume loud/quiet.
- In lists, menus and Internet Pages: Scroll up and down.
- In standby mode: press plus key to set user profiles. Hold minus key to record voice memo. Press minus key to play-back voice memo.
- Clamshell is closed: press plus/minus key to turn on the LCD backlight. Hold minus key to turn on the torch.

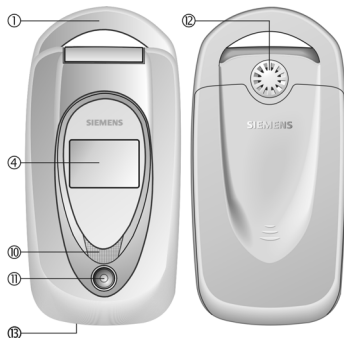

Display symbols

Display symbols (selection)



Signal strength.



Battery charge level, e.g. 50%



Phonebook



Call records



Surf & fun/Service provider portal



Organiser



Messages



Camera



Extras



My stuff



Setup



All calls are diverted



Ringer off



Short ring (beep) only



Ringer only if the caller is stored in the Phonebook



Alarm set



Keypad locked



Auto answer feature on



Activated and available



WAP online



IrDA transmission

Events (selection)



SMS memory full



SMS/MMS full



FFS full



No network access



Missed call



Delete assistant

Message symbols (selection)



Unread



Read



Sent



MMS received



E-mail forwarded



E-mail with attachment



Voice mail received


Getting started

Inserting the SIM card/ battery

The service provider supplies you with a SIM card on which all the important data for your connection is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

Please switch off your phone before removing battery.

Press the grooved area ①, then push the cover towards the front in the direction indicated by the arrow ②.

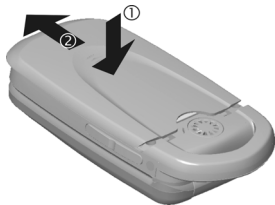

- Place the SIM card in left of the slot with the contact surface facing **downwards**. Then push the SIM card in using gentle pressure ③ (ensure that the chamfered corner is in the correct position).



- Insert the battery sideways into the phone ④, then press it downwards ⑤ until it engages.



- To remove, press the retaining tab on the side of the battery, then lift the battery out.

- Place the cover in position and push it towards the front ⑥ until it latches into place.



Additional information

Only 3-V SIM cards are supported. Please contact your service provider if you have an older card.

Charging the battery

Charging procedure

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**.



Display during charging.

Charging time

A flat battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to 45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating time

The operating time depends upon the conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 100 to 200 minutes

Standby time: 60 to 200 hours.

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the power supply unit included in delivery!

Display while in use

Charge level display during operation (flat-fully charged):



A beep sounds when the battery is nearly flat. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not finish the charging process prematurely**.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Switch on/off, PIN entry

Switching phone on/off




Press and **hold** this key.

Entering the PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correct with .



Confirm by pressing the center key. Logging on to the network will take a few seconds.

Additional information

Change PIN.....p. 15

Clear SIM card barringp. 16

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the **SOS** soft key you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Switching on your phone for the first time

Time/date

During commissioning, set the clock so that it displays the correct time. You will not have to make this setting again.



Press this key, then select **Change**.



First enter the date (day/month/year), then the time (24 hours, including seconds).



Press this key. The time and date are updated.

Time zones

Set the time zone for your area.



Select the city in the desired time zone from the list ...

Set ... and specify this firmly.

If the battery and SIM card is removed, the clock must be reset.

Copying SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. Please **do not interrupt this procedure**. During this time, do **not accept incoming calls**. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (p. 25).

General information

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



Press and **hold** the return to standby mode from any situation.

Signal strength



Strong signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Main menu

The main menu is displayed graphically with symbols:



Call up from standby mode.



Select between two application symbols.



Start an application.

Main menu options

Options Open menu.

Different functions are available depending on the context:

Big letters	Select between two font sizes.
Illumination	Set display illumination to brighter/darker.
Help	Display a help text.

User guide

Menu controls

The steps needed to reach a function are shown in a **condensed form** in the user guide, e.g. to display call list for missed calls in condensed form:


 →  → **Calls missed**

This comprises the following steps:



Open main menu.



Select , place function after **Calls missed**.



Press to confirm.

Menu speed dialling

All menus are numbered so that a function (such as writing a new SMS) can be selected directly from stand-by mode by entering a number:



Press this key to display the main menu.



Press this key for **Messages**.



Press this key for **Create new**.



Press this key for **SMS**.

Symbols

The following symbols are used to explain operation:



Enter numbers/letters



On/Off/End key



Call key



Soft keys



Displays a soft-key function.



Press vertically down on the center key, e.g. to call up the menu.



Press the navi key in the direction indicated.




Function dependent on service provider; special registration may be required.

Standard functions

Option menus

Summary of functions repeatedly appearing in options menus.

Options	Open menu.
Edit	Open the entry to edit.
View	Display entry.
Delete/ Delete all	Delete entry/delete all entries after confirmation.
New entry	Create new entry.
Send...	Select transmission service and medium for sending.
Reply/ Reply to all	The sender becomes the recipient, "Re" is placed in front of the subject matter and the received text is transferred to the new message.
Save	Store entry.
Save to 	Save recipients in the current address directory.
Sort	Set sort criteria (alphabetical order, type, time).

Text input (p. 17)	T9 preferred: Activate/deactivate T9 input. Input language: Select language for text.
Rename	Rename selected entry.
Capacity	Display memory capacity
Attributes	Display properties of the highlighted object.
Help	Display help text.

Highlighting mode

Highlight one or more entries in order to perform a function on it/them.

Options	Open menu.
Mark	Activate mode.
Mark	Highlight a non-highlighted entry.
Unmark	Remove the highlighting from a highlighted entry.

Additional highlighting functions:

Mark all	Highlight all entries.
Unmark all	Delete highlighting on all marked entries.
Delete marked	All selected entries are deleted.


Security

The phone and SIM card are protected against misuse by several security codes.

Keep these security codes in a safe place where you can access them again if required.

Codes

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Needed to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.

 

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.



Press.



Enter PIN.



Confirm entry.

Change PIN

You can change the PIN to any 4- to 8-digit number you find easier to remember.



Enter **current** PIN.



 
Press.



Enter new PIN.



Repeat new PIN.



Change PIN2

(Display only if PIN 2 is available).
Proceed as with **Change PIN**.

Chg.phonecode

(Change phone code)

You define the phone code (4-8 digits) when you call up a phone-code protected function for the first time (e.g. **Direct call**, p. 47). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. If this occurs, contact Siemens Service (p. 55).

Clearing SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN control is deactivated (p. 15) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Press and **hold** On/Off/End key.



Press. The phone switches on.



Press this key or take no action. The phone does not switch on.

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears.

Example:



Press once **briefly** to write the letter **a**, twice to write **b** etc. Press and **hold** to write the number.



Press briefly to delete the letter before the cursor; press and **hold** to erase the whole word.



Move the cursor (forwards/back).



Press briefly: switch between *abc*, *Abc*, *T9abc*, *T9Abc*, *T9ABC*, *123*.

Press and hold: All input variants are displayed.



Press briefly: Special characters are shown.

Press and hold: Open input menu.



Press once/repeatedly:

., ? ! ' " 0 + - () @ / : _

Press and hold: Writes 0.



Writes blank.

Press twice = line break.

Special characters



Press **briefly**.

1)	¿	i	_	;	!	?	,	.
+	-	"	'	:	()	/	*
¤	¥	\$	£	€	&	#	\	@
[]	{	}	%	~	<	=	>
	^	§	Γ	Δ	Θ	Λ	≡	Π
Σ	Φ	Ψ	Ω					

1) Line break



Navigate to characters.

Select

Press.

Text entry menu



Press and **hold**:

Text format (SMS only),
Input language, Mark,
Copy/Insert

Text input with T9

"T9" combines the correct word from the various key inputs.



Activate/deactivate T9.

Select input language

Options

Open text menu.

Select Text input, then select Input language.



Select

Confirm.

Write with T9

It is best if you finish a word without looking at the display.


You simply press the keys where the relevant letter is located **once**.


 /  A blank space or moving to the right ends the word.

Do not use special characters such as Ä. Use the standard characters such as A instead, and T9 will do the rest for you.

T9 word suggestions

If several options are found in the dictionary for a word, the most probable is displayed first.

 Press. If this word is also incorrect, press the key again.


 Press until the correct word is displayed.

Add a new word to the dictionary:

Spell Select and enter word without T9. Then **Save**.

Correct a word

Words written **with** T9:

 Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9 word suggestions again.



Deletes the character to the left of the cursor **and** displays a new possible word.

Additional information



Press briefly: Switch between: abc, Abc, T9abc, T9Abc, 123.

Press and hold: All input modes are displayed.



Press and hold: Opens input menu (p. 17).

T9® Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554;

Canadian Pat. No. 1,331,057;

United Kingdom Pat. No. 2238414B;

Hong Kong Standard Pat. No. HK0940329;

Republic of Singapore Pat. No. 51383;

Euro.Pat. No. 0 842 463 (96927260.8)


DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;

and additional patents are pending worldwide.

Calling



Enter the number (always with dialling code/international dialling code).

 A **short** press clears the last digit, a **long** press clears the entire phone number.



Dial phone number.

End call



Press the End key **briefly**.

Set volume



Press upwards/downwards to regulate the volume.

Redial previous numbers



Press **twice**. The phone number **last** called is redialled.

Call up the redial list:



Press **Once**.



Choose a phone number, then to dial press the ...



... key.

Auto redial

Auto dial The phone number is dialled ten times at increasing time intervals.

Reminder

Prompt A beep reminds you to redial the displayed phone number after 15 minutes.

Accept call



Press.

Reject call



Press **briefly**.

Additional information

Accept the call before bringing the telephone to your ear in order to avoid ear damage caused by the ringtones.



Store phone number in the Addressbook/Phonebook.

Handsfr.

Playback via loudspeaker (hands-free calling).

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you may damage your hearing!



Press and **hold** to switch microphone off.

International dialling codes



Press and **hold** until a "+" is displayed.

Country

Select country.

Call options

Options Functions which are only available **during** the call are offered.

Swapping between 2 calls



Establish a second connection

Options Open menu

Hold Hold current call, then dial the new phone number.

Options Open menu.

Swap Swapping between calls.

Incoming calls during a call

You will hear a "call waiting" and you can now:

- **Accept the waiting call in addition to the first**

Swap Accept the call and put the current call on hold.

- **Reject the waiting call**

Reject Reject the call, or divert it to the mailbox if diversion is set on.

- **Accept the waiting call and end the current call**



End call.



Accept new call.

End call(s)



Press the End key.

Yes

Resume held call.

No

End all calls.

Conference

You can call up to 5 conference participants one after the other. Once you have established a connection:

Options Open menu and select **Hold**. The current call is put on hold.



Now dial a new number. When the new connection is established ...

Options ...open menu and select **Conference**. Repeat until all participants are connected.

End



When the End key is pressed, **all** calls in the conference are ended.

Tone sequences (DTMF)

Enter tone sequences (numbers) for remote inquiries to an answering machine.

 
Options Open menu and select **Send DTMF**.

Default book



Show entries

The entries in the standard directory (Addressbook or Phonebook) are shown.



New entry

 
Create new entry.

Addressbook (see also p. 22)

Phonebook (see also p. 24)

Business card

Create your own business card to sent to a different GSM-phone. If no business card has been created yet, you will be asked for your input.



Save Press.

 
Groups

See p. 23.

Default book

You can set a particular directory to use as your preferred one.

The selected standard book is opened in standby mode with the navi key.



Addressbook

In the address book, a lot of data can be recorded for each entry and additional functions such as pictures, birthdays, E-mail can be used.

Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook on the SIM card can easily be transferred into a different phone.

Addressbook

The Addressbook can store up to 250 entries, each with a variety of phone and fax numbers as well as additional address details. These entries are managed separately from those in the Phonebook in the phone memory.

New entry

The Addressbook is set as standard:



Open Addressbook
(in standby mode)



Display input fields.



Select required input fields.



Fill in input fields.

At least one name must be entered. Always enter phone number with dialling code, e.g. +49 89 ...

Special input fields

Group: Allocation to a group (p. 23).

Address: Extension to enter the complete address: **Street:**, **Post code:**, **City:**, **Country:**

Birthday: After activation, you can enter the date of birth.

Reminder: The phone reminds you one day before the birthday at the time entered.

Picture: Assign a picture to the entry. It is displayed if you are called by that phone number.

All fields/Reduced fields

Displays the number of input fields.

Save

Save the entry.

Additional information



Temporary switch to Phonebook.

Display/find entry



Open Addressbook
(in standby mode).



Select required entry.



Display.

Display options

Options

Displays functions for the selected input field.

Change entry



Select input field and press **Edit**.



Select entry and press **Edit**.



Make changes, then **Save**.

Calling an entry



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.



The number is dialed.

If there are several numbers in the Addressbook entry, these are offered for selection.

Address book options

Different functions are available, depending on the context:

Options Open menu.

Move to ... Allocate current or highlighted entries to a group.

Copy to SIM Copy name and phone number to the SIM card (Phonebook).

Import Set up readiness to receive for an Addressbook entry via IrDA (p. 46) or SMS (p. 30).

(For standard functions see p. 14)

Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.



Open Addressbook (in standby mode).

<Groups> Select (the number of entries is listed after the group name).







Select group.

Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook.

New entry

If the Phonebook has been selected as standard:

-  Open Addressbook (in standby mode).
-  Select <New entry>.
-  Display input fields.
-  Navigate between and fill in the input fields.

Phone number:

Always enter phone number with dialling code. An entry will not be saved without a phone number.

Name:

Enter first and/or last names.

Group:

Default **No group**

Important numbers can be put into one group (VIP).

Location:

Default **SIM**

Special SIM cards can save phone numbers in a protected area (**Protected SIM**) (PIN2 required).

Record number:

Is automatically allocated to every entry. The phone number can be dialled with the record number.

- Save** Press to store the new entry.




Additional information






Temporary switch to Addressbook.

Country International dialling code..p. 19

Call (look for an entry)

-  Open Phonebook.
-  Select a name with the first letter and/or scroll.
-  Phone number is dialled.


Change entry

-  Select entry in Phonebook.
- Edit** Press.
-  Select desired input field.
-  Make changes.
- Save** Press.

Phonebook options

The following functions are available, depending on the current situation.

Options Open menu.

Copy into  Copy all highlighted entries to the Addressbook.

Copy all to  Copy all entries to the Addressbook.

Delete all Delete entire Phonebook (PIN-protected).

Import Set up readiness to receive for a Phonebook entry via IrDA (p. 46) or SMS (p. 30).

(For standard functions see p. 14)

<Special books>



Open Phonebook and select <Special books>.

<Own numbers>

Enter "own" phone numbers in Phonebook (e.g. fax) for information.

<VIP numbers>

Display the phone numbers saved in the VIP group.

<SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

<Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider.

Call records

Phone numbers are saved to make it easier to redial them.



Select record.



Open call list.



Select phone number.



Dial phone number.

10 phone numbers can be stored in each call list.

Calls missed



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Missed call.

Calls received

Accepted calls are listed.

Calls dialled

Access to the last numbers dialled by you.



Fast access in standby mode.

Delete records

The records are deleted.

Duration/charges



→ Durat/charges
→ Last call, All calls, Remain. units



Select.



Open report or settings.



Reset the selected report.

Charge sett.



Open menu.

Currency

Edit your currency.

Personal rate

Enter the currency as well as the charge per unit and time.

Account limit

Special SIM cards allow you or the service provider to define a credit or a period after which the phone is barred for outgoing calls.

Auto display

Call duration and charges are automatically displayed.

Camera

You can view photos on the integrated camera immediately and

- use the photo as a background image, logo.
- send the photo via MMS or e-mail.

Switch on



Or



Start camera in standby mode.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness



Zoom factor



White balance



External flash connected

The number of photos that can still be taken in the selected resolution is displayed in the top right-hand corner of the preview image. This number varies considerably from image to image depending on how much storage space is required. The selected resolution is indicated beneath the preview image or, if video mode has been selected, there is an indication as to how much recording time has already been used and how much time is still available.

Photo mode



Take a photo.

The photo is saved with a name. To enter the name, see **Setup** in the options menu (p. 28).

Settings prior to taking a photo:



Set the brightness.



Set the zoom factor.

Image resolution

It is possible to set the quality of the image regardless of the preview image resolution.

Premium:	640 × 480 (VGA)
High:	320 × 240 (QVGA)
Medium:	160 × 120 (QQVGA)
Wallpaper:	132 × 176 or 130 × 130

The resolution may decrease depending on the selected digital zoom.

Flash

You have to activate the flash function before using it, regardless of whether the flash is external or internal.



External flash

If the external flash is plugged in, this is shown by a symbol in the display. The flash is charged constantly while connected to the phone. This reduces the standby time.



This symbol flashes when the external flash is being charged.

Internal flash

The internal flash will be activated automatically (if you set this function on in advance). Please be noted that the internal flash has a distance of 50 cm.

For settings see options menu.

Camera options

The following functions are available, depending on the current situation.

Options Open menu.

Settings	<ul style="list-style-type: none"> • Default picture name • Resolution. • Colour mode: normal, sepia, grey scale and Dream scape.
Photo album	Displays list of photos.
Flash	Select different flash modes: Off, On, Automatic, Red eye red.
Frame	Select different frames for current picture.
Self timer	The photo is taken approx. 15 seconds after triggering.
White balance	Choose between: Automatic, Indoor, Outdoor
Help	
(For standard functions see p. 14)	

Messages

Inbox

The central input folder contains all messages which have been received. The entries are marked with a symbol to indicate their type and status (p. 6).

To call up the central input folder, e.g. if a new SMS has been received:



Press the soft key beneath the symbol.

When you open an entry, the relevant application also starts. After a set time span, entries which have already been read and opened are only displayed in the (**Options**) message-related incoming lists.

In the central input folder, you will find the following **message types**:
SMS, MMS, E-mail

System messages

Message about MMS, Missed alarm, Missed appts., Calls missed, WAP push, Voice message

Data objects

Ringtones, Pictures and Video, Calendar entries, Notes, Business card and Voice notification.

Message lists

All SMS, MMS and E-mail are each displayed in four separate lists.



→ Inbox

→ Select message type.

List of received messages.



→ Draft

→ Select message type.

List of saved drafts.



→ Unsent

→ Select message type.

List of messages not yet successfully sent.



→ Sent

→ Select message type.

List of received messages.

Options

Call up the function menu to process the messages.

SMS


You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges). You can also insert pictures and sounds in an SMS.



Write/send


 →  → Create new → SMS

 Enter text (see also p. 17).

Options Text creation functions.

 Start sending procedure.

 /  Select phone number from the Phonebook/Addressbook or enter it.

 The SMS is transmitted to the service centre to be sent.

Special functions

Picture&sound


You can send pictures and tones with or without accompanying text.


With the text input field open:


Options Open menu.

 Select **Picture&sound**.


The menu contains:
Fix animations, Fix sounds, Own animat., Own pictures, Own sounds

 Select list.


 Confirm. The first entry of the selected section is displayed.


 Scroll to entry required.

For **Fix animations/Fix sounds**:

 The selection is added to the SMS.

For **Own animat., Own pictures, Own sounds**:

 The selection is displayed/played back.

 The selection is added to the SMS.

SMS archive

 →  → SMS archive

The list of SMS messages stored in the phone is displayed.

SMS to group

You can send an SMS message as a "circular" to a recipient group.

Options Open menu.

Send Select.

Group The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



The SMS is sent after a security query.

Read



Arrival of a new SMS announced in the display.

The **Inbox** is opened. It offers you a quick overview of the messages currently received.



To read the SMS.



Scroll through message line by line.

Additional information



If this symbol flashes, the SIM memory is full. Delete or archive messages.

Reply

You can answer the SMS now open immediately. The newly added text is placed above the received text.



Functions for a direct

reply.

Setting

SMS profiles



→ Message setup
→ SMS → SMS profiles

5 SMS profiles can be set. These define the transmission characteristics of an SMS.

Activate profile



Select profile.



Activate.

Set profile



Select profile and open with **Edit** to process it.

SMS signature



→ Message setup
→ SMS → SMS signature

You can enter a "signature" with a maximum of 16 characters. This signature will then be attached to each SMS except for a **Reply** and when changes are made to an existing SMS.

MMS

The **Multimedia Messaging Service** enables you to send texts, pictures and sounds in a combined message to another mobile phone or to an e-mail address.

Depending on your phone setting, you will either receive the complete message or only a notification with sender details and size. The actual MMS can then be downloaded manually later.

Create

An MMS consists of the address header and the content. This may consist of a series of pages. Each page may contain a text, a picture and a sound.

Create standard MMS



→ Create new → MMS

First select an object for processing to be added to the first page of the MMS:

Options Open menu.

<Picture> Select.



Display picture functions:
Insert picture, Camera,
Open, Save picture

<Sound> Select.



Display sound functions:
Insert sound, Record, Open,
Save sound

<Text> Select.



Display text functions
(see also p. 17).

Options

Options Open menu.

Send MMS	Send MMS.
Play	Play entire MMS on the display.
Picture...	See above.
Sound...	See above.
Text...	See above.
Page	<p>Add page: Insert new page behind current one.</p> <p>Delete page: Delete current page.</p> <p>Page list: Display available pages.</p> <p>Timing: Set the time sequence for the MMS presentation:</p> <ul style="list-style-type: none"> • Page duration: Automatic or Manual • Show page: only if Manual has been selected. Enter the lifespan of a page.

Msg. details	Enter sending parameters (see next chapter).
Reply	Replay to an MMS, SMS or any template.
Forward	Forward current message.
Save as templ.	Save created MMS as a template. See also below:
(For standard functions see p. 14)	

Templates

 →  → MMS templates

MMS templates are saved MMSs without an address. They can be sent as new MMS or used as part of a new MMS messages. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.


Options Open menu and select **Save as templ.**

Send

The page(s) of the new MMS has (have) already been created. The MMS is displayed.



Open address entry.

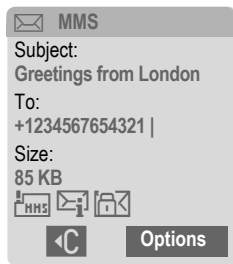

Subject: Enter a brief description of the MMS.

Send to: Enter one or more phone number(s)/ e-mail address(es).

Size: Display the MMS size.



Start sending procedure.





The MMS is sent after confirmation.

More: Provide additional address fields.

Message details options

Options	Open menu.
Send	Send MMS.
Play	Play entire MMS on the display.
Edit	Display object selection to change an object.
Add recipient	Add recipient from the current address directory.
Delete recip.	Delete individual recipient.
Page list	Display MMS pages for viewing and/or changing.
Save as templ.	Save created MMS as a template.
(For standard functions see p. 14)	

Receive

 /  Arrival of new MMS/notification announced on display.



Start reception. Depending on the setting (p. 35), the MMS/notification is transferred to the inbox folder (Inbox).

In order to receive the complete MMS **subsequently**, the message must be opened.

Receive Start transmission.

Read

An MMS has been received in full.



Start playback.

Key functions for playback:



To the next page.



Press briefly once to return to the start of the current page; press briefly twice to return to the start of the previous page.



Set volume.



Terminate.

The message details are displayed when the MMS is complete.

Subject: Description of the MMS.

From: Information about the sender.

Size: Size of the MMS in KB.

More: Additional input fields.

Setting

 →  → Message setup → MMS

MMS profile:

Five MMS profiles can be set. The sending properties are specified in these profiles. In most cases, the setting has already been made. If necessary, check with your service provider for details.



Select profile.



Open to edit the profile.

Setting options

Options Open menu.

Activate, Change sett., Rename

User settings

Set the MMS dispatch to suit your requirements:

Sender visibility:	Request to show or hide your identity when sending MMS.
Delivery report:	Request delivery confirmation for sent messages.
Read reply:	Request confirmation that the MMS has been read.
Default priority:	Send priority: Normal, High, Low

Validity: Select the period within which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum*

* Maximum period that the service provider permits.

Earliest deliv. time: Transmission from the service centre to the recipient:

Immediate, Tomorrow

Default duration: Length of display for an MMS page (default requirement).

Retrieval: Receive complete MMS or only notification of arrival.

Immediate

Receive complete MMS immediately.


Auto.homenet

Receive complete MMS immediately in home network

Manual

Only the notification is received.

Spam filter: Settings for receipt of promotional MMS.

Size indication:  Set a max. message size and how it is to be handled.

E-mail

Your telephone has an e-mail program (client) with which you can receive e-mails. You can receive the whole E-mail or just the header information (E-mail address, date, subject ... etc.).

Receive/read

 →  → **Inbox**
→ Select function.

Before an e-mail can be read, it must be retrieved from the server.

E-mail List all the received E-mail.

Options Open menu and select **Retrieve body**.

Rec. e-mails
All e-mails are sent into **Inbox** from server.

Setting

 →  → **Message setup** → **E-mail**

Before using this service, you must set the server access and your e-mail options. Most of this data has already been entered. If not, you can obtain it from your service provider. See also on the Internet at:


www.siemens-mobile.com/cfx65

Activating access

 Select access.

 Activate access.

Account sett.

 Select access or **<Empty>**.

Edit Start processing. Fill in the data fields as specified by your service provider.

Voice message/CB

Voice message

 →  → Setup → Voice message

If you have a mailbox, a caller can leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- or if you are making a phone call.

You may have to register for this function and set it manually.

Setup



The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to your voice messages.

 →  → Setup → Voice message

Enter phone number and confirm with **OK**.

Save call divert number

Calls are diverted to this phone number.

 →  → Phone setup → Divert
→ e.g. Unanswered → Set

Enter phone number and register it on the network with **OK**.

Listen to message



A new voice message can be announced as follows, depending on the service provider:



Symbol plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and **hold** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

CB services



 →  → Setup → CB services

Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated you will receive message about the activated topics in your **Topic list**.

Surf & fun

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Internet



The browser is activated with the pre-set option as soon as you call up the function (Internet settings, p. 39; may be specified/pre-assigned by service provider).

Internet service

Options Open menu.

Homepage Call up the pre-set homepage or the current profile (p. 39).

Bookmarks Display bookmarks stored in the phone; save bookmark.

Recent pages Display last Internet sites to be visited.

Enter address Enter a URL.

Resume Reconnect the latest web-site after disconnection.

Setup Browser settings (p. 39).

Push inbox View and save the push msgs.

End connection



Press and **hold** to close the connection and the browser.

Navigation in the browser



- Select a link.
- Settings, status on/off.



- Press **briefly**: back a page.



- One input field/link forward/back.
- Scroll one line.

Display symbols in the browser



Enter special characters



Select important special characters.

Internet settings



Options Open menu.

Setup Select.

Edit Homepage Edit the homepage title and URL.

Select profile The list of profiles is displayed for activation (see below).

Connection Set all connection information according to different profiles.

Browser options Set start option as well as handling of pictures and tones and send options.

Rename Change the name of current profile.

Cache Enable/disable the caches.

Cookie Enable/disable cookies.

WAP push set. Set to receive or reject push msg. from all, none or specific service provider.

Clear recent pages Delete all the URLs from **Recent Page**.

Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

Profile pre-set

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.

Set profile manually

If necessary, contact your service provider. You can change settings.

Your Internet browser is licensed by:



Games and Applications

Games and applications are offered on the Internet. Once downloaded, these are available to you via the telephone. Most applications include instructions. Some applications and games are already pre-installed on your telephone. You will find these listed here:

www.siemens-mobile.com/cfx65

Requirements

WAP profile (p. 39) and the access (p. 46) must be configured.

Download

Select the correct access depending on whether you are loading games or applications:

 →  → Games/Applications

In addition to URLs and service providers for the download, any available applications/games and folders will be displayed.

Additional information

You can use WAP to download applications (e.g. ringtones, games, images, animations) from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application.

For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired.

In such cases, the buyer is required to download or release the application again. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup.

Siemens does not warranty, guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge. If technically possible, secure your applications on the PC with the "mobile phone manager".

Setup

Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can be changed however:
Normal environment,
Quiet environment,
Noisy environment,
Car Kit, Headset
- You can set two personal profiles (<Name>).
- The special profile **Aircraft mode** is fixed and cannot be changed.

Profile settings

Edit a default profile or create a new personal profile:



Select profile.

Options

Open menu and select
Change sett.

The list of available functions is displayed. When you have finished setting a function, you return to the profile menu where you can change a further setting.

Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically 'when the phone is inserted into the cradle (also see accessories).

Headset

The profile is only switched on automatically if an original Siemens headset is used (also see accessories).

Aircraft mode

All alarms (appointments, alarm clock) are switched off. This profile **cannot be modified**.

Switch on



Scroll to **Aircraft mode**.



Confirm selection.



Confirm again upon safety inquiry to activate the profile. The phone switches itself off automatically.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.


Display



Language

Set the language of the display text. When "automatic" is set, the language of your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your service provider with the following input (in standby mode):

*#0000# 

Text input

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry.

Wallpaper

Set wallpaper graphic for the display.

Logo

Choose graphic to be displayed instead of the provider logo.

Colour skin

Select colour scheme for the entire user interface.

Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. An incoming call and pressing any key will end the function except if the safety function is activated.

Start up anim.

Shown when the phone is switched on.

Note

The picture (animated) and digital clock screensavers significantly reduce the phone's standby time.

Shutdn anim.

Shown when the phone is switched off.

Own greeting

Is displayed instead of an animation when you switch on the phone.

Big letters

You can choose between two font sizes for the display.

Illumination

Set display illumination to brighter/darker.

Contrast

Set display contrast level.

Ringtones



Set the tones on the telephone to suit your requirements.

Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.

Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The silent alert can be switched on in addition to the ring tone. This function is deactivated when the battery is being charged and accessories are connected (except the headset).

Volume

Set different volumes for types of call/functions.

Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Calls

The same melody is set for all callers whose phone numbers are saved in the same address book or SIM.

Group calls

The same melody is set for all callers whose phone numbers belong to the same group.

Other calls

The same volume is set for caller whose phone numbers are not saved.

More melodies

You can set up different melodies for Messages/Alarm clock/Startup mel./Shutdown mel./Sound rec.

Sound recorder

Use the sound recorder to record voice memos and social sounds for use as ring tones.

New recording

<New entry>

Select. The remaining time available as well as the recording time are shown in the display.

Start another application as follows

The recording display appears:



A brief tone sounds when the recording starts.



End recording.

The recording is saved with a timestamp in the file system in **Sounds**.

Playback



Playback.

Call setup

 →  → Call setup
→ Select function.

Hide ID

If activated, your phone number will not appear on the other party's display (depending on the service providers).

Call waiting

If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Divert

You can specify when calls should be diverted to your mailbox or other numbers.

Set up call divert (example)

Unanswered



Select **Unanswered**.
(Includes the conditions **Not reachable**, **No reply**, **Busy**, see below)



Confirm and select **Set**, then enter the phone number to which the call will be diverted.



Confirm. The network setting confirms.

All calls

All calls are diverted.



Icon in the top line of the display in standby mode.


Other possibilities for divert:

Not reachable, **No reply**, **Busy**,
Receiving fax, **Receiving data**,
Status check, **Clear all**

Call screening

Only calls from phone numbers that are in the Phonebook/Addressbook or in a group are signalled. Other calls are only displayed.

Any key answ.

Incoming calls can be accepted by pressing any key (except for ).

Minute beep

During the call, you (and only you) will hear a beep every minute so you can check the call's duration.

Phone setup



Key tones

Set the type of acoustic key acknowledgement.

Info tones

Set service and alarm tones.

Automatic switch off

The phone switches off each day at the set time.

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternatively, in standby mode enter: ***#06#**

Info Display further information about the phone.

Software version

Display in standby mode:

***#06#**, then press **Info**.

File system

Format

(Phone-code protected)

The phone memory is formatted and **all** saved data such as ringtones, pictures, games, etc. is deleted.

Formatting may take longer than one minute.


Clean up

Free memory by deleting temporary files that are no longer required.

Master reset

Reset phone to default values (factory setting). This does not affect the SIM card or the network settings.

Alternatively, in standby mode enter:

***#9999#** 

Clock



Time/date

Change First enter the date, then the time.

Time zones

 
World map

Displays world time zones.



City list

List of world cities.



Date format

Select the display format for the date.

Time format

Select 24h or 12h.

Buddhist year

Switch to Buddhist year.

Display Clock

Activate/deactivate time display.

Connectivity



GPRS



(General Packet Radio Service)

GPRS is a new method for transmitting data faster in the mobile network.

GPRS info

Display connection information.

IrDA

Your phone has an infrared interface. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other.

Data services

Default setting and activation of the connection profiles for **MMS**, **WAP** applications. The phone default setting varies from service provider to service provider. Consult your service provider or go to this address on the Internet for more information www.siemens-mobile.com/mobilescustomer care in the FAQ section.

Authentication

 
Activate or deactivate encrypted WAP dial-up (CSD connections only).

Security



Direct call

Only **one** phone number can be dialled. The required phone code (4 to 8 digits) is set by you and entered at the first security inquiry.



Only



Restrict calls to SIM-protected numbers in the Phonebook.

PIN codes

Description, see p. 15:
PIN control, Change PIN, Change PIN2, Chg.phonecode

This SIM only

Your phone is prevented from being used with a **different** SIM card.

Barrings



Network barring restricts the use of your SIM card.

All outgoing

All outgoing calls except emergency numbers are barred.

Outgo internat (Outgoing international)

Only national calls can be made.

Out.int.x.home (Outgoing international without home country)

No international calls, only calls to the home country.

All incoming

The phone is barred for all incoming calls.

When roaming

You will not receive calls when outside your home network.

Status check

Status check for network barring.

Clear all

Clear all barrings.

Network



Line



Two independent phone numbers must be registered.

Network info

The list of GSM networks currently available is displayed.

Choose netwrk

Network search is restarted.

Auto network

If activated, the next network is dialled in the order of your "preferred networks".

Pref. network

Set the service providers you prefer when you leave your home network.

Band selection



Select either GSM 900 or GSM 1800.

User group



Depending on your service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special rates apply. Please check with your service provider for details.

Accessories



→ Accessories

→ Select function.

Car Kit

Only in combination with an original Siemens handsfree car kit (see accessories). The car kit profile is activated automatically when the phone is inserted into the cradle.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Automatic switch off

(factory default: 2 hours)

The phone is powered by the car's power supply. Set the time which must elapse after the ignition has been switched off before the phone is automatically switched off.

Car loudspk.

Improves playback in certain circumstances.

Headset

Only in conjunction with an original Siemens headset (see accessories). If an original Siemens Headset is used the profile is automatically activated when the headset is plugged in.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

Fast access function


Soft keys

Assign one phone number or function to each of the two soft keys.

Change

For example, the **Internet** function is assigned to the soft key. To change this (in standby mode):

Internet Press **briefly**, then press **Change**.

Select a new function from the list and confirm with .

Apply


The "Internet" is just used as an example here.


Internet Press and **hold**; the application is started.

Speed dialling keys

Assign one phone number of function to each of the keys from 2 to 9. Number key 1 is reserved for the mailbox.

Assign functions

 Press a number key (e.g. key 3) **briefly**, then press **Set**.

Select a new function to be assigned from the list and confirm with .

Apply

Select a stored phone number or start a stored application (e. g. **Internet**).

In standby mode:



Press and **hold**.

My menu



Press.

My menu Press.

Set up your own menu. The list of 10 entries is preset, but can be changed.

Change menu

You can replace each entry (1-10) with another entry from the selection list.



Select entry.

Change

Open the function list to make a selection.



Select the **new** entry from the list.



Confirm. The entry is saved.

Reset all

Reset all Select. After a security inquiry, the default setting is restored.

Organiser



→ Select function.

Calendar

You can enter appointments in the calendar. Time and date must be set correctly.

The calendar offers you three views: monthly view, weekly view, and daily view.

The various entries are colour-coded. Appointments are shown as a vertical colour bar on the horizontal hour division.

Navigation:



Scroll between weeks/days/hours.

Appointments

Appointments are displayed in chronological order in a list.

Enter new appointment

<New entry>

Select.

Types:



Memo: Text input for description.



Voice memo: Enter voice memo.



Call: Enter phone number. Shown with alarm.



Meeting: Text input for description.



Holiday: Enter start and end date.



Birthday: Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see **Standard** (p. 14).

Additional information



Alarm clock, alarm set.



Appointment, alarm set.

An alarm sounds even when the phone is switched off (except in **Aircraft mode**, p. 41). The phone does not go to standby mode. To deactivate it press any key.

Tasks

A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time.

When no time is entered the task appears at the top of the list every day until it is marked as completed. The entries are made in the same way as **Appointments** (see "Appointments").

 →  → Select function.

Notes

T9 support (p. 17) makes writing short notes such as shopping lists easier. Save confidential notes with the phone code.

Missed alarm

Events with an alarm (**Appointments**, **Tasks**) to which you have not reacted are listed for reading.

Time zones

See p. 46.

Calend. setup

Start of day:

Time when the working day begins.

Start of week:

Weekday on which the monthly and weekly view on the left starts.


Set weekend

Set the days for the weekend.

Show birthdays:

Set the days for birthday.

Extras


 →  → Select function.


SIM services


It allows you to add new function over the air to the mobile, however, the service provided would be different according to different operators and the supported class of the SAT on your mobile equipment.


Alarm clock


The alarm will ring at the time you set, even when the phone or/and ringtones are switched off.

 Activate/deactivate the alarm.

 Set the time for the alarm call (hh:mm).

 Navigate to the various days.

 Display options: alarm call time and days.


 Set days for alarm calls. Press and **hold** to highlight/unhighlight all the days.


OK Confirm setting.


You can set the alarm to repeat with Snooze.

Calculator

The calculator can be used in a basic version and with an extended range of functions (**Options**).


 Enter number(s).


 /  Navigate functions.

 Use function.


Unit converter


You can convert various measurement units into other measurement units.

 Select the source unit/currency, then enter the quantity.

 Select the target measurement unit/currency. The result is displayed.

Special key functions:

 Set decimal point.

 Change sign.

Conv.

When you first call up the function, enter the base currency.



Enter currency (e.g. euro) and save the entry with **Save**.

Now enter the names and exchange rates of the currencies to be converted.

Stopwatch

Two intermediate times can be recorded and saved.



Start/stop/reset to zero.

Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a beeping signals the fact.

My stuff

A file management function is available for you to organise your files. This functions in the same way as on a PC. Folders have already been created for different data types.



The list of the folders and files is displayed.

Navigation



Select file/folder in lists.



Open folder or start file with related application.

Media player

When you are viewing a picture or listening to a melody, the application starts a media playback.



Browse to the next media file.

Pictures



Display.

Send

e.g. send via MMS.

Melodies



Play, depending on the situation.



Stop playback.

Picture processing

Options

Open menu and select **Send, Save, Delete, Rename, Drive info.**

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**[www.siemens-mobile.com/
mobilescustomer care](http://www.siemens-mobile.com/mobilescustomer care)**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), the software version (to display, press *#06#, then **Info**) and if available, your Siemens Service customer number.

You can also get personal advice about our range of products on our Premium Hotline: **United Kingdom** **0906 9597500** (0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 98 78
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14

Bosnia Herzegovina	0 33 27 66 49
Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
China	0 21 38 98 47 77
Croatia	0 16 10 53 81
Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Egypt	0 23 33 41 11
Estonia	06 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany	0 18 05 33 32 26
Greece	0 80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 52 74 20 10
Luxembourg	43 84 33 99
Macedonia	02 13 14 84
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0 90 03 33 31 00
New Zealand	08 00 27 43 63
Nigeria	0 14 50 05 00
Norway	22 70 84 00
Oman	79 10 12
Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04
Philippines	0 27 57 11 18

Poland.....	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 04 60 00
Russia.....	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 80 95 50
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain.....	9 02 11 50 61
Sweden.....	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand	0 27 22 11 18
Tunisia	71 86 19 02
Turkey.....	0 21 65 79 71 00
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 66 03 86
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Vietnam.....	84 89 30 01 21
Zimbabwe	04 36 94 24

Accessories

Fashion & Carry Textile Case FCT-600

Energy Li-Ion Battery 600 mAh
EBA-670
Travel Charger ETC-500 (EU)
Travel Charger ETC-510 (UK)
Car Charger Plus ECC-600

Handsfree Portable Headset Basic HHS-500
Headset HHS-510
Headset Purestyle HHS-610

Office Data Cable DCA-500
Data Cable USB DCA-510
Data Cable USB DCA-540
SyncStation DSC-600

Multitainment Flash IFL-600

Car Solutions Car Kit Portable HKP-500
Car Kit Easy HKP-630
Upgrade Kit HKO-640

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:



Original Siemens Accessories

www.siemens-mobile.com/shop

For more detailed product information please see:

www.siemens-mobile.com/cfx65

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply, remove the battery and leave the open phone to dry at room temperature!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Battery quality declaration

The capacity of your mobile phone battery will reduce each time it is charged/discharged. Storing the battery at temperatures that are too high or too low also causes a gradual loss of capacity. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

The battery is, however, designed to be capable of being charged and discharged for a period of six months from the date when the phone was purchased. Following this six-month period, we recommend replacing your battery if you experience a significant drop in performance.

Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Please note that the appearance that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

Product data

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or visit:

www.siemens-mobile.com/conformity

CE 0700

Technical data

GSM class:	4 (2 watt)
Frequency range:	880–960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710–1,880 MHz
Weight:	88 g
Size:	97 × 48 × 23 mm (78 ccm)
Li-Ion battery:	600 mAh
Operating temperature:	–10 °C– +55 °C
SIM card:	3.0 V

Phone ID

You will need the following details if you lose your phone or SIM card:

The number of the SIM card (on the card):

.....

15-digit serial number of the phone
(under the battery):

.....

The customer service number of the
service provider:

.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Operating time

The operating time depends upon the respective conditions of use: Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 100 to 200 minutes

Standby time: 60 to 200 hours

Action taken	Time (min)	Reduction of stand-by time by
Calling	1	60–100 minutes
Light *	1	20 minutes
Network search	1	5–10 minutes

* Key input, games, organiser etc.

Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.

- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Siemens
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.

- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by
Siemens Ireland Limited,
Ballymoss Road,
Sandyford Industrial Estate,
Dublin 18 -
The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

SAR – European Union (RTTE)

INFORMATION ON RF EXPOSURE/
SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE
LIMITS SET BY THE EU (1999/519/EC)
FOR PROTECTION OF THE HEALTH
OF THE PUBLIC FROM THE EFFECTS
OF EXPOSURE TO ELECTROMAGNETIC
FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only after this has been demonstrated, the CE mark may be affixed**. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg***. This corresponds with the requirements of the International Commission for Non-Ionizing Radiation Protection ICNIRP and was adopted in the European Norm for Mobile Radio Equipment EN 50360. The SAR of mobile phones is determined in accordance with European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone

is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for compliance against the norm is

0.699 W/kg****.

The SAR information can also be found on the Siemens web site at
www.siemens-mobile.com

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for using of mobile phones.

Further information:

www.who.int/peh-emf,
www.mmfai.org,
www.siemens-mobile.com

** The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

*** averaged over 10 g body tissue.

**** SAR values may vary depending on national requirements and frequency bands. SAR information for different regions can be found at www.siemens-mobile.com

SAR – International (ICNIRP)

INFORMATION ON RF EXPOSURE/ SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTRO-MAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-Ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg**. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest power level. The actual SAR level of the phone during operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0.699 W/kg***.

SAR information can also be found at

www.siemens-mobile.com

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

- * The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for using of mobile phones.

Further information:

www.who.int/peh-emf,


www.mmfa.org,


www.siemens-mobile.com


- ** averaged over 10 g of tissue.


- *** SAR values may vary depending on national requirements and frequency bands. information for different regions can be found at **www.siemens-mobile.com**


Menu tree

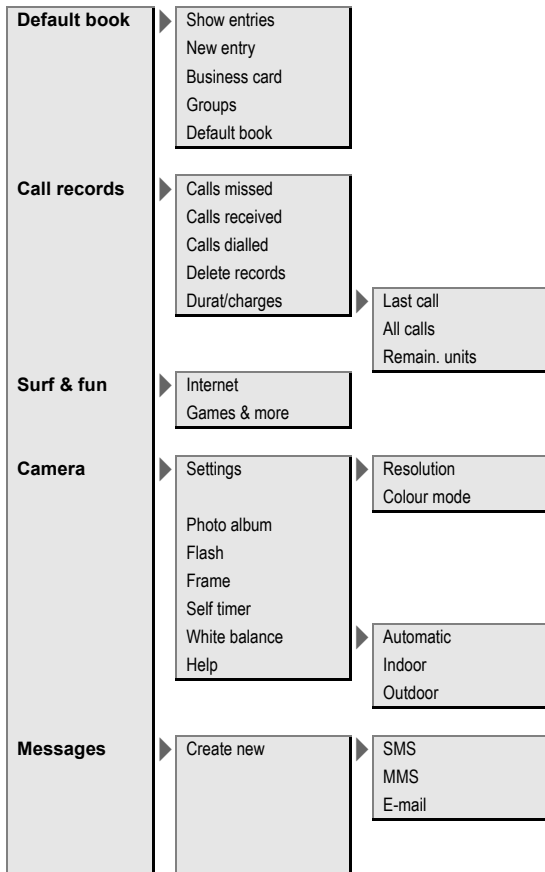


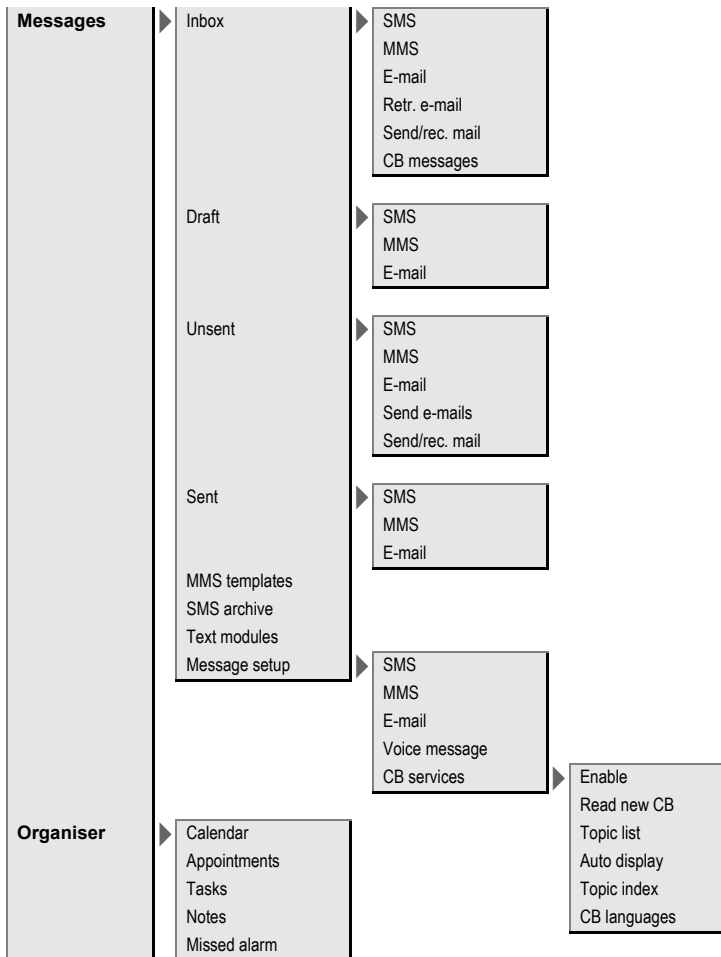

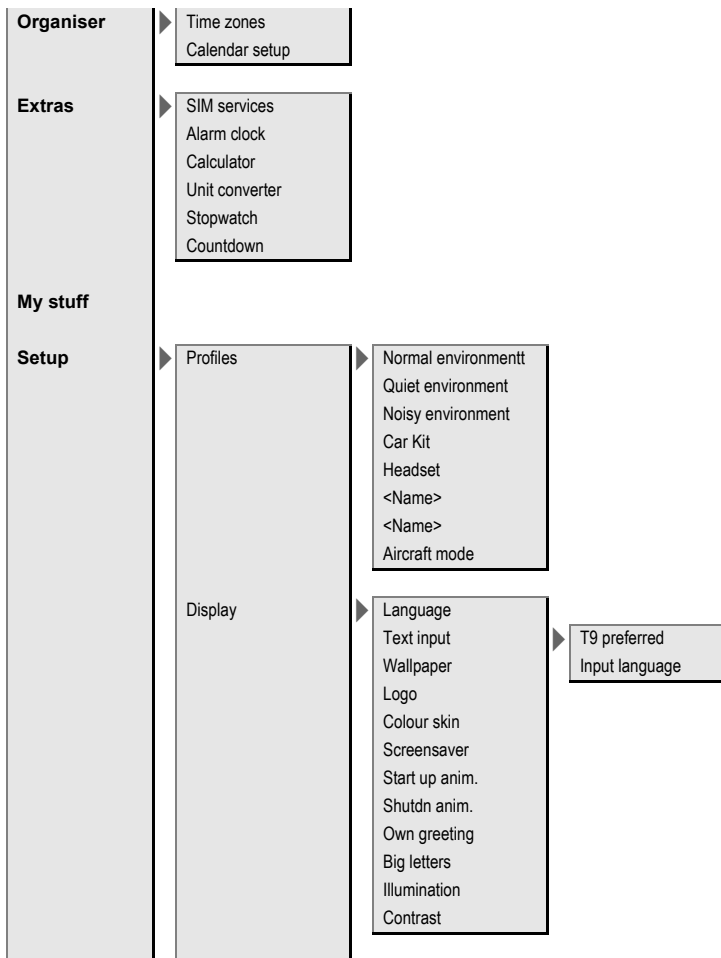

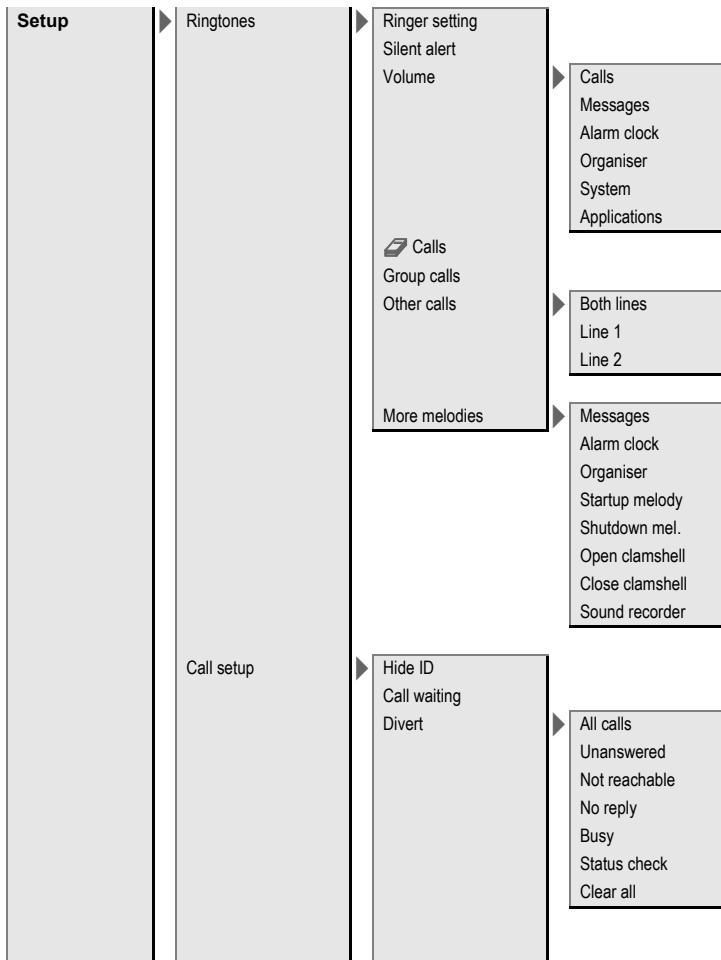

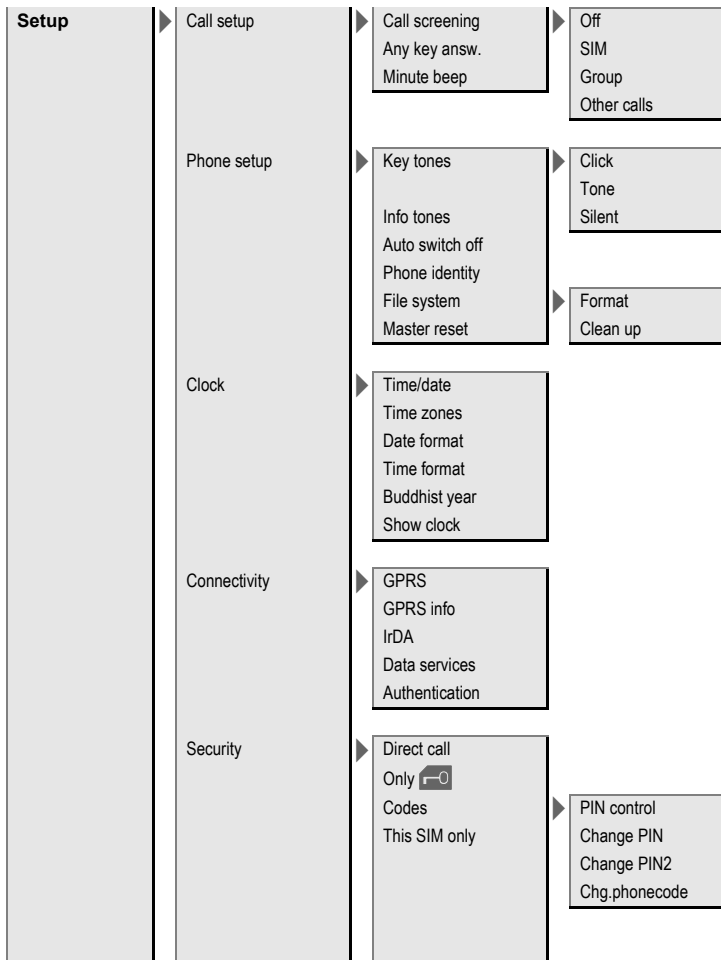

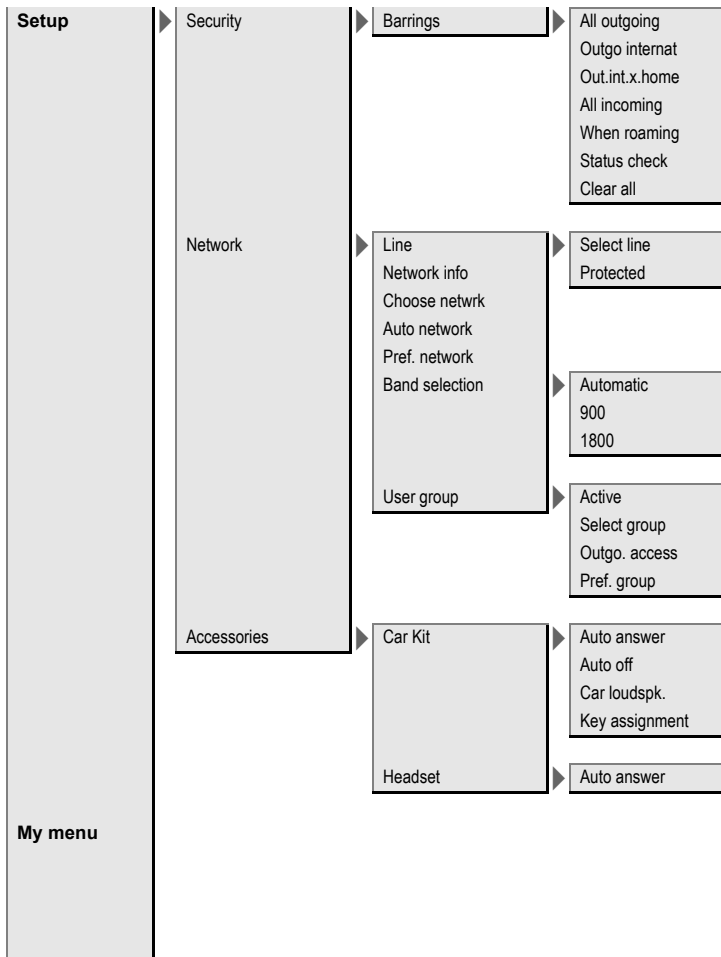

In-call menu

- ▶ Hold
- Microphone on
- Handsfree
- Volume
- Conference
- Time/charge
- Send DTMF
- Call transfer
- Main menu
- Call status

Index

A

Additional books.....	25
Addressbook	
Dial entry.....	23
Groups	23
New entry.....	22
Read entry	23
Aircraft mode	41
Alarm (alarm clock)	52
Alarm clock	52
All calls (diversion)	44
All incoming (barrings)	47
Answering service (external)	37
Any to answer	44
Appointments	50
Auto display	
Clock	46
Duration/charges	26
Auto key lock.....	47
Auto. network selection.....	48
Auto. redial	19
Automobile accessories	56


B

Band selection	48
Battery	
Charge.....	8
Insert.....	7
Operating time	8, 58
Quality declaration.....	57
quality declaration	57
Big letters.....	42
Browser.....	38
Buddh. year	46
Business card.....	21

C

Calculator	52
Calendar	50
Call	
Accept/end.....	19
Barring	47
Charges.....	26
Conference	20
Divert.....	44
End	19
Hold.....	20
Menu	20
Reject.....	19
Swap (change)	20
Call divert	44
Call waiting.....	44
Calling	19
Calls dialled (call record)	26
Calls received (call record).....	26
Camera	27
Car Kit	
Accessories	56
Car kit (setting)	48
Car kit accessories	56
Care of phone	57
Cell Broadcast (CB)	37
Charge rate.....	26
Charges	26
Charging the battery	8
Clock	46
Codes	15
Colour skin.....	42
Conference	20
Control code (DTMF)	20
Countdown.....	53
Credit limit.....	26

-
- D**
- Data connection 46
 - Date format..... 46
 - Default book 21
 - Dialling code 19
 - Display
 - Illumination 42
 - Language 42
 - Symbols..... 6
 - Divert 44
 - Download 40
 - DTMF codes
(tone sequences)..... 20
 - Duration/charges 26
- E**
- E-mail
 - Receive/read 36
 - Settings 36
 - Write 36
 - Emergency number 10
 - Extras 52
- F**
- Factory settings 45
 - Fast access 49
 - Filter 44
 - Formatting
(phone memory) 45
 - Frequency range 48
- G**
- Games and applications 40
 - GPRS 46
 - Groups 23
 - Guarantee certificate 59
- H**
- Handsfree talking..... 19
 - Headset
 - Accessories 56
 - Headset (setting) 48
 - Hide ID 44
 - Highlighting mode 14
 - Hold call 20
 - Hotline 55
- I**
- Identity number (IMEI) 45
 - IMEI number 45
 - Inbox 29
 - Info tones 45
 - Information services (CB) 37
 - Infrared 46
 - Infrared (IrDA) 46
 - Input language (T9) 17
 - International dialling code..... 19
 - Internet 38
- K**
- Key tones..... 45
- L**
- Language..... 42
 - Limit (call time/charge) 26
 - Logo 42
 - Loss of phone, SIM card 58
- M**
- Mailbox 37
 - Maintenance of phone 57
 - Menu
 - Controls 13
 - My menu 49
 - Speed dialling 13
 - Menu tree 66

Message		Pictures & sounds (SMS).....	30
CB	37	PIN	
E-mail.....	36	Change	15
Lists.....	29	Control.....	15
MMS.....	32	Enter.....	10
SMS.....	30, 31	PIN2	15
Minute beep.....	44	Preferred network.....	48
Missed appointments	51	Preventing accidental	
Missed calls (call record).....	26	activation.....	16
MMS		Product data	58
Receive.....	34	Profiles (phone)	41
Send.....	33	Provider logo	42
Write	32	PUK, PUK2	15
N		R	
Network		Records.....	26
Barring	47	Redial	19
Connection.....	47	Reminder.....	19
Settings.....	47	Remote synchronisation.....	53
Notes	51	Ringtones	43
O		S	
Only 	47	Safety precautions	2
Only this SIM	47	Screensaver	42
Operating times		Security	15
(battery).....	8, 58	Service tones	45
Organiser	50	Set time/date	46
Own (phone) numbers	25	Settings	41
P		Short message (SMS)	30
Phone code	15	Shown in the display.....	6
Phone data.....	58	Shut down animation.....	42
Phone identity number		Signal strength	12
(IMEI).....	45	Silent alert	43
Phone number		SIM card	
transmission.....	44	Clear barring	16
Phonebook		Insert	7
Additional books.....	25		
Call an entry	24		
New entry.....	24		
Protected SIM	25		
VIP numbers	25		

-
- SMS
- Archive 30
 - Read 31
 - Settings 31
 - To group 31
 - Write 30
- SOS 10
- Special characters 17
- Speech time (battery) 58
- Speed dialling keys 49
- Standard functions 14
- Standby mode 12
- Standby time 8
- Start up animation 42
- Stopwatch 53
- Storage location
(Phonebook) 24
- Surf & fun 38
- Swap between calls 20
- Switch off phone
- Automatic 45
 - Manually 10
- Switch on phone 10
- Symbols 6
- T**
- T9
- Text entry 17
 - Word suggestions 18
- Tasks 50
- Technical data 58
- Time zones 11, 46
- U**
- Unanswered 44
 - Unit converter 52
 - Upper and
lowercase letters 17
 - User group 48
- V**
- Volume
- Handset volume 19
 - Profiles 41
 - Ringtone 43
- W**
- Wallpaper (display) 42
 - WAP 38
 - WAP push 29