

SIEMENS

Be inspired

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2002
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.my-siemens.com



M50


Thank you for buying a Siemens mobile phone. We wish you a lot of enjoyment and pleasure with it.

If you read through the user guide carefully, you will get to know all the functions of the phone.


In particular, please observe the safety precautions (p. 3) and PIN security (p. 10).

The front and back covers of the casing (CLIPit™ Covers, my-CLIPit™: p. 12 and p. 87) can be changed in a matter of seconds - no tools required:

To attach

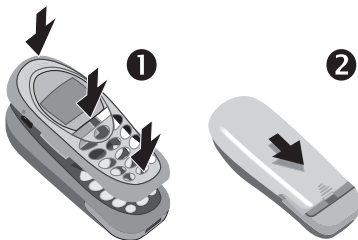

To remove

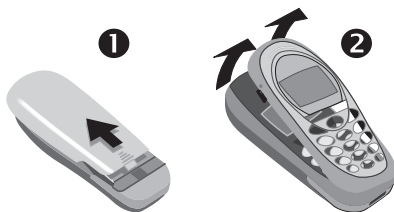

Note

Your phone's display and the display cover of the upper shell are delivered with a protective film. **Remove this film before getting started.**

In rare cases the static discharge may cause discolouration at the edges of the display. However this will disappear within 10 minutes.

Safety precautions	3	Location	22
Overview phone	4	Record no.	23
General instructions	5	Assign picture	23
User guide	5	Message (SMS)	24
Soft keys	5	Read messages	24
Getting started	7	Inbox/outbox	25
Insert SIM card/battery	7	Archive	25
Charging	8	Compose a message	26
Switch on, off/PIN entry	9	Predefined text	27
Security	10	SMS to group	27
Codes	10	Text entry with "T9"	28
Prevent accidental activation ..	11	Picture & Sound	30
My phone	12	Message setup	30
Making a phone call	13	Surf & fun	32
Dialling with number keys	13	Internet (WAP)	32
End call	13	Games & more	35
Set volume	13	Bitmap viewer	37
Redial previous numbers	13	Select bitmap style	38
When a number is busy	14	Own greeting	38
Accept call	14	Screensaver	38
Reject call	14	Melody manager	39
Hold call	15	Ringer tones	40
Call waiting/Swap	15	Voice message/Mailbox	41
Conference	16	Cell broadcast	42
Call menu	16	Duration/charges	43
Babysitter	17	Display	43
Records	17	Charge settings	43
Phonebook	19	Divert	44
<New entry>	19	Groups	46
Call/search for an entry	19	SMS to group	46
Group	21	Call to group	46

See also Index at the end of this user guide

Group setup	48	Ringer tones	60
Organiser	49	Setup	61
Diary	49	Device	61
Greetings	50	Security	63
Notes	51	Network	64
Missed alarms	52	User group	66
Alarm clock	52	During a call	67
Clock	53	Clock	67
Time/date	53	Connectivity	67
Date format	53	Accessories	70
Auto display	53	Fax/data mode using a PC	72
Auto phone off	53	Notes A-Z	73
Auto timezone	53	Display symbols (selection)	81
Profiles	54	Questions & Answers	82
Setup	54	Siemens Service	85
Car Kit	55	Specifications/maintenance	86
Headset	55	Accessories	87
Aircraft mode	55	Basics	87
My menu	56	Data/Applications	87
Fast access key	57	Car Solutions	88
Left soft key	57	Innovations	88
Speed dialling keys	58	Index	89
Audio	59		
Ringer setting	59		
Volume	59		
Call screening	59		
Silent alert	59		
Key tones	59		
Minute beep	60		
Information tones	60		
Melody manager	60		

See also Index at the end of this user guide



Switch off in hospitals or in the vicinity of medical devices, e.g. pacemakers or hearing aids. Mobile phones can interfere with the function of these devices.

A minimum distance of 20 cm between pacemaker and mobile phone should be kept. When using the mobile phone, hold it to the ear which is farther removed from the pacemaker.



Always use the handsfree kit for calls while driving (p. 70)!



Mobile phones must be switched off at all times in an aircraft. To prevent accidental activation, see (p. 11).



Switch off near petrol stations, fuel depots, chemical plants or blasting operations. Mobile phones can interfere with the operation of technical installations.



The ring tone is reproduced through the earpiece. To avoid damage to hearing, first accept the call, then hold the phone to the ear.



SIM card may be removed. Caution! Small parts could be swallowed by children.



The mains voltage specified on the power supply unit must not be exceeded.



We recommend you use only original Siemens batteries (100% mercury-free) and charging devices. Otherwise considerable health risks and damage to the product cannot be excluded.



Neither the phone nor the battery (100% mercury-free) may be opened under any circumstances (except when exchanging the battery, SIM card or top shell). Any other changes to this device are strictly prohibited, as they will invalidate the type approval criteria required for operation of the unit.

Please note:



Dispose of used batteries and phones according to the legal regulations.



Mobile phones can interfere with the operation of nearby TVs, radios or PCs.



We recommend you use only original Siemens accessories to avoid possible damage and to comply with the existing regulations.

Improper use invalidates the warranty!

4 Overview phone

Loudspeaker

Display indicators

Signal strength/
battery level.

Call key

Select displayed phone
number or name, accept
calls. Display last calls in
standby mode.

Phonebook key

Press once for Phonebook
Press twice for Groups

Hold down

In standby mode:
Switch signal tones on and
off.

Microphone

Device interface

Connection for charger,
headset etc.

Soft keys

The current functions of these
keys are displayed in the grey
fields as text or icons. These
keys display the quick selec-
tion and menu in standby
mode. Factory default:

New SMS or e.g.

(SIM service) and

Menu (main menu).

Integrated antenna



Do not interfere with the
phone above the battery
cover unnecessarily. This
reduces the signal strength.

On/Off/End key


Press briefly:
End call/function and return
to standby mode. In menus:
one menu level back.

Hold down:
Switch phone on/off.

From menus: return to
standby mode.

Hold down

In standby mode:
Switch key lock on and off.

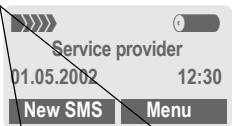

To call up a function dis-
played, press the soft key un-
derneath the function.

Example: Press the **right**
soft key to call up the menu.

Scroll key

Press on the left or on the
right to scroll through menus
and lists.

User guide

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Phonebook key.



Call key.



Press on the left or on the right to scroll up and down.



Press to call a function (soft key).

Menu

Displays a soft key function.



Function depends on the service provider, special registration may be necessary.


Soft keys

Steps for calling a function are shown in a **condensed form** in this user guide, e.g.: to display the call list for missed calls:

- Menu**
- Records
 - Missed calls

This corresponds to:

1


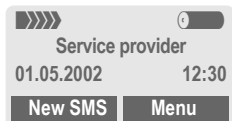


Menu

Open menu.

From standby mode:
Press **right** soft key.

 
2

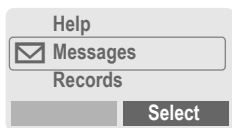

Scroll to **Records**.

Press scroll key on the **right** to scroll downwards.

3

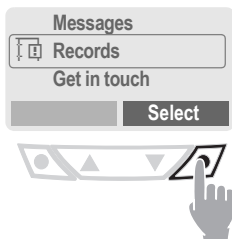

Select

Press.
Press **right** soft key to open the Records submenu.


4



Select

Press.
Press **right** soft key to open the list of the Missed calls.


5

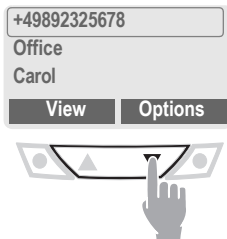

Scroll to the required entry.

Press scroll key on the **right** to scroll downwards.


6

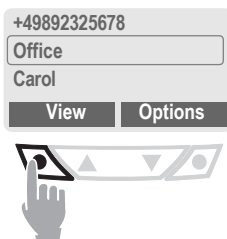

View

Press.
Press **left** soft key to display the phone number with date and time.


7

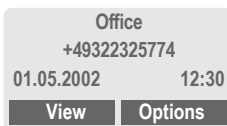


Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit card size, snap the smaller segment out and remove any rough edges.


- Press grooved area ①, then lift cover ②.

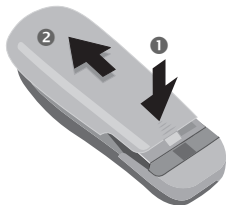

- Press latch in the direction indicated by the arrow ③, lift battery at the cutout on side of the phone, then tilt upwards and remove ④.

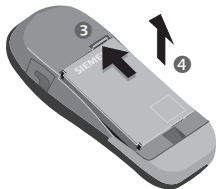

- Insert SIM card in the opening (contacts pointing downwards) and push gently until it engages (make sure the angled corner is in the correct position ⑤).

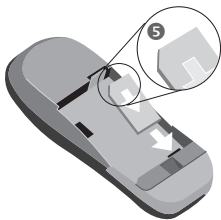

- Insert battery into the phone sideways ⑥, then press downwards ⑦, until it engages.



- Replace cover and press downwards until it engages.

Note

Always switch off phone before removing the battery!


Only 3-Volt SIM cards are supported. Please contact your service provider, if you have an older card.

Functions without SIM card p. 80

Charging

The battery is not fully charged when delivered, so:

- Plug in charger cable at the bottom of the phone, plug in the power supply unit to the mains power socket and charge for at least two hours.
- Push the sides of the charger cable plug together and pull to remove it.

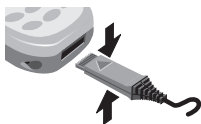

Display when charging is in progress



When charging is in progress.



End of charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible in an ambient temperature of 5°C to 40°C (the charge icon flashes as a warning when the temperature is 5°C above/below this range). The voltage specified on the power supply must not be exceeded.

Charge icon not visible

If the battery is totally discharged no charge icon is displayed when the charger is plugged in. It will appear after two hours at most. In this case the battery is fully charged after 3-4 hours.

Only use the charger provided!

Display while in service

Charge level display during operation (full-empty):



A beep sounds when the battery is nearly empty.

Note

The charger heats up when used for long periods. This is normal and not dangerous.

Operating times p. 76

Battery care (only NiMH) p. 62

Quality declaration for battery p. 76

Switch on, off



Hold **down** On/Off/End key to switch on or off.

Enter PIN

The SIM card can be protected with a 4-8 digit PIN.



Enter your PIN code using the number keys (the display shows a series of asterisks, if you make a mistake press **Clear**).




OK

Confirm input with the right soft key.

Logging on to the network will take a few seconds.

Standby mode

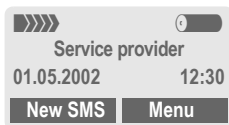

When the name of the service provider appears on the display, the phone is **in standby mode** and **ready for use**.

Note

Signal strength	p. 77
SIM services (optional)	p. 77
New SMS	p. 26
SOS	p. 73
Change PIN.....	p. 10
SIM card problems	p. 77
Clear SIM card barring	p. 11
Other network.....	p. 64
Set time	p. 53

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered.
Phone code	Protects your phone. Must be entered at the first security setting.

Menu → **Setup** → **Security**
→ then select a function

Codes

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone.

Select Press.



Enter PIN.

OK

Confirm input.

Change

Press.

OK

Confirm.

Some service providers do not permit this function.

Change PIN

You can change the PIN to any 4-8 digit number you may find easier to remember.



Enter **old** PIN.

OK

Press.



OK

Enter **new** PIN.



OK

Repeat **new** PIN.

Change PIN2

(display only if PIN 2 is available).
Proceed as with **Change PIN**.

Change phonecode

You define and enter the phone code (4-8 digits) when calling up a phone code protected function (e.g. Babysitter, p. 17) for the first time. It is then valid for all functions. If you have forgotten it, please call Siemens Service (p. 85).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider together with the SIM card according to instructions. If PUK (MASTER PIN) has been lost, please contact your service provider.

Note

Screensaver.....	p. 38
Auto key lock.....	p. 61
Further security settings.....	p. 63

Prevent accidental activation

Even if PIN entry is deactivated (see p. 10), confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Hold **down**.

Please confirm switch on

OK

Cancel

OK

Press to switch on the phone.

Cancel

Press (or no further input) to stop switch-on procedure. The phone does not switch on.

Your phone offers a number of functions so that you can adapt it to meet your personal requirements.

Ringer tones

Assign individual ring tones to caller groups or anniversaries (p. 40).

The melody manager is available for managing the ring tones (p. 39).

Logos, screensavers, animations

Adjust your phone according to your own wishes in the following areas to give it a personal touch:

To switch on

Select a bitmap style (p. 38) and a greeting (p. 38) that you create yourself.

Screensaver (p. 38)

You can set an analogue clock or an individual picture as screensaver.

(Provider) logo (p. 37)

Select an individual picture from the bitmap viewer.

Where do I get what?

You can order additional ring tones, logos and screensavers on the Internet and receive them via SMS:

www.my-siemens.com/ringtones

www.my-siemens.com/logos

www.my-siemens.com/screensaver

Or you can directly download them via WAP:

wap.my-siemens.com

Siemens City Portal

Further services for your mobile phone (e.g. a Photo Logo Composer to create personal pictures for your Phonebook (p. 23)) can be found at:

www.my-siemens.com/city

The Siemens City Portal also offers a list of countries in which these services are available.

CLIPit™ Covers

Select different colours for the top and bottom covers from the Siemens City Portal. Or use a personal photo to make your phone unique (p. 87):

www.my-siemens.com/my-clipit

My menu

Create your own menu with frequently used functions, phone numbers or WAP pages (p. 56).

Dialling with number keys

The phone must be switched on (standby mode).



Enter the number (always with prefix, if necessary with the international dialling code).

Clear A **short** press clears the last digit, a **long** press clears the entire number.



Press the Call key. The phone number displayed is dialled.

End call



Press the End key **briefly**. Call is ended. Press this key even if the person on the other end of the line has hung up first.

Set volume



You can adjust the handset volume with the scroll key (only during the call).

If a Car Kit is used, its volume setting does not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number **last** called:



Press the Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key once.



Pick out the required phone number from the list, then press...



... to dial.

Note

Store number	p. 19
Options Call lists	p. 17
Hold	p. 15
menu Call menu	p. 16
Divert Divert set	p. 73
International dialling codes	p. 75
Auto key lock	p. 61
Phone number memo	p. 76
Switch ringer on, off	p. 59
Microphone off	p. 16
Phone number transmission off/on (Hide ID)	p. 67
Send DTMF tones	p. 73

 
When a number is busy

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

Auto redial previous numbers

Auto dial Press. The number is automatically dialed for up to 15 minutes at increasing intervals. End with:



or

Call back




Call back Press. Your phone rings when the busy number is free. Press the Call key to dial the number.

Reminder

Prompt Press. A beep reminds you to redial the displayed phone number after 15 minutes.

Accept call

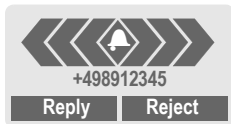

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.

Reply Press.

or

 


If the phone number has been transmitted by the network, it is displayed. If it is stored in the Phonebook, the corresponding name is displayed instead.


Reject call

Reject Press.

or



Note

 Missed calls..... p. 18
Accept call using any key p. 61

Hold call


You can call another number during a call.



Hold The current call is put on hold. Now dial the new phone number.

When the connection is established press...

Swap ... to swap back and forth between both calls.

Note
 **menu** Call menu p. 16

Call waiting/Swap

You may need to register for this service with your service provider and set your phone accordingly (p. 67).

During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

Accept the waiting call

Swap Accept the waiting call and place the current call on hold.

To swap between the two calls, press **Swap** each time.

End the current call:



Press. The following query is displayed: "Return to the call on hold?"

Yes Return to the held call.

or

No The held call is ended.

Reject waiting call

Reject Reject the waiting call, the caller will hear the busy tone.

or

Divert If this is set, the waiting call will be diverted, to the mailbox for example.

End current call



End the current call.


Reply Accept the new call.

Conference



Call up to 5 parties one by one and link them together in a phone conference. Some of the functions described may not be supported by your service provider or must be enabled specifically.

You have established a connection:

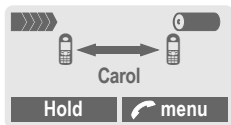

Hold

The current call is put on hold. Now dial a new number. When the new connection is established...

menu

... open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End



All calls in the conference are ended simultaneously when the End key is pressed.

Call menu

The following functions are only available during a call:

menu Open menu.

Microphone on

Switch microphone on/off. If switched off, the person on the other end of the line cannot hear you (muting).

Alternatively:

Hold down.

However, numbers being entered are audible when **Send DTMF tones** is active.

Volume

Adjust handset volume.

Conference

(see left)

Duration/charges

While the connection continues, the call duration and (if set, p. 43) the charge details are displayed.

Send DTMF tones

(p. 73)

Call transfer



The original call is joined to the second one. For you, both calls are now ended.

Main menu

Access to the main menu.

Call status

List all held and active calls (e.g. participants in a conference).

Babysitter

Only one phone number can be dialled. Hold **down** the **right** soft key.



Switch on

Menu → Setup
→ Security → Babysitter

Select Press.



Enter phone code:

When first prompted, you define and enter the phone code (4-8 digits). **Please do not forget this code!**

OK Confirm input.

Change Press.



Select phone number from the Phonebook (p. 19), or enter a new one (with name).

OK The babysitter is now active.

Switch off



Hold **down**.



Enter phone code.

Change Press.

OK Confirm input.

Note

Change phone code.....p. 11

Records

Your phone stores the phone numbers of calls for convenient redialling.

Menu → Records

Select Press.



Choose call list.

Select Press.



Select phone number.



Dial phone number

or

View display information on the phone number.

- Menu** → Records
→ Select function

The following call lists are available:

Missed calls



The phone numbers of calls that you have received but not answered can be recorded for call back purposes.

When you have missed a call, the following icon appears in the display above the left soft key in standby mode:



If you press the left soft key, the phone number is displayed.

Requirement:

The network supports the "Caller Identity" feature.

Calls received



All accepted calls are listed.

Requirement:

The network supports the "Caller Identity" feature.

Calls dialled

Access to the last ten numbers you dialled.



Fast access in standby mode.


Erase records

The contents of all call lists are deleted.

Records menu

The call list menu can be called up if an entry is highlighted.

Options Open list menu.

View	View entry.
Correct no.	Load number into display and correct it there if necessary.
Save no. to 	Store entry in the Phonebook.
Delete	Delete entry after confirmation.
Delete all	Delete all entries of the call list after confirmation.

Note




Press on the right in standby mode for easy access to call lists.

Enter frequently used phone numbers in the Phonebook with a special name. To dial them, simply highlight the name. If a phone number is stored with a name, it appears on the display when you are called. Entries that belong together can be combined to form a **group**.

<New entry>



Open Phonebook.

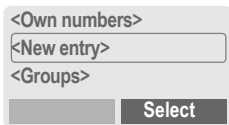

<New entry>

Select.



Activate input fields.



Make the following entries:

Phone Number

Enter phone number (with prefix).

Name

Enter (Text entry, p. 20).

Group

The entry can be assigned to a group, for example:

VIP, Leisure, Office, Family

(p. 21 and p. 46).

Location

Select a storage location such as **SIM card, SIM protected** or **mobile phone** (p. 22).

Record no.

(storage location number)

Each entry is automatically assigned a number under which it can also be selected (p. 23).

Save

Press.

Call/search for an entry



Open Phonebook.



Select a name with the first letter and/or scroll.



Dial number.

Note

+List International dialling code p. 75

<Own numbers> p. 76

Store control codes p. 73

Text entry

Press number key repeatedly until the required letter is displayed. The cursor advances after a short delay.



Press **once** for **a**, twice for **b** etc. The first letter in each name is automatically written in UPPERCASE.



Umlauts and numbers are displayed after the relevant letters.



Press briefly to delete the letter before the cursor, hold down to erase the whole name.



Move the cursor (forward/back).



Press briefly:
Switch between uppercase, lowercase and digits.

Hold down:
Set input language and text mode.



Activate/deactivate T9 (p. 28).



Write: . , ? ! 0 + - :



Space.



Enter special characters, see p. 74.

Phonebook menu

Options	Open menu.
View	Display entry.
Edit	Display phone number and name for changes.
New entry	Create a new Phonebook entry.
Delete	Delete entry from the Phonebook.
Delete all	Delete all entries after confirmation.
Send SMS...	<p>as entry: Send Phonebook entry to recipient.</p> <p>as text: Send entry as text of an SMS message.</p>
Picture	Assign an individual picture to the phone number (p. 23).
Capacity	Display the maximum and available capacity.

Group

If there are many Phonebook entries it is best to assign them to a group, e.g.:

VIP, Leisure, Office, Family

A special melody can sound (p. 40) and/or a symbol can be displayed (p. 22) if the phone number of a call is registered in a group.

Select group



Two short presses **or** one long press on Phonebook (in standby mode).



Select group. The number of entries is displayed in brackets after the group name.

VIP	VIP	(17)
	Leisure	(9)
	Office	(7)
View		Options

View

Press. All entries of the selected group are displayed.

Group menu

Options Open menu.

View members Display all entries assigned to the group.

Rename group Change the current name of the group.

Group symbol Assign a symbol to a group (p. 22).

Call to group Call up to 5 members of a group one by one and link them together in a conference (p. 46).

SMS to group Send an SMS to all members of a group (p. 46).

Change group assignment

You can assign a Phonebook entry to a group when you enter it (p. 19). To change the group assignment or to assign to a group later:

When the Phonebook is open:



Select entry.

View

Press.

Change

Press.



Scroll to Group.

Change

Press and select a new Group.

Save

Confirm assignment.

Group entry menu

Options	Open menu.
View	Display entry.
Edit	Display the entry for changes.
New entry	Open Phonebook and add an entry to the current group.
Remove entry	Remove entry only from the group.
Remove entries	Remove all members from the selected group.
Send SMS...	<p>as entry: Send a Phonebook entry to recipient.</p> <p>as text: Send entry as text of an SMS message.</p>
Picture	Assign a picture/symbol to phone number.

Group symbol

You can assign one of many standard symbols to a group. Three symbols are displayed at one time. The centre symbol is the current selection.



Choose symbol.



Add symbol to the group entry.

Location

An entry can be moved from the Phonebook to the other storage locations.



Open Phonebook.



Select entry.



Open menu and select **Edit**.



Go to the input field **Location**.

SIM (standard)

Entries that are stored in the Phonebook on the SIM card can also be used on a different GSM Phone.

Protected SIM



Phone numbers can be stored in protected locations on a special SIM card. A PIN 2 is needed for editing (p. 10).

Mobile (phone memory)

Phonebook entries are stored here if the memory of the SIM card is full.

Record no.

A record number (storage location number) is automatically assigned to every new entry in the Phonebook.

Call



Enter record number.



Press.



Press.

Edit

Select entry in the Phonebook.

Options Press and select Edit.



Go to Record no.

Change Press repeatedly until the required (available) number is displayed.

Save Press.

Assign picture

Assign an individual picture to phone numbers. This picture will appear in the display when there is a call from this number.

Assign picture



Open Phonebook.



Select entry.

Options Open menu and select Picture.

The list with your Own pictures is displayed.



Select entry.

Load

The bitmap viewer (p. 37) is opened and the picture is displayed.

Select

The picture is assigned to the phone number.

It appears with a symbol in the Phonebook.

Delete/change picture

If a picture is assigned to a phone number, it can be deleted or replaced.



Select entry with picture in the Phonebook.

Options Press



Select Picture

Delete The assignment is cleared.

or

Select The picture list is displayed for new selection.

Note

A picture can be assigned to several phone numbers.

Add pictures to the picture listp. 37

Siemens City Portalp. 12


You may transmit and receive very long text messages (up to 760 characters) on your phone, which are automatically composed from several "normal" SMS messages (note the accruing charges).

Depending on the service provider, e-mails and faxes can also be sent via SMS (change setting if necessary, p. 30).


Read messages



Display indicates a new message.

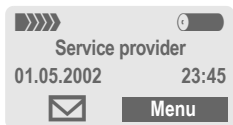

Press the soft key underneath the letter symbol to read the message.

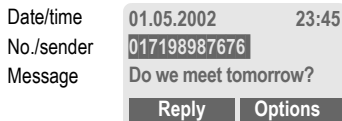

Scroll through the message line by line.

Reply

Reply menu shown below.

Options

Inbox/outbox menu (p. 25).

Pictures and sounds in SMS

Pictures or **sounds** can be part of messages you receive.

Pictures are shown in the message, sounds are indicated as notes. If a note is reached when scrolling through the message, the corresponding sound is played. For sending pictures and sounds see p. 30.

Note



Message store full p. 75

Use **highlighted** phone number p. 76

Reply menu

Reply

Open reply menu.

Write message

Create a new reply text (p. 26).

Edit

Edit message received or assign a new text to it.

Answer is YES

Add YES to the message.

Answer is NO

Add NO to the message.

Call back

Append a standard text to the message as a reply.

Delay


Thanks

When the message has been edited in the editor, it can be stored or sent with **Options**.

Inbox/outbox

Menu → Messages
→ Inbox / or Outbox /

The list of saved messages is shown.

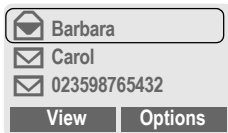

Options See below.

Symbol	Inbox /	Outbox /
	Read	Not sent
	Unread	Sent

Inbox/outbox menu

Different functions are available depending on the context:

Options Open menu.

View	Read entry.
Reply	Directly answer incoming SMS messages.
Send	Dial number or select from the Phonebook, then send.
Edit	Open editor for changes.
Delete	Delete selected message.
Delete all	Delete all entries after confirmation.

Picture & Sound (EMS, p. 74) List pictures and sounds included in the message.

Capacity Display maximum and available capacity.

Status report (Outbox list only) Request delivery confirmation for messages sent.

Mark as unread Mark the message as unread.

Save no. to Copy a selected phone number to the Phonebook.

Move to archive Move message to the archive.

Archive

Menu → Messages → Archive

The list of messages recorded on the phone is shown. Different functions are available depending on the context:

Archive menu

Options Open menu.

View	Read entry.
Mark text	Highlight text to be edited.
Delete	Delete selected message.
Delete all	Delete all saved messages after confirmation.
Rename	Rename the entry.
Sort	Set sort criteria (alphabetical, time).
Attributes	Display name, size and date.
Capacity	Display maximum and available capacity for SMS archive, special graphics etc.

Compose a message

Menu → Messages → New SMS



Text input using "T9" (p. 28) allows you to quickly create long SMS messages using just a few key entries.

Clear Press **briefly** to delete letter by letter, hold **down** to delete the entire word.



Press.



Dial number or pick out from the Phonebook.

OK

Confirm. The message is sent to the service centre for transmission.

OK

Return to the editor.

Options

Open menu and select **Save** to store the message.

Display in the uppermost line:

T9	Abc	SMS	1	738
We start at 8 a.m.				

T9

T9 active.

abc/Abc/
ABC/123

Lowercase/uppercase letters or digits

SMS

Display title.

1

Number of the required SMS messages.


748

Number of characters still available.

Note

Insert pictures & sounds into text	p. 30
If Message type , Validity period , Service centre : are requested	p. 30
Send melodies	p. 39
Send graphics	p. 37
Enter special characters	p. 74
SMS status report.....	p. 78

Text menu

Options	Open the text menu.
Send	Dial the number or select from the Phonebook, then send.
Save	Save the composed message in the outbox list.
Picture & Sound	Add pictures and sounds to message (p. 30).
Format	Line feed Small font, Medium font, Large font Underline Left, Right, Center (align) Mark text (highlight text with the scroll key)
Clear text	Delete the whole text.
Insert text	Insert predefined text fragment.
Insert from 	Open Phonebook and copy phone number into the message.
Bookmark	Insert URL from the WAP bookmarks into the text.
T9 input (p. 28)	T9 preferred: Activate/deactivate T9 input. Input language: Select the language in which the message is to be composed.

Predefined text

Standard text fragments which can be added to messages are stored in the phone. You can also create five additional text fragments yourself.

Write text fragments

Menu → Messages → Predefined text

<New entry>

Select.



Write text fragment.

Save

Press.

Use text fragments



Compose message (p. 26).

Options

Open the text menu.

Insert text

Select.



Select text fragment from the list.

Select

Confirm. The text fragment is inserted in the message at the cursor position.

SMS to group

You can send messages (SMS) as "circulars" to all members of a group (p. 46).

Text entry with "T9"

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu.


T9 input Select.

T9 preferred
Select.



Activate T9.

Select Confirm.

To activate or deactivate T9 temporarily: 

Select Input language

Select the language in which you want to compose your message.

Options Open text menu.

T9 input Select.

Input language
Select.

Select Confirm, the new language is set.

Languages with T9 support are marked by the T9 symbol.

Create a word using T9

Since the display changes as you proceed it is **best if you finish a word without looking at the display.**

You simply press the keys where the relevant letter is located **once only**. For "hotel", for example, type:



Press. A blank ends a word.



Press repeatedly before the word for lowercase letters/uppercase letters, digits or special characters.

Do not use special characters such as Å but write the standard character, e.g. A, T9 will do the rest for you.

Note

Enter special characters.....p. 74



Full stop. Ends a word when a blank follows. Acts as a wildcard character for an apostrophe/hyphen in the word:

e.g. **provider.s** = provider's.



Go to the right. Ends a word.



Press briefly:

Switch between uppercase, lowercase letters and digits.

Hold down:

Set input language and text mode.

T9 dictionaries for other languages can be found at: www.my-siemens.com/t9

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be **highlighted**. Then press




The displayed word is replaced with a different word. If this word is also incorrect,



press again. Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it may be written without T9.

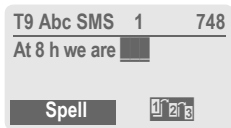

To add a word to the dictionary:

Spell Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

Correct a word

Words created **using** T9:



Move word by word to the left/right until the required word is highlighted.



Scroll through the T9 word suggestions again.

Delete

Deletes the letter to the left of the cursor **and** displays a new possible word!

Words **not** created using T9:



Move character by character to the left/right.

Delete

Deletes the letter to the left of the cursor.



Characters are inserted at the cursor position, .

Note

Within a "T9 word", individual letters may not be edited without cancelling T9 first. In most cases it is better to rewrite the complete word.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5, 818, 437, 5, 953, 541, 5, 187, 480, 5, 945, 928, and 6, 011, 554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Picture & Sound

Insert pictures and sounds in the message (EMS, p. 74).



Compose the message as usual.

Options Open the text menu at the end of a word.

Picture & Sound

Select.

The Pictures&Sound menu opens:

Fix animations

Fix sounds

Own animat.

Own pictures

Own sounds



Select range.

Select Confirm.

The first entry of the selected range is displayed.



Scroll in the list to the required entry.

Select The picture/animation is "inserted" in the text and shown there as a wildcard.

Note

Playback only occurs on phones that support this function.

In input mode a wildcard is shown instead of the picture/sound.

Add pictures/sounds: SMS (p. 25), WAP (p. 32), bitmap viewer (p. 37).

Message setup

An SMS profile (maximum 5) defines the transmission characteristics of an SMS. The presetting depends on the SIM card inserted.

Menu → Messages → Message setup

You can select a profile from the list of available profiles. To activate it:

Activate Press.

SMS setup menu

Options Open menu.

Activate Use the selected profile.

Change settings Change settings, see options below.

Rename Rename the profile.

Service centre

Enter or change the phone numbers of the service centre as supplied by the service provider.

Recipient

Enter the standard recipient for this transmission profile or select from the Phonebook.

Message type

Manual	The message type is requested for each message.
Standard text	Normal SMS message.
Fax	Transmission via SMS.
E-mail	Transmission via SMS.
New	You may need to obtain the required code number from your service provider.

Validity period

Select the period in which the service centre tries to deliver the message:

Manual, 1 hour, 12 hours, 1 day, 1 week, Maximum *, New

*) Maximum period that the service provider permits.

Status report



You are given confirmation of the successful or unsuccessful delivery of a sent message. This service may be subject to a charge.

Direct reply



The reply to your message is handled via your service centre when **Direct Answer** is activated (for information please contact your service provider).

SMS via GPRS



When this function is activated, SMS messages are automatically sent via GPRS (if available).

Requirement: GPRS is activated (p. 67). Ensure that your service provider offers this function.

Internet (WAP)

Get the latest WAP information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your mobile phone via WAP. Internet access may require registration with the service provider.


Internet access



Menu → Surf & fun → Internet

The browser is activated as soon as you call up the function. If necessary, set how the Internet access should be made (see **Start with...**, p. 79).

The start menu appears, e.g.:

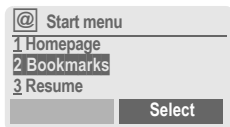

Select the required function.

Select

Confirm.

You can now surf the Internet. For further instructions see p. 79.

Start menu

Homepage	The connection to the Internet provider's portal is established (may be set/preset by the service provider).
Bookmarks	Display up to 12 URLs stored in the phone for fast access (p. 79).
Resume	Call up recently visited pages that are still in the memory.
WAP Profiles	Set up to 5 access profiles (p. 68).
Inbox	Inbox for messages from the WAP server.
Exit browser	Close the browser and clear down the connection.

End connection



Hold **down** to end the connection.

Browser menu

If the browser is active, the menu can be activated as follows:



Press

or



Select **@** and confirm.

Homepage	The first WAP Internet page that is displayed after connection is established (may have been set/preset by the service provider).
Bookmarks	Display up to 12 URLs stored in the phone for fast access (p. 79).
Resume	Call up recently visited pages that are still in the memory.
Go to URL	Enter URL for directly accessing an Internet address, e.g. wap.my-siemens.com
Show URL	Show the Internet address of the current page.
Reload	The page is reloaded.
Disconnect	End connection.
More ...	See below.
Exit browser	Close the browser and clear down the connection.






More ...

WAP Profiles	Set up to 5 access profiles (p. 68).
Reset	Delete the pages last visited (cache).
Setup	<p>Font size</p> <p>Protocol parameters</p> <ul style="list-style-type: none"> • Push • Push can force online • Timeout for unanswered network requests • GPRS linger time <p>Security</p> <ul style="list-style-type: none"> • Connection prompt • Secure prompt • Current certificate • CA certificates • Private Key PINs • Encryption <p>Start with...</p> <ul style="list-style-type: none"> • Start menu • Browser menu • Homepage • Resume • Bookmarks
Inbox	Inbox for messages from the WAP server.
Save bitmap	Bitmap viewer opens for editing the picture.
About Openwave	Display the browser version.






Notes

Homepage: The soft keys may be assigned functions that are controlled online from the homepage of your service provider such as "link" or "menu". The contents of the option menus are also variable.

Displays:

	Browser menu
	Offline
	Online
	GPRS Online
	No network

 Enter special characters:

	Press 3 times for /
	Press 3 times for @
	Press once for . (full stop)
	Press repeatedly for r:
	Press repeatedly for ~

WAP profiles

Preparation of the phone for Internet access depends on the service provider currently used:

- If the settings have already been made by your service provider you may begin immediately.
- If access profiles have been assigned by your service provider select a profile and activate it.
- The access profile must be set manually (p. 68).

If necessary, check with your service provider for details.

Activate WAP profile

You can change the current profile each time before accessing the Internet.

Menu → Surf & fun → Internet
→ WAP Profiles

 Select a profile.

Select Press to activate. The current profile is selected.

Your Internet browser is licensed by:



OPENWAVE™



Games & more

Load games and other applications via WAP. You are advised on relevant applications on the Internet.

Download can start after a game/an application has been selected. You can now use the application/play the game.

Most applications include instructions.

Note

The ISP access for Java™ must be configured to download applications p. 69
 Activate a Java™ profile p. 37

Applications and games can be found at:

wap.my-siemens.com


or on the Internet at:

www.my-siemens.com/city

Games and applications

Applications and links that are already stored on your phone are found under:

Menu → Surf & fun → Games & more

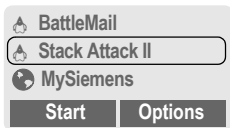

Different functions are available depending on which entry is highlighted:

Carry out game/application offline

Start Executable application ; can be started directly.

Load game/application online

Download README only (p. 75); Application still has to be downloaded.

Go to a link, surf online

Internet The selected Internet page is loaded.


Receive information

If information, which is required e.g. by an application that has already been installed, is received via **SMS**, the symbol appears above the left soft key.

By pressing this key, the relevant application is started and the information is processed.

Note

The following key control is used for many games (virtual joystick):

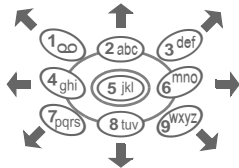

Games & more menu

All functions required for managing your files are found in the Options menu:

Options Open menu.

Download	An application is downloaded from the Internet and installed.
Start	Start application.
Delete	Delete selected application.
Rename	Rename selected applications.
Java Profiles	Select access profile.
Details	Show details on the application (name, version, size, path, producer, date).
Sort	Set sort criteria (alphabetical, time).
More Info	Download further instructions via Internet (WAP), if available.
Reinstall	Reinstall an application (update).
Capacity	Display maximum and available capacity.

WAP can be used to download applications from the internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. The same applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in this device or the applications or software and for any direct damage or consequential damage of whatever nature resulting from the use of these applications or software. For technical reasons, such applications or software and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In these cases the purchaser will need to download the application again or re-enable it. Siemens does not warranty or guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge.

Java™ profiles

Preparation of the phone depends on the service provider currently used:

- If the settings have already been made by your service provider you may begin immediately.
- If access profiles have been assigned by your service provider select and activate profile.
- The access profile must be set manually (p. 69).

If necessary, check with your service provider for details.

Activate Java™ profile

Menu → Surf & fun → Games & more
→ Java Profiles



Select the required profile.

Select Press to activate.

Bitmap viewer

Set animations, logos and screensavers on your phone according to your wishes.

Pictures and links that are already stored on your phone are found under:

Start bitmap viewer

Menu → Surf & fun → Bitmap viewer



Select storage location, folder or link:

Own animat.

Own pictures

Screensaver

Logo

URL

Different functions are available depending on which entry is highlighted:

Own animat./Own pictures



Select folder.

Select Press.



Select picture.

Load The picture is displayed.

Screensaver/Logo

Load The picture is displayed.

Go to a link, surf online

Internet The selected Internet page is loaded.

Store pictures

Store pictures currently displayed in the bitmap viewer on a new storage location e.g. to create a new screensaver:



Select storage location.

Save Press.

Send pictures via SMS

Open bitmap viewer and activate the required picture then:

Options Open menu.

Send Enter recipient or use Phonebook .

OK Confirm.

Receive pictures

If a picture (graphic/screensaver) has been received via **SMS** the symbol appears above the left soft key. By pressing this key, the bitmap viewer is started and the picture is displayed.

When downloading via **WAP**, the bitmap viewer opens automatically. Internet addresses see p. 12.

Note

If a received picture has not been copied to the bitmap viewer, it will be overwritten when the next picture is received.

Bitmap viewer menu

Options Open menu.

Save as...	Store the current picture on one of the storage locations.
Send	Send picture via SMS.
Load	Load new picture to the bitmap viewer.
Discard	Delete current picture from the buffer.
Delete	Delete selected picture.

Select bitmap style

Menu → Setup → Device
→ Display → Bitmap style

You can select between two animations which are shown in different situations, for example when entering a PIN. Animations available on the phone are:

Racing

Windsurfing

Own greeting

Menu → Setup → Device
→ Display → Own greeting

The greeting is displayed instead of an animation when you switch on the phone.

Change Switch on/off.



Delete old message and create new message.

OK Confirm changes.

Screensaver

Menu → Setup → Device
→ Display → Screensaver

The screensaver shows a picture on the display once a user-definable time has elapsed. An incoming call and any key press ends the function. You can also receive and save a screensaver via SMS/WAP.

Screensaver menu

Options Open menu.

Enable	Activate screensaver.
Style	Analog clock or Bitmap.
Preview	Display the style set.
Timeout	Set period after which the screensaver starts.
Security	Enter phone code to end screensaver (as security setting).

Melody manager

You can use the melody manager to manage your additional ring tones and a folder with more of your own ring tones and links.

Start melody manager

Menu → Surf & fun → Melody manager



Select folder, storage location or link:

Own sounds

Individual 1

Individual 2

Individual 3

Individual 4

URL

Different functions are available depending on which entry is highlighted:

Own sounds



Select folder.

Select

Press.



Select ring tone.

Load

Load ring tone to the melody manager.

Play

Play ring tone.

Individual 1 To Individual 4

Load

Load ring tone to the melody manager.

Play

Play ring tone.

Go to a link, surf online

Internet The selected Internet

page is loaded.

Store ring tone

Save ring tone currently loaded in the melody manager on a new storage location e.g. on **Individual 1**:

Options Open menu.

Save as... Select.

Select Confirm.



Select storage location.

Save

Store ring tone.

The ring tones stored under **Individual 1** to **Individual 4** can be assigned to different functions/anniversaries if you use the **Ringer tones** (p. 40) function.

Send ring tones via SMS

Start melody manager and load required ring tone, then:

Options Open menu.

Send Enter recipient or use Phonebook

OK Confirm.

Receive ring tone

If a ring tone has been received via **SMS** a note appears above the left soft key. Press this key to start the melody manager.

The melody manager automatically opens after a melody has been loaded via **WAP**. Internet addresses see p. 12.

Melody manager menu

Options Open menu.

Play	Play the ring tones currently loaded.
Save as...	Store ring tone at Individual 1 to 4 or Own sounds.
Load...	Load ring tone from Individual 1 to 4 or Own sounds.
Discard	Delete loaded ring tone from the buffer.
Delete	Delete ring tone from Individual 1 to 4 or Own sounds.
Send	Send ring tone via SMS.

Ringer tones

For the ranges/functions listed below you can choose from 20 ring tones already stored in the phone and from four own (p. 39) ring tones (Individual 1 to 4,).

Menu → Audio → Ringer tones



Select range (except Melody manager):

All calls

☐ Calls

Group calls

Appointments

Messages

Cell broadcast services
(Melody manager)



Choose ring tone.

OK

Confirm.

Note

Special ring tones can be sent to you via SMS (p. 39) or you can load them via WAP (p. 32).

Most service providers offer you an external answering service. In this mailbox, a caller may leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and if **Call waiting** is not active p. 15).

If the voice mail service is not part of your service provider's user package, you will need to register and the settings must be made manually. The following description may vary slightly depending on the service provider.

Setup



The service provider supplies you with two phone numbers:

Mailbox number

You call this phone number to listen to the voice mails left for you. To set it up:

- Menu** → Messages
→ Voice message

Select phone number from Phonebook or dial it/change it and confirm with **OK**.

Forwarding number

Calls are diverted to this phone number. To set it up:

- Menu** → Divert
→ e.g. Unanswered → Set

Dial the number of the mailbox.

- OK** Registration at the network will be confirmed after some seconds.

For further information on call divert see p. 44.

Listen to



A new voice mail can be displayed as follows:



Icon plus beep.

or



a text message announces a new voice mail.

or

you receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Hold **down** (if necessary enter mailbox number once only).

Confirm with **OK** or **Mailbox** depending on service provider.

Outside your home network, you may need to dial a different mailbox number and enter a password to access your mailbox.

Some service providers offer information services (info channels). If reception is activated, you receive messages on the active topics in your "Topic list".

Menu → Messages → Cell broadcast

Receive CB

You can activate and deactivate the CB service. If the CB service is activated, the standby time of the phone will be reduced.

Read new CB

All unread CB messages are displayed.

Topic list

Add an unrestricted number of topics to this personal list from the topic index (see **Topic index**). You can pre-set 10 entries with their channel number (ID) and, if necessary, name.

New topic

New topic Select.

- If no topic index is available (**Topic index**) enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted, select a topic and confirm with **OK**.

Selection from a list


Options Open list menu.

If a topic is selected in the list you can have a look at it, activate it, deactivate it, edit it or delete it.

Auto display

CB messages are displayed in standby mode, longer messages are automatically scrolled. This display can be activated/deactivated for all or only new messages.

To switch to "full page view":

, then press **View CB**.

Topic index

The list of topics is displayed for you to choose from. If none are displayed you must enter the channel numbers (ID) manually (see **Topic list**). Please contact your service provider for details.

CB languages

Receive Cell Broadcast messages only in a specific language or in all languages.

Displays



Topic activated/deactivated.



New messages received on the topic.



Messages already read.

You can display the charge details and the duration of calls as you speak as well as setting a unit limit for outgoing calls.

Display

Menu → Records → Duration/charges

After you have made the charge detail settings, you can display the call duration/charges for the various call types or you can display the credit balance.

Select a call type (see setting for **All calls** and **Incoming calls**)

Select Display the data.

When displayed, you can:

Reset Clear display.

OK End display.


Charge settings

Menu → Records → Charge settings

Conv. 

(PIN 2 query)

Enter the currency in which the charge details are to be shown.

Personal rate 

(PIN 2 query)

Enter the charges per unit/period.

Account limit 
(PIN 2 query)

Special SIM cards allow you or the service provider to define a credit/period after which the phone is blocked for outgoing calls.

Change Enter the number of units and confirm with **OK**.

Then confirm the credit or reset the counter. The display of Prepaid cards may vary depending on the service provider.

All calls 

Activate to display the following call types:

Last call

Any call

Remain. units

Incoming calls 

Activate to display the following call types:

Last call

All outgoing calls

All incom. calls

Remain. units

Auto display

Call duration/charges are automatically displayed for each call.

You can set the conditions for which calls are diverted to your mailbox or other numbers.

Menu → Divert

Set divert:

The most common condition for divert is:

Unanswered



Menu → Divert



Select **Unanswered**.

(covers the **Not reachable**, **No reply**, **Busy** conditions, see right)

Select

Press.

Set



Enter the phone number to which the caller will be diverted (if not done already)

or



select this phone number from the Phonebook or via **Mailbox**.

OK

After a short pause, the setting is confirmed by the network.

All calls



All calls are diverted.



Symbol in the top line of the display in standby mode.

Spec. divert



Not reachable

Divert if the phone is switched off or out of range.

No reply

A call is only diverted after a delay (depends on the network). The period can be set by the user to a maximum of 30 seconds in 5 second intervals.

Busy

Divert if a call is in progress. If **Call waiting is** activated (p. 67), you will hear the call waiting tone during a call (p. 15).

Receiving fax



Fax calls are diverted to a number with a fax connection.

Receiving data



Data calls are diverted to a phone number with a PC connection.

- Menu** → Divert
→ Select a function.

Status check

You can check the current divert status for all conditions.

After a short pause, the current situation is transmitted by the network and displayed.

 Condition set.

 Not set.

? Display if status is unknown (on a new SIM card for example).

Clear all

All set diversions are cleared.



Note

Note that the divert is stored in the network and not in the phone (when the SIM card is changed for example).

Check condition or delete it

First select the condition.

Select Press.

Check status

Select

or

Delete select.

Reactivate divert

The last divert has been stored.

Proceed as with Set divert.

The stored phone number is displayed. Confirm the number.

Edit phone number

Proceed as with "Set divert". When the stored number is displayed:

Delete Delete the phone number.

Enter new number and confirm.


If there are many Phonebook entries it is best to assign them to a group (p. 21), e.g.: **VIP, Leisure, Office, Family**

Menu → Get in touch → Groups
→ Select a function:

SMS to group

A memo (SMS) can be sent as a "circular" to all members of a group.

 Select a group.

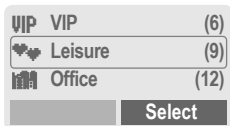

Select Press. The group is confirmed and the editor is opened.



Compose message (p. 26).



Press and confirm the displayed group with **OK**.



Press. The first recipient is displayed.



Press. The SMS is sent. Each send operation must be confirmed. It is possible to skip individual recipients.

Call to group



You can call up to 5 members of a group one by one and link them together in a conference (function may need to be enabled).



Select a group.

Select


Press. The members of the group are listed.



Select the entries you want to call.

Change

Press. Mark entry/unmark entry.

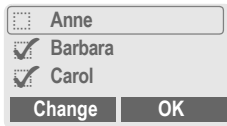


OK

Confirm selection. The first entry is dialed. When the connection has been established, the call is put on hold.



Proceed with calling the next entry until all marked entries have been called (up to 5, depending on the service provider).

Options Open the menu e.g. to link the calls on hold in a conference.

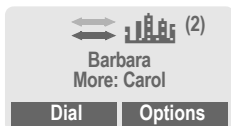

Send DTMF tones (p. 73)


Call transfer (p. 16)

Main menu Direct access to the main menu.

Call status List all held and active calls (e.g. participants in a conference).

Call to group menu

Options Open menu.

Dial	Dial current entry.
Skip	Skip next number.
Conference	Link all calls on hold in a conference (p. 16).
Swap	Accept the waiting call and put the current call on hold.
Microphone on	<p>Switch the microphone on or off. If it is switched off, the person on the other end of the line cannot hear you (muting).</p> <p>Alternatively:  Hold down.</p> <p>However, numbers being entered are audible when Send DTMF tones is active.</p>
Volume	Adjust handset volume.
Time/charge	While the connection continues, the call duration and (if set, p. 43) the call time/cost are displayed.

Group setup

Menu → Get in touch → Groups



Select a group.

Select Press. The group is displayed for editing.

The following functions are applied to the group or all entries of a group:

Group menu

Options Open menu.

View members	Display all entries assigned to the selected group.
Rename group	Change the current name of the group.
Group symbol	Assign a symbol to a group (p. 22).

Change group assignment

Normally a group is assigned to a Phonebook entry when it is entered (p. 19).

To change the group assignment or to assign a group later, the following steps are necessary:

When the Phonebook is open:



Select entry.

View Press.

Edit Press.



Scroll to group.

Edit Press and select new group.

Save Save assignment.

Note



Phonebook key:

Press once to open Phonebook


Press twice to display groups

Press three times to display 1st group entries

Menu → Get in touch → Organiser
→ Diary

Diary

Up to 50 appointments can be entered.

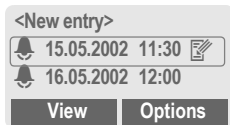

If an alarm is missed it appears in the list of missed appointments (p. 52).

New appointment

<New entry>

Select.



Make the entries field by field.

Type:



Memo. A text with up to 20 letters may be added.



Call. Enter phone number. Shown with alarm.



Meeting

Description: A short description can be entered.

Reoccurrence: Period for repeating.

Date: Enter start date.

Time: Enter start time.

Save Store the appointment.

Appointments menu

Options Open menu.

View	Display entry.
Activate/Deactivate	Activate or deactivate appointment.
Edit	Display the entry for changes.
New entry	See left.
Delete	Delete entry.
Delete all	Delete all appointments after confirmation.
Send SMS...	as entry: Send entry to recipient. as text: Send entry as SMS message.
Capacity	Display number of entries.

Note

An alarm sounds even when the phone is switched off (the phone does not switch to the standby mode). To deactivate it press any key.

Deactivate all alarms p. 55

Ringer setting p. 59

Clock p. 53



Display when alarm is activated.

Pause Repeats the alarm after 5 mins.

Menu → Get in touch → Organiser
→ Greetings

Greetings

Your phone will remind you of special events so you do not to forget them any more.

New event

<New entry>

Select.




Make the entries field by field.

Type:

Birthday

Anniversary

Special event

Name: Enter name. E.g. copy the name from the Phonebook .

Date: Enter start date.

Time: Enter start time.

Events menu

Options Open menu.

View	Display entry.
Activate/ Deactivate	Activate/deactivate alarm.
Edit	Display the entry for changes.
New entry	Enter a new event.

Delete	Delete entry.
Delete all	Delete all events after confirmation.
Send SMS...	as entry: Send congratulations to recipient. as text: Send congratulations as SMS message.
Capacity	Display number of entries.

Reminder

An alarm will remind you of the event twice:

- 24 hours before the date of the event as entered.
- Directly on the date of the event with the following options:

Options Open the menu

SMS	Send an SMS with standard (changeable) text.
Call	Dial the number.
Pause	Repeat the alarm after 5 minutes.
Off	Stop the alarm.

If an alarm is missed (e.g. because you are making a phone call) it appears in the list of missed appointments (p. 52) with the same options as described above.

Menu → Get in touch → Organiser
→ Notes

Notes

T9 support (p. 28) makes writing notes such as shopping lists easier for you.

New entry

<New entry>

Select.



Enter the text.

Options Open menu.

Save Store the entry.

Text menu

Options Open menu.

Save Store the entry.

T9 input
(p. 28) **T9 preferred:** Activate intelligent text entry or deactivate it.

Input language: Select the language in which the note is to be composed.

Line feed Enter line break.

Clear text Delete the note.

Send Send note as text of an SMS message.

Display entry



Select entry.

View Open note.

Notes menu

Options Open the menu.

View Display the entry.

Change Display the entry for changes.

New entry Enter a new note.

Delete Delete entry.

Delete all Delete all notes after confirmation.

Confidential Protect entry with phone code (p. 10).

Send Send entry as text of an SMS message.

Capacity Display number of entries.

Note

Protect confidential data with the phone code (p. 10).

We recommend that you do not store any passwords (PIN, TAN etc.) as notes.

Menu → Get in touch → Organiser
→ Missed alarms


Missed alarms

Events with alarm which you have missed are listed and can be displayed.

Menu → Get in touch → Alarm clock

Alarm clock

Use this function to set a **single** time for the alarm call. The alarm sounds even when the phone is switched off.

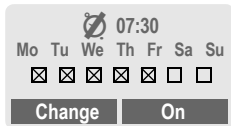

On / Off Switch the alarm on and off.

Setting

Change Display the set time and date for the alarm call.

Set the time for the alarm call (hh:mm).



Navigate to the days.

Change Set the days for the alarm call.

OK Confirm settings.

Note



Alarm clock switched on.



Alarm clock switched off.



Alarm clock active (display in standby mode).

Menu → Get in touch → Clock

Time/date

The clock must be set correctly once at start-up.

Change Press.



First enter the date (day/month/year) then the time (24 hours, including seconds).

Note

If the battery is removed for more than about 30 seconds, the clock must be reset.

Date format

Setting of the date format at:

DD.MM.YYYY or MM/DD/YYYY

Auto display

The time display can be switched on and off.

Auto phone off

The phone switches off each day at the set time.

Activate:

Time Press.



Enter time (24 h clock).

OK

Confirm.

Deactivate:

Manual Press.

OK

Confirm.

Auto timezone



If this feature is activated, you will be asked if you want to change the time whenever you cross into a new time zone (if this feature is supported by the network with which you are registering).

If a profile is used, several settings are made with **one** function.

- Five profiles are standard with default settings, they can be changed however:

Normal envi.

Quiet environ.

Noisy environ.

Car Kit

Headset

- You can set two personal profiles individually (<No Title>).
- The special profile **Aircraft mode** is fixed and cannot be changed (p. 55).

If the phone is used by several people, they can each activate their own settings by selecting their individual profile.

Activate

Menu → Profiles



Select default profile or personal profile.

Activate Activate the profile.

Normal envi.
 Quiet environ.
 Noisy environ.

Activate **Options**

Active profile.

Setup

Edit a default profile or create a new personal profile:



Select profile.

Options Open menu.

Change settings
Select.

The list of available functions is displayed:

Ringer setting	p. 59
Volume	p. 59
Melodies	p. 40
Call screening.....	p. 59
Silent alert	p. 59
Key tones	p. 59
Information tones.....	p. 60
Illumination	p. 61
Big letters	p. 61
Bitmap style.....	p. 38

When you have finished setting a function, you return to the profile menu where you can change a further setting.

Profiles Menu

Options Open menu.

Activate	Activate profile.
Change settings	Change profile settings.
Copy from	Copy settings from another profile.
Rename	Rename personal profile.

Menu → Profiles
→ Select a function:

Car Kit

If an original Siemens Car Kit is used (p. 88) the profile is activated automatically as soon as the phone is inserted into the cradle (p. 70).

Headset

If an original Siemens headset is used (p. 87), the profile is activated automatically as soon as the headset is plugged in (p. 71).

Aircraft mode

All alarms (appointments, alarm clock) are deactivated. It is **not possible** to modify this profile.

- The phone must be switched off when you select a profile.
- In this status, alarms are **not** indicated by the ringer or silent alert.

Activate

Menu → Profiles



Scroll to **Aircraft mode**.

Activate Activate the profile.

A security prompt must be confirmed.

The phone switches itself off automatically.

Normal operation

The next time you switch on the phone and return to normal operation the default profile **Normal envi.** will be activated.

Menu → My menu

Create your own menu with frequently used functions, phone numbers or WAP pages.

The list of the 10 entries available is preset. However you can change it according to your wishes.

Note

For fast access from standby mode:



Press, then ...



... press twice **on the left**.

Activate

Select the required entry.

Select

Press.

or

Options

Press.

Activate

Select

Select

Press.

or



If the selected entry is a phone number, you can also call it with the Call key.

Change settings

You can replace each preset entry (1-10) with another entry from the selection list of **My menu**.



Select the required entry.

Options

Press.

Change settings

Select.

Set

Press.



Select the **new** entry in the selection list.

Set

Press.

If you have selected a phone number or a WAP favourite as a new entry, the relevant application opens to choose from.

Reset all

After confirmation and after entering the phone code, the default entries are set.

The left soft key and the keys 2 to 9 (speed dialling numbers) can each be assigned an important phone number or a function. The phone number can then be dialled or the function can be started at the touch of a button.

Notes

A function may already have been programmed on the left soft key by your service provider (e.g. access to "SIM Services"). It may not be possible to modify this key assignment.

The soft key may sometimes be replaced automatically by /○○ to access a new message for example.


Available key assignments :

Internet.....	p. 32
Games & more.....	p. 35
Phone number	p. 19
Alarm clock	p. 52
New SMS.....	p. 26
Illumination.....	p. 61
Hide ID.....	p. 67
Missed calls	p. 18
Calls received	p. 18
Inbox (SMS).....	p. 25
Outbox (SMS).....	p. 25
My menu	p. 56
Call screening	p. 59

Left soft key

A function/phone number may be assigned to the **left** soft key for fast access.

Change

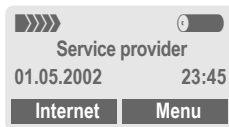

Internet. Press **briefly**.

Change Pick out the application from the list.

- Assign the new function (e.g. **New SMS**) to the soft key.
- Special case **Phone number**. Pick out a name from the Phone-book (e.g. "Carol") to assign to the soft key.

Select Confirm setting.

Apply

The setting "Carol" is used here only as an example.

Carol Hold **down**.

Speed dialling keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access. For available key assignments see p. 57. Number key 1 is reserved for the mailbox number (p. 41).

Edit

In standby mode:



Press number key (2-9). If the key is not assigned:

Set

Press.

or

New SMS

Press **briefly** (if "New SMS" is assigned, for example).

Change

Scroll to application in the list.

Special case **phone number**.
Pick out a name from the Phonebook for assignment to the key.

Special case **bookmark**.
Scroll to a URL in the bookmark list for assignment to the key.

Select

Confirm setting.

Apply

Select a stored phone number or start a stored application (e.g. **New SMS**).

In standby mode:

2 abc Press.

The assignment of the number key 2 is displayed instead of the left soft key e.g.:

New SMS Hold **down**.

or simply

2 abc hold **down**.

You can set the tones that sound in specific situations to suit your particular tastes.

Menu → Audio
→ Select a function:

Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.



Hold down in standby mode (p. 78).

Note



Display: Beep.

Display: Ringer off.

Volume

You can set the volume for each area.



Select the type:

All calls

☐ Calls

Group calls

Appointments

Messages

Cell broadcast services



Set volume.

OK

Confirm.

Note



Displays rising volume.

If two independent phone numbers are registered for your phone you can set different volumes for them (p. 64).

Call screening



Only calls from numbers that are in the Phonebook or in a predefined group are signalled audibly or by silent alert. Other calls are merely displayed.

If you do not accept these calls, they are diverted to your mailbox (if set, p. 41).

Note



Displayed when filter is activated.

Silent alert

To avoid being disturbed by the ringer, you can activate the silent alert of the phone instead. The silent alert can also be activated in addition to the ringer (e.g. in noisy environments). This function is deactivated when the battery is being charged.

Key tones

You can set the acoustic key tone:

Click or Tone or Silent

- Menu** → Audio
- Select a function:

Minute beep

During the call, you hear a beep after every minute as a reminder of the time elapsed.

Information tones

Set service and alarm tones:

Select On/Off.

Change If activated, service tones are reproduced for an extended range of functions.

Melody manager

(p. 39)

Ringer tones


(p. 40)

Device

Menu → Setup → Device
→ Select a function.

Language

Set the language of the display text. When "automatic" is set, the language of your service provider is used. If a language that you do not understand happens to be set, the phone can be reset to the language of your service provider with the following input:

*#0000# 

Display

Own greeting

(p. 38)

Bitmap viewer

(p. 37)

Screensaver

(p. 38)

Illumination

Can be switched on and off (switching it off increases the standby time).

Big letters

You can choose between two font sizes for the display.

Contrast


You can set the display contrast.

Bitmap style

(p. 38)

Keys


Any key to answer

You can press any key to accept an incoming call (except )

Auto key lock

If **Auto key lock** is activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

The keypad can also be directly locked and unlocked as follows:

 Hold **down**.

Key tones

You can set the type of acoustic key tone:


Click or Tone or Silent

Menu → Setup → Device
→ Select a function.

Status

Fact. settings

The phone is reset to the default values (factory setting) (does not apply to SIM card and network settings):

*#9999# 

Phone identity

The phone ID (IMEI) is displayed. This information may be useful for customer service.

Fast search

When this function is active, network connection is speeded up (standby time is reduced).

T9 input

T9 preferred

Activate intelligent text entry or deactivate it.

Input language

Select language in which the message is to be composed.

Languages with T9 support are marked by the **T9** symbol.

Menu → Setup → Device
→ Select a function.

Battery care

(only if a NiMH battery is used)

This function allows the NiMH battery to be regenerated when the operating time drops (eliminating the memory effect).

Connect the phone as for charging (p. 8) and then call up this function.

The battery is now fully discharged and recharged. Depending on the state of the battery, this can take up to 5 hours.

Note

No phone calls can be made during this process. The clock setting is retained.

Security

The phone and SIM card are protected against misuse by several security codes.

Menu → Setup → Security
→ Select a function:

Codes

PIN control, Change PIN, Change PIN2, Change phonecode, see p. 10.

Babysitter

(Phone code protected)

Only **one** number can be dialled. Hold **down** the right soft key on the the outside right (p. 17).

Allow only



(PIN 2/phone code protected)

Dialling is restricted to the numbers in the Phonebook, new entries are not possible. If only area codes are entered, the relevant phone numbers can be added to these manually before dialling.

Depending on whether the Phonebook is stored on the SIM card or in the phone, the PIN 2 or phone code are requested before changes can be made.

Menu → Setup → Security
→ Select a function:

Only



(PIN 2 protected)

The dialling options are restricted to SIM protected numbers in the Phonebook. If only area codes are entered, the relevant phone numbers can be added to these manually before dialling.

Last 10 only



(Phone code protected)

Calls are limited to the call list (p. 18) of "dialled numbers". This list can be filled with phone numbers specifically for this purpose: First delete the call list, then create "new entries" by dialling phone numbers and cancelling before the connection is established.

This SIM only



(Phone code protected)

Your phone is prevented from being used with a **different** SIM card.

Network

Menu → Setup → Network
→ Select a function:

Line



This function is only displayed if it is supported by the service provider.

Two independent phone numbers must be registered on the phone.

Select

Select the currently used phone number.

1 >>> > Display the active phone number.

Note

Settings for phone numbers p. 78

Block line

(Phone code protected)

You may limit usage to one phone number.

Configuration

Network info

The list of GSM networks currently available is displayed.



Indicates forbidden service providers (depending on SIM card).

Menu → Setup → Network
→ Configuration
→ Select a function:

Choose network

The network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network info list is rebuilt when **Auto network** is set.

Auto network

Activate or deactivate, see also "Choose network" above.

If "Automatic network" is activated, the next network is dialled in the order of your "preferred service providers". Otherwise a different network can be selected manually from the list of available GSM networks.

Net operator

A list of all known GSM networks worldwide is displayed with the current codes.

Band selection

Select either GSM 900 or GSM 1800.



- Menu** → Setup → Network
→ Configuration
→ Select a function:

Pref. network

The service providers you prefer after your home network are displayed here (e.g. if there are several networks that differ in price).

Note

If the signal strength of your preferred network is not strong enough when you switch the phone on, the phone may log on to another network. This can change when the telephone is next switched on or if you manually select another network (p. 64).

Your service provider is displayed:

- List** Display list of preferred networks.

Create new entry:

- Select empty line, press **Entry**, then select another entry from the list of service providers and confirm.

Change/delete entry:

- Select entry, press **Change**, then select another entry from the list of service providers and confirm it or press **Delete**.

- Menu** → Setup → Network
→ Barrings
→ Select a function:

Barrings



Barring restricts the use of your SIM card (not supported by all service providers). You need a 4 digit password that your service provider will give you. You may need to be registered separately for each barring.

Outgo. access

All outgoing calls except emergency number 112 and 999 are barred.

Outgo internat

Only national calls can be made.

Out.int.x home

International calls are not permitted. However you can make calls to your home country when abroad.

All incoming

The phone is barred for all incoming calls (the forwarding of all calls to the mailbox offers a similar effect).

When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.

- Menu** → Setup → Network
 → Barrings
 → Select a function:

Status check

The following information can be displayed after a status check:

- Barring set.
- Barring not set.
- ? Status unknown (e.g. new SIM card).

Clear all

All barrings are cleared. A password which the service provider will give you is needed for this function.

User group



- Menu** → Setup
 → User group
 → Select a function:

If offered by the service provider, this service enables groups to be formed. These have access for example to internal (company) information or special tariffs apply to them. Check with your service provider for details.

User group

Activate or deactivate the function. "User group" must be deactivated for normal phone use (phone code, p. 11).

Select group

You may select or add groups other than the preferred groups (see below). The service provider supplies you with code numbers for the groups.

All outgoing

In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

Preferred grp

If activated, only calls within this standard user group can be made (depending on the network configuration).

During a call

Menu → Setup → During a call
→ Select a function:

Call waiting

If you are registered for this service, you can check whether it is set and you can activate/deactivate it (p. 15).

Hide ID

When you make a call, your phone number may be displayed on the recipient's display (depending on the service providers).

To suppress this display, you may activate the "Hide ID" mode for the next call or for all subsequent calls. You may need to register separately with your service provider for these functions.

Clock

(p. 53)

Connectivity

Menu → Setup
→ Connectivity
→ Select a function:

GPRS

(General Packet Radio Service)

GPRS is a new method for transmitting data in the mobile network faster. If you use GPRS, you can be connected to the Internet permanently if the network capacities suffice.

Some service providers do not yet support this service.

Change Activate or deactivate GPRS function.

Shown in the display:

GPRS GPRS activated.

 GPRS available.

GPRS info

Display of information on the connectivity status.



Press on the **left**. Fast access in standby mode.

- Menu**
- Setup
 - Connectivity
 - Select a function:

WAP profile settings

You can set or change up to 5 WAP profiles (may be barred by the service provider). The entries may vary depending on your service provider. To set a new profile:



Select a profile.

Options Open menu.

Change settings

Select and confirm.



Select profile range and make your settings/entries field by field.

Edit The entry card is displayed.

If necessary, check with your service provider for details:

WAP parameters



IP address: * Enter IP address.

Port: * Enter port number.

Homepage: Enter homepage (p. 32), if not set by the service provider.

Linger time: Enter time in seconds after which a connection should be terminated if no input or data exchange takes place.

*) depends on your service provider, if necessary enter 2nd IP address and 2nd port

CSD settings (Circuit Switched Data)

Dial-up no.: Enter ISP number.

Call type: Select ISDN or Analogue.

Login name: Enter login name.

Password: Enter password (shown as a series of asterisks).

GPRS settings (General Packet Radio Service)

activated/deactivated: Activate/deactivate

APN: Enter the address of your service provider.

Login name: Enter login name.

Password: Enter password (shown as a series of asterisks)

Save

The settings are stored and the profile list is shown.

Activate the set WAP profile (p. 34).

Note

As an alternative method to set/change a new profile, you can use the browser menu:



Call up the menu.

More ... Select.

WAP Profiles

Select.

- Menu**
- Setup
 - Connectivity
 - Select a function:

Set Java™ profiles


Up to 5 profiles can be defined. The settings have normally been carried out by the service provider in advance. To set a new profile:

 Select profile.

Options Open menu.

Change settings

Select and confirm.

 Select profile range and make you settings/entries field by field.

Edit The entry card is displayed.

If necessary, check with your service provider for details:

CSD settings (Circuit Switched Data)

Dial-up no.: Enter ISP number.

Call type: Select ISDN or Analogue.

Login name: Enter login name.

Password: Enter password (shown as a series of asterisks).

Linger time: Enter time in seconds after which a connection should be terminated if no input or data transfer takes place.

GPRS settings (General Packet Radio Service)

APN: Enter the address of your service provider.

Login name: Enter login name.

Password: Enter password (shown as a series of asterisks).

DNS1/DNS 2: (optional)

Save The settings are stored and the profile list is shown.

Activate set Java™ profile (p. 37).

Note

As an alternative method to set/change a new profile you can use Surf & fun:

Menu → Surf & fun → Games & more
→ Java Profiles

Options Select.
Java Profiles Select.

- Menu** → Setup
→ Connectivity
→ Select a function:

Fax/data mod.

(p. 72).

Authentication

- Change** Activate encrypted WAP dial-up (CHAP Challenge Authentication Procedure) or deactivate (PAP Personal Authentication Procedure).

Accessories

- Menu** → Setup → Accessories
→ Select a function:

Car Kit

If an original Siemens Car Kit is used (p. 88) the profile is activated automatically as soon as the phone is inserted into the cradle.

User-defineable settings

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!



Indication on the display.



Switch between the phone and Car Kit Portable during a call.

Auto off

(factory default: 2 hours)

The phone is powered by the car's power supply. The time between switching off the ignition and deactivation of the phone can be adjusted.

Automatic settings:

- Permanent illumination: switched on.
- Auto key lock: switched off.
- Charge the phone battery.
- Automatically activate Car Kit, when the phone is inserted (p. 55).

Menu → Setup → Accessories
→ Select a function:

Headset

If an original Siemens Headset is used (p. 87) the profile is activated automatically as soon as the headset is plugged in.

User-defineable settings**Auto answer**

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Eavesdropping is possible!

Automatic setting

Accept call with the Call key or PTT key (Push To Talk) when the key lock is activated.

Auto answer

If you fail to notice an incoming call there is a risk that it may be overheard by others.

HomeStation

These functions are only available with the appropriate original Siemens accessories (p. 88).

Menu → Setup → Connectivity
→ Fax/data mod.

With the phone and a connected PC, you can transmit and receive faxes and data. Appropriate software for data communication/fax communication must be available on your PC and there must be a connection to the phone.

Fax and data services must be enabled by the service provider. Different networks support different types of fax/data reception, please contact your service provider for details.

Change Set the required mode.

Fax/data mod.

Your service provider has given you a number for telephoning and a fax/data number.

Send

Start your PC communication program and enter the required destination phone number in the program.

Receiving

The call is signalled by a special ringtone and the type of call (fax or data) is displayed.

Now start the communication program in your PC to receive the fax/data.

Send vce/fax

Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

While the connection is being set up, the following soft key is available for two seconds:

Voice/fx Switch to **Send vce/fax** mode; you may now send a fax.

Voice/fax rec

(**Only** if a special fax or data number is not available).

Start the required communication program in your PC and switch on the function at the phone **during** the call (the PC accepts the connection).

End transmission

End transmission with PC software and/or press .

Control codes (DTMF)

Send DTMF tones

You can enter control codes (digits) during a call so that an answering machine can be controlled remotely. These digits are directly transmitted as DTMF tones (control codes).

 **menu** Open call menu.

Send DTMF Select.

Use the Phonebook

Store phone numbers **and** control codes (DTMF tones) in the Phonebook like a normal entry.



Enter phone number.



Press until a "+" appears on the display (pause for connection setup).



Enter DTMF signals (digits).



If necessary, enter further pauses of three seconds each to ensure correct processing at the destination.



Enter a name.

 **Save** Press.

You can also store the DTMF tones (digits) without a phone number and send them during a call.

CSD

(Circuit Switched Data)

Data transfer is made via a data connection to a default IP address of your network provider or service provider. This connection can be used for the exchange of data (e.g. for access to the Internet or for downloading games and applications as well as for using WAP services).

As long as this connection is established, in order to use services or to load applications from the Internet, charges for connection accrue according to the price list of your network provider or service provider.

Divert set

Divert

Diverts the caller to the mailbox, for example, if **Busy** (p. 44) is set and the **Call waiting** function (p. 15) is activated.

Emergency number (SOS)

By pressing the soft key **SOS**, you can make an emergency call on any network without a SIM card and without entering a PIN (not available in all countries).

This must only be used in real emergencies!

EMS

(Enhanced Messaging Service)

Besides (formatted) texts, you can also send

- pictures (bitmaps),
- sounds and
- animations
(sequence of 4 pictures)

using the EMS.

The segments specified above can be transmitted together or individually in an SMS. With EMS, pictures and sounds can also be sent e.g. as ring tones and screensavers. This can lead to messages that exceed the length of a single SMS. In this case a concatenation of individual segments to a single message is made.

Enter special characters

Press key repeatedly until the character is displayed:

	Blank	1	€	£	\$	¥	¤		
	.	,	?	!	0	+	-	:	¿
	i	“	’	;	_				
	*	/	()	<	=	>	%	~
	#	@	\	&	§	Γ	Δ	Θ	Λ
	≡	Π	Σ	Φ	Ψ	Ω			

To write special characters after numbers (e.g. 5 £), switch to the letter mode first:

 Press.

Extending numbers in the Phonebook

When entering a phone number in the Phonebook, digits can be replaced by a question mark "?":



Hold down.

These wildcards must be completed for the call.

Select the phone number in the Phonebook to call:



Press.



Replace "?" with digits.



Press to dial phone number.

GPRS




(General Packet Radio Service)


GPRS is a new method for transmitting data in the mobile network faster. If you use GPRS, you can be connected to the Internet permanently if the network capacities suffice.

Some service providers do not yet support this service.

International dialling codes

Many international dialling codes are stored in your phone.

In standby mode ( not necessary when dialling from the Phonebook):

 Hold **down** until a "+" is displayed. This replaces the first two digits of the international dialling code.

+List Press.

Select the required country. The international dialling code is displayed. Now add the national number (in many countries without the first digit) and press the Call key.

JAD and JAR

Three file types occur when using Java™:

The JAD file (Java Descriptor)

These files contain information on the application (JAR file) and its address for download. When a JAD file is activated, the connection to the Internet is established and the executable application is loaded.

The JAR file (Java archive)

These files include the executable applications. When a JAR file is activated, the application is started.

Combined files

These files result from JAR files being loaded via JAD files. In this case the JAD file is added to the JAR file. The display icon is the same as for JAR files.

The following icons appear when using Java™:



JAD file



JAR file

Java™

Java™ represents the best method to use numerous games and applications on your mobile phone. You can download these applications from the Internet and install them on your mobile phone. The application can be started after installation. Please refer to the operating instructions for each application.

Siemens does not guarantee that the downloaded and installed Java™ applications work well with your mobile phone (see also p. 36).

Message store full

The SIM memory is full when the message symbol flashes. **No** more SMS messages can be received. Delete or save messages (p. 25).

Operating times

The operating times depend on the operating conditions:

Operation carried out	Time (min)	Decrease of stand-by time by
Calling	1	30 to 60 minutes
Display back light *	1	30 minutes
Network search	1	5 to 10 minutes
* key input, games, organiser etc.		

If the phone is exposed to heat the standby time is considerably reduced. Avoid exposing the phone to direct sunlight or placing it on a radiator.

Outside your home network

If you are outside your "home network" your phone automatically dials a different GSM network (p. 64).

Own numbers

You can enter your "own numbers" in the Phonebook (e.g. fax) for information. These numbers can be changed or deleted and also be sent as SMS.

Phone number memo

If you enter a number with the keypad during a call the person on the other end of the line can hear the numbers being entered. It can be stored or dialled after the current call has ended.

Phone number / URL in SMS

Numbers **highlighted** in the message can be dialled or they can be stored in the Phonebook (p. 19). URLs (Internet addresses) can be accessed directly.

Quality declaration for the battery

The capacity of your mobile phone battery is reduced each time you charge/discharge it. Storing the battery at temperatures that are too high or too low also causes a gradual loss of capacity. This can cause the operating times of your mobile phone to drop significantly per usage cycle.



The battery is, however, designed to be charged and fully discharged within a period of six months from when the mobile phone was purchased. Following this six-month period, we recommend replacing your battery if you experience a significant drop in performance. Please purchase only original Siemens batteries.

Quick menu selection

All menu functions are numbered internally.

By entering these numbers one after the other the function may be started at once.

For example, to compose a new SMS:



- Menu** Press.
-  for Messages
 -  for New SMS

If your service provider offers additional functions (SIM services) in the menu system, the numerical order may change.

Service numbers

Numbers provided by your service provider may be stored in the Phonebook. You can call local or nationwide information services or use services offered by your service provider.

Signal strength

-  Strong signal.
-  A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

SIM card problems

You have inserted your SIM card, but the following message appears:

Please insert SIM card

Please ensure that the card is **correctly** inserted and the contacts are clean; if necessary, clean them with a dry cloth. If the card is damaged, please contact your service provider.

See also "Questions&Answers" (p. 82).

SIM services (optional)



Your service provider may offer special applications such as mobile banking, stock market etc. via the SIM card.

If you have such a SIM card the SIM services will appear at the top of the main menu or directly above the left soft key.



Symbol of the SIM services.

If there is more than one application they are displayed in the "SIM services" menu.

Menu → SIM serv

With the SIM services menu, your phone is ready for the future and will support additions to your service provider's user package. For further information, please contact your service provider.

SMS Push

This function allows you to call up an Internet address (URL) directly from an SMS. After selecting it, the URL is

highlighted. By pressing the Call key, the WAP browser is automatically started and the highlighted Internet address is called up.

SMS status report

If the phone was unable to send the message to the service centre a retry option is available. If this attempt also fails, contact your service provider.

The **Message sent!** text only indicates that the message has been transmitted to the service centre which now tries to deliver the message within a certain period.

See also "Validity" (p. 31).

Switch off ringer

Switch off the ringer only for the **current** call/alarm (not if "Any key answer", p. 61, is active):



Hold **down**.

The call is still displayed. When you accept or reject the call or the next time you switch the phone off or on, this function is ended.

T9 language versions

If you want to load another dictionary (T9 language version) to support writing SMS in a different language, a comprehensive selection of dictionaries to be downloaded via the Internet and the relevant installation notes can be found at:

www.my-siemens.com/t9

Two phone numbers



Special settings can be made for each phone number (e.g. melody, call divert etc.). Switch to the required number first (p. 64).

To switch the phone number/line in standby mode:



Press.



Press.

WAP


(**W**ireless **A**pplication **P**rotocol)

A technical standard that is the basis of the connection between mobile radio networks and the Internet. WAP enables mobile surfing using the mobile phone in the Internet, downloading of games and applications and the use of WAP services such as news, stock exchanges or information.

WAP usage

Start with...

You can set which functions are to be displayed after Internet access:

 Open the browser menu.

More ... Select.

Start with...

Select, then select from the list:

Start menu (p. 32)

Browser menu (p. 33)


Homepage (p. 32)

Resume (p. 32)

Bookmarks (p. 32)

Enter the Internet address (URL)

A WAP page must be shown on the display (online or offline). Then:

 Open the browser menu.

Go to URL Select.



Enter URL and confirm.
The connection is established.

Bookmarks (URL)



You can store a list of your favourite Internet addresses (URLs) in the phone (offline and online available, depending on the service provider):

Save:



Open the browser menu.

Bookmarks Select.

Online (save):

Add bookmark

The current WAP address is added as a bookmark.

Offline (save):

(Empty) Select.

Menu Open menu.

Change Select, enter name/head-
er and URL and confirm.

Save Press.

Apply:



Open the browser menu.

Bookmarks Select.



Select entry.

Go The selected call is set up.

Fast access:

To open the bookmark list when the browser has been started:



Press.

Special characters for WAP usage:



Press 3 times for /



Press 3 times for @



Press for . (full stop)



Press repeatedly for :



Press repeatedly for ~

Changing the home page

The address of the home page is set in the (access) profile (p. 68). You can change it in standby mode (if permitted by the service provider!):

Menu → Surf & fun → Internet
→ Profiles

Select the profile, for example:

e-Commerce

Select.

Change The entry card is displayed.

Select **WAP parameters/Homepage**.



Enter new address. Go to the end of the entry card.

Save Press.

Without SIM card

If you switch on the phone **without** SIM card, you can use some functions of the phone.

Menu Press soft key. The functions are displayed.

SOS Emergency number, SOS.

Displays



Signal strength.



Charging completed.



Battery indicator.



All calls are diverted.



Ringer off.



Short ringer (beep) only.



Ringer only, if caller is stored in the Phonebook.



Alarm is set.



Alarm clock active.



Key lock active.

Phone numbers/names:



On the SIM card



On the SIM card
(PIN 2 protected).



In the phone memory.



No network access.



Function active.



Phonebook.

ABC/
abc/Abc

Indicates whether upper or lower-
case letters are active.

T9

Text input **with** T9.

GPRS

GPRS activated.



GPRS available.



WAP Online.



WAP via GPRS Online.



WAP No network.



Headset mode.



Loudspeaker Car Kit.



Additional handset mode.



HomeStation active.



Car Kit active.



Auto answer feature on.

Diary icons



Memo.



Meeting.



Call.

Soft keys



Message received.



Voice mail received.



Unanswered call.



Receiving a picture.



Receiving a melody/ring tone.



SIM memory full.



Store in Phonebook.



Retrieve from Phonebook.



SIM services.






Switch Car Kit Portable.




T9 word selection.

If you have any questions about using your phone, visit us at www.my-siemens.com/customer-care anytime. In addition we have listed some frequently asked questions and answers below.

Question	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	 Press On/Off key for at least two seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty.	Clean contacts.
	See also below under: "Charging error"	
Standby time is too short.	Frequent use of the organiser and games.	Restrict use if necessary.
	Speed search active.	Deactivate speed search (p. 62).
	Display illumination on.	Switch off display illumination (p. 61).
	Unintentional keystrokes (illumination!).	Activate key lock (p. 61).
	Memory effect (only NiMH battery).	Run battery care function (p. 62).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable. 2) Wait up to 2 hours until the charge icon is displayed. 3) Charge battery as usual.
	Temperature out of range: 5 °C to 40 °C.	Make sure the ambient temperature is right, wait a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and device interface, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger.	Only use original Siemens accessories.
	Battery faulty.	Replace battery.
SIM error.	SIM card not correctly inserted.	Make sure that the SIM card is correctly inserted (p. 7).
	SIM card contacts dirty.	Clean the SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 3 V SIM cards only.
	SIM card damaged (e.g. broken).	Inspect the damage. Return the SIM card to service provider.

Question	Causes available	Possible solution
No connection to network.	Signal weak.	Move higher, to a window or open space.
	Outside GSM range.	Check service provider coverage map.
	SIM card not valid.	Reclaim at the service provider.
	New network not authorised.	Try manual selection or select a different network (p. 64).
	Network barring is set.	Check barrings (p. 65).
	Network overloaded.	Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 64). Switching the phone off and on may speed this up.
Calls not possible.	2nd line set.	Set line 1  (p. 64).
	New SIM card inserted.	Check for new restrictions.
	Charge limit reached.	Reset limit with PIN 2 (p. 43).
	Credit used up.	Load credit.
Certain uses of the phone not possible.	Call restrictions are set.	Barrings may be set by your service provider. Check barrings (p. 65).
No entries possible in Phonebook.	Phonebook is full.	Delete entries in Phonebook (p. 20).
Voice mail does not work	Call divert to the mailbox not set.	Set call divert to the mailbox (p. 41).
SMS (text message)  flashes.	SMS memory full.	Delete (p. 25) or store messages (SMS) in the archive (p. 25) to make room.
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Memory problems with Games & More, ring tones, pictures, SMS archive.	Phone memory full.	Delete files where necessary.

Question	Possible causes	Possible solution
Message cannot be sent.	Some service providers do not support this service.	Check with your service provider.
	Phone number of the service centre is not set or is wrong.	Set service centre (p. 30).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre overloaded.	Repeat message.
	Addressee does not have a compatible phone.	Check.
EMS pictures & sounds are not displayed at the addressee	The addressee's phone does not support the EMS standard.	
No Internet access possible.	Wrong WAP profile set or settings wrong, incomplete.	Check settings, if necessary consult your service provider.
PIN error/PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) provided with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 85).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or removed by your service provider via the SIM card.	Check with your service provider.
No fax possible.	Incorrect settings in the PC.	Check settings (p. 72).
	No authorisation for this service.	Contact your service provider.
Charge counter does not work.	Charge pulse not transmitted.	Contact your service provider.
Damage		
Severe shock.	Remove battery and SIM and insert them again. Do not dismantle phone!	
Phone became wet.	Remove battery and SIM card. Dry immediately with cloth, do not heat. Dry connector contacts thoroughly. Stand unit upright in an air current. Do not dismantle phone!	

Reset settings to the factory default (p. 62): * # 9 9 9 9 # 

Simple, straightforward support for technical and operational queries is available from our online support service on the Internet:

www.my-siemens.com/customer-care

or in the "Questions&Answers" section, p. 82, of this user guide.

If repair work is necessary please contact one of our service centres:

Abu Dhabi	0 26 42 38 00	Macedonia.....	02 13 14 84
Argentina	0 80 08 88 98 78	Malaysia	0 21 63 11 18
Australia.....	18 00 62 24 14	Malta	00 35 32 14 94 06 32
Austria.....	05 17 07 50 04	Mauritius	2 11 62 13
Bahrain.....	40 42 34	Morocco.....	22 66 92 32
Bangladesh.....	0 17 52 74 47	Netherlands.....	0 90 03 33 31 00
Belgium.....	0 78 15 22 21	Norway.....	22 70 84 00
Brunei.....	02 43 08 01	Oman.....	79 10 12
Bulgaria.....	02 73 94 88	Pakistan.....	02 15 66 22 00
Cambodia.....	12 80 05 00	Philippines.....	0 27 57 11 18
Canada.....	1 88 87 77 02 11	Poland.....	08 01 30 00 30
China.....	0 21 50 31 81 49	Portugal.....	8 00 85 32 04
Croatia.....	0 16 10 53 81	Qatar.....	04 32 20 10
Czech Republic.....	02 33 03 27 27	Romania.....	0 12 04 60 00
Denmark.....	35 25 86 00	Russia.....	09 57 37 29 52
Dubai.....	0 43 96 64 33	Saudi Arabia.....	0 22 26 00 43
Egypt.....	0 23 33 41 11	Sharjah.....	0 65 33 66 42
Estonia.....	6 30 47 35	Singapore.....	62 27 11 18
Finland.....	09 22 94 37 00	Slovak Republic.....	02 59 68 22 66
France.....	01 56 38 42 00	Slovenia.....	0 14 74 63 36
Germany*.....	0 18 05 33 32 26	South Africa.....	08 60 10 11 57
Greece.....	01 06 86 43 89	Spain.....	9 02 11 50 61
Hong Kong.....	28 61 11 18	Sweden.....	0 87 50 99 11
Hungary.....	06 14 71 24 44	Switzerland.....	0 12 12 00 90
Iceland.....	5 11 30 00	Taiwan.....	02 25 18 65 04
India.....	01 13 73 85 89 - 98	Thailand.....	0 22 68 11 18
Indonesia.....	0 21 46 82 60 81	Tunisia.....	0 71 86 19 02
Ireland.....	18 50 77 72 77	Turkey.....	0 21 65 71 89 89
Italy.....	02 66 76 44 00	United Arab Emirates.....	0 43 31 95 78
Ivory Coast.....	80 00 03 33	United Kingdom.....	0 87 05 33 44 11
Jordan.....	0 64 39 86 42	USA.....	1 88 87 77 02 11
Kenya.....	72 37 17	Vietnam.....	45 63 22 44
Kuwait.....	2 45 41 78	Zimbabwe.....	04 36 94 24
Latvia.....	7 50 11 14		
Lebanon.....	01 44 30 43		
Libya.....	02 13 50 28 82		
Lithuania.....	2 39 77 79		
Luxembourg.....	43 84 33 99		

Note

When calling customer service, please have your receipt and the phone identity number (IMEI, p. 62) ready.

* 0.12 Euro/Minute

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original.

Technical data

GSM class	4 (2 Watt)
Frequency range:	880-960 MHz
GSM class:	1 (1 Watt)
Frequency range:	1.710-1.880 MHz
Weight:	97 g
Dimensions:	109x46x23 mm (82 ccm)
Li-Ion battery:	650 mAh
Operating temperature:	-10°C to 55°C
SIM card:	3.0 V

Maintenance tips

- The SIM card should be treated with the same care as a cheque guarantee card. Do not bend or scratch it or expose it to static electricity.
- Clean the card with a damp cloth or an anti-static wipe without chemical cleaning agents.
- Protect the phone from moisture and shocks. Do not expose your phone to direct sunlight.
- Remove the battery if you are not going to use the phone for extended periods of time (more than one month).
- Battery care, only NiMH (p. 62).

Phone ID

You will need the following details if you lose your phone or SIM card. Please enter here

the number of the SIM card (on the card):

.....

15-digit serial number of the phone
(under the battery):

.....

Customer Service number of the service
provider:

.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Basics

NiMH Battery (550mAh)

L36880-N4701-A100

Li-Ion Battery (600mAh)

L36880-N4701-A112

The Li-Ion Battery increases the standby time and talk time and weighs significantly less.

Travel Charger

L36880-N4001-A103 (Euro)

L36880-N4001-A104 (UK)

Desk Top Charger

L36880-N4501-A101

Enables simultaneous charging of the phone battery and a spare battery.

Headset PTT

L36880-N4001-A123

Retractable Headset PTT

L36880-N4001-A160

Car Charger

L36880-N4001-A108

Mobile Holder

L36880-N4501-A102

Mobile Holder Antenna

L36880-N4501-A103

Mobile holder for connecting an outdoor antenna. Ideal in combination with Headset PTT or Car Kit Portable.

Carry Set

L36880-N4701-A101

Features a belt clip and a clip for fastening the phone to clothes or bags.

Talk&Carry Pack

L36880-N4701-A102

Carry Set and headset for optimum freedom of movement.


Basic Car Pack

L36880-N4501-A107

Allows handsfree talking and simultaneously charges the mobile phone in the car.

CLIPit™ Covers

Exchangeable top and bottom covers can be obtained in specialist shops. Visit our online shop under:

	<p>Original Siemens Accessories</p> <p>www.siemens.com/mobilestore</p>
---	---

Carrying Cases

- Leather Holster L36880-N4001-A154
- Belt Case..... L36880-N4801-A116
- Neoprene Case L36880-N4001-A155
- Grip Case L36880-N4501-A132
- Loop Case..... L36880-N4501-A133
- Leather Case..... L36880-N4501-A131
- Shoulder Bag L36880-N4001-A149

Data/Applications

Soft Data Link 5.0

L36880-N4501-A115

Data Cable

L36880-N4501-A148

Car Solutions

Car Kit Portable

L36880-N3015-A117

Handsfree kit with integrated loudspeaker and microphone and auto answer feature. Simply plug into the cigarette lighter socket. Ideal for mobility between vehicles.

Car Kit Comfort

L36880-N4501-A104

Handsfree kit with first-class digital call quality and utmost ease of use. Includes all components needed for installation. The individual antenna solution can be obtained from your specialist dealer.

Car Kit Professional Voice II

- L36880-N4501-A108 (German)
- L36880-N4501-A109 (English)
- L36880-N4501-A110 (French)

Handsfree kit with voice recognition, capacity for more than 150 names. Electronics box with connection for fax and e-mail transmission via your notebook. Includes all components needed for installation. The individual antenna solution can be obtained from your specialist dealer.

Car Kit Upgrade

L36880-N4501-A106

Cradle for upgrading your handsfree kit for the C25/28/35, M35, S25/35, SL45 models.

Optional Car Kit accessories

- Car Handset L36880-N3015-A123
- VDA Adapter Cable L36880-N4001-A121
- Car Data Adapter L36880-N4501-A134

Innovations

MP3 player USB

L36880-N4501-A114

Stereo headset for handsfree talking and superior sound quality when playing MP3 audio files. The 32MB Multimedia Card saves 30 minutes of music in premium quality. The package includes the software for downloading and USB connecting cables.

HomeStation

- L36880-N4501-A118 (Germany)
- L36880-N4501-A120 (Italy)
- L36880-N4501-A122 (Spain)
- L36880-N4501-A124 (France)
- L36880-N4501-A126 (Great Britain)
- L36880-N4501-A128 (Denmark)
- L36880-N4501-A130 (Norway/Finland)

Connects the mobile phone to the fixed network, enabling automatic transfer of GSM calls to a phone. GSM calls are diverted to the fixed network PABX without additional charges and can be handled from there.


Products can be obtained in specialist shops. Visit our online shop under:

SIEMENS


Original
Accessories

Original Siemens Accessories

[www.siemens.com/
mobilestore](http://www.siemens.com/mobilestore)

- A**
 - Accessories 70, 87
 - Account limit 43
 - Activate
 - phone profile 54
 - WAP profile 34
 - Aircraft mode 55
 - Alarm clock 52
 - Alarm tones 60
 - Alarms
 - alarm clock 52
 - anniversaries 50
 - appointment 49
 - All calls 43
 - divert 44
 - duration/charges 43
 - All incoming
 - duration/charge 43
 - network barring 65
 - All outgoing
 - duration/charge 43
 - network barring 65
 - Allow only  63
 - Anniversaries 50
 - Answering service (external) 41
 - Any key to answer 61
 - Application
 - download 35
 - start 35
 - Appointments 49
 - Archive, SMS 25
 - Audio 59
 - Authentication 70
 - Auto answer, Car Kit 70
 - Auto display
 - CB 42
 - clock 53
 - duration/charge 43
 - Auto network 64
 - Auto network search 64
 - Auto redial previous numbers 14
 - Auto timezone 53
 - B**
 - Babysitter 17
 - Band selection 64
 - Battery
 - care 62
 - charge 8
 - insert 7
 - operating times 76
 - quality declaration 76
 - Big letters 61
 - Birthday 50
 - Bitmap style 38, 61
 - Bitmap viewer 37
 - Bookmarks 56
 - Bottom cover, my-CLIPit™ 12, 87
 - Browser, WAP 33
 - C**
 - Call
 - accept/end 14
 - barrings 65
 - charges 43
 - conference 16
 - divert 44
 - end 13
 - hold 15
 - menu 16
 - reject 14
 - several simultaneously 15
 - swap (toggling) 15
 - to group 46
 - Call back 14
 - Call lists 17
 - Call status 16
 - Call transfer 16
 - Call waiting 67

- Car Kit
 - accessories 70
 - profile..... 55
- Car solutions 88
- CB languages..... 42
- CB services 42
- Cell Broadcast..... 42
- Charge display 43
- Charge settings..... 43
- Charges/units 43
- Charging the battery..... 8
- Clear all, divert 45
- CLIPit™ Cover 12, 87
- Clock 53
- Codes 63
- Conference..... 16
- Confidential numbers 10
- Configuration, network..... 64
- Congratulations 50
- Connectivity 67
- Contrast, display 61
- Control codes (DTMF) 73
- Covers, my-CLIPit™ 12, 87
- CSD 73
- D**
- Data
 - receive, divert 44
- Date format 53
- Default values..... 62
- Dialled calls, call list 18
- Dialling with number keys..... 13
- Dictionary (T9)..... 29
- Direct reply 31
- Display 61
 - big letters 61
 - contrast 61
 - illumination 61
- Display of call duration/charges... 43
- Display symbols 81
- Divert..... 44
- DTMF tones (control codes)..... 73
- Duration/charges..... 43
- During a call, setup 67
- E**
- E-mail via SMS..... 31
- Emergency call..... 73
- EMS 30, 74
- F**
- Factory settings..... 62
- Fast access 57
- Fast search..... 62
- Favourites 56
- Favourites, WAP 32
- Fax
 - receive, divert 44
- Fax via SMS..... 31
- Fax/data mode with PC..... 72
- Filter for calls 59
- G**
- Games & More 35
- Games, download 35
- Getting started 7
- GPRS
 - activate/deactivate 67, 74
 - set 68
- Greeting 38, 61
- Group
 - call to group 46
 - settings 48
 - SMS to group 46
- H**
- Handset volume 13
- Headset 71
 - accessories 71
 - profile 55
- Hide ID on/off..... 67

- Hold call 15
- Home network..... 64
- Home page..... 32
- HomeStation 71, 88
- Hotline 85
- I**
- Illumination, display 61
- IMEI number..... 62
- Inbox, SMS 25
- Information tones..... 60
- Input language, SMS..... 28
- Input language, T9 62
- International dialling codes..... 75
- J**
- JAD file 75
- JAR file 75
- K**
- Key lock..... 61
- Key tones 61
- Keys 61
- L**
- Language, phone..... 61
- Last call, duration/charges 43
- Limit, duration/charges 43
- Line (2nd phone number) 64
- Load picture, Bitmap viewer..... 37
- Lost phone, SIM card 86
- M**
- Mailbox 41
- Maintenance tips 86
- Melodies, ring tones 40
- Melody manager 39
- Menu
 control..... 5
 My menu 56
- Message (CB)..... 42
- Message (SMS) 24
- Message store 75
- Message, SMS 24
- Microphone off 47
- Microphone on/off 16
- Minute beep 60
- Missed appointments 52
- Missed calls, call list 18
- Muting..... 16
- My menu 56
- my-CLIPit™ 12
- N**
- Network..... 64
 barrings 65
 choose 64
 connection 64
 network info 64
 provider 64
 status check 66
- New appointment 49
- New message
 SMS 24
- Noisy environm., profiles..... 54
- Norm. environm., profiles 54
- Notes..... 51
- Number is busy 14
- O**
- Only  63
- Only last 10..... 63
- Operating times of the battery 76
- Organiser 49
- Out.int.o.home, network barring. 65
- Outbox, SMS 25
- Outgo. internat., network barring 65
- Own (call) numbers..... 76
- P**
- Phone code 10
- Phone identity no. (IMEI)..... 62
- Phone memory 22

- Phonebook
 - assign picture 23
 - call 19
 - call to group 21
 - new entry 19
 - store control codes (DTMF) 73
 - text entry 20
- Pictures
 - receive 37
- Pictures & Sounds (EMS) 30
- Pictures in SMS 24
- PIN
 - change 10
 - enter 9
 - error 84
- PIN 2 10
- PIN control 10
- Preferred network 65
- Prefix 13
- Prevent accidental activation (aircraft mode) 11
- Profiles 54
 - Java 36, 69
 - phone 54
 - SMS 30
- PUK, PUK2 10
- Q**
- Quick menu selection 77
- Quiet environm., profiles 54
- R**
- Read new CB message 42
- Read new SMS 24
- Receive/send picture 37
- Received calls 18
- Record No. 23
- Records 17
- Redial previous numbers 13
- Remaining units, duration/charges.. 43
- Reminder 14
- Ring melodies, ring tones 39
- Ring tone
 - choose 60
 - send 39
- Ring tone setting 59
- Ringer setting 59
- Roaming, network barring 65
- S**
- Safety precautions 3
- Screensaver 38, 61
 - receive 38, 61
- Second line 64
- Security 10, 63
- Security codes 63
- Select line, connection 64
- Send/receive ring tones 39
- Service centre, service provider ... 30
- Service tones 60
- Settings
 - group 48
- Setup
 - accessories 70
 - clock 53
 - connectivity 67
 - during a call 67
 - network 64
 - phone 61
 - security 63
 - SMS profile 30
 - user group 66
 - user profile 54
- Short message (SMS) 24
- Show URL, WAP 33
- Siemens City Portal 12
- Signal strength 77
- Signal tone, ringer 59
- Silent alert 59

- SIM card
 - clear barrings 11
 - error 82
 - insert 7
 - problems 77
 - protect 10
- SIM protected 22
- SIM services 77
- SMS
 - archive 25
 - capacity 25, 36
 - compose message 26
 - delete message 25
 - delivery confirmation 25
 - inbox/outbox 25
 - insert pictures/sounds 30
 - read message 24
 - setup 30
 - status report 31
 - text entry with T9 28
 - to group 21, 46
 - via GPRS 31
- Soft keys
 - control 5
 - explanation 4
- SOS 73
- Sounds in SMS 24
- Spec divert 44
- Special characters 74
- Specifications 86
- Speed dialling keys 58
- Speed dialling number 58
- Standard text fragments 27
- Standby mode 9
- Standby time 76
- Start menu 32
- Status check
 - divert 45
 - network barring 66
- Status report, SMS 25
- Storage location 22
- Storage location number 23
- Surf & Fun 32
- Swap 15
- Switch off phone
 - auto phone off 53
 - manually 9
- Switch on phone 9
- Symbols 81
- T**
- T9
 - activate/deactivate 27
 - preferred 62
 - text entry 28
 - word suggestions 29
- Talk time (battery) 76
- Technical data 86
- Text entry 20
- Text entry with T9 28
- Text message, SMS 24
- This SIM only 63
- Time/date settings 53
- Top cover, my-CLIPit™ 12, 87
- Topic index, CB 42
- Topic list, CB 42
- Transfer (call) 16
- U**
- Unanswered calls 44
- Upper-, lowercase 20, 28
- User group
 - all outgoing 66
 - preferred group 66
 - select group 66
- User guide, symbols 5
- V**
- Validity, SMS 31
- Voice message (Mailbox) 41

Voice/fax	72
Volume ringer	59
Volume, handset volume	13

W

Waiting call.....	15
WAP	
browser	33
exit browser.....	33
explanation.....	78
options	68
Writing letters.....	20