

SIEMENS








Be inspired

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich









© Siemens AG 2003
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.my-siemens.com



Safety precautions	3	Phonebook	29
Overview of the phone	5	<New entry>	29
Display symbols (selection)	7	Call (search for an entry)	30
Getting started	9	Change entry	30
Insert SIM card/battery	9	Addressbook	32
Charge battery	10	<New entry>	32
Switch on, off / PIN entry	11	Change entry	33
Switching on for the first time ..	11	Call (search for an entry)	34
Standby mode	12	Addressbook menu	34
General instructions	13	Voicedialling	35
User guide	13	Groups	36
Menu controls	13	 Records	37
Security	15	 Durat/charges	38
Codes	15	 Voice mail/mailbox	39
Preventing accidental activation	16	 SMS	40
My phone	17	Writing and sending text messages (SMS)	40
Calling	18	Picture&sound	41
Dialling with number keys	18	SMS to group	42
End call	18	Read SMS	42
Set volume	18	Ringtones, icons	43
Redial previous numbers	18	SMS archive	44
If the number is busy	19	 MMS	45
Accept call	19	Writing/sending MMS messages	45
Reject call	20	Receive MMS	48
Handsfree	20	Read MMS	48
Swapping between 2 calls	20	 E-mail	51
Conference	22	Write/send e-mails	51
Babysitter	23	Receive e-mail	52
Text entry	24	Read new e-mail	52
 Default book	28		

See also Index at the end of this User Guide

 Message profiles	55	 Extras	95
SMS profiles	55	Alarm clock	95
MMS profile	56	Calculator	95
E-mail settings	57	Currency conv	96
 CB services	59	Stopwatch	97
 Surf & fun	60	Countdown	97
Internet browser (WAP)	60	Camera (Accessories)	98
Games & more	63	Voice command	100
 Setup	66	Remote synchronisation	101
Display	66	SIM services (optional)	102
Audio	68	Fast access key	103
Dynamic Light	70	 Filesystem	105
Keys	71	Send...	107
Phone setup	71	Notes A-Z	108
Clock	74	Siemens Data Suite	116
Connectivity	75	Questions & Answers	118
Security	78	Customer care	121
Network	80	Care and maintenance	123
Accessories	82	Product data	124
 Profiles	83	SAR - European Union (RTTE) ...	125
My menu	85	SAR - International (ICNIRP) ...	127
 Organiser	86	Accessories	128
Calendar	86	Battery quality statement	130
Alarm	88	Guarantee certificate (UK)	131
Tasks	90	Guarantee certificate (IRL)	133
Notes	91	Index	135
Missed appointments	92		
Dictating machine	93		
Time zones	94		

See also Index at the end of this User Guide

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



The SIM card may be removed. Caution! Small parts like this could be swallowed by young children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.



The ringtone (p. 68), info tones (p. 70) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 20). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



You may only open the phone to place the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.

Important:

Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!

The phone may only be used if the keypad is fully closed or fully opened; for optimum audio quality, however, it is recommended you open the keypad completely.

① Call key




Dial phone number /name displayed, take calls. Show last phone numbers dialled in standby mode.

② On/Off/End key

- Switched off: hold **down** to switch on.
- During a conversation or in an application (except for Surf & Fun): press **briefly** to finish.
- In menus: press **briefly** to go back a level. Hold **down** to return to standby mode.
- In standby mode: hold **down** to switch off phone.

③ Control key





In lists and menus:

-  Scroll up/down.
-  Select function.
-  Menu level back.

During a call:

-  Open call menu.

In standby mode:

-  Voice control (hold down).
-  Open Addressbook/Phonebook.
-  Open menu.
-  GPRS info.



① Integrated antenna


Do not interfere with the phone above the battery cover unnecessarily. This reduces the signal quality.

② Loudspeaker

③ Display icons

Signal strength/ GPRS available/ battery level.

④ Soft keys

The current functions of these keys are shown in the bottom line of the display as **text** /symbol (e.g. ).

⑤ Input keys

Numbers, letters

⑥ Hold down

- In standby mode: switch all audible signals on/off (except alarm).
- For incoming calls: only switch off ringtones.

⑦ Hold down

In standby mode: switch key lock on/off.


⑧ Microphone

⑨ Dynamic Light

Two LEDs on each side indicate different functions visually (set, p. 70).

⑩ Device interface

Connection for charger, headset etc.

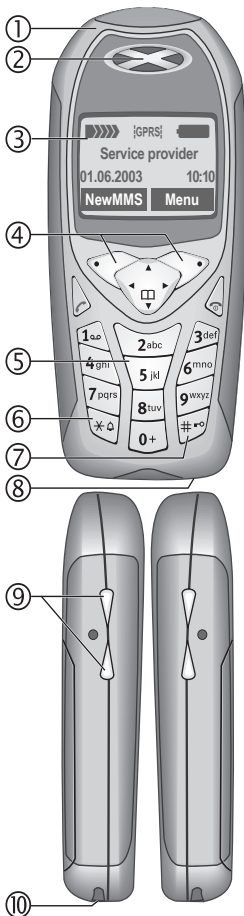

Display symbols



Signal strength.



Charging.



Battery charging status,
e.g., 50 %.



Phonebook/Addressbook



Records



Surf & Fun



Organiser



Messages



Profiles



Extras



File system



Settings



All calls are diverted.



Ringer off.



Short ring (beep) only.



Ringer only if caller is stored in
Phonebook/Addressbook.



Alarm set.



Alarm clock activated.



Key lock activated.

Phone numbers/names:



On the SIM card



On the SIM card
(PIN2 protected).



In the phone memory.



No network access.



Function activated/deactivated.



Phonebook/Addressbook.



Indicates whether upper or lower-
case letters are active.



Text input **with** T9.



Activated and available.



Registered.



Temporarily interrupted.



GPRS download.



WAP online.



WAP via GPRS online.



WAP no network.



Headset mode.



Auto answer feature on.

Organiser/Extras symbols



Memo.



Call.



Appointment.



Dictating mach./Voice memory.



Birthday.



Alarm clock/stopwatch.

Depending on the service provider, some of the symbols shown here may vary from those in the phone.

Soft keys



Message received.



MMS received.



MMS notification received.



Voice mail received.



Data received.



Picture received.



Melody received.



Unanswered call.



Store in Phonebook/
Addressbook.



Retrieve from Phonebook/
Addressbook.




Change Phonebook/
Addressbook.


Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.


- Remove cover upwards in the direction of the arrow ①.

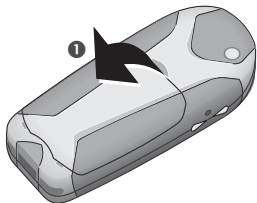


- Insert the SIM card in the opening with the contact area **facing downwards** and push gently until it engages below the holder (make sure the angled corner is in the correct position ②).

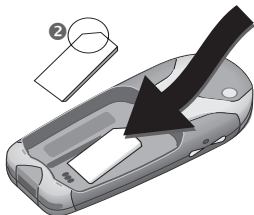

- Insert the battery sideways into the phone ③, then press downwards ④ until it engages.

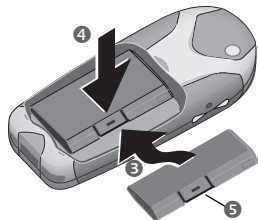

- To remove, press the retaining tab ⑤ then lift the battery out.
- Insert the cover in the lower edge ⑥, then press downwards ⑦ until it engages.

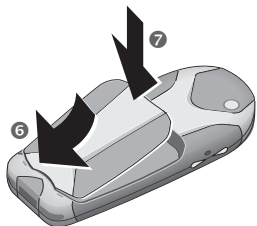

Additional information


Always switch off your phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider if you have an older card.

Functions without SIM card p. 115

Charge battery

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**.

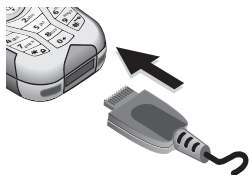

Display when charging is in progress



During charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to +40 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Charge symbol not visible

If the battery has been discharged fully the charge icon is not visible when the charger is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3–4 hours.

Only use the charger provided!

Display while in service

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The battery level is only shown correctly during an unbroken charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not finish the charging process early**.

Additional information

The charger heats up when used for long periods. This is normal and not dangerous.
 Operating time.....p. 112
 Outside your home networkp. 112

Note

Your phone's display is delivered with a protective film.

Remove this film before getting started.

Electrostatic charging can in rare cases lead to discolouring at the edge of the display. This will, however, disappear of its own accord after 10 minutes at the most.

Switch on/off




Hold **down** On/Off/End key to switch on or off.

Enter PIN

The SIM card can be protected with a 4- to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correct errors with **Clear**.

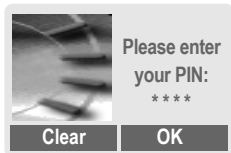

OK

Confirm entry with right soft key. Logging on to the network will take a few seconds.

Switching on for the first time

Time/date

The clock must be set to the right time once at start-up.

Yes

Press.



First enter the date (day/month/year), then the time (24 hours, including seconds).

OK

Press. The time and date are updated.

Time zones

Set the time zone for your area.



Select the required time zone from list ...

Set

... and set.

Additional information

If the battery is removed for longer than 30 seconds, the clock must be reset.

Additional clock settingsp. 74.


Additional information

Change PIN	p. 15
Other network	p. 80
SIM card problems	p. 113
Clear SIM card barring	p. 16

Phonebook or Addressbook

You can choose whether you want to use the **Phonebook** on the SIM card or the internal **Addressbook** as standard.

You can copy the SIM card Phonebook to the Addressbook on the phone. Please **do not interrupt this procedure**. During this time **do not accept incoming calls**. Follow instructions in the display.

To copy data on the SIM card at a later time, highlight entries (see p. 111) and copy these with the function **Copy into**  (Phonebook options menu, p. 30).

You can change the standard phonebook at any time (p. 28).

Signal strength



Strong receive signal.




A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the soft key **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Standby mode

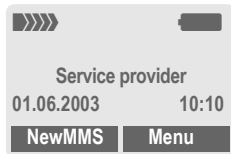


When the name of the service provider appears on the display, the phone is in **standby mode** and **ready for use**.

The left soft key may have different functions pre-assigned.



Hold **down** the On/Off/End key to return to standby mode from any situation.

Additional information

 SIM services (optional) p. 102

User guide

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key.



Press the control key on the side indicated.



Soft keys

Menu

Displays a soft-key function.



Function dependent on service provider, may require special registration.


Menu controls

The steps needed to reach a function are shown in a **condensed form** in this user guide, e. g. to display call list for missed calls:

Menu →  → Calls missed

This corresponds to:

1

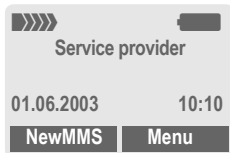

Menu

Open menu.

From standby mode: press **right** soft key.


2



Select **Records** .

Press **top** of control key.

3

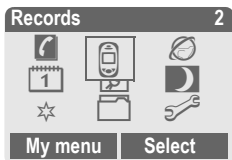


Select

Press.

Press **right** soft key to open the Records submenu.

4

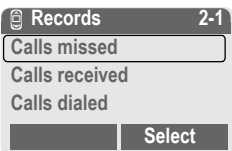


Select

Press.

Press **right** soft key to open the Calls missed list.


5

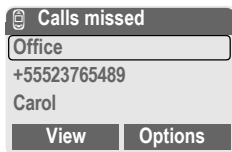

Scroll to the required entry.

Press control key **at the bottom** to scroll down.

6

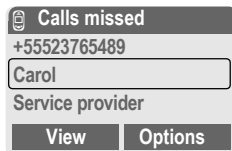


View

Press.

Press **left** soft key to show phone number with date, time and number of calls.

7

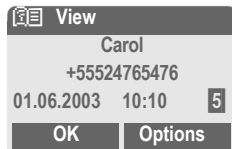

Codes

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.


PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions requiring special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.

Menu →  → Security
 → Codes
 → Select function

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

Select Press.

 Enter PIN.


OK Confirm input.

Change Press.


OK Confirm.

Change PIN

You can change the PIN to any 4 to 8 digit number you find easier to remember.

 Enter **current** PIN.

OK Press.

 **OK** Enter **new** PIN.

 **OK** Repeat **new** PIN.

Change PIN2

(Display only if PIN2 is available).
 Proceed as with **Change PIN**.

Menu →  → Security
→ Codes

Chg.phonecode

(Change phone code)

You define the phone code (4–8 digits) when you call up a phone-code protected function for the first time (e.g. Babysitter p. 23). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. If this happens please contact Siemens Service (p. 121).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Additional information

Screensaver.....	p. 67
Key lock	p. 71
Further security settings.....	p. 78

Preventing accidental activation

Even if PIN entry is deactivated (see p. 15), confirmation is required to switch on the phone.

This prevents the phone from being switched on accidentally, e. g. when carried in a pocket or whilst you are on an aircraft.



Hold **down**.

Please confirm switch on

OK

Cancel

OK

Press. The phone switches on.

Cancel

Press or take no action. The switching-on operation is broken off.

Change your phone to match your personal requirements.

Ringtones

Assign individual ringtones to caller groups or for special dates (p. 69).

Animations, screensavers, logos, applications

Adjust your phone in the following ways to give it a personal touch and make it just how you want it:

Animations

Choose a start-up and closing animation (p. 67) as well as a personal greeting (p. 67).

Screensaver

Choose an analogue clock or a personal picture (p. 67).

(Provider) logo

Choose an individual picture (to be displayed in standby mode) (p. 67).

Background image

Choose your own permanent background image (p. 66).

Applications

Download your own applications from the Internet (p. 63).

Colour scheme

Choose a colour scheme for the entire service system (p. 66).

Dynamic Light

Signal, for example, calls, incoming SMS or MMS with different LED flash rhythms on the side of your phone (p. 70).

Where do I get what?

You can order additional ringtones, logos and screensavers on the Internet and receive them by SMS/MMS:

www.my-siemens.com/ringtones

www.my-siemens.com/logos

www.my-siemens.com/screensaver

www.my-siemens.com/animations

Or you can download them direct via WAP:

wap.my-siemens.com

Siemens City Portal

Further applications, games and services for your mobile phone (e.g. a Photo Logo Composer to create personal pictures for your Addressbook) can be found at:

www.my-siemens.com/city

The Siemens City Portal also provides a list of countries in which these services are available.

My menu

Create your own menu with frequently used functions, phone numbers or WAP pages (p. 85).

Dialling with number keys

The phone must be switched on (standby mode).



Enter number (always with area code, if necessary with international dialling code).

Clear A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key. The displayed phone number is dialled.

End call



Press End key **briefly**. The call is ended. Press this key even if the person on the other end of the line has hung up first.

Set volume



Use the control key (top) to start adjusting the volume (only possible during conversation).



Set volume and confirm with **OK**.

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number **last** called:



Press Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key once.



Pick out the required phone number from the list, then press ...



... to dial.

Additional information

Save phone number in Address-book/Phonebook	p. 29, p. 32
Options Call lists	p. 37
Hold	p. 20
menu Call menu	p. 22
Divert Set divert	p. 71
Handsfr. Handsfree	p. 20
Microphone off	p. 22
Voice dialling	p. 35
Auto key lock	p. 71
Phone number transmission off/on (Hide ID)	p. 71
International dialling codes	p. 110
Phone number memo	p. 113
Control codes (DTMF)	p. 109


If the number is busy

If the number called is busy or cannot be reached, several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

Auto. redial

Auto dial Press. The phone number is automatically dialed ten times at increasing time intervals. End with:

 End key.

Or

Call back

Call back Press. Your phone rings when the engaged number is free. Press the Call key to dial the number.




Reminder

Prompt Press. A beep reminds you to redial the displayed phone number after 15 minutes.

Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.

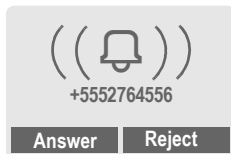

Answer Press.

Or

 Press.

If the phone number has been transmitted by the network, it is displayed. If the caller's name also appears in the Phonebook or AddressBook, this will appear instead of the number. If set, a picture can be displayed instead of the bell icon (p. 32).

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing caused by a loud ringtone!

Reject call

Reject Press. The call will be diverted if this has been set previously (p. 71).

Or




Press **briefly**.

Additional information

Missed calls	p. 37
Accept call using any key	p. 71
Switch off ringer	p. 108

Handsfree

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.

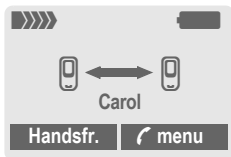

Handsfr. Activate handsfree talking.

Yes Switch on.



Use the control key to adjust the volume.

Handsfr. Switch off.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear! This will avoid damage to hearing!

menu Call menu p. 22

Swapping between 2 calls




Establish a second connection

You can call another number during a call.

menu Open call menu.

Hold The current call is put on hold.

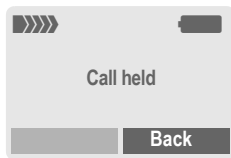

Now dial the new number (Phonebook/Addressbook).

When the new connection is established:

menu Open call menu

Swap Swap back and forth between the calls.

- **End current call**



End the current call and press **Yes**. You are now connected to the caller.

Incoming calls during a call

You may need to register for this service with your service provider and set your phone accordingly (p. 71).

During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

- **Accept the waiting call**



Accept the waiting call, putting the current call on hold to do so. Always proceed as above to swap between the two calls.

End call

Press the End key . The following is displayed:
Return to call on hold?

Accept the waiting call by pressing **Yes**.

Or

End the second call also by pressing **No**.

- **Reject waiting call**



Reject the waiting call.

Or



The waiting call is diverted, for example, to the mailbox.

- **Accept the waiting call and end the current call**



End the current call.



Accept the new call.

Conference



Call up to 5 parties one by one and link them together in a conference call. Some of the functions described may not be supported by your service provider or may have to be enabled specially. You have established a connection:



Open menu and select **Hold**. The current call is put on hold.



Now dial a new number. When the new connection is established ...



... open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End





All calls in the conference finish simultaneously when the End key is pressed.

Call menu

The following functions are only available during a call:



Open menu.

Hold	(p. 20)
Microphone on	Switch microphone on/off. If switched off, the person on the other end of the line cannot hear you (muting). Also:  hold down.
Handsfree	(p. 20)
Volume	Adjust handset volume.
Conference	(See above)
Durat/charges	Display call duration and if set (p. 38) costs accruing during the call.
Send DTMF	(p. 109)
Call transfer 	The original call is connected to the second one. For you, both calls are now ended.
Main menu	Access to main menu.
Call status	List all held and active calls (e.g. conference call participants).

Babysitter

If this is active, only **one** number can be dialed.

Enable

Menu →  → Security
→ Babysitter

Select Press.



Enter phone code.

The phone code (4 to 8 digits) is set by you and entered at the first security setting.

Please don't forget the number (see also p. 16)!

OK Confirm input.


Change Press.



Select phone number from the Addressbook (p. 33) or Phonebook (p. 30) or enter new number.

OK Confirm "On".

Apply

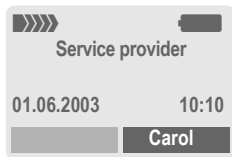

Use the **right** soft key and hold it **down** to dial (e.g. Carol's phone number).

Switch off



Press **down**.



Enter phone code.

OK

Confirm input.

Change

Press.

OK

Confirm "Off".

Additional information

Change phone code p. 16

Text entry without T9

Press number key repeatedly until the required letter appears. The cursor will jump forward after a brief interval. Example:



Press briefly once for **a**, twice for **b** etc. The first letter of a name is automatically written in upper case.

Hold down to write the number.

Ä,ä,1-9

Umlauts and numbers are displayed after the relevant letters.

Clear

Press briefly to delete the letter before the cursor, **hold down** to erase the whole word.



Move the cursor (forwards/back).



Press briefly: Swap between *abc*, *Abc*, *T9abc*, *T9Abc*, *T9ABC*, *123*. Status shown in top line of display.

Hold down: All input modes are displayed.

Press briefly: Special characters are shown.



Hold down: Open input menu.



Press once/repeatedly:

.,?!' " 0 - () @ / : _

Hold down: Writes 0.



Writes blank. Press twice = jumps a line.

Special characters



Press **briefly**. The symbols chart is displayed:

1)	¿	¡	_	;	.	,	?	!	+	-
"	'	:	*	/	()	¤	¥	\$	£
€	@	\	&	#	[]	{	}	%	~
<	=	>		^	§	Γ	Δ	Θ	Λ	≡
π	Σ	Φ	Ψ	Ω						

1) Line skip



Navigate to character.

Select

Press.

Input menu

With text input:



Hold down. The input menu is displayed:

Text format (SMS only)

Input language

Mark text

Copy/Add

Text entry with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu.

T9 input Select.

T9 preferred
Select.

Edit Activate T9.

Select Input language

Select the language in which you want to compose your message.

Options Open text menu.

T9 input Select.

Input language
Select.

Select Confirm. The new language is set. Languages with T9 support are marked by the T9 symbol.

T9 language versions

If you want to load a dictionary in another language, you will find a large selection to download from the Internet as well as installation instructions under:


www.my-siemens.com/t9

Write a word using T9


Since the display changes as you proceed,

it is best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:

 press briefly for T9Abc then type

 Press. A blank ends a word.

Do not use special characters such as Å but rather use the standard characters, e.g. A; T9 will do the rest for you.

Additional information



Set a full stop. A word is concluded when followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. **provider.s** = provider's.
Go to the right. Ends a word.





Press briefly: Swap between: abc, Abc, T9abc, T9Abc, 123. Status shown in top line of display.

Hold down: All input modes are displayed.




Press briefly: Select special characters (p. 24).


Hold down: Open input menu (p. 24).

T9 word suggestions


If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be **highlighted**. Then press

 again. The displayed word is replaced with a different word. If this word is also incorrect, press

 again. Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.

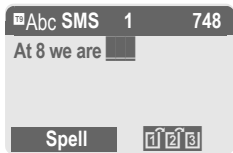

To add a word to the dictionary:

Spell Select.

The last suggestion is deleted and the word may now be entered without T9-support. Press **Save** to add it automatically to the dictionary.

Correct a word

Words written **with** T9:



Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9-word suggestions again.



Deletes the character to the left of the cursor **and** displays a new possible word!

Words **not** written with T9:



Move letter by letter to the left/right.



Deletes the letter to the left of the cursor.



Letters are inserted at the cursor position.

Additional information

Within a "T9-word", individual letters may not be edited without first removing the T9-status. In most cases it is better to re-write the complete word.

T9® Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5, 818, 437, 5, 953, 541, 5, 187, 480, 5, 945, 928, and 6, 011, 554;
 Canadian Pat. No. 1,331,057;
 United Kingdom Pat. No. 2238414B;
 Hong Kong Standard Pat. No. HK0940329;
 Republic of Singapore Pat. No. 51383;
 Euro.Pat. No. 0 842 463 (96927260.8)
 DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;
 and additional patents are pending worldwide.

Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).

Write text modules

Menu →  → Text modules

Options Select **New text**.



Write text module.

Options Select **Save**.

Accept the default name or give it a new name, then save with **OK**.

Use text modules



Write message (SMS, MMS, e-mail).

Options Open text menu.



Select **Text modules**.



Select text module from the list.

Select Confirm. The text module is displayed.

Select Confirm. The text module is inserted in the message to the right of the cursor.



→ Select function.

Show entries

Entries in the standard directory (Addressbook or Phonebook) are shown for selection.



Select a name with the first letter and/or scroll.



The number is dialed.

<New entry>

Create new entry in standard directory.

Phonebook (see p. 29)

Addressbook (see p. 32)

Default book

Select the Phonebook (only one phone number possible per entry) or the Addressbook as your standard directory (default book). Your preference should be for the Addressbook, because more entries and functions (e.g. pictures, birthdays, several phone numbers per entry, etc.) are possible.



Select Phonebook or Addressbook.

Select

Set as standard.

Groups

(see p. 36)

Businesscard

Create your own business card. Send it as an SMS/MMS to another GSM-phone.

If no business card has been created yet, you will be asked for your input.



Move from field to field to put in your details. You will find explanations of these input fields on p. 32 and p. 33.

Last name:	E-mail 2:
First name:	URL:
Phone:	Company:
Phone/office:	Street:
Phone/mobile:	Post code:
Fax:	City:
Fax 2:	Country:
E-Mail:	Birthday:

Save

Press.

Additional information

The content of the business card corresponds to international standards (vCard).



Copy numbers from Addressbook/Phonebook.

Options

See Addressbook menu (p. 34).

Service numbers

(see p. 113)


Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook. You can, however, exchange data between the Phonebook and the Addressbook.

<New entry>

If the Phonebook is set as standard (Addressbook as standard, p. 28):



Open Phonebook (in standby mode).

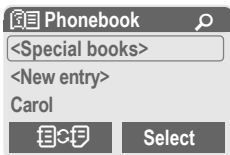

Select <New entry>.



Press.



Select input fields.



Fill in the input fields described below. The maximum number of characters available is displayed at the top of the screen.

Number:

Always enter phone number with dialling code.

Name:

Enter first and/or last names.

Location:

Default: SIM



Select the storage location, such as SIM or Protected SIM (p. 31).

Record no.:

Each entry is automatically assigned a record number. You can also dial using the record number (p. 30).



Change the record number.

Save

Press to store the new entry.

Additional information

- Temporary swap to Addressbook p. 32
- +List** International dialling code ...p. 110
- Store control codesp. 109
- Text entryp. 24

<Special books>:

<Own numbrs>: enter personal phone numbers, (p. 112), <VIP numbers>: assign important numbers to group, <SIM phonebook> (p. 31), <Protected SIM> (p. 31), <Service numb.> (p. 113).

Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



Number is dialed.

Call using record no.

A record number is automatically assigned to every new entry in Phonebook.



Enter record number.



Press.



Press.

Change entry



Select entry in Phonebook.



Press and select **Change**.



Select input field.



Edit.



Press.

Phonebook menu

The following functions are available, depending on the current situation. Some functions may be applied to the current entry as well as multiple highlighted entries:

Options Open menu.

View	Display entry.
Change	Open the entry to edit.
New entry	Create new entry.
Copy into	Copy entry/entries to the Addressbook.
Copy all to	Copy all entries to the Addressbook.
Delete	Delete entry.
Delete all	Delete all entries after confirmation.
Mark	Activate highlighting mode; the entry currently selected is highlighted (p. 111).
Mark all	Activate highlighting mode; all entries are highlighted (p. 111).
Send...	(p. 107)
Capacity	Display maximum and available capacity.

Location:

An entry can be moved from one storage location to another.


SIM (Standard)

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

Protected SIM

On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing (p. 15).



Activate with the function **Only**  (p. 78).


The Addressbook can store up to 500 entries, each with a variety of telephone and fax numbers as well as additional address details. These entries are managed separately from those in the Phonebook in the phone memory. However, you can exchange data between the Addressbook and the Phonebook on the SIM card.

<New entry>

If the Addressbook has been selected as standard:




Open Addressbook (in standby mode).

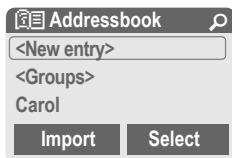

Select

Press.

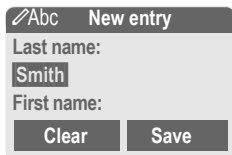

Enter first and/or last name.

Group



Entries can be organised by groups (p. 36). Select with **Change**.

Make further entries field by field.

Phone:	URL: (Internet address)
Phone/office:	Company:
Phone/mobile:	Street:
Fax:	Post code:
Fax 2:	City:
E-Mail:	Country:
E-mail 2:	Birthday: (p. 33)

Bitmap

Select Assign a picture to an Addressbook entry. It is displayed if you are called by the corresponding phone number (see p. 105).

All fields

Select Show all input fields if the display was previously reduced (see p. 34, Addressbook menu, Field setup).

Save

Save the entry.

Additional information

<Groups> Group functions (p. 36).

Birthday After entering the date of birth, the "reminder box" can be activated. You can now enter the time for the reminder. The phone will then remind you with an acoustic tone and also with a display one day before the birthday and on the birthday.



Copy data from another Addressbook entry.



Copy international dialling code from the list (p. 110).




Temporarily switch to Phonebook.

Synchronising with a PC

Using XTNDConnect® PC (p. 116) you can synchronise your Addressbook with Outlook® or Lotus Notes™.

Using **Remote sync.** you can synchronise your mobile with an organiser stored on the Internet (p. 101).

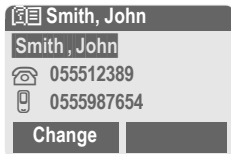

Select input field.



Open entry.



Make changes.

Options See below.



Save setting.

Right soft key:

When you jump from line to line while reading, the right soft key changes depending on the type of data. Press this key to activate the relevant application:

VoiceDial Voice dialling menu (p. 35).

E-mail Create e-mail (p. 51).

Link Visit URL (p. 60).

Show Display respective picture.

Change entry

Open Addressbook (in standby mode).



Select required entry.



Press.

Call (search for an entry)



Open Addressbook (in standby mode).




Select a name with the first letter and/or scroll.



The number is dialed.

If an Addressbook entry has several numbers stored:

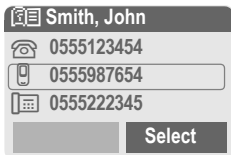

Select phone number.



The number is dialed.

Addressbook menu

Depending on the actual situation, different functions will be offered. These functions can be applied to the entry currently selected as well as to multiple selected entries:

Options Open menu.

View	Display entry.
Change	Open the entry to edit.
New entry	Create new entry.
Move to ...	Assign entry to a group.

Copy to SIM	Copy entry/entries with name and selected phone number to SIM card.
Delete	Delete entry.
Delete all	Delete all entries after confirmation.
Mark	Switch on highlighting mode (p. 111).
Mark all	Activate highlighting mode; all entries are highlighted (p. 111).
Filter	Display only those Addressbook entries with the following criteria: <ul style="list-style-type: none"> • Voicedialling • E-mail • URL • Birthday • Bitmap
Business-card	Define an entry as your own business card.
Voicedialling	Apply voice dialling to an entry (p. 35).
Send...	(p. 107)
Capacity	Display maximum and available capacity.
Field setup	Select visible input fields for new entry.

Voicedialling

Dial numbers by voice command. Up to 20 recorded names for voice dialling or voice commands (p. 100) can be saved on the mobile (not on the SIM card).

Record



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.

Options Open menu.

Voicedialling

Select.



Choose phone numbers, if there are more than one.

Record Press.

Start Start recording.

A short signal sounds. Now speak the name. After a second beep and message in the display, **repeat** the name. A beep now confirms the recording, which is saved automatically.

Voice dialling menu

Depending on the actual situation, different functions will be offered.

Options	Open menu.
Play	Play back a voice command.
New	Record a new voice command.
Delete	Delete voice command from an entry.
Delete all	After confirmation delete all voice commands for this entry.

Apply voice dialling



Hold **down**. Start voice dialling (in standby mode).

Now speak the name. The number is dialled.

Additional information

Noisy environments may affect voice recognition. If attempt was unsuccessful, press the control key once more and repeat the name.

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.



Open Addressbook (in standby mode).

<Groups> Select (the number of entries is listed behind the group name).



Select group.

Options Open menu.

Rename group

Select and give group a name.

Additional information

No group: Contains all Addressbook entries that do not belong to a group (name cannot be changed).

Received: Contains vCard Addressbook entries received by SMS (name cannot be changed).

SMS to group p. 42

Group menu

Options Open menu.

Open Display all members of the selected group.

View Addressbook, p. 33.

Options See p. 34.

Group symbol Assign a symbol to a group, see below.

Rename group Change name of group.

Move Transfer one or more highlighted entries from one group to another.

Delete all After confirmation, delete all members of the current group.

Group symbol

Assign to a group a symbol that appears on the display when one of its members calls you.



Select group.

Options Open menu.

Group symbol

Select.



Choose a symbol.

OK Confirm.

Your phone stores the phone numbers of calls for convenient redialling.

Menu → 

Select Press.



Select call list.

Select Press.



Select phone number.



Dial phone number.


Or

View Display information on the phone number.

10 phone numbers can be stored in each call list:

Calls missed

The phone numbers of calls that you have received but not answered are stored for call back purposes.

 Icon for missed call (in standby mode). Press the control key (on the left) to display phone number.

Requirement: the network supports the "Caller Identity" feature.

Calls received



Accepted calls are listed.

Calls dialed

Access to the last numbers dialed.



Fast access in standby mode.


Erase records

The records are deleted.

Call list menu

The call list menu can be called up if an entry is highlighted.

Options Open list menu.

View	View entry.
Correct no.	Load number to display and edit there if necessary.
Copy into 	Store entry in the Addressbook/Phonebook (see also below).
Delete	Delete entry after confirmation.
Delete all	Delete all entries in call list after confirmation.

Additional information

When copying to the Addressbook a new entry can be created with the phone number or an existing entry can be corrected. Once the input field has been selected, the phone number is transferred to the entry with **Paste**.

You can display charge details and the duration of different types of calls while you speak, as well as setting a unit limit for outgoing calls.

Menu →  → Durat/charges

Select type of call:

Last call

All calls

Remain. units

Select Show data.

Once displayed you can:

Reset Reset display.

OK End display.

Charge sett.

Menu →  → Durat/charges
→ Charge sett.

Conv. 

(PIN2 prompt)

Enter the currency in which the charge details are to be shown.

Personal rate 

(PIN2 prompt)

Enter the charges per unit/period.

A/c limit 

(PIN 2 prompt)

Special SIM cards allow you or the service provider to define a credit or a period after which the phone is barred for outgoing calls.

Change Press, enter PIN2.

A/c limit Switch on.



Enter number of units.

OK Confirm.

Then confirm the credit or reset the counter. The status display for pre-paid cards may vary, depending on the service provider.

Auto display

Call duration and call charges are automatically displayed for each call.

Menu →  → Setup
→ Voice message

Most service providers supply an external voice mail service. A caller may leave a voice message for you in this mailbox

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and **Call Waiting** is not activated, p. 71).

If voice mail is not part of your service provider's package, you will need to register and settings may have to be made manually. The following description may vary slightly, depending on the service provider.

Settings:





The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to the voice mails left for you.


Menu →  → Setup
→ Voice message

 →  Select number from Phonebook/Addressbook or enter/change it.

OK Confirm.

Save call divert number

Calls are diverted to this phone number.

Menu →  → Phone setup
→ Divert
→ e.g., Unanswered → Set

Enter call divert number.


OK Registration with network. Divert will be confirmed after a few seconds.

Further information on call divert can be found on p. 71.


Listening to message



A new voice mail can be announced as follows, depending on the service provider:

 Icon plus beep.

Or

 A text message announces a new voice mail.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Hold **down** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.


Away from your home network you may have to dial a different mailbox number and enter a password before you can listen to any messages.

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Depending on the service provider, e-mails and faxes can also be sent and e-mails received via SMS (change setting if necessary, p. 55).

Writing and sending text messages (SMS)

Menu →  → New SMS



Text input using "T9" (p. 25) allows you to create longer messages very quickly using just a few key strokes.

Clear Press **briefly** to delete letter by letter, hold **down** to delete an entire word.

Press.



Dial number or pick out from the Phonebook/Addressbook.

Groups SMS to group (p. 42).


OK

Confirm. Send the SMS to the service centre for transmission. The sent SMS is saved in the "Sent" list.

OK

Return to Edit mode.

Display in the uppermost line:

 Abc SMS 1 739
We start at 8.

 Abc
abc/Abc/
ABC/123

T9 active.

Switch between upper-case/lower-case letters and digits.

SMS

Display title.

1

Number of SMS messages required.

739

Number of characters still available.

Additional information

Insert pictures & sounds into text p. 41
SMS profile..... p. 55

Message type, Validity period,
Service centre may be requested ... p. 55
SMS status report..... p. 113
Enter special characters..... p. 24

Text menu

Options Open text menu.

Send	Enter recipient's phone number/select from Phonebook/Addressbook, then send.
Save	Save composed text in draft list.
Picture&sound	Add pictures, animations and sounds into message (see following text).
Text modules	Insert text module (p. 27).
Format	Line feed Small font, Medium font, Large font Underline Left, Right, Centre (align) Mark text (highlight text using control key)
Clear text	Delete the whole text.
Insert from...	Insert entry from Phonebook/Addressbook.
T9 input (p. 24)	T9 preferred: Activate/deactivate T9. Input language: Select language for text.
Send via ...	Select an SMS profile for transmission (p. 55).

Picture&sound

Insert pictures and sounds into message.



Write message.

Options Open text menu at the end of a word.



SelectPicture&sound .

The menu contains:

Fix animations

Fix sounds

Own anim.

Own pictures

Own sounds

Select section.



Select Confirm.

The first entry of the selected section is displayed.

Scroll to entry required.



For **Fix animations/Fix sounds:**

Select The selection is added to the SMS.

For **Own anim./Own pictures/Own sounds:**

Load The selection is displayed/played back.

Select The selection is added to the SMS.

Additional information

Playback only occurs if the destination phone supports the EMS standard (p. 110).
In input mode, a wildcard is shown when a melody is selected.

SMS to group

You can send an SMS message as a "circular" to a recipient group.

Options Open menu.

Send Select.

Groups Press. The Addressbook is opened in highlighting mode (p. 111). There are the following options:

- Highlight individual entries.
- Select <Groups>, open a group and highlight individual entries/all entries there.
- Select <Groups>. Select a group.

Send Press. The first of the highlighted recipients is displayed. If this recipient has several phone numbers, one number can be selected.


Skip Skip recipient.

Send Transmission is started after confirmation.


Read SMS



Arrival of new SMS announced on display.

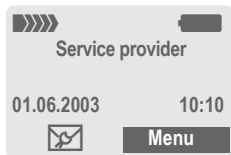

To read the SMS, press the left soft key.

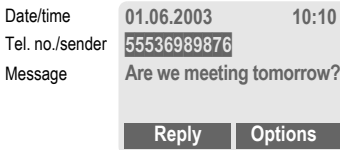


Scroll through message line by line.

Reply See below.

Options See p. 44.

Additional information

Pictures and sounds in SMSp. 41

 Message memory fullp. 112

Use **highlighted** phone number/e-mail address/WAP-addressp. 113


Reply menu

Reply Open reply menu.

Write mess.	Create a new reply text.
Change	Edit received SMS or add new text.
Answer is YES	Add YES to the SMS.
Answer is NO	Add NO to the SMS.
Call back Delay	Add a standard text as a reply to the SMS.
Thank you	

When the SMS has been edited in the edit mode, it can be saved or sent with **Options**.

Ringtones, icons ...

You can receive links for downloading ringtones, logos, screensavers, animations and informationen about applications (p. 64) with an SMS. Please highlight this link and, by pressing the Call key , start the download.

Please ensure that the HTTP profile (p. 65) and the connection (p. 76) are configured.


Lists

All SMS messages are archived in four different lists, according to their status:

Inbox

Menu →  → Inbox → SMS

The list of received SMS messages is displayed.

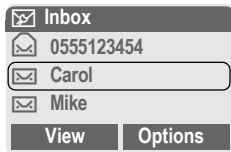

Draft

Menu →  → Draft → SMS

The list of not yet transmitted SMS messages is displayed.

Unsent

Menu →  → Unsent → SMS

The list of concatenated SMS messages not yet completely sent is displayed. Transmission can be restarted.

Sent


Menu →  → Sent → SMS

The list of sent SMS messages is displayed.

Lists menu

Each list offers different functions:


Options Open menu.







View	View entry.
Reply	Answer incoming SMS messages immediately.
Delete	Delete selected SMS messages.
Delete all	Delete all SMS messages after confirmation.
Send	Dial number or select from the Phonebook, then send.
Change	Open SMS message to edit.
Capacity	Display free capacity on SIM card/phone. In case of segments: number of concatenated SMS messages.
Mark a unread	Mark message as unread.
Save to 	Copy a highlighted phone number to Phone/Addressbook.
Archive	Move SMS message to archive.
Send via ...	Select an SMS profile for transmission (p. 55).
Picture & sound	Save pictures or sounds from the SMS.

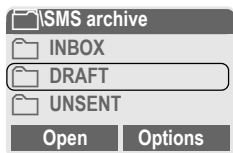SMS archive

Menu →  → SMS archive

The list of SMS messages stored in the phone is displayed.



	Unread
	Read
	Draft
	Sent
	Entry on SIM card.
	Concatenated message.

Different functions are available, depending on the context:

Archive menu

Options Open menu.

View	View entry.
Send	Dial number or select from the Phonebook, then send.
Change	Open edit mode for changes.

For further services, see **Filesystem**, p. 105.

The **Multimedia Messaging Service** enables you to send texts, pictures (also photos) and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Writing/sending MMS messages

An MMS consists of the address header and the content.

An MMS message can consist of a series of pages, each one of which may include a combination of text, sounds and pictures.

Texts can be written with the help of T9 (p. 25).


Pictures and **graphics** that have been produced with accessories such as digital cameras can be attached in JPEG, WBMP, GIF or GIF format. See also **Filesystem**, p. 105.


Music is sent and received in a MIDI file, single tones/sounds in an AMR file.

Navigation



Scroll line by line with the control key.

Menu →  → **New MMS**

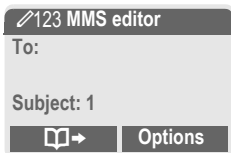

Input fields:

To:  /  Phone number/e-mail address of recipient(s).

Subject: Enter MMS heading (up to 40 characters)

Picture: **Insert** Press. The picture list is opened for selection (see also **Filesystem**, p. 105).

Text: **Edit** Press. Write text with the help of T9. Text menu, see p. 46.

Sound: **Insert** Press. You can now select a stored melody (see also **Filesystem**, p. 105).

Slide duration

Enter length of display for individual pages (minimum 0.1 seconds).

Attach extra pages

Options Open menu.

New slide Select.

Additional information

No more than 20 phone numbers/addresses, (of 50 characters each) can be addressed.

Options MMS main menu p. 47

Attach business card

Options Open menu.

Extras Select.



Scroll to **Businesscard**.



Attach business card.

Attach appointment

Options Open menu.

Extras Select.



Scroll to **Appointment**.



Import appointment from calendar.

Check MMS

Check the MMS message before sending it:

Options Open menu.

Preview slide

View a single page.

Prev. message

Play back the whole MMS in the display. Use any key to cancel.

Send MMS.

Options Open menu.

Send Select.

Text menu

Options Open menu.

Line feed	Start new line.
Save	Save MMS text.
Clear text	Delete the whole text.
T9 input (p. 24)	T9 preferred: Activate/deactivate T9. Input language: Select language for text.
Text modules	Insert text module (p. 27).

MMS menu

Different functions are available, depending on the context:

Options Open menu.


Insert line	Extend address field by one line.
Delete	Delete entries.
Insert from...	Insert number from Phonebook/Addressbook and appointments/tasks.
Send	Send MMS.
Save	Store MMS in the draft list.
New slide	Insert new page behind current one.
Delete item	Delete element on a page.
Delete slide	Delete page currently displayed.
Preview slide	Playback of complete page.
Slide list	Display pages available for selection.

Prev. message	Playback of complete MMS. Use any key to cancel.
T9 input (p. 25)	T9 preferred: Activate/deactivate T9. Input language: Choose language in which the text is to be written.
Attributes	Date:, Size:, Priorität: of the MMS must be shown.
Extras	Enter other features of MMS and attach Businesscard and Appointment .

Receive MMS



Indicates receipt of an MMS/a notification.

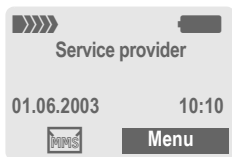

Press the left soft key to read the MMS or notification.

Depending on the setting, (p. 56) the

- complete MMS is received
- the notification is opened. Press **Receiving** to receive the complete MMS.

Press any key to break off function.

Read MMS



Automatic presentation of the MMS. Use any key to cancel.



Scroll page by page with the control key.



Call up individual pages directly by number key.

Attachment

A single MMS can contain several attachments.

Options Open menu.

Attachment Select.



Select attachment.

Open The attachment is opened with the available application.

Save The attachment is saved under a name.

Pictures and sounds

Pictures and sounds received in an MMS can be saved separately e.g., for use as a ringtone or background image. To do this, stop the MMS by pressing any key, or alternatively scroll through to the required page.

Options Open menu.

Content Select.

Proceed as for attachments above. Show as icons at the top of every page.

Functions for editing MMS can be found under **Options**.

Lists

All MMS messages are saved in four different lists:

Inbox

Menu →  → Inbox → MMS

The list of MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press **Receiving**.

Draft

Menu →  → Draft → MMS

The list of stored drafts is displayed.

Unsent

Menu →  → Unsent → MMS

The list of the MMS messages not yet completely transmitted is displayed.

Sent

Menu →  → Sent → MMS

The list of sent MMS messages is displayed.









Lists menu

Each list offers different functions:

Options Open menu.

Play	Play back MMS.
Change	Open edit mode for changes.
Reply	Reply to MMS immediately.
Receive MMS	Start inward transmission of MMS when only notification is highlighted (p. 56).
Receiv.all MMS	Start receipt of all new MMS messages.
Forward	Forward MMS to new recipients.
Delete	Delete selected MMS messages.
Delete all	Delete all entries after confirmation.
Mark a.unread	Mark MMS as unread.
Save to 	Copy phone number/e-mail address into Phonebook/Addressbook.
Attributes	Information on MMS is displayed: <ul style="list-style-type: none">• Sender• Arrival time• Subject• Size• Priority
Capacity	Size of current MMS as well as capacity still available are shown.

Preview slide	Play back current page.
Slide list	Display pages available for selection.
Attachment	Open list of attachments received.
Content	Selection of page contents to be archived, such as picture or sound.
Save	Store MMS in outbox list.

Icon	Meaning
	MMS unread
	MMS read
	MMS draft
	MMS sent
	MMS read and forwarded
	MMS read with despatched confirmation
	Notification unread
	Notification read



Your phone has an e-mail program (client). You can use it to create and receive e-mails.

Write/send e-mails

Menu → → New e-mail

Enter e-mail address

To: E-mail address of receiver(s).

Cc: E-mail address for the copy recipient.

Bcc: E-mail address for blind copy recipients (the other recipients are not shown the Bcc recipient).

Attach.: See below.

Press **briefly** to write special characters such as @ (p. 24).
T9 helps you write e-mails (p. 25).

Subject:
Enter e-mail heading (max. 255 characters).

Content: Enter text.

Options Open menu.

Send Send e-mail.

Add attachments

A file from the file system (e.g. ringtone) can be inserted in an e-mail as an attachment (p. 105).

Attach. Open file system.



Select file to be inserted.

Mark Highlight file.

OK Copy file as an attachment.

E-mail editor menu

Options Open menu.

Insert line	Extend address field by one line.
Delete line	Delete line in address field.
T9 input (p. 24)	T9 preferred: Activate/deactivate T9. Input language: Select language for text.
Insert from...	Insert entry from Phonebook/Addressbook.
Attach.	See above.
Save	Save in draft list.
Send	Establish connection with server and send e-mail. If necessary, select different access (p. 76).
Send later	Transfer to outbox list to be sent later.

Receive e-mail

Menu →  → Inbox
→ Receive e-mail

Before an e-mail can be read, it must be retrieved from the server. The service provider is dialled with the default access profile (p. 76) and all e-mails are transmitted to the inbox list.









Additional information

The e-mail client always receives complete messages including header, content and, if applicable, attachments. You can restrict the size of the received messages (p. 57).

A maximum of 50 e-mails can be stored in the phone. E-mail size is limited to 99 KB.

Synchronising with a PC

With XTNDConnect® PC (p. 116) you can synchronise your incoming/outgoing e-mails with Outlook® or Lotus Notes™.

E-mail	With attachment	Meaning
		Unread
		Read
		Draft
		Sent

Read new e-mail

Menu →  → Inbox → E-mail



Select e-mail.

View

The e-mail is displayed.



Switch between small, normal and large font sizes.




Scroll line by line with the control key.

The left soft key offers different functions depending on which text area you have selected:



E-mail addresses/phone numbers in the message are **highlighted** and can be stored in the Address-book.

 Dial phone number or start new e-mail.

Save

Save attachment (e.g. bitmap).

Reply

Reply to sender.

Link

Start WAP browser and visit URL (p. 60).



Read menu

Different functions are possible, depending on the context:

Options Open menu.

Reply	The original e-mail is retrieved. The sender is entered as recipient and can be changed as can the header and CC.
Reply to all	As above, but all recipients are listed in the "Send to" field.
Forward	The original e-mail is retrieved. Enter the new recipient to whom it should be forwarded.
Change	To edit, open e-mail in edit mode.
Delete	Delete selected e-mail.
Delete all	Delete all e-mails in the inbox or outbox.
Font size	Select font size.
Save attach.	The attachment is stored in the file system (Filesystem, p. 105).

Lists

All e-mails are stored in four different lists:

Inbox

Menu → → Inbox → E-mail

The list of received e-mails is displayed.



Select e-mail.

View

The e-mail is displayed for reading.

Draft

Menu → → Draft → E-mail

The list of draft e-mails is displayed.

Unsent

Menu → → Unsent
→ E-mail

The list of e-mails not yet transmitted is displayed.

Menu → → Unsent
→ Send e-mail

Send all e-mails queued for transmission to the server.

Menu → → Unsent
→ Send/rec. mail

Transmit all e-mails queued for transmission to the server and receive all new e-mails from the server.

Sent

Menu →  → Sent → E-mail

The list of transmitted e-mails is displayed.

Lists menu

Each list offers different functions:

Options Open menu.

View	(p. 52)
Change	Edit e-mail.
Reply	The original e-mail is retrieved. The sender is entered as recipient and can be changed as can the header and CC.
Reply to all	As above, but all recipients are listed in the "Send to" field.
Forward	The original e-mail is retrieved. Enter the new recipient to whom it should be forwarded.
Delete	Delete selected e-mail in phone.
Delete all	Delete all e-mails in phone.

Sort	Sort <ul style="list-style-type: none"> • by subject • by sender • by recipient • by date/time • by status Not all sort criteria are possible in all lists.
Send e-mail	Establish connection with server and send e-mails.
Receive e-mail	Establish connection with server and receive incoming e-mails.
Send/rec. mail	Establish connection with server, send e-mails and receive incoming e-mails.



SMS profiles

Menu →  → Setup → SMS

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these. The pre-setting depends on the SIM card inserted.



Select profile.

Options

Open menu.

Change sett.

Select.

Service centre	Enter or change the service-centre phone numbers as supplied by service provider.
Recipient	Enter the standard recipient for this transmission profile or select from Phonebook.
Message type	<p>Manual The message type is requested for each message.</p> <p>Standard text Normal SMS message.</p> <p>Fax Transmission via SMS.</p> <p>E-mail Transmission via SMS.</p> <p>New You may need to obtain the required code number from your service provider.</p>

Validity period	<p>Select the period in which the service centre is to try to deliver the message:</p> <p>Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum *</p> <p><i>*) Maximum period that the service provider permits.</i></p>
Status report 	You will receive confirmation whether delivery of a message has been successful or unsuccessful. This service may be subject to a charge.
Direct reply 	The reply to your SMS message is handled via your service centre when Direct Answer is activated (for information please contact your service provider).
SMS via GPRS 	<p>Send SMS automatically by GPRS (if available).</p> <p>Requirement: GPRS is activated (p. 75). Ensure that your service provider offers this function.</p>
Save aft. send	Sent SMS messages are saved in the Sent list.

Activate profile



Select profile.

Activate

Press to activate profile.



MMS profile

Menu → → Setup → MMS

A number of MMS profiles can be selected. The transmission characteristics of an MMS are defined in these.



Select profile.

Options Open menu.

Change sett.
Select.

Expiry time Select the period in which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum*

*) Maximum period that the service provider permits.

Def. priority Send priority: Medium, High, Low

Def. duration Length of display for an MMS page (standard requirement).

Retrieval Receive complete MMS or only notification of arrival.

Automatic
Receive complete MMS immediately.

Auto.homenet
Receive complete MMS immediately in home network

Manual
Only the notification is received.

MMS relay-srv. MMS relay URL, e.g.
http://www.webpage.com

IP settings **IP address:** Enter IP address.

Port: Enter port number.

IP address: Enter IP-address.

Port: Enter port number.

These settings can be different from those of the WAP browser.

Conn.pro-file: Select or set access profile (p. 76).

Activate profile



Select profile.

Activate

Press to activate profile.



E-mail settings

Menu → → Setup
→ E-mail
→ Select function.

Before using this service, you must set the server access and your e-mail options. The data for these may already have been entered. If not, your service provider will supply you with the relevant information. See also on the Internet at:

www.my-siemens.com/m55

Additional information

Your service provider must support the following protocols for successful data exchange with the e-mail server:

POP3, IMAP4 and SMTP or eSMTP.

E-mails will be MIME-encoded for transmission.

Encryption of e-mail transmission (SSL, APOP) is not possible at present.

E-mail accounts

5 accounts can be defined. If no access data have been defined for the account, the entry card is displayed.

Alternatively:

Options Press.

Change sett.

Press, then:

User settings

Provider	Select provider.
User name:	Your name.
E-mail addr.: *	Your e-mail address, e.g.,: name@domain.abc
Reply-t.addr.:	Additional e-mail address for replies.
User ID: *	Your user ID.
Password: *	Your password.

* Your service provider will supply you with this information.

Mail settings

Downl. only mails smaller than <10> KB	Set maximum size for incoming e-mails.
Leave copy on server?	E-mails remain on the server after they have been retrieved or are deleted.
POP3 server: *	Enter Internet address if the server type is POP3 and SMTP.



POP3 Port: *	(Default: 110)
IMAP4 *	Enter Internet address if the server type is IMAP4 and SMTP.
IMAP4 Port: *	(Default: 143)
SMTP server: *	Enter Internet address.
SMTP port: *	(Default: 25)
SMTP Authentication:.	Authentication: Yes/No
SMTP Password:	A user password will be required if "Authentication" is set to Yes.

* Your service provider will supply you with this information.

OK Save and activate settings.

General sett.

Enter the preset default of an e-mail address for blind-copy recipient (Bcc).

Activate profile



Select profile.

Activate Press to activate profile.

Voice message

These functions are described in a separate chapter (see p. 39).

CB services

These functions are described in a separate chapter (see p. 59).

Menu →  → Setup
→ CB services

Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, your **Topic list** will supply you with messages on the activated topics.

Broadcast

You can activate and deactivate the Cell Broadcast service (CB service). If the CB service is activated, standby time for the phone will be reduced.

Read new CB

All unread CB messages are displayed.

Topic list

You can import as many topics as you wish into this personal list from the topics offered (**Topic index**). 10 Entries may be entered using the channel number (ID) and, if required, the name itself.

New topic Select.

- If no topic index (**Topic index**) is available, enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted, select a topic and confirm with **OK**.

Channel: Select


Options Open list menu.

If a topic is selected in the list you can view it, activate/ deactivate it, edit it or delete it.

Auto display

CB messages are displayed in standby mode, longer messages are scrolled automatically. This display can be activated/deactivated for all or only new messages.

For "full page view":

 Press, then press **View CB**.

Topic index



The list of topics is displayed for you to choose from. If nothing is displayed, you must enter the channel numbers (ID) manually (**Topic list**). Please contact your service provider for details.

CB languages

Receive Cell Broadcast messages in only one specific language or in all languages.

Displays



Topic activated/deactivated.



New messages received on the topic.



Messages already read.

Internet browser (WAP)

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.


Internet access



Menu →  → Internet

The browser is activated as soon as you call up the function. The functions of the soft keys vary, depending on the internet page, for example "link" or "menu". The contents of the option menus are also variable. If necessary, set the way in which WAP access should be made (see **Browser menu**, **Setup**, **Start with...**, p. 61).

For example the start menu appears:

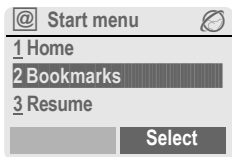

Select required function.

Select

Confirm.

Start menu

Home	The connection to the provider's portal is set up. This may be defined or pre-set by your service provider.
Bookmarks	List of URLs stored in the phone for fast access.
Resume	Call up recently visited pages that are still in memory.
Inbox	Inbox for messages from the WAP server (WAP push).
Profiles	The list of profiles is displayed for activation/setting (p. 62).
Exit browser	Close browser and clear down connection.

Additional information

Operating instructions p. 114

End connection



Hold **down** to clear down the connection and to close the browser.

Your Internet browser is licensed by:



OPENWAVE™



Browser menu

If the browser is active, the menu can be activated as follows:



Press

or










confirm.

Home	The connection to the provider's portal is set up. This may be defined or pre-set by your service provider.
Bookmarks	Up to 50 URLs stored in the phone for fast access (p. 115).
Resume	Call up most recently visited page still in memory.
Go to...	Enter URL to access WAP page directly, e.g. wap.my-siemens.com Select from list of most recently visited WAP addresses.
Reload	Reload page.
Inbox	Inbox for messages from the WAP server (WAP push).
Disconnect	End connection.
Save bitmap	Save picture(s) on the page shown.
More ...	See below.
Exit browser	Close browser and clear down connection.

More ... (in menu)

Profiles	The list of profiles is displayed for activation/setting (p. 62).
Setup	<p>Font size</p> <p>Protocol parameters</p> <ul style="list-style-type: none"> • Push • Push can force online • Timeout for unanswered network requests <p>Security</p> <ul style="list-style-type: none"> • Connection prompt • Secure prompt • Current certificate • CA certificates • Private Key PINs • Encryption <p>Start with...</p> <ul style="list-style-type: none"> • Start menu • Browser menu • Home • Resume • Bookmarks
Reset	Restart session and clear cache.
About Openwave	Display browser version.

Additional information

	Browser menu.
	Offline.
	Online.
	GPRS Online.
	No network.
	Select special characters, such as @, ~, \, see p. 24.
	or press repeatedly for: . , ? ! ' " 0 - () @ / : _

WAP profiles

Menu →  → Internet
→ Profiles

Preparation of the phone for WAP Internet access depends on the current service provider:

- The settings have already been installed by provider. You can start immediately.
- Access profiles for a number of providers have already been set. Then select and activate profile.
- The access profile must be set manually.

If necessary, check with your service provider for details.

Activate WAP profile

You can change the current profile each time you access the Internet.



Select profile.

Select

Activate. The current profile is selected.

Set WAP profile

Up to 5 WAP profiles can be set (if not barred by provider). The entries may vary depending on the service provider:



Select profile.

Edit

Open to make settings.

Profile name Enter/change name.

WAP param.



IP address: Enter IP address.

Port: Enter port number.

Homepage: Enter homepage, if not set by the service provider.

GPRS linger-time Time in seconds after which a connection should be ended if no input or data exchange takes place.

Conn.profile: Select or set access profile (p. 76).

Save

Save settings.

Games & more

Download games and other applications. You are advised about relevant applications on the Internet.

Once you have selected a game or application you can start to download it immediately. Then you can use the application.

Most applications include instructions.

Additional information

To download applications, the WAP profile (p. 62), HTTP profile (p. 65) and access (p. 76) must be configured.

Java™ information p. 111

Sounds (ringer)/silent alert on/off p. 68

Applications and games can be found at:

wap.my-siemens.com

or on the Internet at:

www.my-siemens.com/city

Games and applications

Applications and links that are already stored on the phone are found under:

Menu →  → Games & more

Games & more

★ Application

★ Game

 MySiemens

Options

Select

Different functions are available depending on which entry is highlighted:

★ **Execute game/application offline**

Select

Runnable application can be started immediately.

★ **Load game/application online**

Select

Only description file (p. 111); application has still to be loaded.

 **Load link (optional)**

Internet


The selected Internet page is loaded.

Receive information

If information required, say, by an application that has already been installed, is received via **SMS**, the ☆ symbol appears in the display. By pressing the left soft key, the relevant application is started and the information is processed.

Additional information

The following key control is used for many games (virtual joystick):

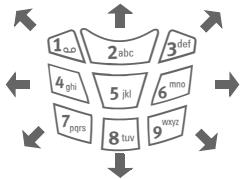

Games&More menu

All functions required for editing and managing your applications and folders are found in the Options menu:

Options Open menu.

Start	Start application.
Download	An application is downloaded from the Internet and installed.
New folder	Create and name new folder.
Delete	Delete selected application/folder.

Delete all	Delete all applications/folders after confirmation.
Rename	Rename highlighted applications/folders.
Move	Move applications between folders.
HTTP profile	The list of profiles is displayed for activation/setting (p. 65).
Reinstall	Reinstall an application (update).
More info	Download further instructions via Internet (WAP), if available.
Details	Show details of the application/folder (name, version, size, path, producer, date).
Sort	Set sort criteria (alphabetical, time).
Security	Checks before applications are downloaded: Confirm everytime Confirm once No confirmation
Capacity	Display maximum and available capacity.

HTTP profile

Menu →  → Games & more

Options Open menu



Select HTTP profile.

Preparation of the phone depends on current service provider:

- The settings have already been installed by provider. You can start immediately.
- Access profiles have already been set by your provider. Then select and activate profile.
- The access profiles must be set manually.

If necessary, check with your service provider for details.


WAP can be used to download applications from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications or software and for any direct damage or consequential damage of whatever nature resulting from the use of these applications or software. For technical reasons, such applications or software and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In these cases the purchaser will need to download the application again or re-enable it. Siemens does not offer any warranty, or guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge. Save your applications on a PC with Siemens Data Suite Software, see p. 116.

Display

Menu →  → Display
→ Select function.

Language

Set the language of the display text. When "automatic" is set, the language of your service provider is used. If a language that you do not understand happens to be set, the phone can be reset to the language of your service provider with the following input (in standby mode):

*#0000# 

T9 input

(see also p. 25)

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry. Languages with T9 support are marked by the T9 symbol.

Wallpaper

Set wallpaper graphic for display.

Logo

Choose picture to be displayed instead of the provider logo.

Color scheme

Select colour scheme for the whole service system.

Activate colour scheme



Select colour scheme.

Activate Activate.

Load colour scheme


Up to three colour schemes can be included in the selection list in places 2 to 4. These can be loaded by WAP, for example.

Options Open menu.

Load Select colour scheme.

Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. The function is ended by an incoming call or by pressing any key.

Enable	Activate/deactivate screensaver.
Style	Analog clock, Bitmap or Energy saving.
Bitmap	Select picture in file system.
Preview	Display screensaver.
Timeout	Set period after which the screensaver starts.
Security	Phone-code protected termination of screensaver.
Auto key lock	The keypad is locked automatically if no key has been pressed for one minute in standby mode. Unlocking:  Hold down .

Start up anim.

Select animation to be shown when phone is switched on.

Shutdn anim.

Select animation to be shown when phone is switched off.

Own greeting

Enter greeting to be displayed instead of animation when phone is switched on.

Edit

Activate/deactivate.



Delete old message and create new message.

OK

Confirm changes.

Big letters

You can choose between two font sizes for the display.

Illumination

Set display light brighter/darker. The darker the setting the longer the standby time.



Press the control key repeatedly to adjust up or down.

Additional information

You can also receive individual logos, screensavers and animations by SMS (p. 40), MMS (p. 45) or WAP (p. 60). See also **My phone** (p. 17).

Contrast

Set display contrast.



Press the control key repeatedly to adjust up or down.

Audio

Menu →  → **Audio**
→ Select function.

You can set the tones to match your needs.

Ringer setting

On/Off Activate/deactivate all tones.

Beep Reduce ringtone to a short signal (beep).

Additional information



Display: Beep.



Display: Ringer off.

Switch off ringer p. 108

Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The silent alert can also be activated in addition to the ringer (e.g. in noisy environments). This function is deactivated when the battery is charged.

The silent alert is activated if the loudest setting is set for the ringtone. This is to remind you **not to hold the phone to your ear when ringing** in order to avoid damaging your hearing.

Volume

Set different volumes for types of call/functions.



Select:

Incoming call (see below)

Alarm

Alarm clock

Messages

Cell broadcast

Start melody

End melody

Applications

Select

Press. The ringtone is played.




Set volume.

OK

Confirm.

Incoming call

You can assign different volumes to  **Calls**, **Other calls** and each group in the Addressbook.

Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing caused by a loud ringtone!

If two independent phone numbers are registered on your phone, you can set different volumes for them (p. 114).

Menu →  → **Audio**
→ Select function.

Melodies

Set different ringtones for types of call/functions.



Select:

Incoming call (see below)
Alarm
Alarm clock
Messages
Cell broadcast
Start melody
End melody

Select

Press. The melody is played.




Select ringtone.

OK

Confirm.

Incoming call

You can assign different melodies to  **Calls**, **Other calls** and each group in the Addressbook.

Additional information

You can receive individual ringtones via **SMS/MMS** or download them via **WAP** (p. 60). See also **My phone**, p. 17, File formats, p. 105.

Call screening



Only calls from phone numbers that are in the Phonebook/Addressbook or in a group are signalled audibly or by silent alert. Other calls are merely displayed.

If you do not accept these calls, they are diverted to your mailbox (if set, p. 71).



Display in standby mode: call screening is activated.

Key tones

You can set the type of acoustic key tone:

Click or Tone or **Still**

Minute beep

During a call, you will hear a beep after every minute as a reminder of the time elapsed. The recipient does not hear this beep.

Info tones

Set service and alarm tones:

On/Off Activate/deactivate tones.

Extended If switched on, a wider range of service tones is available, e.g.:

- end of menu reached,
- max. text entry reached,
- network connection lost.

Dynamic Light


Menu →  → **Dynamic Light**
→ Select function.

You can switch on the visual signals (LEDs) on both sides of the phone for the following functions. The LEDs then flash in different rhythms depending on the current function.

Play demo

All flash rhythms are displayed in sequence. End with **Cancel**.

Incoming call

You can assign different flash rhythms to  **Calls**, **Other calls** and each group.

During call

Select a flash rhythm to flash during the call.

Incoming msgs

Select a flash rhythm to signal that an SMS/MMS has been received.

Alarm

Select a flash rhythm to signal an appointment.

CarKit conn.

Switch the flash rhythm on or off that is to flash when connected with the CarKit.

Net search

Switch the flash rhythm on or off that is to flash during a netsearch.

Low battery

Switch the flash rhythm on or off that signals a low battery.

Switch on/off

Switch the flash rhythm on or off that is to flash when the phone is switched on/off.

Net sync.

Switch the flash rhythm on or off that is to flash when the phone and network are synchronised.

Keys

Menu →  → Keys
→ Select function.

Any to answer

Incoming calls can be accepted by pressing any key

(except ).

Auto key lock

If activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

Additional information

The keypad can also be directly locked and unlocked in idle state.

In each case:



Hold down.

Key tones

You can set the type of acoustic key tone:

Click or Tone or Still

Phone setup

Menu →  → Phone setup
→ Select function.

Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it (see also p. 20).

Hide ID



When you make a call, your phone number can be displayed on the recipient's display (depending on the service providers).

To suppress this display, you can enable the "Hide ID" mode for all subsequent calls or just for the next call. You may need to register separately with your service provider for these functions.

Divert

You can set the conditions under which calls are diverted to your mailbox or other numbers.

Set up call divert (example):

The most common condition for call divert is, for example:

Unanswered

Select **Unanswered**.
(Includes the conditions **Not reachable**, **No reply**, **Busy**, see below)

Select

Press.

Set

Select.
Enter the phone number to which the caller will be diverted (if not already done)

Or

Select this phone number from the **Addressbook/Phonebook** or via **Mailbox**.

OK

Confirm. After a short pause, the setting is confirmed by the network.

All calls

All calls are diverted.



Icon in top line of display in standby mode.

Not reachable

Divert occurs if phone is switched off or is out of range.

No reply

A call is only diverted after a delay that is determined by the network. The period can be set to a maximum of 30 seconds in 5 second intervals.

Busy

Divert occurs if a call is in progress. If **Call waiting** is activated (p. 71), you will hear the call waiting tone during a call.

Receiving fax

Fax calls are diverted to a number with a fax connection.

Receiving data

Data calls are diverted to a phone number with a PC connection.

Status check

You can check the current divert status for all conditions.

After a short pause, the current situation is transmitted by the network and displayed.



Condition set.



Not set.

Display if status is unknown (e.g. with a new SIM card).

Clear all


All set diversions are cleared.

Menu →  → Phone setup
→ Select function.

Fact. settings

The phone is reset to the default values (factory setting) (does not apply to SIM card or network settings).

Alternative input in standby mode:

*#9999# 

Filesystem

(Phone-code protected)

Format

The file system memory is formatted and **all** data that has been saved is deleted, including Addressbook, ringtones, organiser entries, etc. Save important data in advance (p. 116).

Clean up

The file system is defragmented.

Additional information

Note that the divert is stored in the network and not in the phone (e. g., when the SIM card is changed).

Check condition or delete it

First select the condition.

Select Press.

Check status
Select.

Or

Delete Select.

Reactivate divert

The last divert has been stored. Proceed as with "Set divert". The stored phone number is displayed. Confirm phone number.

Edit phone number

Proceed as with "Set divert". When the stored number is displayed:

Delete Press. The phone number is deleted.

Enter new number and confirm.

Menu →  → Phone setup
→ Select function.

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternative input in standby mode:
***#06#**

Check software version p. 114.

Auto off

The phone switches off each day at the set time.

Activate:

Time Press.



Enter time
(24-hour-clock).

OK Confirm.

Deactivate:

Manual Press.

OK Confirm.

Clock

Menu →  → Clock
→ Select function.

Time/date

The clock must be set to the right time once at start-up.

Edit Press.



First enter the date (day/month/year), then the time (12 hours, including seconds).

Additional information

If the battery is removed for longer than 30 seconds, the clock must be reset.

Setting date format:

DD: Day (2-digit)

MM: Month (2-digit)

YYYY: Year (4-digit)

Time zones


Set the time zone for your area.



Select the required time zone from list ...

Set ... and set.

Options Open menu.

DST	Activate/deactivate daylight saving. When daylight saving is activated a sun icon appears on the display.
View	Display the selected time zone with name and date.
Set	Set time zone.
Rename	Assign a new name to time zone.
Auto time-zone 	The time zone is switched automatically to local time by the network.

Date format

DD.MM.YYYY or MM/DD/YYYY

Time format

Select 24h or 12h.

Show clock

Activate/deactivate time display in standby mode.

Buddhist year

Switch to the Buddhist date (not on all model variants).

Connectivity

Menu →  → **Connectivity**
→ Select function.

GPRS



(**General Packet Radio Service**)

GPRS is a new method for transmitting data faster in the mobile network. Use GPRS and if the network has sufficient capacity, you can be connected to the Internet permanently. Only the actual transmission time is charged by the network operator.

Some service providers do not yet support this service.

Yes / **No** Activate or deactivate GPRS function.

Shown in display:

GPRS Activated and available.

GPRS Registered.

GPRS Connection briefly lost.

GPRS Download.

GPRS info

Display of information on connection status.

Menu →  → **Connectivity**
→ Select function.

Data services

For the **MMS**, **Wap** and **Mail**, **Java**, **Rms** applications at least one connection profile must be set up and activated.



Select profile.

Options Open menu.

Change sett. Press, then:

For CSD (Circuit Switched Data)

CSD settings

Select.

If it has not been pre-installed, enter the data or enter the required settings (your service provider will supply you with information on this):

Edit Press.

Dial-up number	Enter ISP number.
Call type:	Select ISDN or analogue.
Login name:	Enter login name.
Password:	Enter password (shown as a series of asterisks).
DNS1 / DNS2:	(Optional).

Save Save settings.

For GPRS (General Packet Radio Service)

GPRS settings

Select.

You can activate GPRS for the profile and change the settings here. You can only start to use GPRS once you have activated GPRS on your phone (p. 75).

Edit Press.

APN:	Enter service provider address.
Login name:	Enter login name.
Password:	Enter password (shown as a series of asterisks).
DNS1 / DNS2:	(Optional).

Save Save settings.

Menu →  → **Connectivity**
→ Select function.

HTTP profile

Preparation of the phone depends on current service provider:

- The settings have already been installed by provider. You can start immediately.
- Access profiles have already been set by your provider. Then select and activate profile.

- The access profiles must be set manually.

If necessary, check with your service provider for details.

Fax/data mod.

Fax/data mode using a PC

With the phone and a connected PC, you can transmit and receive faxes and data. Appropriate software for fax and data communication must be available on your PC and there must be a connection to the phone.

Fax and data services must be enabled by the service provider. There are variations in fax and data reception, depending on the network. Please ask your service provider about this.

Edit Set the required mode.

Rec fax/data

Your service provider has given you a number for telephoning and a fax/data number.

The call is signalled by a special ring-tone and the type of call (fax or data) is displayed.

Now start the communication program in your PC to receive the fax/data.

Send vce/fax

Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

While the connection is being set up, the following function is available for two seconds:


Voice/fx Switch to **Send vce/fax** mode; you may now send a fax.

Voice/fax rec

(**Only** if no special fax or data number is available).

Start the required communication program on your PC and select the function on the phone **during** the call (the PC will take over the connection).

End transmission

End transmission with PC software and/or press .

Authentication

Edit Activate encrypted WAP dial-up (CHAP: Challenge Authentication Procedure) or deactivate (PAP: Personal Authentication Procedure).

Security

Menu →  → Security
→ Select function

The phone and SIM card are protected against misuse by several security codes.

Codes

PIN control, Change PIN, Change PIN2, Chg.phonecode, (p. 15).

Babysitter

(Phone-code protected)

Only **one** phone number can be dialled. Hold **down** the right soft key (p. 23).

Only



(PIN2 protected)

Dialling options are restricted to SIM-protected phone numbers in the Phonebook. If only area codes are entered, relevant phone numbers can be added to these manually before dialling.

If the SIM card does not support PIN2 input, the **whole** Phonebook can be protected with the phone code.

Last 10 only



(Phone-code protected)

Only phone numbers from the call list of "dialled numbers" (p. 37) can be dialled. This list can be filled with phone numbers specifically for this purpose.

First delete the call list, then create "new entries" by dialling phone numbers and cancelling before the connection is established.

This SIM only



(Phone-code protected)

The phone can be connected to a SIM card when the phone code is entered. Unless the phone code is known the phone will not operate with a **different** SIM card.

If the phone is to be used with a different SIM card, enter the phone code when requested.

Menu →  → Security
→ Select function

Barrings



Barring restricts the use of your SIM card (this is not supported by all service providers). You need a 4-digit password which your service provider will give you. You may need to register each barring separately with your service provider.

All outgoing

All outgoing calls except emergency numbers 999 and 112 are barred.

Outgo internat

(International outgoing)

Only national calls can be made.

Out.int.x home

(International outgoing without home country)

International calls are not permitted. However you can make calls to your home country when abroad.

All incoming

The phone is barred for all incoming calls (forwarding of all calls to mailbox provides a similar effect).

When roaming

You do not receive calls when you are outside your home network. This means that no charges are incurred for incoming calls.

Status check

The following information can be displayed after a status check:



Barring set.

Barring not set.

Status unknown (e.g. new SIM card).

Clear all

All barrings are deleted. A password which the service provider will give you is needed for this function.

Network

Menu →  → Network
→ Select function


Line



This function is only displayed if it is supported by the service provider.
Two separate phone numbers must be registered on the phone.

Select

Select phone number in current use.

 Display current phone number.

Additional information

Settings for phone numbers p. 114

Block line

(Phone-code protected)

You may limit usage to one phone number.

Network info

The list of GSM networks currently available is displayed.



Indicates forbidden service providers (depending on SIM card).

Choose network

Network search is restarted. This is useful if you are **not** on your home network or want to register on a **different** network. The network list is rebuilt when **Auto network** is set.

Auto network

Activate/deactivate, see **Choose network** above. If "Automatic network" is activated, the next network on the list is dialed in ranking order of your "preferred networks". Alternatively select a different network manually from the list of the available GSM networks.

Pref. network

Enter your preferred service providers here for when you leave your home network (e.g. if there are differences in price).

Additional information

If the signal strength of the preferred network is inadequate when you switch on the phone, the phone may register in a different network. This can change when the telephone is next switched on or if another network is selected manually.

Your service provider is displayed:

List Display list of preferred networks.

Create new entry:

- Select empty line, press **Entry**, then select another entry from the list of service providers and confirm.

Change/delete entry:

- Select entry, press **Change** then select another entry from the list of service providers and confirm or press **Clear**.

Band selection



Select either GSM 900, GSM 1800 or GSM 1900.

Fast search

When this function is active, network reconnection is speeded up (and standby time is reduced).

Menu →  → **Network**
→ Select function.

User group



Depending on service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special tariffs apply. The details can be clarified with your service provider.

Active

Activate/deactivate function. "User group" must be deactivated for normal phone use (phone code, p. 16).

Select group

You can select or add groups other than preferred groups (see below). Code numbers for the groups are obtained from your service provider.

Outgo. access

In addition to network control for a user group, it is possible to set whether outgoing calls outside the group are permitted. If the function is deactivated, only calls within the group are permitted.

Preferred grp

If activated, only calls within this standard user group can be made (depending on the network configuration).

Accessories

Menu →  → Accessories
→ Select function.

Car Kit

Only in combination with an original Siemens handsfree Car Kit (p. 129). The profile is activated automatically as soon as the phone is inserted into the cradle.

Auto answer

(Factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!



Shown on the display.

Auto off

(Factory default: 2 hours)

The phone is powered by the car's power supply. You can adjust the time between switching off the ignition and the automatic switching off of the phone.

Car loudspk.

Select a different audio setting if necessary for your Car Kit.

Automatic settings:

- Permanent illumination: switched on.
- Key lock: switched off.
- Charging the phone battery.
- Auto. activation of the Car Kit profile when phone is inserted in cradle.

Headset

Only in conjunction with an original Siemens headset (p. 128). The profile is automatically activated when headset is plugged in.

Auto answer

(Factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset. Eavesdropping is possible!

Automatic setting

Accept call with Call key or PTT key (Push To Talk), even when the key-lock is activated.

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can be changed however:

Normal envi.

Quiet environ.

Noisy environ.

Car Kit

Headset

- You can set two personal profiles (<No Title>).
- The special profile **Aircraft mode** is fixed and cannot be changed, (p. 84).

Activate


Menu → 



Select default profile or personal profile.

Activate

Activate profile.

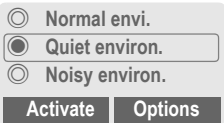

- Active profile.

Setup

Edit a default profile or create a new personal profile:



Select profile.

Options

Open menu.

Change sett.Select.

The list of available functions is displayed:

Ringer setting	p. 68
Volume	p. 68
Silent alert	p. 68
Call screening.....	p. 69
Info tones.....	p. 70
Key tones	p. 69
Illumination	p. 67
Big letters	p. 67

When you have finished setting a function, return to the profile menu where you can change a further setting.

Profile menu

Options Open menu.

Activate	Activate selected profile.
Change sett.	Change profile settings.
Copy from	Copy settings from another profile.
Rename	Change personal profile (except default profiles).

Car Kit

If a Siemens original Car Kit is used (p. 129) the profile is activated automatically as soon as the phone is inserted into the cradle (p. 82).

Headset

If an original Siemens headset is used (p. 128) the profile is activated automatically as soon as the headset is in operation.

Aircraft mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**. The phone will switch off if you select this profile.

Activate



Scroll to **Aircraft mode**.

Select

Switch on profile.

A security prompt must be confirmed.

The phone switches itself off automatically.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.

Menu Press.

My menu Press.

Create your own menu with frequently used functions, phone numbers or WAP pages.

The list of 10 possible entries is preset. You can, however, change it as you want.

Additional information

For fast access from standby mode you can set the function **My menu** on the left soft key (p. 103).

Activate



Select the required entry.

Select Press.

Or

Options Press.

Activate Select.

Select Press.

Or



If the entry selected is a phone number, you can also call it with the Call key.

Change sett.

You can replace each entry (1–10) with another entry from the selection list.



Select the required entry.

Options Press.

Change sett.

Select.

Set Press.



Select the **new** entry from the selection list.

Set Press.

If you have selected a phone number or a WAP favourite as a new entry, the corresponding application is started.

Reset all

Options Press.

Reset all Select.

After confirmation and entering the phone code, the default entries are reset.

Calendar

Menu →  → Calendar

You can enter appointments and tasks in the Calendar. It offers a

- monthly overview,
- weekly overview,
- daily overview.

Time and date must be set for the Calendar to work correctly (p. 74).

Monthly overview

Tu		Aug 2003						W32	
				1	2	3			
4	5	6	7	8	9	10			
11	12	13	14	15	16	17			
18	19	20	21	22	23	24			
25	26	27	28	29	30				
Week				Agenda					



Scroll between weeks.



Scroll between days.

Week

Display weekly view.






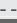



Agenda

List of the day's appointments and tasks.

Additional information

Calendar days in bold face indicate appointments or birthdays (p. 94) on this day.

Weekly overview

Tu		Aug 2003						W32	
M	T	W	T	F	S	S			
4	5	6	7	8	9	10			
6									
12									
18									
Day				Agenda					



Scroll by the hour from 0:00 to 24:00 hours.



Scroll between days.

Day

Display the daily overview.

Daily overview

Tu		Aug 2003						W32	
0	4	8	12	16	20				
1	5	9	13	17	21				
2	6	10	14	18	22				
3	7	11	15	19	23				
Month				Agenda					

Each day is divided into six blocks of four hours (morning + afternoon).



Scroll between days.

Additional information




Appointments are displayed by vertical bars.



Time overlaps in appointment entries are highlighted.

Agenda

Agenda Select in the current overview.

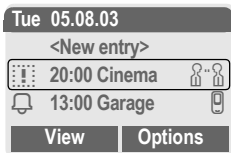

Appointments (p. 88) and where applicable any outstanding tasks (p. 90) for the current day are displayed in chronological order in the agenda.

<New entry>

Create new entry as appointment or as task.

Options

Different functions are provided, depending on the Calendar item selected or the current organiser function:






 


Options Open menu.

View	Display entry.
Activate/Deactivate	Switch alarm on/off.
Done	Change task to "completed".
Change	Open the entry to edit.
New entry	Create new entry as Appointment (p. 88) or Task (p. 90).

Filter	Select feature: Memo, Speech memo, Call, Meeting, Birthday, All. All entries with the selected feature are displayed.
Delete	Delete selected recording.
Delete all	Delete all entries after confirmation.
Delete until	Delete all entries prior to a certain date.
Delete done	Delete all completed tasks.
Mark	Activate highlighting mode; the entry currently selected is highlighted (p. 111).
Mark all	Activate highlighting mode; all entries are highlighted (p. 111).
Send...	(p. 107)
Capacity	Display available capacity.

Additional information

For additional calendar settings see below under **Calend. setup** (p. 94).

-  Appointment with alarm activated.
-  Appointment with alarm deactivated.
-  Appointment with repeated alarm activated.
-  Appointment with repeated alarm deactivated.
-  Task.
-  Priority task.
-  Task completed.
-  Task deadline exceeded.

Synchronising with a PC

With XTNDConnect® PC (p. 116) you can synchronise your appointments with Outlook® or Lotus Notes™.

With **Remote sync.** you can synchronise your phone with an organiser stored on the Internet (p. 101). For this a time zone must be set (p. 74).

Alarm

Menu →  → Alarm

All appointment entries are displayed in chronological order. If an alarm is missed it appears in the list of missed appointments (p. 92).

Enter new appointment


Select Press.



Make the entries field by field.

Edit

Browse through displays in the selection fields.

 **New entry**

Type: Memo

Description:

Edit
Save

Type:



Memo.

Description with up to 50 characters.



Speech memo.

Record a voice memo at the end of the input procedure (see also p. 93).



Call.

Enter phone number.
Shown with alarm.



Meeting.

Description with up to 50 characters.

Description:

Display in the agenda list.

Location:

Location of appointment, e.g. meeting room.

Start date:

Start time:

End date:

End time:

Alarm:



Activate alarm.



Enter start time of the alarm **before** the appointment.



Select:

Minutes, Hours, Days.

Reoccurrence:

Select a timeframe for repeating the appointment:

None, Daily, Weekly, Monthly, Annual.

Enter a parameter for repeating:

Forever, Until, Occurrences (number)

If **Weekly** is selected, certain weekdays can be highlighted.



Save the appointment.

The alarm is automatically activated. If **Speech memo** is selected as type, the dictating machine is started for recording (p. 93).

Alarm

When the set date and time are reached there is an audible and a visual alarm. If an alarm is missed it appears in the list of missed appointments (p. 92).

Alarm type **Memo/Meeting**: the text is shown in the display.

Alarm type **Call**: the phone number is displayed for dialling.

Alarm type **Speech memo**: playback with dictation key.


Pause The alarm stops for 5 minutes.

Off The alarm is stopped.

Additional information

Message in display that alarms have been set:

 Alarm clock.

 Appointments.

An alarm sounds even when the phone is switched off (the phone does not switch to standby mode). To deactivate it press any key.

Deactivate all alarms..... p. 84

Set alarm tone..... p. 68


Clock..... p. 74

Options p. 87

Tasks

Menu →  → Tasks

A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed.

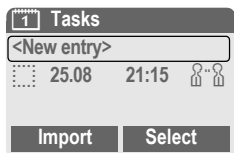

Enter new task

Select Press.



Select appointment type (see appointments, p. 88).

Description:

Display in the list.

Status:

Choose between: **Done** or **Outstanding**

Priorität:

Select between 1 (high) and 5 (low). Default is 3.

Use date

When **Yes** is selected, the following option is provided.

Due date:

Enter date.

Due time:

Enter time.

Alarm:


Enter a time (0–99) and a time unit (minutes, hours, days) at which an audible/visual notification of an impending task should be made.

Save Save task.

Notes

Menu →  → Notes

Use your phone as a notepad.

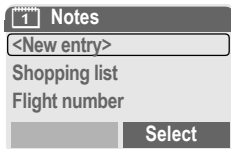

New entry

Select Press.



Enter text, 150 characters maximum.

Options Open menu.

Save Store entry.

Text entry menu

Options Open menu.

Save	Store entry.
T9 input (p. 25)	T9 preferred: Activate/deactivate T9. Input language: Select language for text.
Line feed	Enter line break.
Clear text	Delete note.
Send	Send entry as SMS message.

Display entry



Select entry.

View

Open note.

Notes menu

Options

Open menu.

View	Display entry.
Confidential	Protect note with phone code (also refer to "Additional information").
Change	Display entry for editing.
New entry	Create new note.
Delete	Delete entry.
Delete until	Delete all entries prior to a certain date.
Delete all	Delete all notes after confirmation.
Mark	Switch to highlighting mode (p. 111).
Mark all	Activate highlighting mode; all entries are highlighted (p. 111).
Send	Send entry as SMS message.
Capacity	Display available capacity.

Additional information

Protect confidential data using a phone code (p. 16). Please note that with the aid of suitable programs it is possible for confidential notes to be read from the phone when connected to a PC.

We recommend that you do not store any passwords (PIN, TAN etc.) as notes.









A total of 500 entries (appointments, tasks, notes) can be stored in the organiser.

Enter special characters.....p. 24

Missed appointments

Menu →  → Missed alarms

Events with an alarm to which you have not reacted are listed for reading.

 Missed alarms			
	03.08	21:15	 
	05.08	12:30	
	05.08	18:00	
View		Options	

Missed appointments menu

Options Open menu.

View	Display entry.
Delete	Delete entry.
Delete all	Delete all entries after confirmation.
Send...	(p. 107)

Dictating machine

Use the dictating machine to record short voice memos.

- Use your phone as a dictating machine when on the move.
- Record a memo as a reminder or as a note for others.
- Add a voice memo to an alarm in the Calendar (p. 89).
- Record a call – useful for remembering numbers or addresses.


Warning!


The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential.

You may only use this feature if the other party to the conversation agrees.

New recording

Menu →  → Dictating machine
The list of recordings is opened.

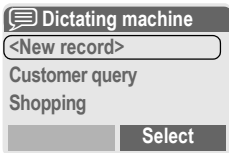

Select

Press.

Record

Start recording

Stop

Pause Recording pause.

End recording.

Recording is automatically saved with a time stamp.

Save

Name recording.

Save

Save recording.

Or

Play

Play back recording before storing it.

Play back

Menu →  → Dictating machine

The list of recordings is opened.



Select recording.

Play

Press. If **Handsfree** is set in the options menu, **Play loud** is now offered.

Dictating machine menu

Options Open menu.

Play	Play recording back.
Handsfree	Activate/deactivate playback in handsfree mode.
New record	Start new recording.
Delete	Delete selected recording.
Delete all	Delete all entries after confirmation.
Rename	Replace time/date stamp of recording with a name.

Time zones

Menu →  → Time zones

Set the time zone for where you currently are (p. 74).

Calend. setup

Menu →  → Calend. setup

Show Birthd.

Switch birthdays display on/off. Birthdays are highlighted in colour and shown in bold type. Birthdays may only be entered in the Address-book.

Begin of week

You can set which weekday is listed first on the left in the monthly and weekly overviews.

Menu → ☆
→ Select function.

Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.

Setting

Edit Display options: alarm call time and days.

Set time for the alarm call (hh:mm).



Navigate to the days.

Edit

Set days for alarm calls.

OK

Confirm settings.



On / Off Activate/deactivate the alarm.

Calculator



Enter number (up to 8 digits).



Select calculator function.



Repeat procedure with other numbers.



Result is displayed.

Calculator functions



Press right soft key repeatedly.



Toggle between "+" and "-".



Convert to percentage.



Save the number displayed.



Retrieve the number saved.



Exponent (max. two digits).

Special keys:



Set decimal point.



Add (Hold **down**).

Additional information



Alarm clock switched on.



Alarm clock switched off.



Screen display in standby mode: alarm clock activated.

Currency conv

Menu → ☆ → Currency conv

You may calculate the exchange rates between three different currencies.

Enter the currency

If no currency has yet been entered, press **OK** for first input.

Otherwise:

Options Open menu

New entry Select, then if:

• **Only Euro currencies:**

List Press and select 1st Euro currency:

Select Confirm.



Select next field.

List Press and select 2nd Euro currency.

Select Confirm.

OK Confirm.

• **Euro currencies and/or other currencies:**



Enter symbols for the currencies.

OK Confirm.



Enter exchange rate. Save with **Options** and **OK**.

Calculator functions



Press right soft key repeatedly.



Retrieve a saved number from calculator.

Convert

Any combination of calculations can be carried out between the currencies entered.



Select a combination of currencies from the list.

Start

Confirm.



Enter amount (up to 12 digits).



Result is displayed.

Repeat Repeat conversion with other data.

Calculator menu

Options Open menu.

Start Enter value to be calculated.

New entry Enter two new currencies.

Change Change the two currencies.

Delete Delete the two currencies.

Delete all Delete all currency pairs after confirmation.

Menu → ☆ → Stopwatch
→ Select function.

Stopwatch

Two intermediate times can be recorded and saved.



Reset

Reset to zero.



Start/stop.



Intermediate time.

Stopwatch menu

Options Open menu.

Save Record the time(s) measured and assign a name to them.

Reset Reset stopwatch.

Stopwatch list Display the stored times.
View Display the stored times and intermediate times.

Rename Rename stored entry.

Delete Delete entry.

Delete all Delete list.

Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

Set Set period of time.

Start Start counter.

Stop Interrupt counter.

Edit Change period of time.

Reset Reset counter to starting time.

Camera (Accessories)

Photos you have taken with the "QuickPic camera" (p. 128) may be viewed, saved and sent immediately through the phone. The camera has an integrated flashlight.

Pictures can be taken in two different formats:

- Low resolution:
QQVGA 160x120 pixels, memory size up to 6 KB to send as a picture message (p. 45).
- High resolution:
VGA 640x480 pixels, memory size of one shot up to 40 KB – e.g. for further editing on PC. To allow the picture to be viewed on the phone display, a QQVGA picture is created for every VGA picture.

Camera Press (in standby mode).

Or

Menu → ★ → Camera

First the number of pictures still available is shown (depends on resolution chosen).

OK Confirm.

The last picture taken is shown.



Scroll through photos.

Picture

A picture (especially in high resolution) requires a few seconds to be processed.

Take Press. You will hear an advisory tone when the exposure time has expired. The photo is shown on the display and saved automatically.

Flashlight

First switch on flashlight function:

Options Open menu.

Use flash Select.

Then take a photo using flash:

Load † Press **briefly**. The flash is charged (battery capacity approx. 30 % at least).

Take Press. The photo is taken with the flash. You will hear an advisory tone when the exposure time has expired. The photo is shown on the display and saved automatically.

Additional information

Photograph without flash when the Use flashfunction is switched on:

Load † Hold **down**. The charging process for the flashlight is omitted and a shot is taken immediately without flash.


Camera menu

Options	Open menu.
Use flash	Use flashlight (only when camera is plugged in)
Full screen	Switch to full screen mode.
Delete	Delete current picture after confirmation.
Delete all	Delete all pictures after confirmation.
Move	Move currently selected picture to another folder (if necessary, first choose resolution). See also <i>Filesystem</i> , p. 105.
Move all	See above.
Send via ...	Send picture by: MMS (only low resolution), e-mail.
Info	Display number of shots still available.
Setup	Set resolution: Low High & Low Set display: Always use fullscreen? Yes or No.

Additional information



Toggle between reduced/full screen.

Switch on display illumination with  or any number keys.

If the memory is full or the camera is not attached:

Delete Delete picture currently shown.

Voice command

Functions can be started by a voice command. Up to 20 voice recordings can be saved in the phone for voice dialling or voice commands (not on SIM card!).

Record

Menu → ☆ → **Voice command**

A list with the functions available is displayed.



Select a function.

Record

Press.

Yes

Confirm selected function.

Start

Start recording.

A short signal sounds. Now say the command corresponding to the function and **repeat** it when prompted.

Apply



Press **down** (in standby mode).

A short signal (beep) sounds and a prompt appears in the display. Now say the function.

Noisy environments may affect voice recognition.

Voice command menu



Highlight required entry.

Options

Open menu.

Playing

Play back the recording belonging to the entry.

New sample

Start new recording for an entry.

Delete

Delete entry.

Delete all

Delete all recordings.

Remote synchronisation

Menu → ☆ → Remote sync.

You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronise these with the data on your phone. The data can, for example, be saved on a company computer or the Internet (e.g., www.my-siemens.com/m55syncml).

Synchronise

Sync Computer is selected and synchronisation started.

Sync. setting

Setup Start synchronisation.

Sync. Profile

A number of profiles can be defined.



Select profile.

Options Open menu.

Change sett.

Select.

Highlight database areas to be synchronised:

Calendar

Contacts

Notes

Tasks

Server sett.

Different functions are offered depending on the situation:

Server sett.

Sync. mode	Fast: Only data that has changed will be synchronised in both directions. Slow: All data will be synchronised in both directions.
Provider	Select or set access profile (p. 76).
Home	E.g., http://www.my-siemens.com/m55syncml
Port:	Enter port number, E.g. 80.
Login name:	Enter user name (login name).
Password:	Enter password (shown as a series of asterisks).
Calendar path	E.g., events
Address path	E.g., contacts
Task path	E.g., tasks
Notes path	

HTTP authentication. Depends on the service provider, generally not required.

HTTP name: Enter user name.

HTTP password.: Enter password.

Save Save settings.

Activate another sync. profile

Sync. setup Select.

Sync. Profile Select.



Select profile.

Select Activate. The current profile is selected.

SIM services (optional)



Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card.

If you have such a SIM card, the SIM services will appear in the main menu under "Extras" or directly above the control key (on the left).



Symbol for SIM services.

Where there are several applications, these are displayed in a SIM services menu.



Menu → ☆ → SIM services

With the SIM services menu, your phone is ready to support future additions in your service provider's user package. For further information, please contact your service provider.

The left soft key and the number keys 2 to 9 (speed dialling numbers) can each be assigned an important phone number or a function. The phone number can then be dialled or the function started at the touch of a button.

Additional information

The left soft key may already have a function allocated by your service provider (e.g. access to "SIM card services"). It may not be possible to modify this soft key assignment.

The left soft key may also sometimes be replaced automatically by   to access a new message.


Key assignments available:

Internet (WAP)	p. 60
Phone number	p. 32
Alarm clock	p. 95
New SMS	p. 40
Illumination	p. 67
Hide ID	p. 71
Calls missed	p. 37
Calls received	p. 37
Inbox (messages)	p. 43
My menu	p. 85
Filesystem	p. 105

Left soft key

Assign a function/phone number to the left soft key for fast access.

Edit

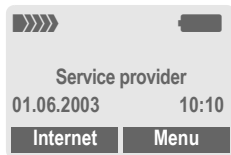

Internet

Press **briefly**.

Edit

Scroll to application in the list.

- Assign a new application (e.g. **New SMS**) to the soft key.
- Special case **Phone number**. Pick out a name from the Phonebook/Addressbook (e.g., "Carol") to assign to the soft key.

Select

Confirm setting.

Apply

The setting "Carol" is used here only as an example.

Carol

Hold **down**.

Speed dialling keys

Number keys 2 to 9 can be used as speed dialling numbers for fast access. For available key assignments see p. 103. Number key 1 is reserved for the mailbox number (p. 39).

Edit

In standby mode:



Press a number key (2–9). If the key is not yet assigned:

Set

Press.

Or

New SMS

Press **briefly** (if **New SMS** is assigned, for example).

Edit

Scroll to application in the list.

Special case **Phone number**. Pick out a name from the Phonebook/Addressbook for assignment to the key.

Special case **Bookmarks**. Scroll to a URL in the bookmark list for assignment to the key.

Select

Confirm setting.

Apply

Select a stored phone number or start a stored application (e. g. **New SMS**).

In standby mode:



Press **briefly**.

The assignment of the number key 3 is displayed above the right soft key e.g.:

New SMS

Hold **down**.

Or **simply**



Hold **down**.

To organise your files, you can use the file system like a PC file manager. The file system assigns special folders to different data types.

Menu → 

A list of the folders and files is displayed.

Navigate through this list using the control key:



Scroll up and down.



Go back from folder.

Open

Open folder or execute file with related application

or

with unknown file types:

Mark

Highlight file.

Index structure

The file system assigns special folders to different data types.

Colour scheme	Colour scheme (p. 66)	*.col
Data inbox	Inbox	*.*
Misc	Other files	*.*
Pictures	Pictures and animations	*.bmx (anim)
	Sub-folder:	*.bmp
	Camera	*.png
	own photos (p. 98)	*.gif *.jpg

SMS archive	Sub-folders: Inbox: Incoming mail Draft: Drafted messages Unsent: Unsent SMS Messages Sent: Sent SMS Messages	*.smo *.smi
Sounds	Ringtones, melodies and sounds	*.mid *.amr *.wav (Intel DVI)
Text modules	Text modules	*.tmo
Voice memo	Voice recordings	*.vmo
Java	Applications. Data. Download link.	*.jad *.jar *.db

Depending on the service provider the file system's structure, content and functionality may vary.

File system menu

Options Open menu

Open	Open folder.
Move	Place highlighted file or folder in temporary memory.
Copy	Copy highlighted file into temporary memory.
Paste	Transfer content of temporary memory into current folder.
Delete	Delete current entry.
Delete all	Delete all entries.
Mark	See highlighting mode (p. 111)
Mark all entr.	All entries are highlighted. See Highlighting mode (p. 111).
New folder	Create new folder.
Rename	Change highlighted entry.
Send via...	Send highlighted file via e-mail or MMS.
Sort	Set sort criteria (alphabetical, type, time).
Attributes	Display information on file or folder selected.
Drive info	Display the capacity used and available.

The phone provides you with several methods for sending texts and data via different transmission routes. Access to these functions is available in the option menu of the relevant application. These menu items can vary depending on the application.

Via SMS

Send... → Via SMS

Phonebook and Addressbook entries as well as appointments can be sent as an SMS to other suitable mobile phones.

With larger items, several SMS messages may be generated and sent as a concatenated message.

SMS as text

Send... → SMS as text

Business cards, Addressbook entries or appointments can be sent as text messages by SMS (this may result in several being generated).

Data objects

Files received via SMS are stored in the file system (p. 105).

Activate/deactivate tones



Hold **down**.

In standby mode

All audible signals (including the ringtone) can be switched off and on again. The function ends when the phone is switched off.

During a call

Switch off the ringtone for the **current** call/alarm (not when **Any to answer**, p. 71, is active). Accepting or rejecting the call ends the function.

- The display will continue to show a call.
- The silent alert function will remain active if it was previously switched on.
- The audio settings are not changed.

Completing phone numbers in the Phonebook/Addressbook

Digits may be replaced by a "?" when phone numbers are entered in the Phonebook/Addressbook:



Hold **down**.

These wildcards must be replaced with numbers before dialling (e.g., with the extension numbers in a phone system).

To make a call, select the phone number from the Phonebook/Addressbook.



Press.



Replace "?" with numbers.




Press, number is dialled.

Control codes (DTMF)

Send control code

You can, for example, enter control codes (numbers) for remote access to an automatic answering machine while another connection exists. These entries are transmitted directly as DTMF codes (control codes).

 **menu** Open call menu.

Send DTMF Select.

Use the Phonebook

Store phone numbers **and** control codes (DTMF codes) in the Phonebook/Addressbook in the same way as a normal entry.



Enter phone number.



Press until a "+" appears in the display (wait for the connection to be established).



Enter DTMF codes (numbers).



If necessary, wait again for three seconds at a time for the receiver to process the entries safely.



Enter a name.

Save Press.

You may also store just the DTMF codes (numbers) and then send them during the call.

Copy protection

Applications may be copy-protected. Applications protected in this way may only be run on devices for which they are intended. It is, however, always possible to create a backup copy of these applications on your PC using the "Siemens Data Suite" (p. 116).

CSD connection

(Circuit Switched Data)

Data is transferred via a data connection to a dial-in point pre-set by your network operator or service provider. This connection can be used for exchanging data, such as, for example, Internet access, or for downloading games and applications as well as for using WAP services.

As long as you are using this connection for downloading applications from the Internet or using services, you must pay connection fees according to your network operator's or service provider's table of charges.

EMS

(Enhanced Messaging Service)

In addition to (formatted) texts, you can also use this service to send

- pictures (bitmaps) up to 32 x 32 pixels (black and white),
- tones,
- animations (sequence of 4 pictures) 8 x 8 and 16 x 16 pixels (black and white).

The items referred to above can be sent together in an SMS or individually.

Pictures and sounds can also be sent as ringtones and screensavers with EMS.

This can result in messages that are longer than a single SMS. If this happens the individual SMS's are linked together into a single message.

GPRS connection



(General Packet Radio Service)

GPRS is a new method for transmitting data faster in the mobile network. Use GPRS and if the network has sufficient capacity, you can be connected to the Internet permanently.


Some service providers do not yet support this service.

HTTP

(Hypertext Transfer Protocol)

HTTP indicates the protocol which governs the transfer of data on the Internet. You can download applications and games (Games & More, p. 63) and multi-tone (polyphone) ringtones from the Internet via HTTP. Configure the HTTP connection using the HTTP profiles (p. 65).

International dialling codes

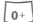International dialling codes are stored in your phone. In standby mode (the  is omitted in the Phonebook):



Hold **down** until a "+" is displayed. This replaces the first two digits of the international dialling code.



Press.

Select country. The international dialling code is displayed. Add the national phone number (in many countries the first digit is omitted) and press the Call key.

JAD ☆ and JAR ☆

Three types of file are possible when Java™ is used:

The JAD file (Java Descriptor)

These files contain information about the application (JAR file) plus their address for downloading. Activating a JAD file establishes the connection to the Internet and the executable application is loaded.

The JAR file (Java Archive)

This file contains the executable application. Activating a JAR file starts the application.

Combined files

These files occur if JAR files are loaded via JAD files. In this case the JAD file is added to the JAR file. The icon is the same as for JAR files.

The following icons appear for Java™:



JAD file

JAR file

Java™

Java™ offers you the opportunity to use numerous games and applications on your mobile phone. You can load these applications from the Internet and install them on your mobile phone. Once installed the application can be started. Please always observe the relevant operating instructions.


Siemens, however, does not guarantee that downloaded and installed Java applications will work perfectly on your mobile phone (p. 65).

Highlighting mode

With some applications (e.g. Addressbook) one or more entries in a list can be highlighted, to carry out a function jointly.

Options Open menu.

Mark text Activate highlighting mode.

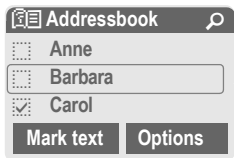

If an **unmarked** entry is selected, this can be highlighted:

Mark text The current entry is highlighted.

If a **highlighted** entry is selected, the highlighting can be deleted:

Unmark Unmark the current entry.

Highlighting functions in options menu:

Options Open menu.

Mark all Highlight all entries.

Unmark all Delete highlighting on all marked entries.

Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence.

E.g., write new SMS:

Menu Press.



for Messages



for New SMS

Message memory full

If the message icon flashes the SIM memory is full. **No** more SMS messages can be received. Delete or file text messages (p. 44).

Operating time

A full battery will deliver 60 to 250 hours of standby time or 100 to 300 minutes of talktime.

The operating time depends upon the use:

Action taken	Time (min)	Reduces standby time by
Calling	1	30–60 minutes
Light *	1	30 minutes
Network search	1	5–10 minutes
* Key input, games, Dynamic Light, organiser etc.		

Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Outside your home network

If you are outside your home network, your phone automatically dials another GSM network (p. 80).

Own numbers

Enter "own" phone numbers in Phonebook (e.g., fax) for information. These numbers can be changed, deleted and also sent as an SMS message.

Phone number memo

You can use the keypad to enter a phone number during a conversation. The person to whom you are speaking can hear these entries. When the connection has ended you can save or dial the phone number.

Phone number/URL in SMS

Phone numbers **highlighted** in the text can be dialed or saved in the Phonebook/Addressbook. It is also possible to call URLs (Internet addresses) directly and start an HTTP download. The HTTP profile (p. 65) or WAP profile (p. 62) must be set and activated.



Press to dial phone number/download.

Service numbers

There might be phone numbers saved in your Phonebook (<Special books>, <Service numb.>, p. 29) that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

Set divert

Divert

Diverts, for example, to mailbox if the **Busy** divert is set (p. 71) and the **Call waiting** (p. 71) function is switched on.

SIM card problems

You have inserted your SIM card. Nonetheless, the following message appears:

Please insert your SIM card

Please check whether the card has been inserted **correctly** or the contacts are dirty. If necessary, clean with a dry cloth. If the card is damaged, please contact your service provider.

Also refer to "Questions & Answers", p. 118.

SMS push

This function allows you to dial an Internet address (URL) directly from a received SMS. The highlighted URL is displayed after the highlighting. Pressing the Call key automatically starts the WAP browser and dials the highlighted Internet address.

SMS status report

If the message cannot be transmitted to the service centre you are offered the chance to repeat the transmission. If this also fails, contact your service provider.

The **Message sent!** message only indicates transmission to the service centre. This will then attempt to relay the message within a certain period.

Refer also to "Validity period", p. 55.

Software version

Display the software version for your phone in standby mode:

*#06#, then press **Info**.

Two phone numbers



Special settings may be made for each phone number (e.g., melody, call divert etc.) To do this, first switch to the required phone number.

Change phone number/connection in standby mode:



Press.



Press.

WAP

(Wireless Application Protocol)

WAP is a technical standard which forms the basis of the connection between mobile radio networks and the Internet. WAP allows you to surf the Internet using your mobile phone, download games and applications, and to use such WAP services as news, stock exchange prices or information.

Special characters for using WAP



Press repeatedly for:

.,?!' " 0 - () @ / : _

WAP operation

Start with...

Set which functions are to be shown in the display after the Internet call.



Open browser menu.

More ...

Select.

Setup

Select.

Start with...

Select, then select from the list:

Start menu

Browser menu

Home

Resume

Bookmarks

Enter Internet address (URL) directly

A WAP page must be shown in the display (online or offline):



Open browser menu.

Go to URL

Select.




Enter URL and confirm. The connection is established.

Change homepage

The homepage address is entered in the WAP profiles (p. 62).

A WAP page must be shown in the display (online or offline):

 Open browser menu.

More ... Press.

Profiles Select.


Select the profile, for example:

e-Commerce

Highlight.

Edit The entry card is displayed. Select

WAP param., then Home.

 Enter new address. Go to the end of the entry card.


Save Press.

Bookmarks (URL)



The list of bookmarks can hold up to 10 entries or folders. Each folder may in turn contain bookmarks or further folders.

Save:

 Open browser menu.

Bookmarks Select.

Online (save):

Add bookmark

The current WAP address is imported as a bookmark.

Online (save):

Select.

(Empty)

Menu

Open menu.



Select New entry and enter and confirm name/title and URL.

Save

Press.

Apply:



Open browser menu.

Bookmarks Select.



Select bookmark/folder.

Go

The selected bookmark is dialled.

Without SIM card

If you switch on the phone **without** a SIM card you can still use some phone functions.

Menu

Press soft key. The functions are displayed.

SOS

Emergency, SOS.

Siemens Data Suite is a software package with which you can increase the functionality of your mobile together with a Windows® PC. Phone and PC are connected using the data cable (accessories, p. 128). In order to ensure fault-free data transfer the phone must be in standby mode (e.g., no active application and no incoming call).

Siemens Data Suite contains the modules described briefly below. You can purchase the software over the Internet: www.my-siemens.com/m55

Data Exchange Software

The Data Exchange software works with Windows® Explorer like an extra drive and mirrors the contents of the file system (p. 105) on your phone.



Mobile

You have these options:

- Access the data in the applications on the phone and synchronise these with the PC by easy drag and drop.
- Convert voice phone messages into the well-known WAV format.

Warning!

When you access the file system, please ensure that no files are deleted that are essential to running applications on the mobile phone, e.g. the "Licenses" folder.

Synctool (XTNDConnect® PC)

With this module you can synchronise the Organiser databases on your phone with your PC. The software synchronises your phone automatically with Outlook® or Lotus Notes™.

A detailed list of the PIM versions supported can be found in the online help for the **Siemens Data Suite**.

Bitmap Editor

You can use the Bitmap Editor to:

- Create a graphic to display instead of the network operator's logo (p. 67).
- Create a screensaver (p. 67) on the PC and transfer this to your phone.

Contacts Management

With Contacts Management you can organise the contacts from your phone's Addressbook and Phonebook and even synchronise them with other phones (including your Siemens DECT handset) or Outlook® on your PC.

You can create new entries on your PC, delete or change entries, and copy these onto your phone. If you don't have Outlook® on your PC, it is possible to import or export a text file.

Messenger

With Messenger you have the convenient option of organising your SMS activities from your PC:

- Save your text messages on your PC in order free up memory on your phone.
- You can write messages with your PC and send them by phone.
- Pictures, ringtones or animations that meet the EMS standard can be included in SMS messages (p. 110).

Ringtone Editor



You can create your own ringtones with the Ringtone Editor (MIDI files).

GPRS Modem Assistant

GPRS Modem Assistant allows you to establish GPRS connections from your laptop. This means you can access the Internet while travelling using your laptop and phone.

If you have any questions about using your phone, visit us at www.my-siemens.com/customer-care anytime. As further help we have listed below some frequently asked questions and answers.

Problem	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least two seconds.
	Flat battery.	Charge battery. Check charging indicator in display.
	Battery contacts dirty.	Clean contacts.
	See also below under "Charging error"	
Too little stand-by time.	Frequent use of organiser and games.	Restrict use if necessary.
	Speed search activated.	Deactivate speed search (p. 81).
	Display illumination on.	Switch off display illumination (p. 67).
	Unintentional keystrokes (illumination!).	Activate key lock (p. 71).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery.
	Temp. out of range +5 °C to +40 °C.	Make sure the ambient temperature is right, wait for a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and device interface, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger.	Only use original Siemens accessories.
	Battery faulty.	Replace battery.
SIM error.	SIM card not inserted correctly.	Check that the SIM card is inserted correctly (p. 9).
	Dirty SIM card contacts.	Clean SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 3V SIM cards only.
	SIM card damaged (e.g. broken).	Carry out a visual check. Change SIM card at service provider.

Problem	Possible causes	Possible solution
No network connection.	Weak signal.	Move higher, to a window or an open space.
	Outside GSM range.	Check service provider's coverage area.
	Invalid SIM card.	Complain to the service provider.
	New network not authorised.	Try manual selection or select a different network (p. 80).
	Network barred.	Check network barrings (p. 79).
	Network overloaded.	Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 80). Switching phone off and on again can speed this up.
Calls not possible.	Second line set.	Set first line  (p. 80).
	New SIM card inserted.	Check for new barrings.
	Charge limit reached.	Reset limit with PIN2 (p. 38).
	Credit used up.	Load credit.
Certain uses of phone not possible.	Call restrictions are in place.	Barrings can be set by service provider. Check barrings (p. 79).
Impossible to make entries in Phonebook.	Phonebook is full.	Delete entries in Phonebook or transfer to Addressbook (p. 29).
Voice mail not functioning.	Call divert to mailbox not set.	Set call divert to mailbox (p. 71).
SMS (text message)  flashing.	SMS memory is full.	To free up capacity, delete (p. 44) or file (p. 44) text messages (SMS).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Capacity problems with, for example, Games & More, ringtones, pictures, SMS archive.	Handset memory full.	Delete files in the relevant areas.
No WAP access, downloading not possible.	Profile not activated, profile settings wrong/incomplete.	Activate (p. 62), set (p. 62) WAP profile or set HTTP profile (p. 65). If necessary ask your service provider.

Problem	Possible causes	Possible solution
Text message cannot be sent.	Service provider does not support this service.	Contact your service provider.
	Phone number for service centre not set or incorrect.	Set service centre (p. 55).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre too busy.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures and sounds not displayed at destination phone.	Destination phone does not support the EMS standard.	
No Internet access possible.	Incorrect WAP profile set, or wrong or incomplete settings.	Check settings or ask contact service provider.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 121).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or deleted by the service provider via the SIM card.	Check with your service provider.
No fax possible.	Wrong settings in the PC.	Check settings (p. 77).
	No authorisation for this service.	Contact your service provider.
Charge meter does not work.	Charge pulse is not transmitted.	Contact your service provider.
Damage		
Severe shock.	Remove battery and SIM and re-insert them. Do not dismantle the phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Stand mobile upright in an air current. Do not dismantle the phone!	

Reset all settings to factory default (see also p. 73): *#9999# 

Simple, straightforward support for technical and operational queries is available from our online support service on the Internet:

www.my-siemens.com/customer-care

You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

You will also find the most frequently asked questions and answers in the chapter entitled "Questions & Answers" in this user guide, p. 118.

Alternatively please contact one of our customer care centres.

When calling, please have ready your receipt, the phone identity number (IMEI, to display, press *# 0 6 #), the software version (to display, press *# 0 6 #, then **Info**) and, if applicable, your Siemens Service customer number.

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary or you have a claim under warranty or guarantee you will receive rapid, reliable assistance from our Service Centres:

Abu Dhabi	0 26 42 38 00	France	01 56 38 42 00
Argentina	0 80 08 88 98 78	Germany *	0 18 05 33 32 26
Australia	13 00 66 53 66	Greece	0 80 11 11 11 16
Austria	05 17 07 50 04	Hong Kong	28 61 11 18
Bahrain	40 42 34	Hungary	06 14 71 24 44
Bangladesh	0 17 52 74 47	Iceland	5 11 30 00
Belgium	0 78 15 22 21	India	01 13 73 85 89 - 98
Bolivia	0 21 21 41 14	Indonesia	0 21 46 82 60 81
Bosnia Herzegovina	0 33 27 66 49	Ireland	18 50 77 72 77
Brazil	0 80 07 07 12 48	Italy	02 66 76 44 00
Brunei	02 43 08 01	Ivory Coast	21 35 02 35
Bulgaria	02 73 94 88	Jordan	0 64 39 86 42
Cambodia	12 80 05 00	Kenya	2 72 37 17
Canada	1 88 87 77 02 11	Kuwait	2 45 41 78
China	0 21 50 31 81 49	Latvia	7 50 11 18
Croatia	0 16 10 53 81	Lebanon	01 44 30 43
Czech Republic	02 33 03 27 27	Libya	02 13 50 28 82
Denmark	35 25 86 00	Lithuania	8 52 74 20 10
Dubai	0 43 96 64 33	Luxembourg	43 84 33 99
Egypt	0 23 33 41 11	Macedonia	02 13 14 84
Estonia	06 30 47 97	Malaysia	03 21 63 11 18
Finland	09 22 94 37 00	Malta	00 35 32 14 94 06 32
		Mauritius	2 11 62 13

* 0.12 euros/minute

Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0 90 03 33 31 00
New Zealand	08 00 27 43 63
Nigeria	0 14 50 05 00
Norway	22 70 84 00
Oman	79 10 12
Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04
Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 04 60 00
Russia	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 22 84 85
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Sweden	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand	0 22 68 11 18
Tunisia	71 86 19 02
Turkey	0 21 65 79 71 00
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 31 95 78
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Vietnam	45 63 22 44
Zimbabwe	04 36 94 24

Your phone has been designed and crafted with great care and attention and should also be treated with care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply and remove the battery!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original.

CE 0168

Technical data

GSM class:	4 (2 watt)
Frequency range:	880 - 960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710 - 1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850 - 1,990 MHz
Weight:	83 g
Size:	101x46x21 mm (71 ccm)
Li-Ion battery:	700 mAh
Operating temperature:	-10 °C... 55 °C
SIM card:	3.0 V
SAR:	0.64 W/kg *

* This applies to the phone together with the front and back covers and keyboard supplied with the phone.

Phone ID

You will need the following details if you lose your phone or SIM card. Please enter here:

the number of the SIM card (on the card):

.....

the 15-digit serial number of the phone
(under the battery):

.....

the Customer Service number of the
service provider:

.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS SET BY THE EU (1999/519/EC) FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before a radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only then the CE mark may be affixed**. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg***. This corresponds with the requirements of the International Commission for Non-Ionizing Radiation Protection ICNIRP and was adopted into the European Norm for Mobile Radio Equipment EN 50360. The SAR of mobile phones is determined in accordance

with the European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for compliance against the norm is

0.64W/kg****.

The SAR information can also be found on the Siemens web site at **www.my-siemens.com**

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

www.who.int/peh-emf, www.mmfaai.org, www.my-siemens.com

** The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

*** averaged over 10g body tissue.

**** SAR values may vary depending on national requirements and frequency bands. SAR information for different regions can be found at www.my-siemens.com

INFORMATION ON RF EXPOSURE / SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg**. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest power level. The actual SAR level of the phone during operation can be well be-

low the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0.64W/kg***.

SAR information can also be found at www.my-siemens.com

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information: www.who.int/peh-emf, www.mmfaai.org, www.my-siemens.com

** averaged over 10g of tissue.

*** SAR values may vary depending on national requirements and frequency bands. information for different regions can be found at www.my-siemens.com

Basics

Li-Ion Battery 700mAh EBA-510

Spare battery.

Travel Charger

ETC-500 (Euro)

ETC-510 (UK)

Travel charger with an extended input voltage range of 100-240 V.

Desk Top Charger EDC-510

The desktop charger makes it easy to charge the phone plus an additional battery.

Headset PTT HHS-510

Headset with PTT key to activate voice recognition and to accept and end calls.

Carry Set FCS-520

Contains a belt clip and a retaining clip for attaching the phone discreetly to clothing or inside bags.

Carrying Cases

A range of carry cases is available at specialist shops or you can visit the Siemens Mobile Store online:

Data

Data Cable DCA-500

For connecting the phone to the serial RS232 port of the PC.

Data Cable USB DCA-510

For connecting the phone to the USB port of the PC. With load function.

SyncStation DSC-500

Table cradle for your mobile phone. Allows data exchange and simultaneously charges the phone via the power supply unit. Features a desktop charger, a data cable (USB) and a Y adapter.

Innovations

QuickPic Camera IQP-530

Camera that plugs into the mobile phone. Allows you to take photos and send them via the mobile phone to other mobile phones using MMS or via email to a PC. Integrated flashlight that can be switched on or off as required.

SIEMENS

Original
Accessories

Original Siemens Accessories

[www.siemens.com/
mobilestore](http://www.siemens.com/mobilestore)

Car Solutions

Car Charger ECC-500

Charger for the cigarette lighter socket in the car.

Car Kit Portable HKP-500

Handsfree kit with integrated loudspeaker and microphone and auto answer feature. Simply plug into the cigarette lighter socket. Ideal for easy transfer between vehicles.

Mobile Holder HMM-540

Cradle without antenna port.

Mobile Holder Antenna HMM-550

Cradle for connecting an outside antenna. Ideal for use with a Headset PTT or Car Kit Portable.

Basic Car Pack HKB-500

Allows in-car charging of your mobile phone as well as handsfree talking. Contains a Car Charger, a Headset PTT and a Y adapter.

Car Kit Comfort HKC-540

Handsfree kit with first-class digital call quality and supreme ease of use. Includes all components needed for installation. The antenna set is available separately from specialist shops.

Car Kit Professional Voice

HKV-560 (German)

HKV-570 (English)

HKV-580 (French)

Handsfree kit with voice recognition, capacity for more than 150 names. Electronics box with connection for fax and e-mail transmission via your notebook. Includes all components needed for installation; the antenna set is available separately from specialist shops.

Car Kit Upgrade HKO-505

Mobile holder for upgrading your handsfree Car Kit Comfort and Car Kit Voice.

Car Kit Upgrade HKO-515

Mobile holder for upgrading your handsfree Car Kit Voice II.

Optional Car Kit accessories

Car Handset HKO-550

VDA Adapter Cable HKO-560

Car Data Adapter HKO-530

Push To Talk Key HKO-520

Products can be obtained in specialist shops or you can visit the Siemens Mobile Store online:

The Siemens logo consists of the word "SIEMENS" in a bold, sans-serif font, enclosed within a rectangular border.The "Original Accessories" logo features the word "Original" in a larger font above the word "Accessories" in a smaller font, both enclosed within a rectangular border.

Original Siemens Accessories

[www.siemens.com/
mobilestore](http://www.siemens.com/mobilestore)

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:


- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Siemens.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
- Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: micro-wave, sauna etc.)
- Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.

- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

- A**
- A/c limit 38
 - Accessories 128
 - Addressbook
 - Dial entry 34
 - New entry 32
 - Read entry 33
 - Agenda 87
 - Alarm
 - Alarm clock 95
 - Appointment 89
 - Switch off 90
 - Type 90
 - Alarm clock 95
 - All calls (call time/charge) 38
 - All calls (diversion) 72
 - All incoming (Barrings) 79
 - Animation, at switch off 67
 - Answering service (external) 39
 - Any key answer (answer call) 71
 - Application, download 63
 - Appointments 88
 - Archive (SMS) 44
 - Audio 68
 - Authentication 77
 - Auto display
 - CB 59
 - Clock 75
 - Duration/charges 38
 - Auto key lock 71
 - Auto time zone 75
 - Auto. redial 19
- B**
- Babysitter 23
 - Background 66
 - Band selection 81
 - Battery
 - Charge 10
 - Insert 9
 - Operating time 112
 - quality declaration 130
 - Battery operating time 112
 - Big letters (message on display) 67
 - Birthday
 - Addressbook 33
 - Calendar 94
 - Bitmap Editor 116
 - Bookmarks (WAP) 60
 - Browser, WAP 61
 - Business card 28
- C**
- Calculator 95
 - Calculator functions 95
 - Calendar 86
 - Call
 - Accept/finish 19
 - Barring 79
 - Charges 38
 - Conference 22
 - Divert 71
 - End 18
 - Hold 20
 - Menu 22
 - Reject 20
 - Call back 19
 - Call diversion 71
 - Call forwarding 22
 - Call waiting 21
 - Calling images (Addressbook) 32
 - Calls dialled (call list) 37
 - Calls received (call list) 37
 - Camera 98
 - Car Kit
 - Accessories 129
 - Setting 82
 - Car kit accessories 129
 - Care of phone 123
 - CB services 59
 - Cell Broadcast (CB) 59
 - Charge rate 38
 - Charges 38
 - Charging the battery 10

- Clock 74
- Codes 15
- Colour schemes 66
- Command (voice command) 100
- Conference 22
- Connection profile 76
- Contacts Management 117
- Contrast (message on display) 68
- Control code (DTMF) 109
- Copy protection 111
- Countdown 97
- CSD 109, 110
 - Data 76
- Currency converter 96
- Customer service, Siemens 121
- D**
- Data exchange (settings) 75
- Data Exchange Software 116
- Data objects 107
- Date format 75
- Dialling code 18
- Dialling with number keys 18
- Dial-up access (connection) 76
- Dictating machine 93
- Display
 - Big letters 67
 - Colour schemes 66
 - Contrast 68
 - Illumination 67
 - Symbols 7
- Display (settings) 66
- Divert 71
- DTMF codes (control codes) 109
- Duration/charges 38
- Dynamic Light 70
- E**
- E-mail
 - Lists 53
 - Profile 57
 - Receiving 52
 - Writing 51
- Emergency number 12
- EMS 110
- Entry no. (phonebook) 29
- Extras 95, 123
- F**
- Factory settings 73
- Fast access key 103
- Fast network search 81
- Fax/data mode 77
- File system 105
- Filter
 - Addressbook entries 34
 - Incoming calls 69
- Flashlight 98
- Folder (file system) 106
- Forwarding (call) 22
- G**
- Games & More 63
- Games (download) 63
- Getting started 9
- GPRS
 - Modem Assistant 117
 - Switch on/off 75
- Greeting 67
- Group 36
 - SMS to group 42
- Guarantee certificate 131
- H**
- Handset volume 18
- Handsfree talking 20
- Headset
 - Accessories 128
 - Setting 82
- Hide ID 71
- Highlighting mode 111
- Hold call 20
- Home network 80
- Hotline, Siemens 121
- HTTP 110
- HTTP profile 65

- I**
- Identity number (IMEI)..... 74
 - Illumination (display)..... 67
 - IMEI number..... 74
 - Inbox
 - E-mail..... 53
 - MMS..... 49
 - SMS..... 43
 - Index (file system)..... 105
 - Information services (CB)..... 59
 - Input language (T9)..... 25
 - International dialling code..... 110
 - Internet..... 60
- J**
- JAD/JAR file..... 111
 - Java..... 111
- K**
- Key tones..... 71
 - Keypad (settings)..... 71
- L**
- Last 10 only..... 78
 - Limit (call time/charge)..... 38
 - Logo, provider logo..... 66
 - Loss of phone, SIM card..... 124
- M**
- Mailbox..... 39
 - Maintenance of phone..... 123
 - Melodies..... 69
 - Menu
 - Controls..... 13
 - My menu..... 85
 - Speed dialling..... 112
 - Message
 - CB..... 59
 - E-mail..... 51
 - MMS..... 45
 - SMS..... 40, 42
 - Message memory..... 112
 - Messenger..... 117
 - Microphone on/off..... 22
 - Minute beep..... 69
 - Missed appointments..... 92
 - Missed calls (call list)..... 37
- MMS**
- Lists..... 49
 - Profile..... 56
 - Receiving..... 48
 - Writing..... 45
- Muting (microphone)..... 22
- My menu..... 85
- My phone..... 17
- N**
- Network
- Barring..... 79
 - Line..... 80
 - Setup..... 80
- New folder (file system)..... 106
- Notes..... 91
- Notes A-Z..... 108
- Number busy..... 19
- O**
- Only ..... 78
 - Only this SIM..... 78
 - Organiser..... 86
 - Own (phone) numbers..... 112
- P**
- PC Synchronisation..... 116
 - Phone (settings)..... 71
 - Phone barring..... 78
 - Phone code..... 15
 - Phone data..... 124
 - Phone identity number. (IMEI)..... 74
 - Phone number transmission on/off..... 71
 - Phonebook
 - Call..... 30
 - Location..... 31
 - New entry..... 29
 - Picture (Addressbook)..... 32
 - Pictures & sounds (SMS)..... 41

- PIN
 - Edit..... 15
 - Enter 11
 - Error 120
 - Usage 15
- PIN 2 15
- POP3 57
- Preferred directory 28
- Preventing accidental activation 16
- Product data 124
- Profiles
 - E-mail 57
 - HTTP 65
 - MMS 56
 - Phone 83
 - SMS 55
 - WAP 62
- Prompt 19
- Provider logo 66
- PUK, PUK2 15
- Q**
- Questions & Answers 118
- R**
- Records 37
- Redial 18
- Reminder 19
- Remote synchronisation 101
- Ringtones (tunes/melodies) 69
- S**
- Safety precautions 3
- Screensaver 67
- Second phone number 80
- Security 15, 78
- Service centre (SMS) 55
- Service numbers, Siemens 121
- Service tones 70
- Set ringtone 68
- Set time/date 74
- Setup
 - Accessories 82
 - Audio 68
 - Clock 74
 - Data connection 75
 - Display 66
 - Divert 71
 - Keys 71
 - Network 80
 - Phone 71
 - Security 78
- Short message (SMS) 40
- Shown in the display 7
- Siemens City Portal 17
- Siemens Data Suite 116
- Signal strength 12
- Silent alert 68
- SIM card
 - Clear barring 16
 - Insert 9
 - Problems 113, 118
- SIM services (optional) 102
- SMS
 - Archive 44
 - Lists 43
 - Pictures & Sounds 41
 - Profile 55
 - Read 42
 - T9 input 25
 - To group 42
 - Writing 40
- SMTP 58
- Software version 114
- SOS 12
- Special characters 24
- Speech time (battery) 112
- Speed dialling keys 104
- Standard values 73

- Standby mode 12
- Standby time 112
- Start animation 67
- Start menu (WAP) 60
- Stopwatch 97
- Surf & Fun 60
- Switch off phone
 - Automatic 74
 - Manually 11
- Switch on 11
- Switch on animation 67
- Symbols 7
- Synchronisation with PC 116
- Synctool 116
- T**
- T9
 - Text entry 25
 - Word suggestions 26
- Tasks 90
- Technical data 124
- Text entry with T9 25
- Text entry without T9 24
- Text module 27
- Time zones 11, 74
- U**
- Unanswered 72
- Upper case, lower case 24
- User groups 81
- V**
- Validity period
 - MMS 56
 - SMS 55
- Voice command 100
- Voice dialling 35
- Voice mail (mailbox) 39
- Volume
 - Handset volume 18
 - Profiles 83
 - Ringtone 68
- W**
- WAP
 - Browser 61
 - Operating tips 114
 - Parameters 62
- Warning tones 70
- X**
- XTNDConnect® PC 116