


Service Manual

and Technical Guide

PROPRIETARY TELEPHONE FOR
ELECTRONIC MODULAR SWITCHING SYSTEM

KX-T7020E

(for United Kingdom)

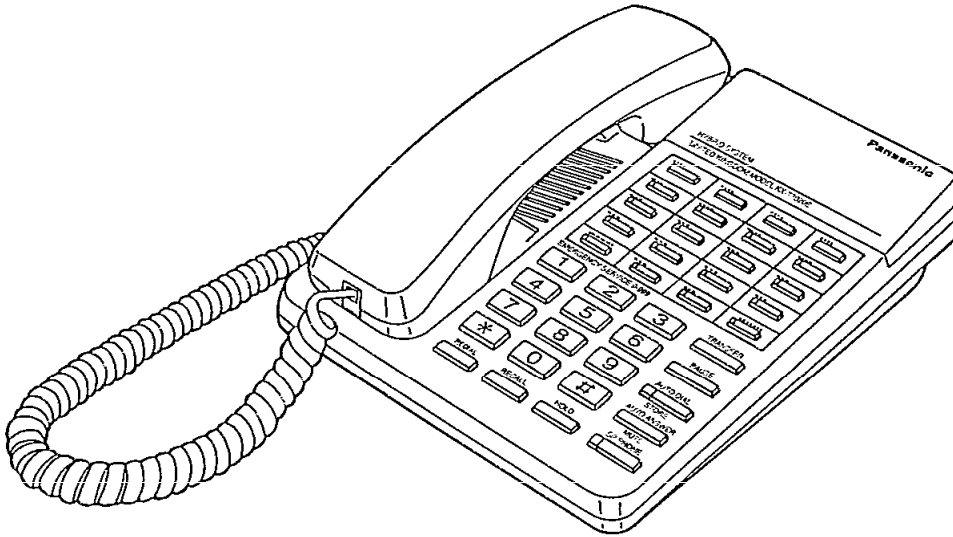

■ SPECIFICATIONS

Station Loop Limit:	40 ohms
Cabling Method:	2 pair wire
Jacks:	EMSS, Handset
Dimensions:	172 (W)×90 (H)×240 (D) mm with handset (6 ²⁵ / ₃₂ "×3 ¹⁷ / ₃₂ "×9 ⁷ / ₁₆ ")
Weight:	850 g (1 lb 14 oz)

Design and specifications are subject to change without notice.


Panasonic

When you mention the serial number, write down the 11 digits. The serial number may be found on the label affixed to the bottom of the unit.

TABLE OF CONTENTS


<p>LOCATION OF CONTROLS2, 3</p> <p>FOR SERVICE TECHNICIANS 3</p> <p>DISASSEMBLY INSTRUCTIONS 5</p> <p>IC DATA6, 7</p> <p>TROUBLESHOOTING GUIDE 8</p> <p>ADJUSTMENTS 8</p> <p>BLOCK DIAGRAM 9</p> <p>CIRCUIT OPERATIONS10-18</p>	<p>SCHEMATIC DIAGRAM19, 20</p> <p>PRINTED CIRCUIT BOARD21, 22</p> <p>EXTENSION CORD CONNECTING METHOD ...23</p> <p>ACCESSORIES AND PACKING MATERIALS ...23</p> <p>CABINET AND ELECTRICAL</p> <p style="padding-left: 20px;">PARTS LOCATION24</p> <p>HANDSET PARTS LOCATION25</p> <p>REPLACEMENT PARTS LIST 26-28</p>
---	--

LOCATION OF CONTROLS

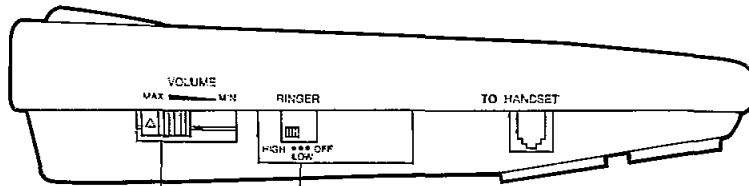

RINGER VOLUME Selector:
 HIGH: The ringing sound will be loud.
 LOW: The ringing sound will be soft.
 OFF: The telephone will not ring.

VOLUME Control:
 MAX: The volume will be loud.
 MIN: The volume will be soft.

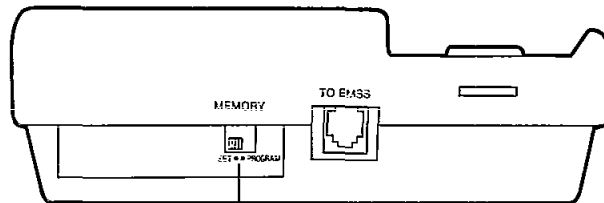

MEMORY Switch:
 Set to "SET".
 For station programming, set to "PROGRAM".

Fig. 1

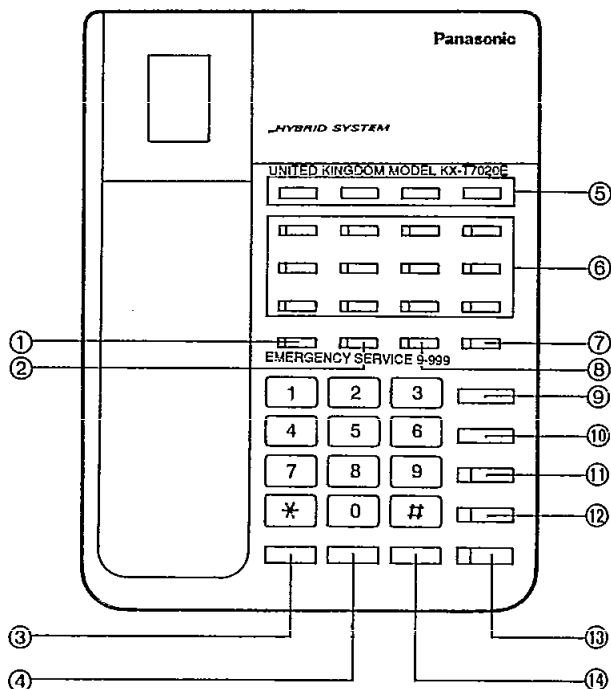


Fig. 2

KX-T7020E is compatible with the Panasonic Electronic Modular Switching Systems and can perform most functions within each system.

- | | | |
|---|--|--|
| <p>① INTERCOM Button and Indicator:
Used to make or receive an intercom call.</p> <p>② CONFERENCE Button and Indicator:
Used to perform a three-party conference.</p> <p>③ REDIAL Button:
Used to redial the last dialed number.</p> <p>④ RECALL Button:
Used to send a recall signal to a Central Office.</p> <p>⑤ Programmable Feature Buttons:
Can be used as One-Touch Dialling buttons or system feature buttons.</p> <p>⑥ Flexible CO Buttons and Indicators:
Can be used as CO, Direct Station Selection, or One-Touch Dialling buttons.</p> | <p>⑦ Flexible MESSAGE Button and Indicator:
Can be used as Message Waiting, Direct Station Selection, or One-Touch Dialling buttons.</p> <p>⑧ FWD/DND Button and Indicator:
Used to set or cancel the Call Forwarding or Do Not Disturb feature.</p> <p>⑨ TRANSFER Button:
Used to transfer an outside or an intercom call to another extension.</p> <p>⑩ PAUSE Button:
Used to insert a pause in a speed dial number.</p> <p>⑪ AUTO DIAL/STORE Button and Indicator:
Used before dialling a speed dial number/In "PROGRAM" mode, used to store a station programming procedure in the memory at the end of operation.</p> | <p>⑫ AUTO ANSWER/MUTE Button and Indicator:
Used to answer an intercom call automatically/Used to hear the other party without them hearing you in handsfree mode.</p> <p>⑬ SP-PHONE Button and Indicator:
Used to make or receive a phone call without using the handset.</p> <p>⑭ HOLD Button:
Used to place a call on hold.</p> |
|---|--|--|

FOR SERVICE TECHNICIANS

Note the following items when exchanging the LEDs (Ref. No. D617~635) of Dial P.C.Board.

1. Do not use LED again which is removed from P.C.Board.
2. Use soldering iron (less than 15 W) for exchanging LED.
3. Do not heat LED more than 2 seconds.
4. Do not move LED after solder.

MEMO

DISASSEMBLY INSTRUCTIONS

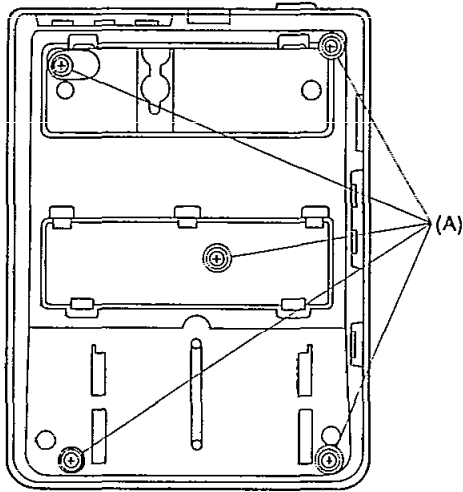


Fig. 4

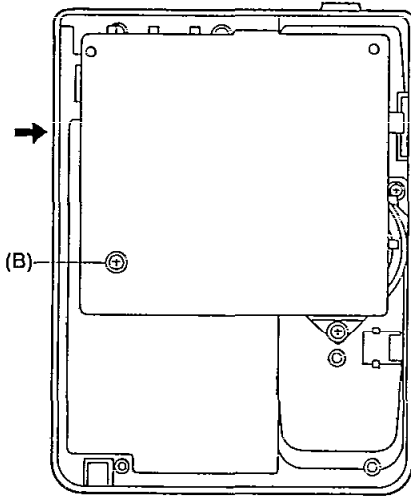


Fig. 5

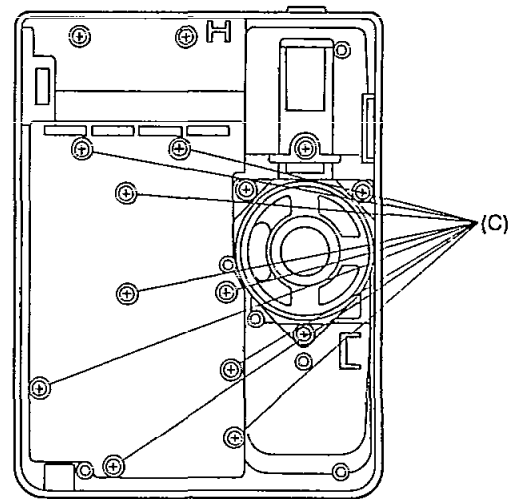


Fig. 6

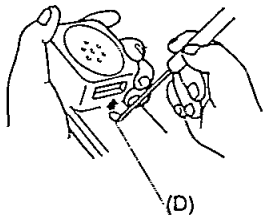


Fig. 7

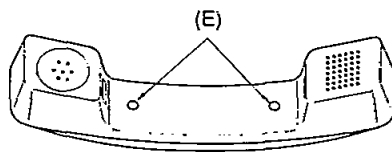


Fig. 8

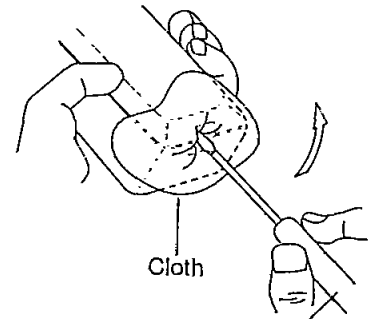


Fig. 9

Ref. No.	Procedure	Shown in Fig.—.	To remove—.	Remove—.
1	1	4	Lower Cabinet	Screw (3×14) (A)×5
2	1-3	5	Main Board	Screw (3×10) (B)×1
3				Remove the Main Board. (Read Note 1)
4	1-5	6	Operation Board	Screw (2.3×8) (C)×9
5				Remove the Operation Board.
6	6-8	7	Handset Cabinet	Rubbers (D)×2
7		8		Screws (3×10) (E)×2
8		9		Remove the cabinet.


Note 1:

When removing the Main P.C. Board, remove from direction of the arrow.

Pin No.	Mark	Function	High	Low
24	R50	Key Scan Output	Normal	Active
25	R51	Key Scan Output	Normal	Active
26	R52	Key Scan Output	Normal	Active
27	R53	Key Scan Output	Normal	Active
28	R60	DTMF Control	Normal	Active
29	R61	DTMF Control	Normal	Active
30	R62	DTMF Control	Normal	Active
31	R63	Not Used	-----	-----
32	Vcc	(+) Power Source Terminal	-----	-----
33	SCK/R40	Interrupt Output	Disable	Enable
34	SI/R41	Key Input	Disable	Enable
35	S0/R42	Key Input	Disable	Enable
36	R43	Key Input	Disable	Enable
37	R70	DTMF Control	Normal	Active
38	R71	DTMF Control	Normal	Active
39	R72	DTMF Control	Normal	Active
40	R73	DTMF Control	Normal	Active
41	R80	Not Used	-----	-----
42	R81	SP-Phone Chip Select Control Output	OFF	ON
43	R82	Not Used	-----	-----
44	R83	SP-Phone MIC Mute Control Output	ON	OFF
45	R90	Key Input	Disable	Enable
46	R91	Key Input	Disable	Enable
47	R92	Power Fail Detect Input	Power Down	Normal
48	R93	Hook Data Input	Off-Hook	On-Hook
49	RESET	System Reset Input	-----	-----
50	TEST	-----	-----	-----
51	OSC1	System Clock	-----	-----
52	OSC2	System Clock	-----	-----
53	GND	Ground	-----	-----
54	D0	Not Used	-----	-----
55	D1	Key Input	Disable	Enable
56	D2	LED Reset Signal Output	Active	Normal
57	D3	Data Input Control	Normal	Active
58	D4	Data Input	Disable	Enable
59	D5	Data Output	Active	Normal
60	D6	Automatic Redial Signal Input	Disable	Enable
61	D7	SP-Phone Path Control	ON	OFF
62	D8	OHCA Path Control	ON	OFF
63	D9	LED Control Output	ON	OFF
64	D10	LED Control Output	ON	OFF





TROUBLE SHOOTING GUIDE

1) NO OPERATION

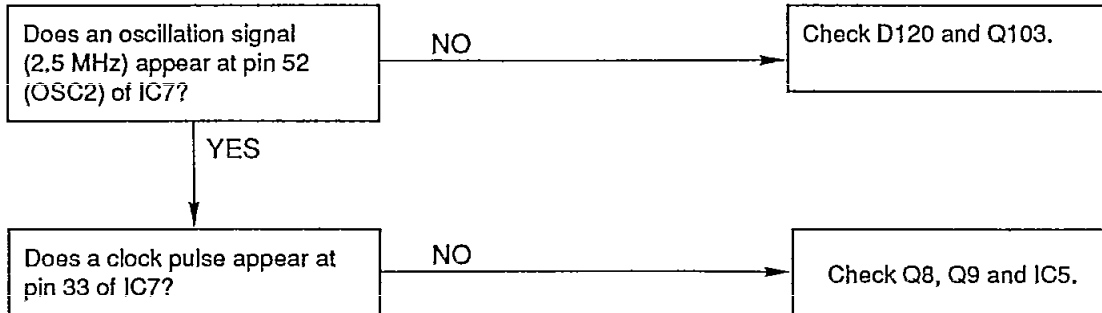

ADJUSTMENT

Perform the following adjustment after replacing IC1 and VR2-VR4.
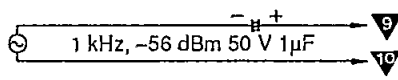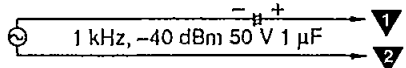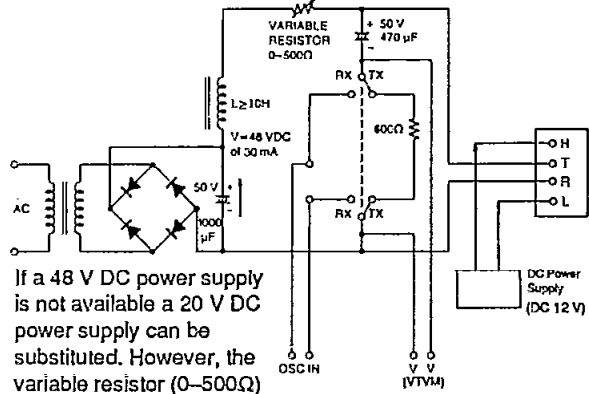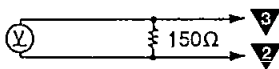
<p>Test Equipment: Loop Simulator RC Oscillator VTVM DC Power Supply</p> <p>Preparation:</p> <ol style="list-style-type: none"> 1. Set unit's controls as follows: A. SP-PHONE SWITCH... "ON" B. VOLUME CONTROL... "MAX" 2. Set the variable resistor of the Loop Simulator to maximum resistance (fully counterclockwise.) 3. Connect the unit to the Loop Simulator. 4. Make adjustment in a quiet room. 	<p>Transmission Level Adjustment (for Speakerphone)</p> <ol style="list-style-type: none"> 1. Connect the test points $\nabla 4 - \nabla 5$ and $\nabla 6 - \nabla 7$. 2. Set the Loop Simulator selector switch to "TX". 3. Connect the test point $\nabla 4 - \nabla 8$. 4. Connect the RC Oscillator to Test Point $\nabla 9 (+) - \nabla 10 (-)$, and connect an electrolytic capacitor (50 V, 1 μF) as shown below. 5. Set RC Oscillator to 1 kHz, 56 dBm.  <ol style="list-style-type: none"> 6. Connect the VTVM to test point $\nabla 10 - \nabla 9$. 7. Adjust VR2 for a reading of -17 ± 0.5 dBm, on the VTVM. 8. Disconnect the test point $\nabla 4 - \nabla 5$, $\nabla 6 - \nabla 7$, and $\nabla 4 - \nabla 8$.
<p>Transmission Level Adjustment (for Handset)</p> <ol style="list-style-type: none"> 1. Set the Loop Simulator selector switch to "TX". 2. Connect the Oscillator to Test Point $\nabla 1 (+) - \nabla 2 (-)$, as shown below. 3. Set RC Oscillator to 1 kHz, -40 dBm.  <ol style="list-style-type: none"> 4. Connect the VTVM. 5. Adjust VR4 for a reading of -9 ± 1 dBm, on the VTVM. 	<p>Please refer to Printed Circuit Board which is located test points (∇).</p> <p style="text-align: center;">Schematic Diagram of Loop Simulator</p>  <p>If a 48 V DC power supply is not available a 20 V DC power supply can be substituted. However, the variable resistor (0-500Ω) must be set to 0 ohms</p>
<p>Reception Level Adjustment (for Handset)</p> <ol style="list-style-type: none"> 1. Set the Loop Simulator selector switch to "RX". 2. Apply the 1 kHz, -20 dBm for the Oscillator. 3. Connect the resistor 150Ω to the test point $\nabla 3 - \nabla 2$, and connect the VTVM to the both ends.  <ol style="list-style-type: none"> 4. Adjust VR3 for reading of -28 ± 1 dBm, on the VTVM. 	<p style="text-align: right;">Fig. 12</p>

BLOCK DIAGRAM

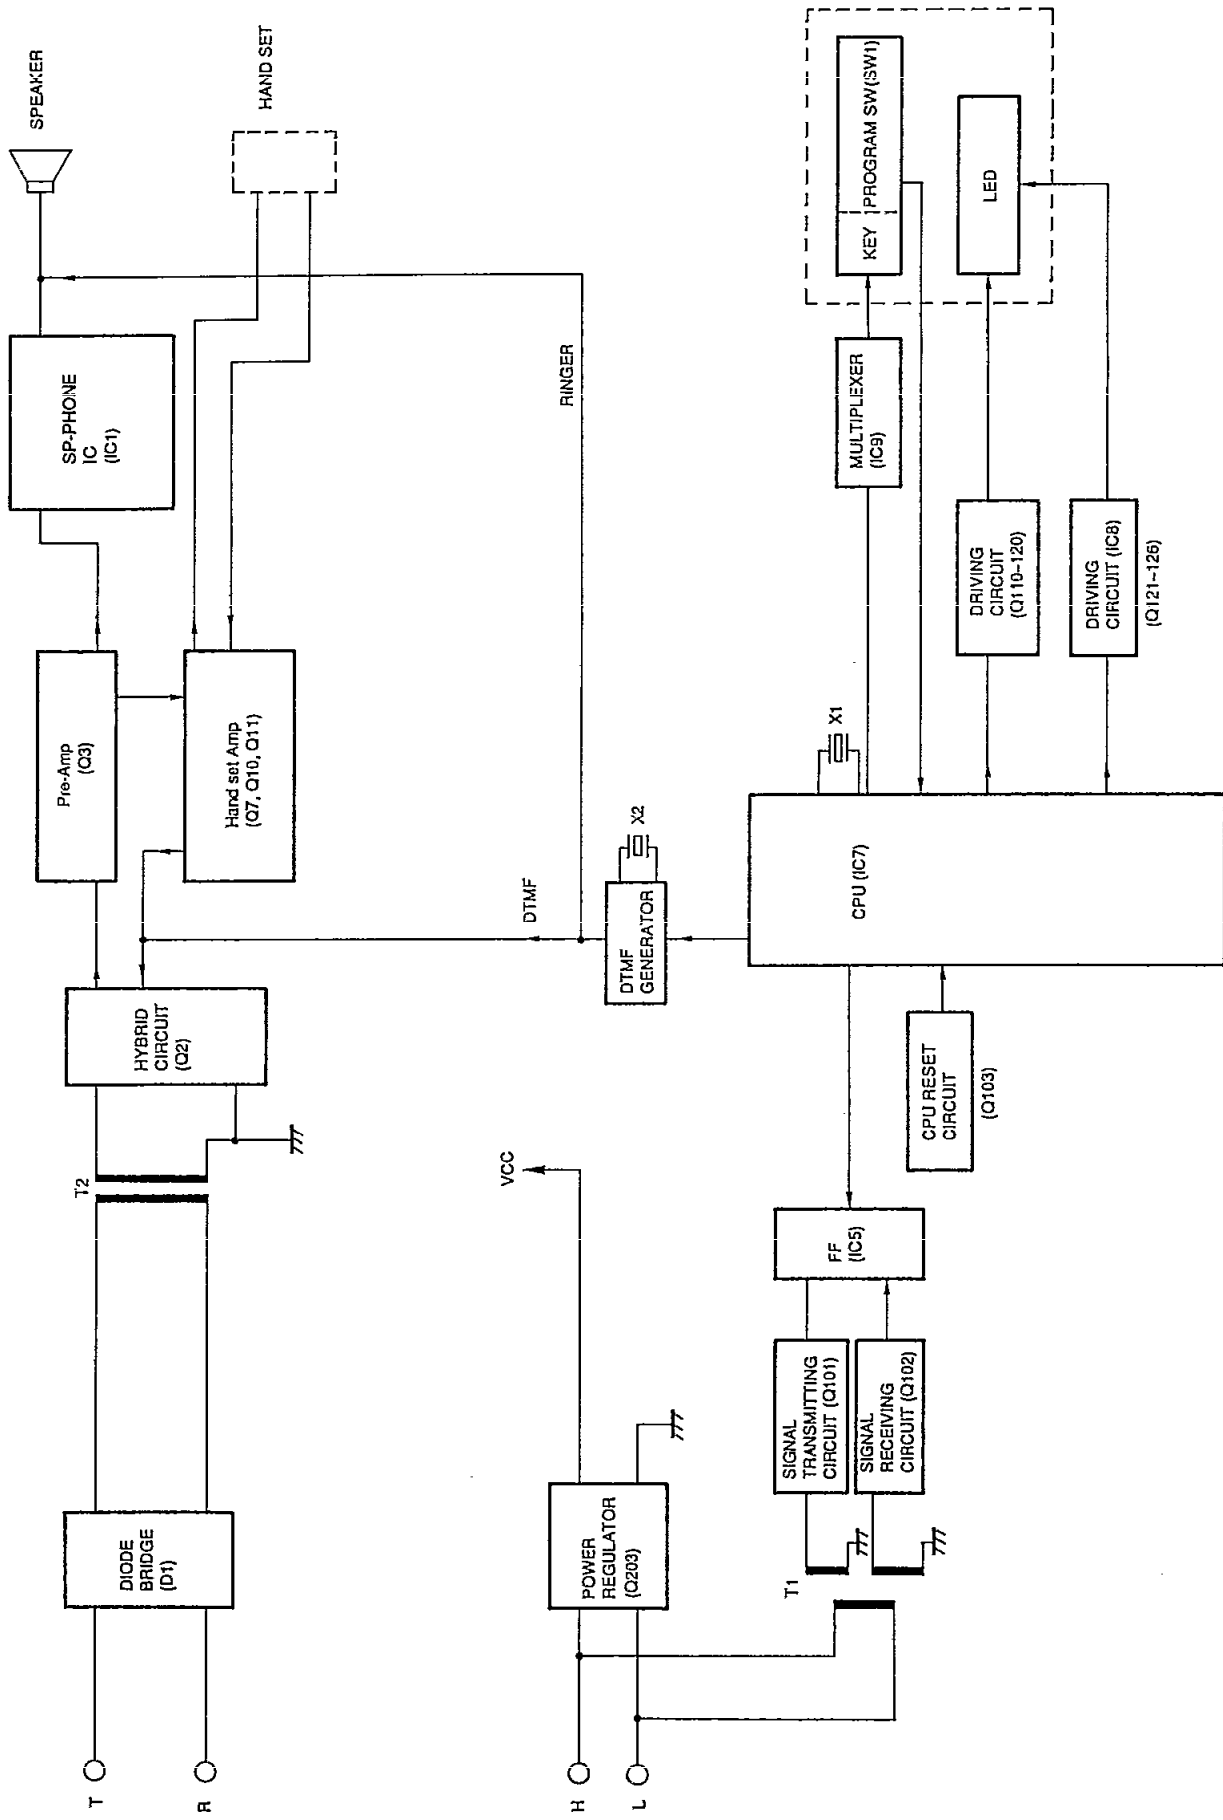



Fig. 10

CIRCUIT OPERATIONS

KEY INPUT CONTROL CIRCUIT

Data output from IC7 (R50 to R53) is decoded by IC9 as shown in the table below. This decoded information is used to scan the key matrix. The key matrix is read by IC7 according to the timing shown. If a key is pressed, the input corresponding to the row in which the key is located will be brought low during scanning and will be detected by IC7.


Circuit Diagram

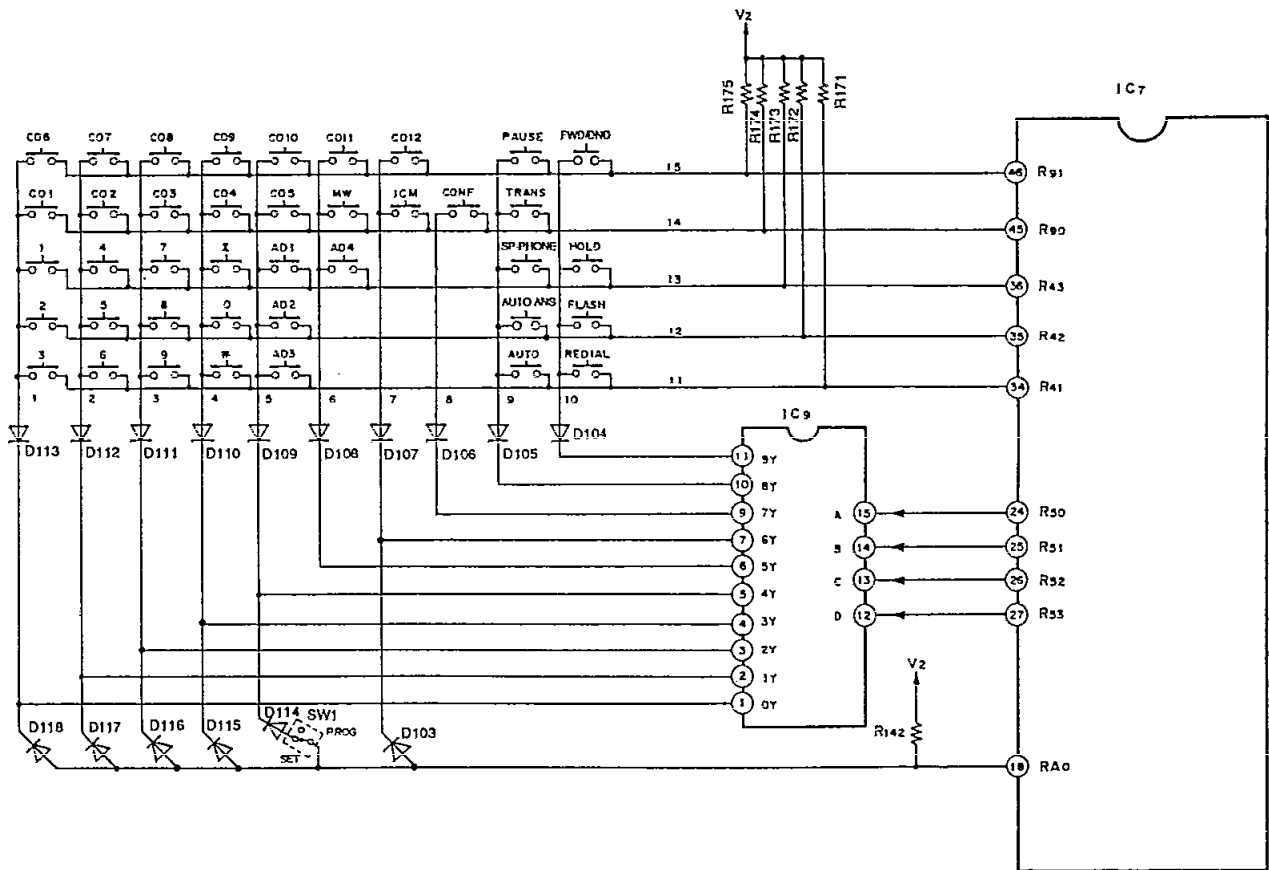

Key Input Control Timing Chart

Logic of IC9

No	INPUT				OUTPUT									
	A	B	C	D	0Y	1Y	2Y	3Y	4Y	5Y	6Y	7Y	8Y	9Y
0	L	L	L	L	L	H	H	H	H	H	H	H	H	H
1	H	L	L	L	H	L	H	H	H	H	H	H	H	H
2	L	H	L	L	H	L	H	H	H	H	H	H	H	H
3	H	H	L	L	H	H	L	H	H	H	H	H	H	H
4	L	L	H	L	H	H	H	L	H	H	H	H	H	H
5	H	L	H	L	H	H	H	H	L	H	H	H	H	H
6	L	H	H	L	H	H	H	H	H	L	H	H	H	H
7	H	H	H	L	H	H	H	H	H	H	L	H	H	H
8	L	L	L	H	H	H	H	H	H	H	H	L	H	H
9	H	L	L	H	H	H	H	H	H	H	H	H	L	H

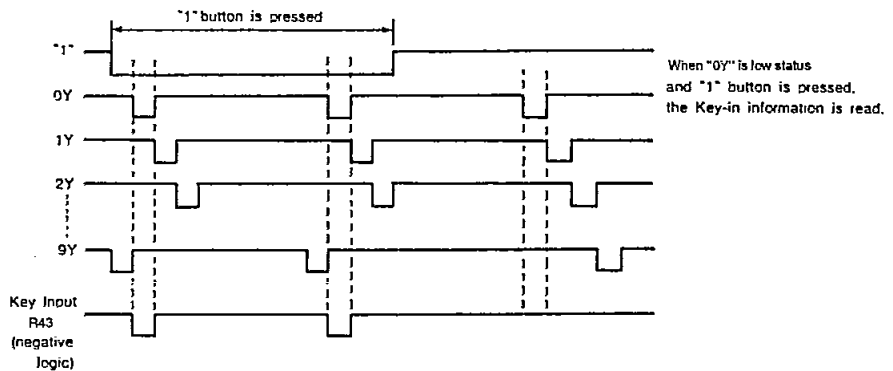


■ LED CIRCUIT


Circuit Operation:

The status of the LED's in the matrix is controlled by the outputs of IC7 and IC8. Transistors Q121–Q126 are sequentially turned on by IC8 which is reset every 6 clock cycles using port D2 from IC7. This is shown in timing chart below. To illuminate an LED, a high level is output from the relevant port of IC7 (port D9–D15, R01–R03) at the same time as the corresponding column is taken low by IC8, Q121–126.

Circuit Diagram

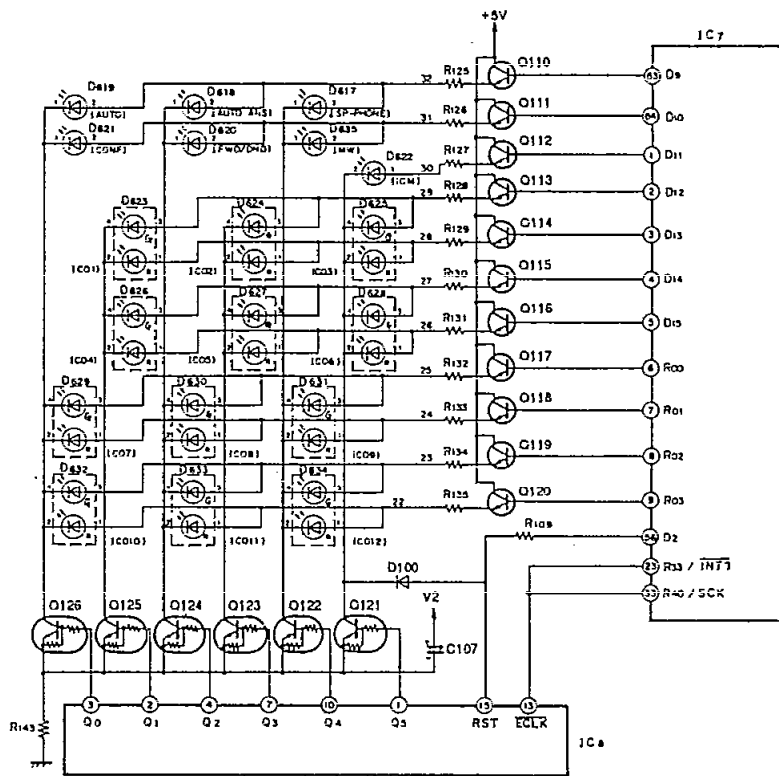

Timing Chart

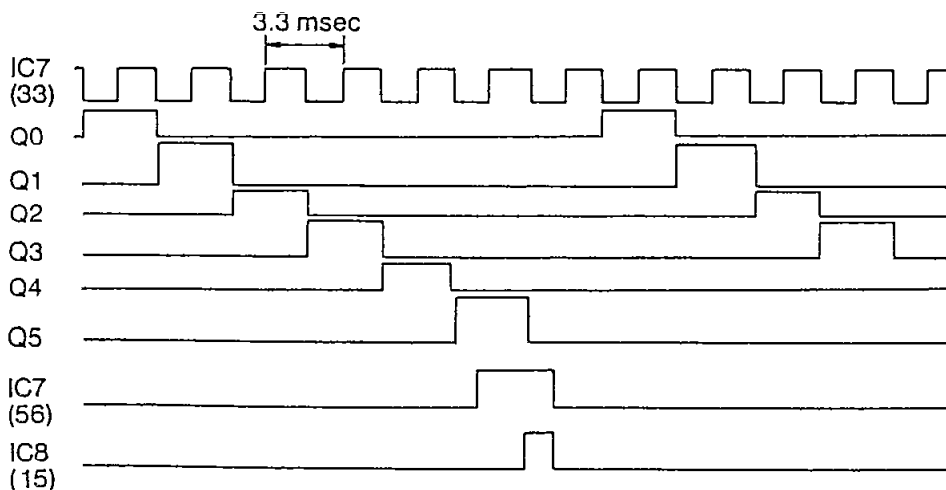

■ DATA COMMUNICATION CIRCUIT

Function:

The data communication circuit provides a path for information exchange between the EMSS and EMSS proprietary telephone, which is used for transmitting such items as key input information and LED/LCD control.

Circuit Operation:

After receiving an IRQ signal from the EMSS, the EMSS proprietary telephone sends key input information (max 19 pulses). The EMSS proprietary telephone then receives LED control information etc. from the EMSS and returns an acknowledge signal.

1) Reception

The data from the EMSS is received via the H and L line along the path;


H, L Line → T1 → R166 → Q102 → IC5 → IC7 pin 58

2) Transmssion


The data to the EMSS proprietary telephone is transmitted along the following path.

IC7 pin 59 → IC5 → R161 → Q101 → T1 → H, L Line

Timing Chart

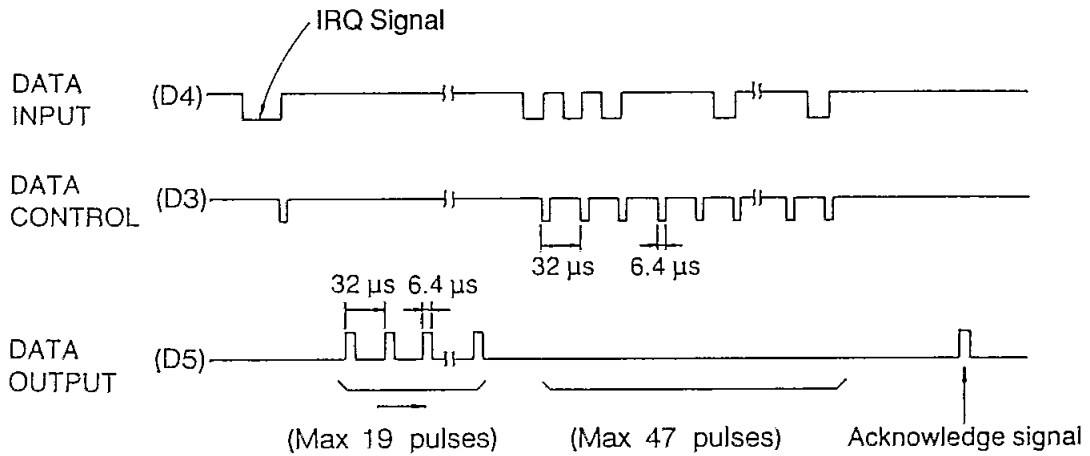

Circuit Diagram

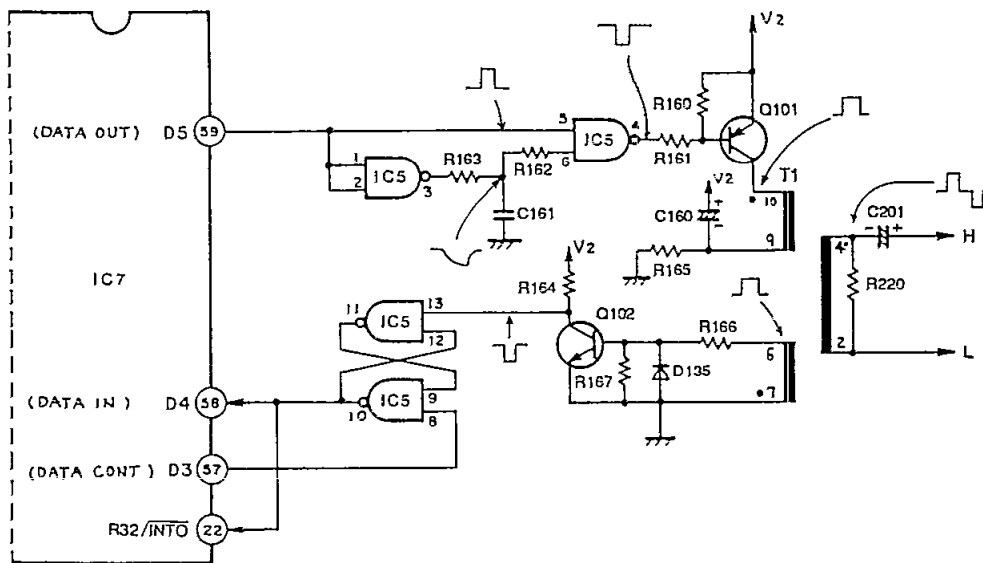


■ RESET CIRCUIT

Circuit Operation:


This circuit is used for transmission of a reset pulse to the CPU (IC7) at the following times, connecting the telephone line jack and switching on the EMSS. The timing chart is shown below.

Power ON → Q103 OFF → IC7 (pin 49) high level → Q103 ON → IC7 (pin 49) low level

Timing Chart

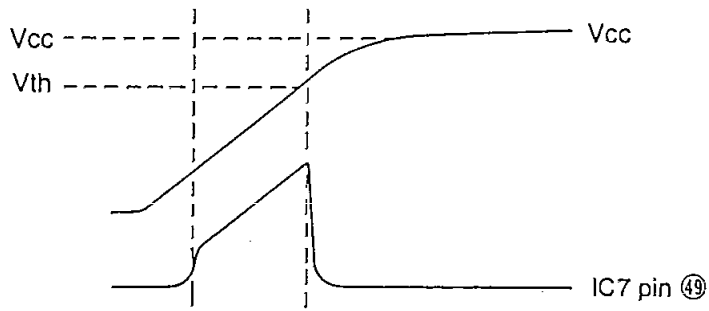

Circuit Diagram

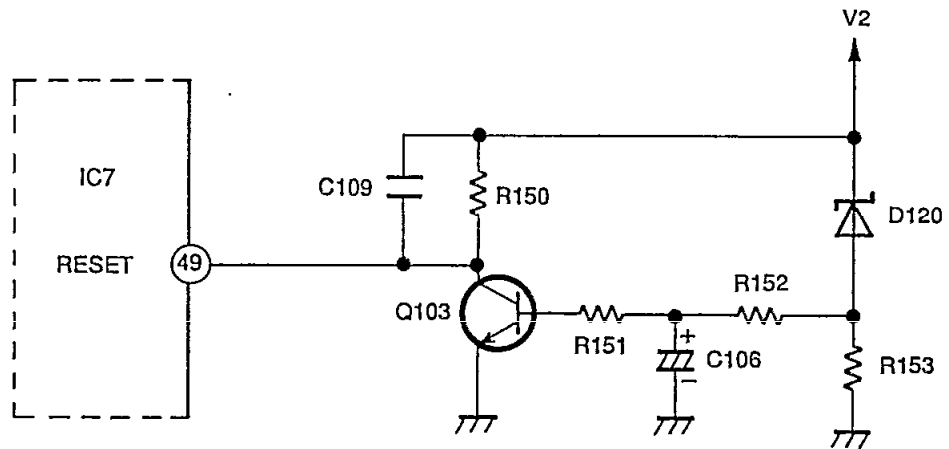

■ TONE GENERATION CIRCUIT


Function:

This circuit generates all system tones including COL, extension, busy and DTMF signals. It is comprised of IC6 (DTMF Generator IC) and IC3 (Analogue Switch).

Circuit Operation:


For an output of a signal row tone, the row terminal (R1–R4) and the each column terminals (C1–C3) intersecting with it are brought a low state. For a dual tone output, one row terminal and one column terminal are brought to low state.

Circuit Diagram

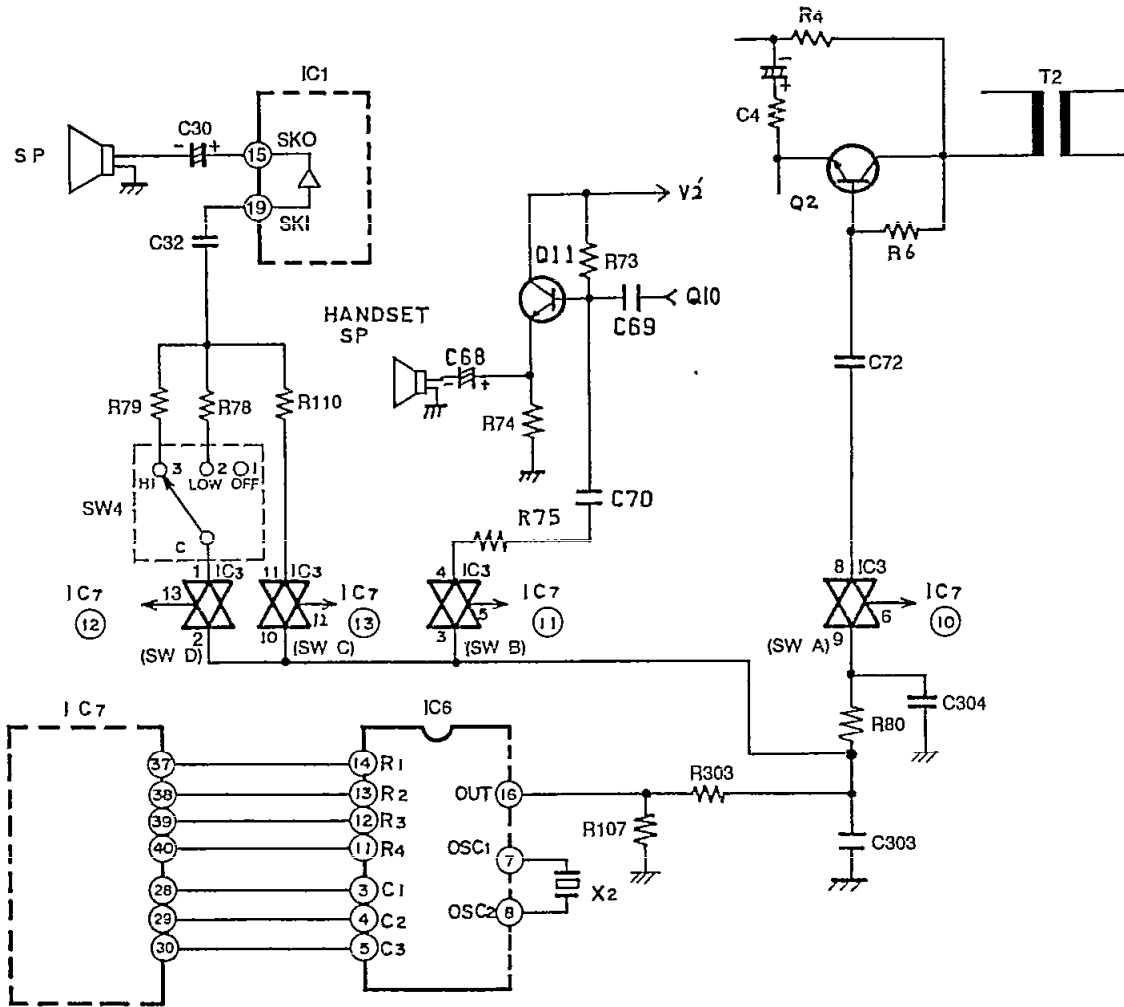

1) Calling Tones from COL and EXT.

For a calling tone from a CO line or extension, pin 13 of IC3 (Analogue Switch) is brought to high state thus the single row tone signal shown below is output from IC6, and the tone volume is controlled by SW4.

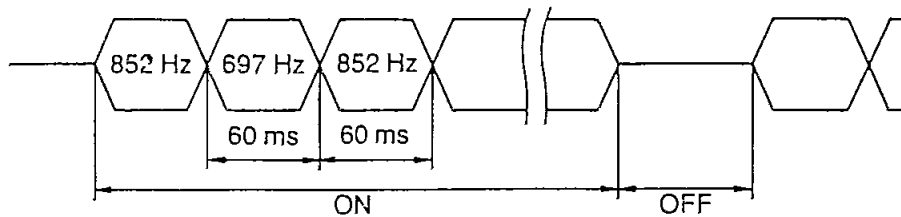

IC6 pin 16 → IC3 pin 2-1 → SW4 → C32 → IC1 pin 19 → IC1 pin 15 → C30 → SP

2) Busy Station Calling Tone

When pin 12 of IC3 (Analogue Switch) is brought to a high state. 852 Hz and 697 Hz signals are outputted from IC6 alternately at intervals of 60 ms. The signal flow is;

IC6 pin 16 → IC3 pin 10-11 → R110 → C32 → IC1 pin 19 → IC1 pin 15 → C30 → SP

3) DTMF Signal

Pins 5, 6 and 12 of IC3 are brought to a high state and a DTMF tone is generated as shown below. The signal flow is;

IC6 pin 16 → IC3 pin 9-8 → C72 → Q2 → T2 → Telephone Line
 IC6 pin 16 → IC3 pin 3-4 → R75 → C70 → Q11 → C68 → Handset Speaker
 (IC3 pin 10-11 → R110 → C32 → IC1 pin 19 → IC1 pin 15 → C30 → SP)

DTMF Frequency Table

		High Group		
		1209 Hz	1336 Hz	1477 Hz
Low Group	697 Hz	1	2	3
	770 Hz	4	5	6
	852 Hz	7	8	9
	941 Hz	*	0	#

Truth Table

	C1	C2	C3	R1	R2	R3	R4
1	L	H	H	L	H	H	H
2	H	L	H	L	H	H	H
3	H	H	L	L	H	H	H
4	L	H	H	H	L	H	H
5	H	L	H	H	L	H	H
6	H	H	L	H	L	H	H
7	L	H	H	H	H	L	H
8	H	L	H	H	H	L	H
9	H	H	L	H	H	L	H
*	L	H	H	H	H	H	L
0	H	L	H	H	H	H	L
#	H	H	L	H	H	H	L

4) Key-In Tone

An 852 Hz single tone is used as the key-in tone. When pins 5 and 12 of IC3 are brought to a high state, a tone is generated from IC6 and is heard at the speaker. The signal flow is shown below.

IC6 pin 16 → IC3 pin 3-4 → R75 → C70 → Q11 → C68 → Handset Speaker
 IC6 pin 16 → IC3 pin 10-11 → R110 → C32 → IC2 pin 19 → IC2 pin 15 → C30 → SP

CONDITION	IC7 pin 10	IC3 SWA	IC7 pin 11	IC3 SWB	IC7 pin 13	IC3 SWC	IC7 pin 12	IC3 SWD
Ringing	L	OFF	L	OFF	L	OFF	H	ON
Call Waiting	L	OFF	L	OFF	H	ON	L	OFF
Tone Dial (Handset)	H	ON	H	ON	L	OFF	L	OFF
Tone Dial (Speakerphone)	H	ON	L	OFF	H	ON	L	OFF

■ SPEAKERPHONE CIRCUIT

Function:

This circuit controls the automatic switching of the transmitted and received signals, to and from the telephone line, when the unit is used in the hands-free mode.

Circuit Operation:

The speakerphone can only provide a one-way communication path.

In other words, it can either transmit an outgoing signal or receive an incoming signal at a given time, but cannot do both simultaneously. Therefore, a switching circuit is necessary to control the flow of the outgoing and incoming signals. This switching circuit is contained in IC1 and consists of a Voice Detector, Tx Attenuator, Rx Attenuator, Comparator and Attenuator Control. The circuit analyzes whether the Tx (transmit) or the Rx (receive) signal is louder, and then it processes the signals such that the louder signal is given precedence.

The Voice Detector provides a DC input to the Attenuator Control corresponding to the Tx signal.

The Comparator receives a Tx and Rx signal, and supplies a DC input to the Attenuator Control corresponding to the Rx signal. The Attenuator Control provides a control signal to the Tx and the Rx Attenuator to switch the appropriate signals ON and OFF. The Attenuator Control also detects the level of the volume control to automatically adjust for changing ambient conditions.

1) Control Signal Path

Control signals for transmission and reception are inputted to IC1 via the following path:

(Transmission Control Signal Path)

MIC → IC1 pin 9 → IC1 pin 10 → IC1 pin 3 → IC1 pin 4 → IC1 pin 5

(Reception Control Signal Path)

Telephone Line → R4 → Q3 → IC1 pin 7

2) Transmission/Reception Switching

The comparison result between Tx and Rx outputs as a DC level at IC1 pin 23 .

Tx level is highpin 23 = pin 20 - 6 mV

Rx level is highpin 23 = pin 20 - 150mV

The comparator output is connected to the attenuator control inside IC1.

3) Voice Detector

The output of the mic amp (pin 10 of IC1) is supplied to pin 13 of IC1 as a control signal for the voice detector.

4) Attenuator Control

The attenuator control detects the setting of the volume control through pin 24 of IC1 and automatically adjusts for changing ambient conditions.

5) Transmission Signal Path

The input signal from the microphone is sent through the circuit via the following path:

Note that, in this case, the logic states of pins 10, 11 and 12 are low, Low and Low respectively.

MIC → C39 → IC1 pin 9 → IC1 pin 10 → IC1 pin 3 → IC1 pin 4 → R14 → C5 → Q2 → T2 → D1 → Telephone Line

6) Reception Signal Path

Signals received from the telephone line are outputted at the speaker via the following path:

Note that, in this case, the logic states of pins 10, 11 and 12 are low, low and low.


Telephone Line → D1 → T2 → R4 → Q3 → C6 → R191 → IC1 pin 27 → IC1 pin 26 → IC1 pin 19 → IC1 pin 15 → SP

7) Busy Tone Detector Circuit


Signal path for busy tone detector circuit is;

Telephone Line → D1 → T2 → C90 → IC10 pin 6-7 → IC10 pin 2-1 → D90 → Q12 → IC7 pin 60


Circuit Diagram

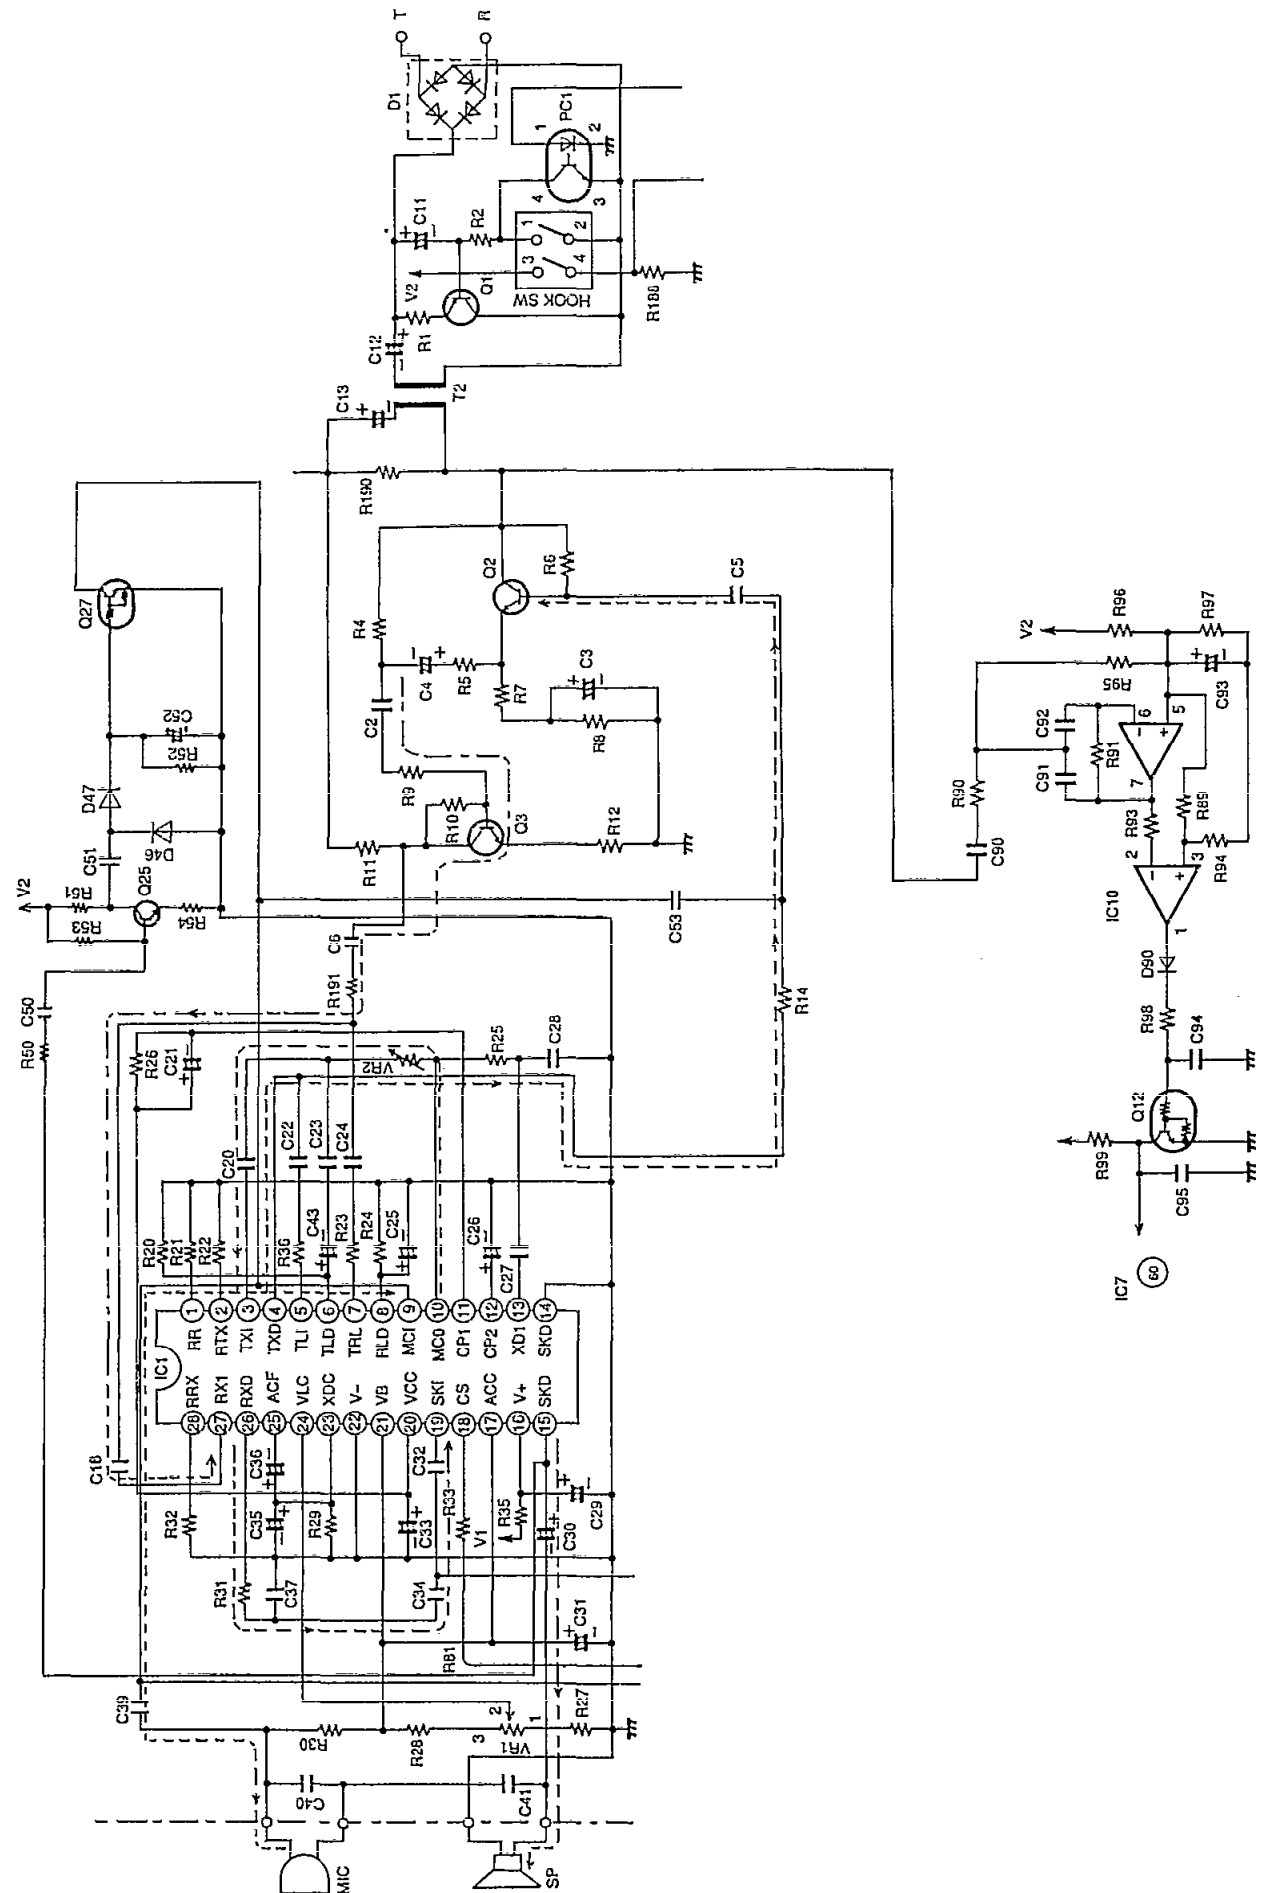



SCHEMATIC DIAGRAM

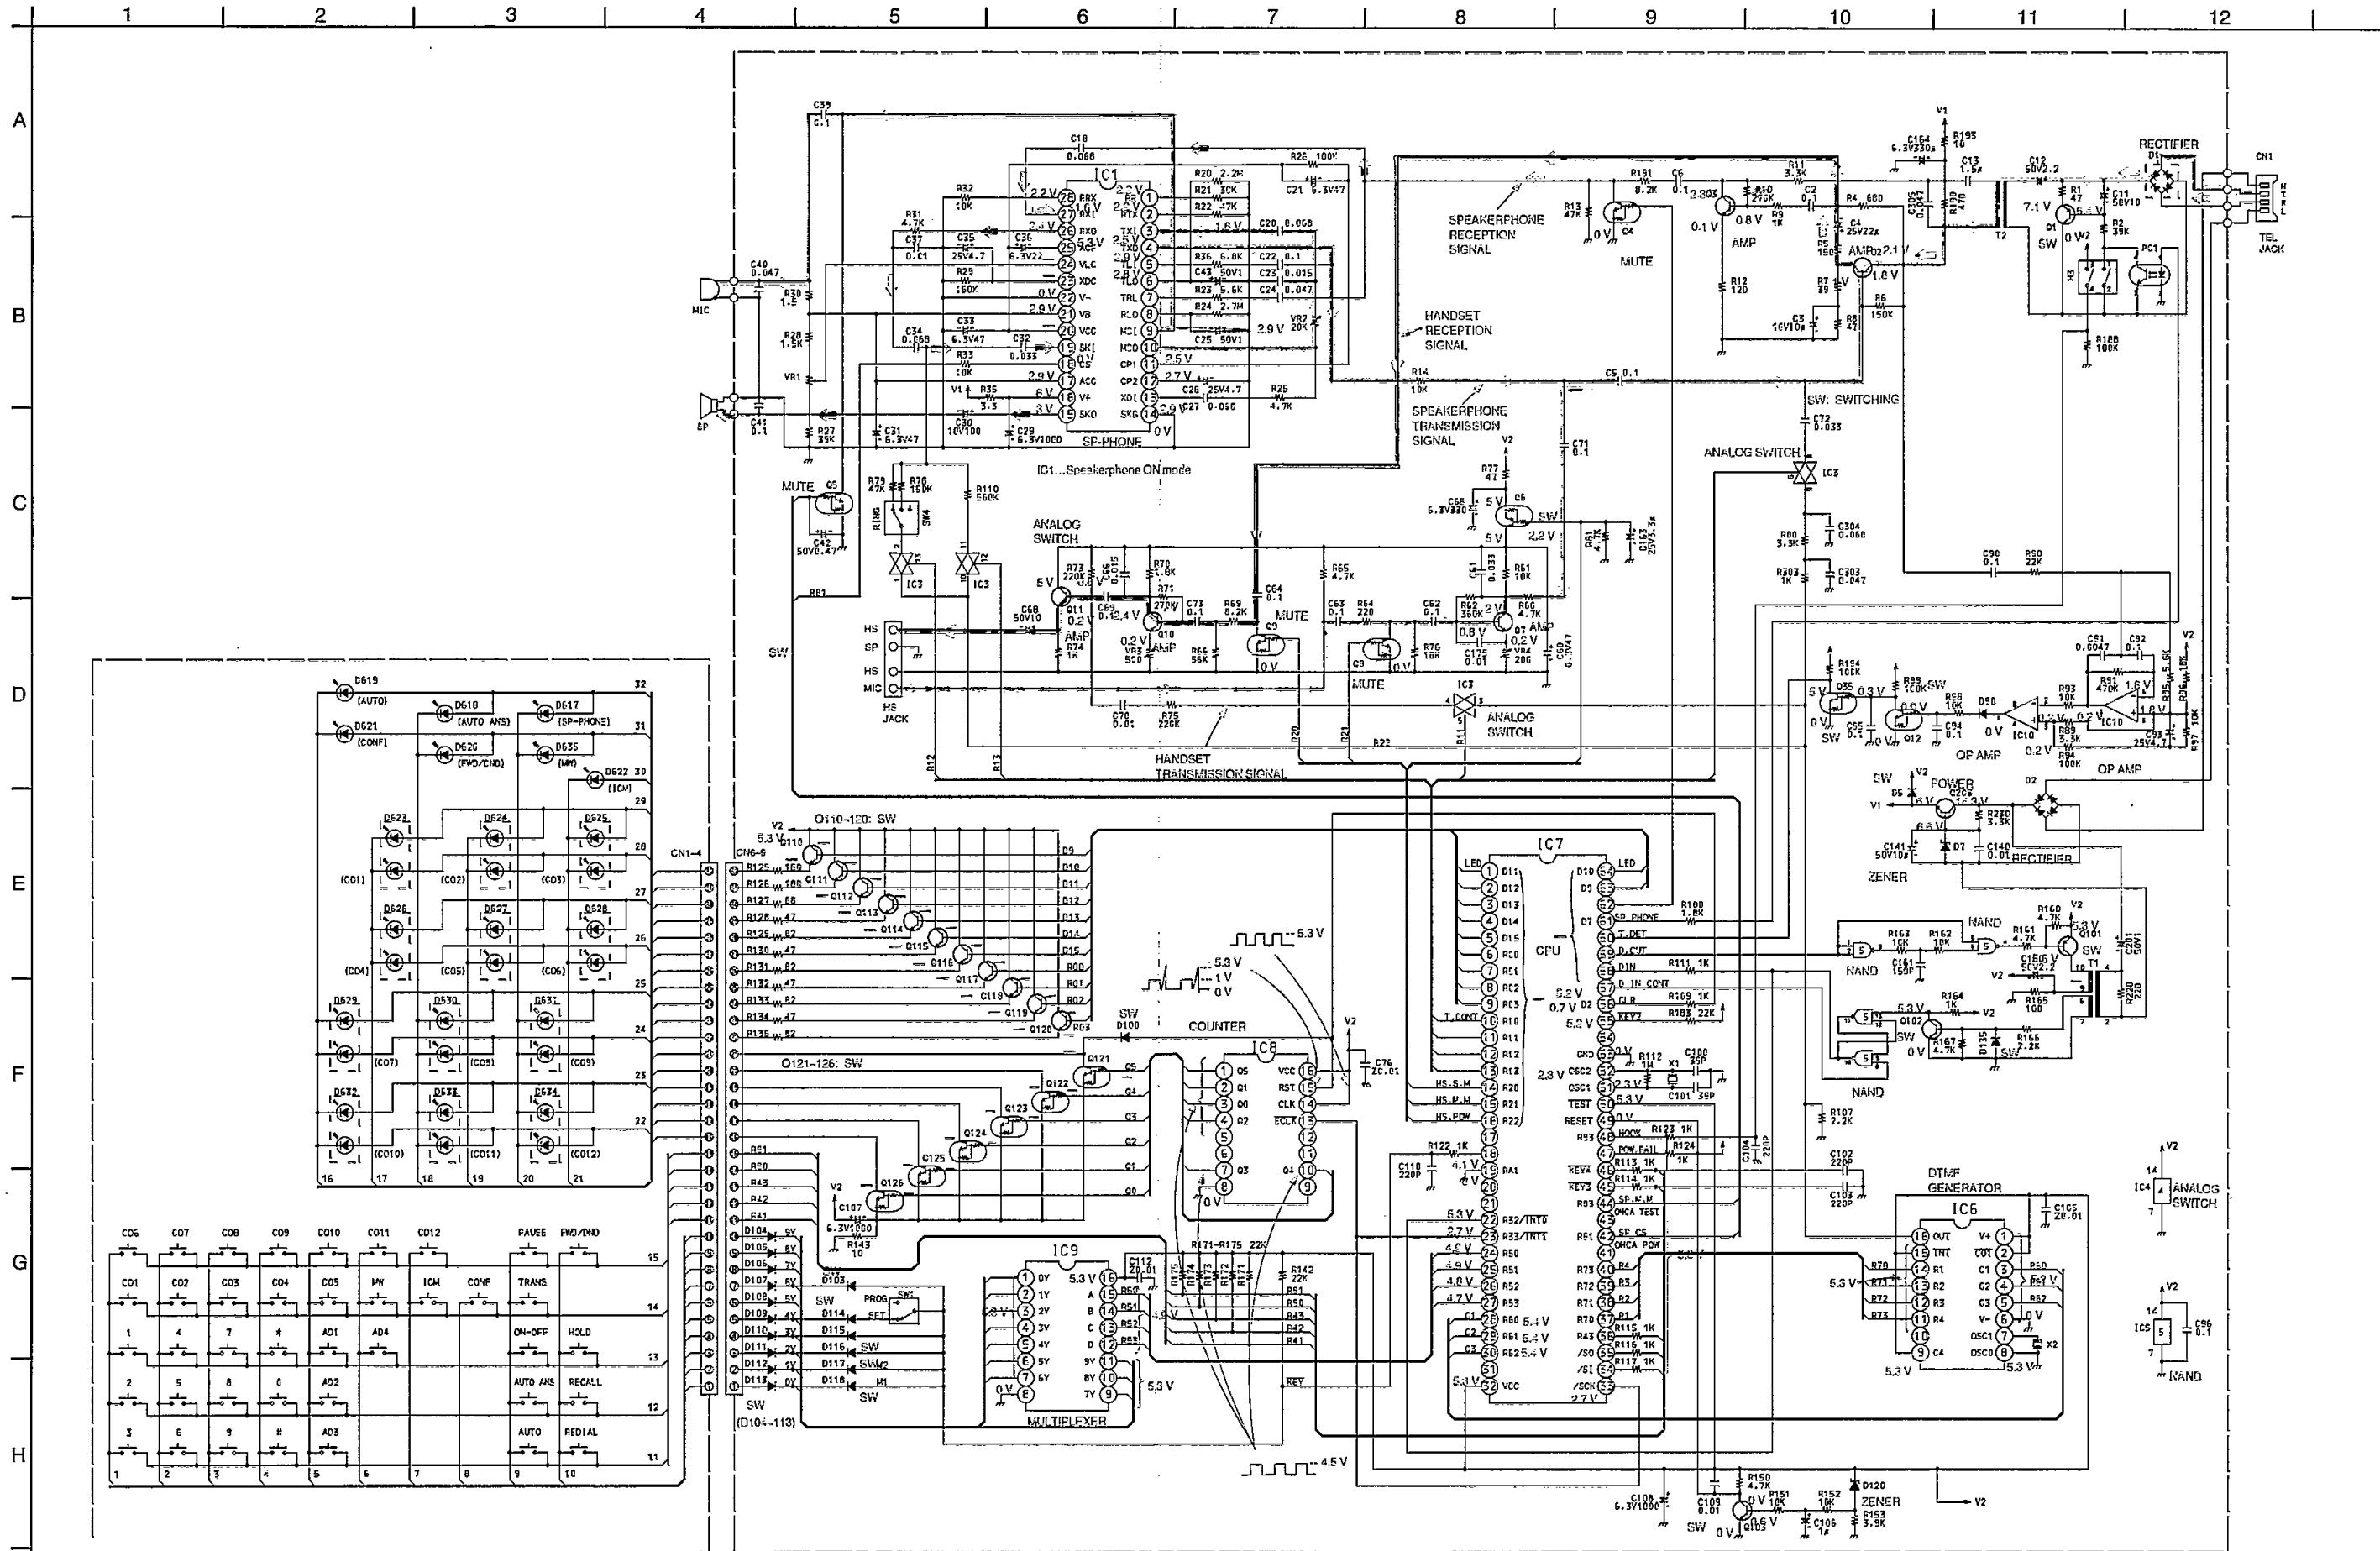

PRINTED CIRCUIT BOARD



COMPONENT VIEW

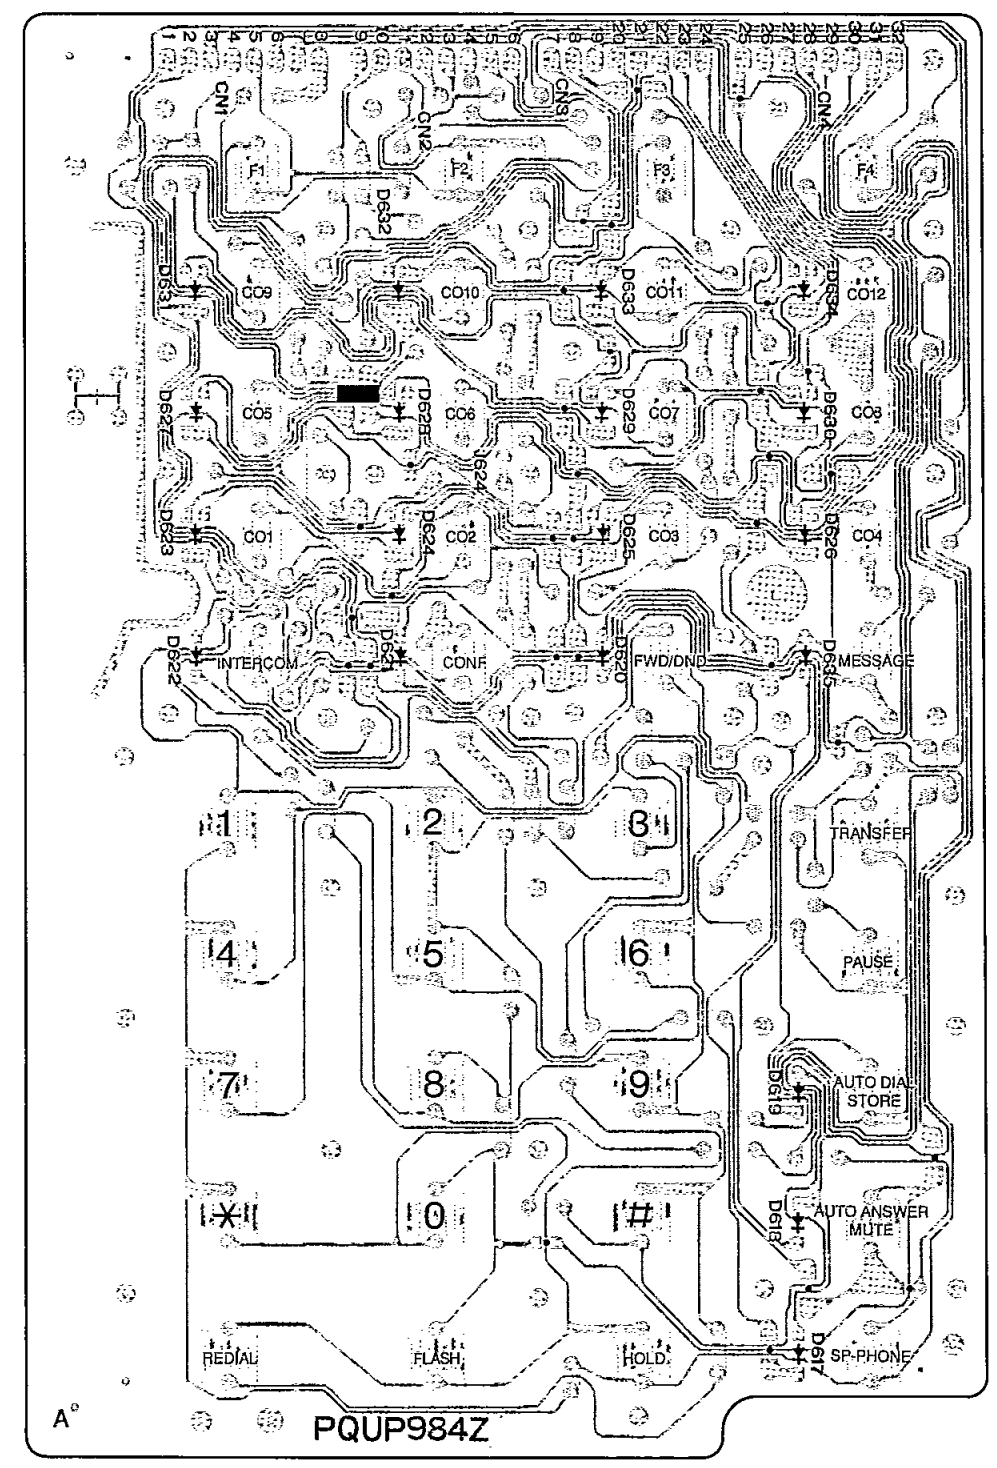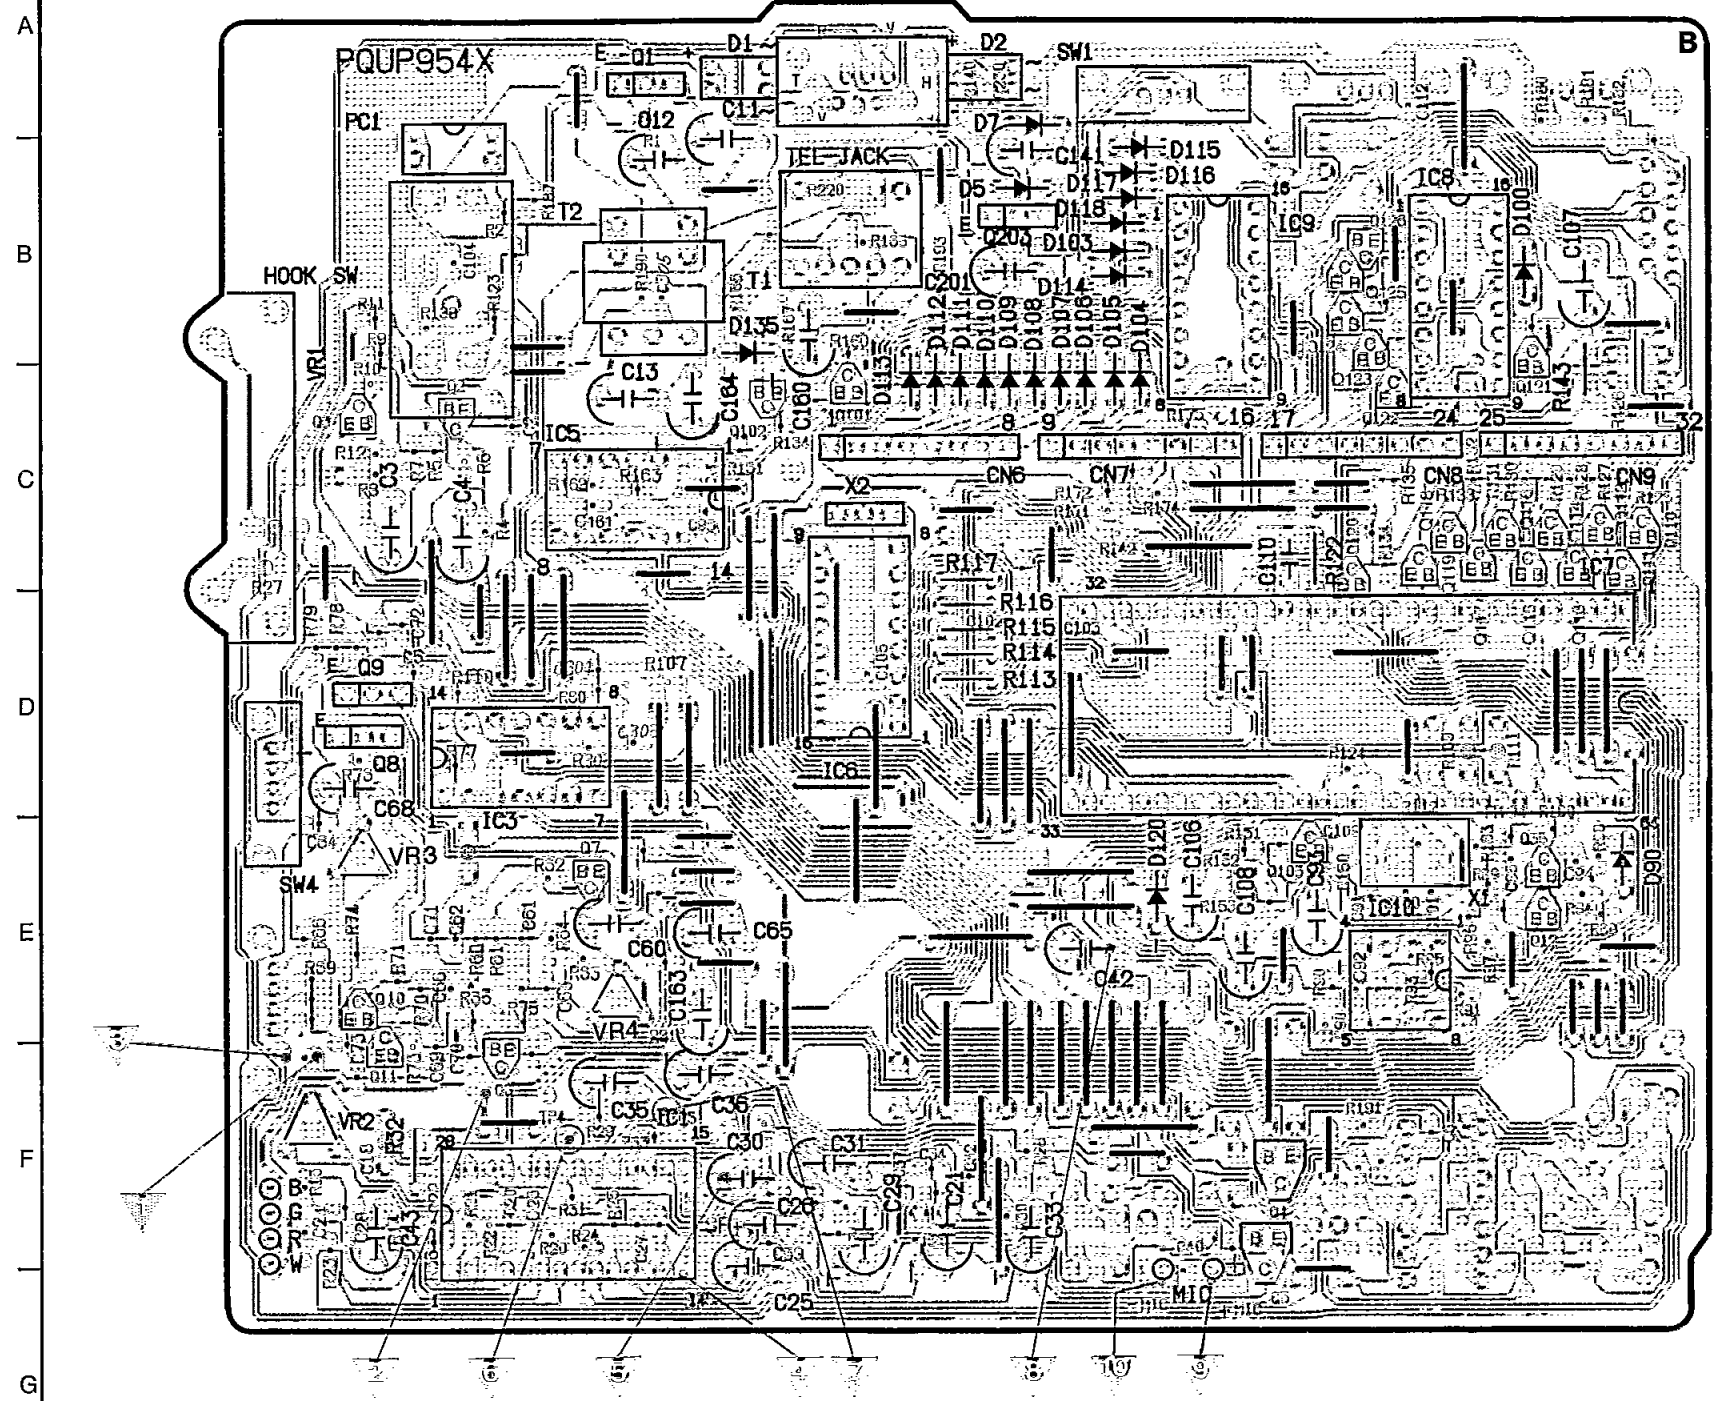

■ FOR SCHEMATIC DIAGRAM

Notes:

- 1. SW1: Memory switch in "SET" position.
- 2. SW4: Ringer volume selector switch in "HIGH" position.
- 3. Hook SW: Hook switch.
- 4. DC voltage measurements are taken with electronic voltmeter or oscilloscope from ground.
(Off-Hook condition
(IC1 ... Speakerphone ON condition))
- 5. This schematic diagram may be modified at any time with the development of new technology.

- Notes:
- 1. The circuit shown in [] on the conductor indicates printed circuit on the back side of the printed circuit board.
 - 2. The circuit shown in [] on the conductor indicates printed circuit on the front side of the printed circuit board.

3. This printed circuit board may be modified at any time with the development of new technology.

EXTENSION CORD CONNECTING METHOD

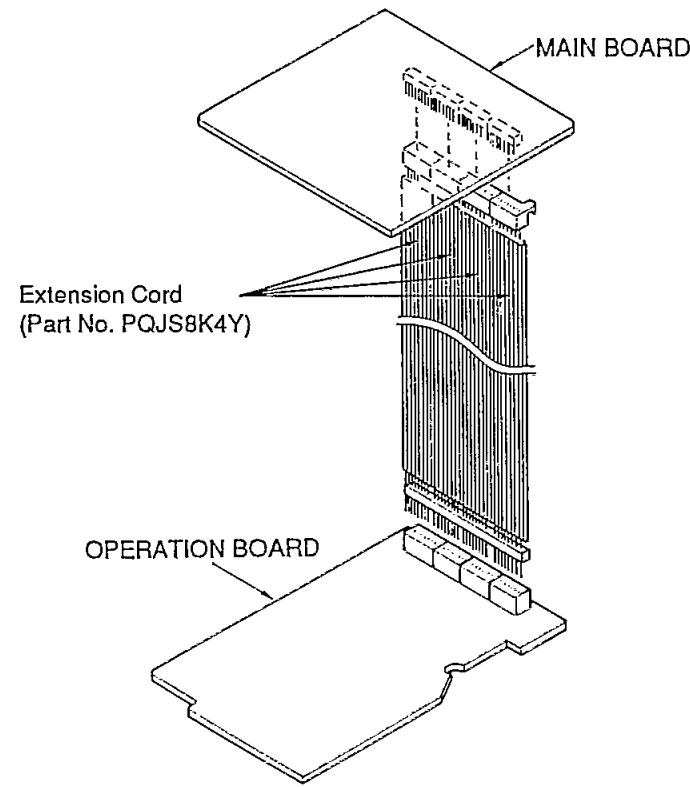


Fig. 11

ACCESSORIES AND PACKING MATERIALS


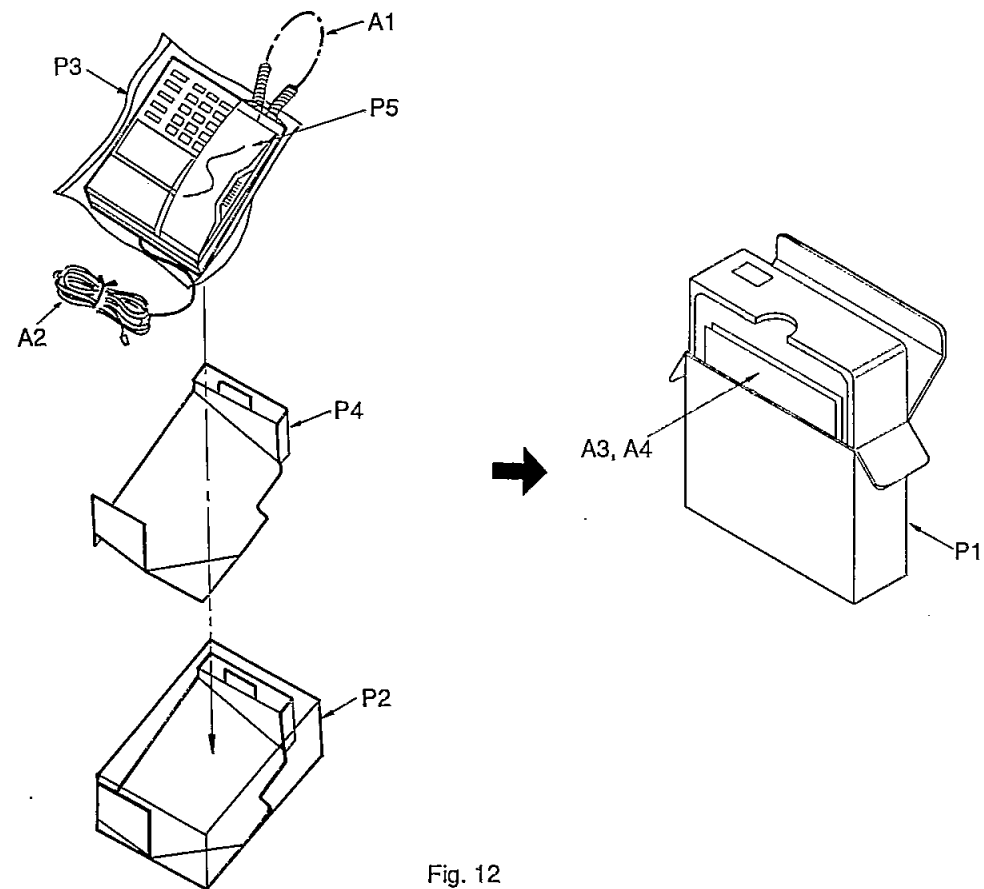


Fig. 12

CABINET AND ELECTRICAL PARTS LOCATION

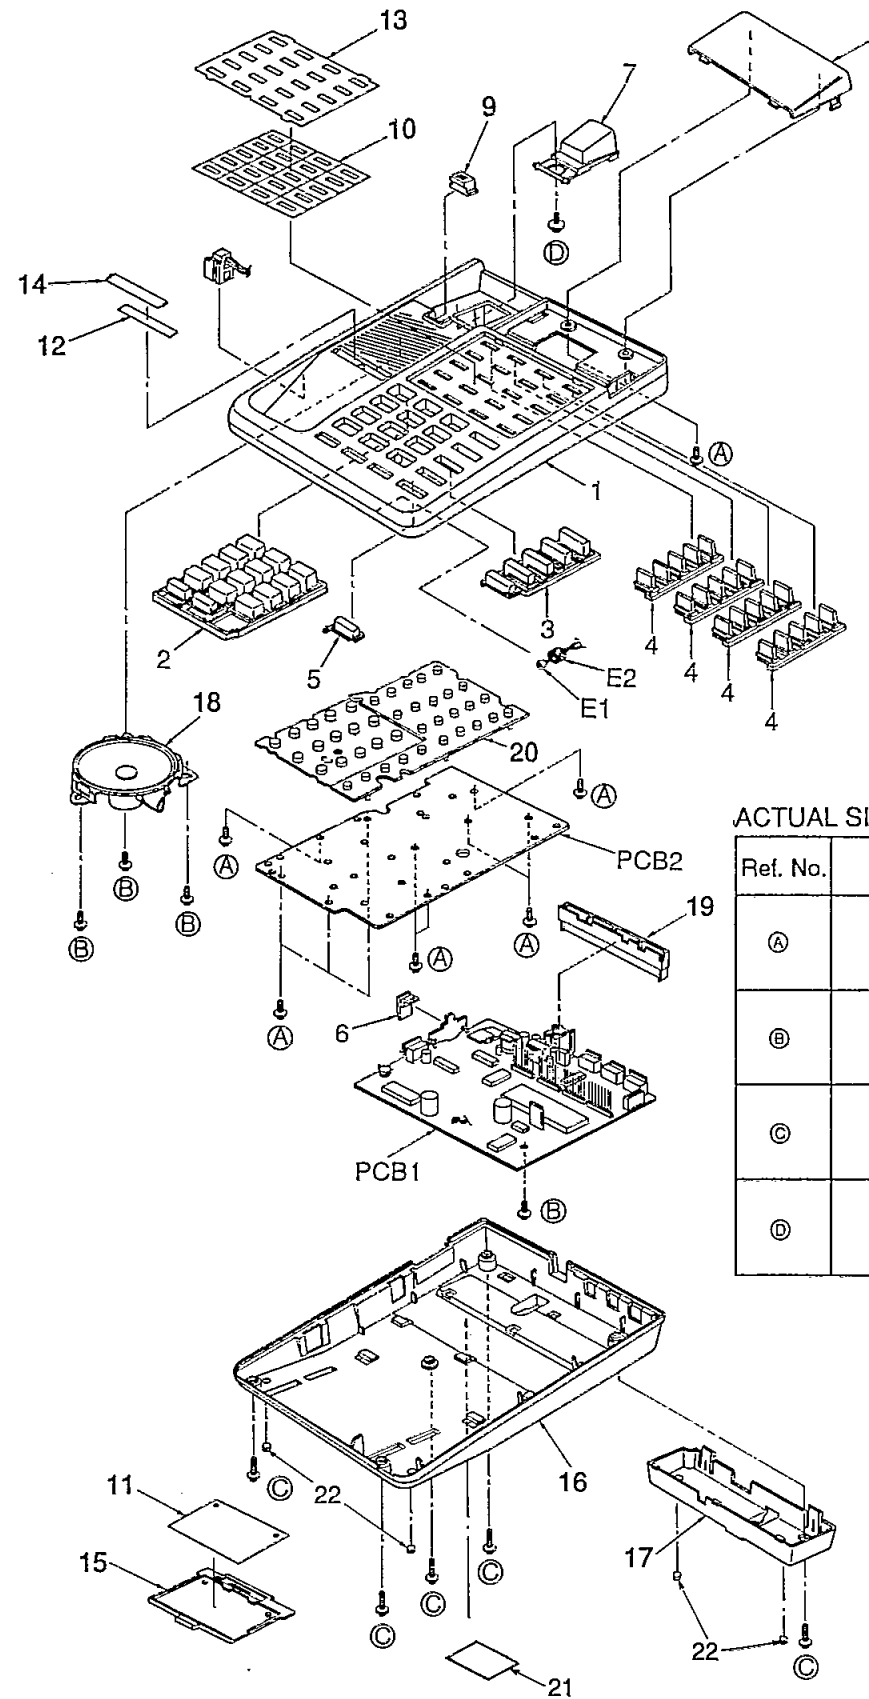

ACTUAL SIZE OF SCREWS

Ref. No.	Figure	Part No.
Ⓐ		XTW26+8F
Ⓑ		XTW3+S10P
Ⓒ		XTW3+S14P
Ⓓ		XTW3+W6F

Fig. 13

HANDSET PARTS LOCATION

ACTUAL SIZE OF SCREWS

Ref. No.	Figure	Part No.
Ⓐ		XTN3+10G
Ⓑ		XTW3+W8P

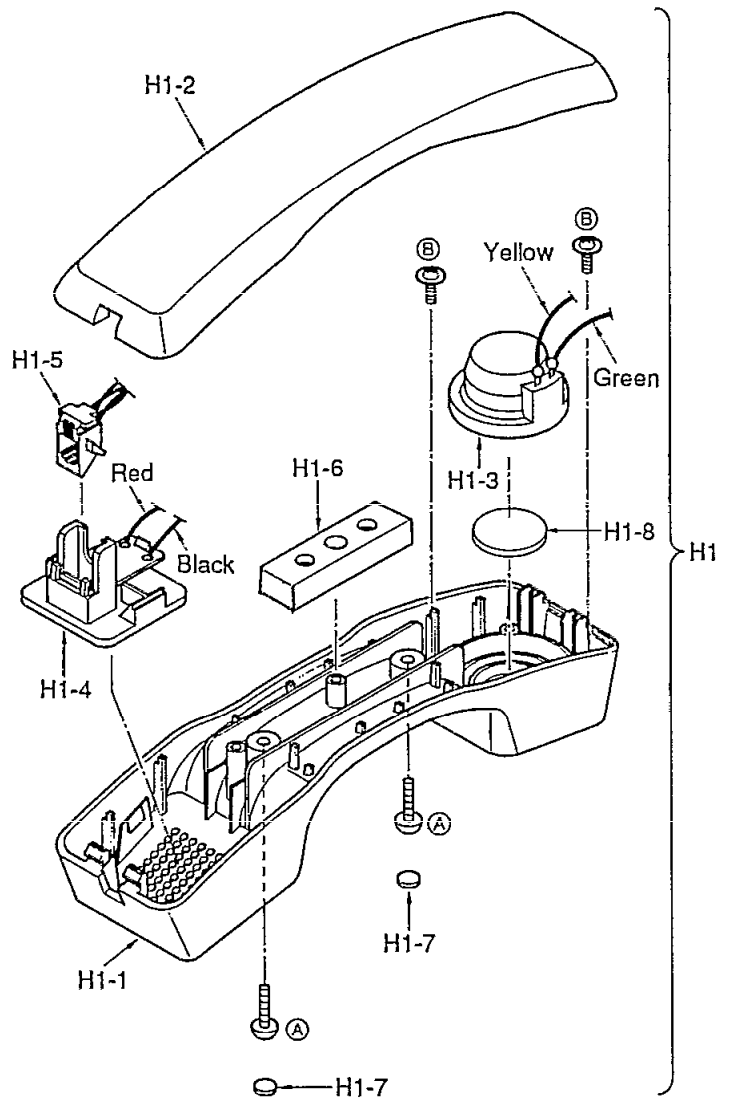


Fig. 14

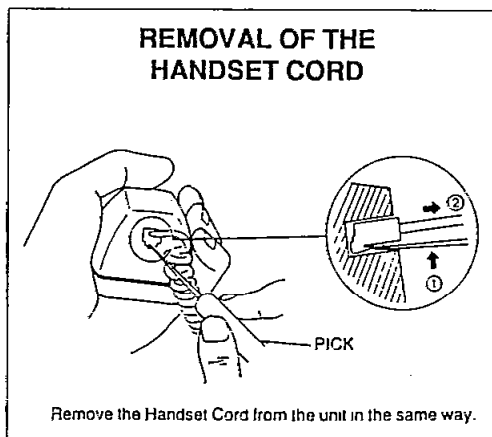


Fig. 15

REPLACEMENT PARTS LIST

Model KX-T7020E

Notes:

- The marking (RTL) indicates that the Retention Time is limited for this item. After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.
- The S mark indicates service standard parts and may differ from production
- Important safety notice. Components identified by the Δ mark special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

4. RESISTORS & CAPACITORS

Unless otherwise specified,
 All resistors are in ohms (Ω) k=1000 Ω , M=1000k Ω
 All capacitors are in MICRO FARADS (μ F) P= μ F
 *Type & Wattage of Resistor
 Type

ERC:Solid	ERX: Metal Film	PQ4R: Carbon
ERD: Carbon	ERG: Metal Oxide	ERS: Fusible Resistor
PORD: Carbon	ERO: Metal Film	ERF: Cement Resistor

Wattage					
10,16:1/8W	14,25:1/4W	12:1/2W	1:1W	2:2W	3:3W

*Type & Voltage of Capacitor
 Type

ECFD: Semi-Conductor	ECOD, ECKD, ECBT, PQCBC : Ceramic
ECOS: Styrol	ECQE, ECQV, ECOG : Polyester
PCCUV: Chip	ECEA, ECSZ : Electrolytic
ECQMS: Mica	ECQP : Polypropylene

Voltage					
ECQ Type	ECQV Type	ECSZ Type	Others		
1H: 50V	05: 50V	0F: 3.15V	0J : 6.3V	1V : 35V	
2A: 100V	1: 100V	1A: 10V	1A : 10V	50, 1H: 50V	
2E: 250V	2: 200V	1V: 35V	1C : 16V	1J : 63V	
2H: 500V		0J: 6.3V	1E, 25: 25V	2A : 100V	

Ref. No.	Part No.	Part Name & Description	Pcs
CABINET AND ELECTRICAL PARTS			
1	PQKM208T81	UPPER CABINET	1
2	PQBCX198Z1	BUTTON, DIAL/REDIAL/FLASH	1
3	PQBCX199Z1	BUTTON, TRANS/PAUSE/AUTO etc.	1
4	PQBCX200Z1	BUTTON, INTERCOM/CONF etc.	4
5	PQBC282Z	BUTTON, HOLD	1
6	PQBD166X1	KNOB, VOLUME	1
7	PQBE37Z1	BUTTON, HOOK	1
8	PQGG90S	GRILLE	1
9	PQKE82Z1	HANGER	1
10	PQGD10008Z1	TEL. NO. CARD (LARGE)	1
11	PQHP5107Z	MEMORY CARD	1
12	PQHP532X	TEL. NO. CARD (SMALL)	1
13	PQHR5370Z	TRANSPARENT PLATE [TEL. NO. CARD (LARGE)]	1
14	PQHR576Z	TRANSPARENT PLATE [TEL. NO. CARD (SMALL)]	1
15	PQHR9565Y1	COVER, MEMORY CARD	1
16	PQKF188T81	LOWER CABINET	1
17	PQKL37Z81	STAND	1
18	PQAS65P06V	SPEAKER	1
19	PQHR9597Z	SPACER	1
20	PQSE118Z	KEY SWITCH	1
21	PQGT10294Z	NAME PLATE	1
22	PQHG316Z	FOOT RUBBER	4
HANDSET PARTS			
H1	PQJX2PSL05Z	HANDSET ASSEMBLY	1
H1-1	PQKM211P81	LOWER CABINET	1
H1-2	PQKF192Y81	UPPER CABINET	1
H1-3	PQAX4P03Y	SPEAKER	1
H1-4	PQWMJ2PYL02Y	MICROPHONE ASS'Y	1
H1-5	PQJJ1TB17X	JACK	1
H1-6	PQHM67Z	WEIGHT	1
H1-7	PQHG695W	RUBBER PARTS, CAP	2
H1-8	PQHS277Z	FELT PART	1

Ref. No.	Part No.	Part Name & Description	Pcs
ACCESSORIES AND PACKING MATERIALS			
A1	PQWAT7020EUK	HANDSET CORD	1
A2	PQJA87T	TELEPHONE CORD	1
A3	PQQX10146Y	INSTRUCTION BOOK	1
A4	PQQW10534Z	LEAFLET	1
P1	PQPK10233Z	GIFT BOX	1
P2	PQPN10122Z	CUSHION	1
P3	XZB30X25A01	PROTECTION COVER (FOR UNIT)	1
P4	PQPN10123Z	ACCESSORY BOX	1
P5	PQPH75H	PROTECTION COVER (FOR HANDSET)	1
MAIN BOARD PARTS			
PCB1	PQWP1T7020EU	MAIN BOARD ASS'Y (RTL)	1
(ICs)			
IC1	PQVISC77655S	IC	1
IC2	Not Used		
IC3	PQVITC4066BP	IC	S 1
IC4	Not Used		
IC5	PQVITC4011BP	IC	S 1
IC6	PQVITP5089N	IC	1
IC7	PQVI4046SA92	IC	1
IC8	PQVITC4017BP	IC	S 1
IC9	PQVITC7H42P	IC	S 1
IC10	PQVIUPC358C	IC	S 1
(TRANSISTORS)			
Q1	2SA1626	TRANSISTOR(SI)	S 1
Q2,3	2SD1819A	TRANSISTOR(SI)	S 2
Q4,5	PQVTFB1J3P	TRANSISTOR(SI)	2
Q6	PQVTDTA143XU	TRANSISTOR(SI)	1
Q7	2SD1819A	TRANSISTOR(SI)	S 1
Q8,9	PQVTBB1J3P	TRANSISTOR(SI)	2
Q10,11	2SD1819A	TRANSISTOR(SI)	S 2
Q12	PQVTDTC144E	TRANSISTOR(SI)	1
Q35	UN5213	TRANSISTOR(SI)	S 1
Q101	2SB1218A	TRANSISTOR(SI)	S 1
Q102,103	2SD1819A	TRANSISTOR(SI)	S 2
Q110-120	2SD1819A	TRANSISTOR(SI)	S 11
Q121	PQVTDTC123E	TRANSISTOR(SI)	1
Q122-126	PQVTDTC143E	TRANSISTOR(SI)	5
Q203	2SD2136	TRANSISTOR(SI)	1
(DIODES)			
D1,2	PQVDS1YB40F1	DIODE(SI)	2
D3	Not Used		
D4	Not Used		
D5	1SS131	DIODE(SI)	1
D6	Not Used		
D7	MA4068	DIODE(SI)	1
D90	1SS131	DIODE(SI)	1
D100	1SS131	DIODE(SI)	1
D101,102	Not Used		
D103-118	1SS131	DIODE(SI)	16
D120	MA4039	DIODE(SI)	1
D135	1SS131	DIODE(SI)	1
(PHOTO ELECTRIC TRANSDUCER)			
PC1	PQVITLP627	PHOTO COUPLER	S 1
(SWITCHES)			
SW1	PQSS2A27Y	SWITCH, MEMORY	1
SW2	Not Used		
SW3	Not Used		
SW4	PQSS3A17Y	SWITCH, RINGER	1
HOOK SW	ESE14A211	SWITCH, HOOK	1

Ref. No.	Part No.	Part Name & Description	Pcs	Ref. No.	Part No.	Part Name & Description (Value)	Pcs
T1	ETE13K24AY	(TRANSFORMERS) PULSE TRANSFORMER	1	C94	PQCUV1E104MD	0.1	1
T2	PQLT8D2A	COMMUNICATION TRANSFORMER	1	C95	PQCUV1E104MD	0.1	1
				C96	PQCUV1E104MD	0.1	1
				C97	Not Used		
				C98	Not Used		
				C99	Not Used		
VR1	PQVAL204B24A	(VARIABLE RESISTORS) VOLUME CONTROL, 20kΩ (B)	1	C100	PQCUV1H390JC	39P	1
VR2	PQNB3A00B24M	SEMI-FIXED, 20kΩ (B)	S 1	C101	PQCUV1H390JC	39P	1
VR3	PQNB3A00B52M	SEMI-FIXED, 500Ω (B)	S 2	C102	PQCUV1H221JC	220P	1
VR4	PQNB3A00B22M	SEMI-FIXED, 200Ω (B)	S 2	C103	PQCUV1H221JC	220P	1
				C104	PQCUV1H221JC	220P	1
				C105	PQCUV1H103KB	0.01	1
				C106	ECEA1HKS010	1	1
		(CRYSTAL OSCILLATOR & CERAMIC FILTER)		C107	ECEA0JU102	1000	1
X1	PQVCX2500N9	CRYSTAL OSCILLATOR	1	C108	ECEA0JU102	1000	1
X2	PQVBT3.58G7	CERAMIC FILTER	1	C109	PQCUV1H103KB	0.01	1
				C110	PQBCB1H221KB	220P	1
				C111	Not Used		
		(CAPACITORS)		C112	PQCUV1H103KB	0.01	1
C1	Not Used			C140	PQCUV1H103KB	0.01	1
C2	PQCUV1E104MD	0.1	1	C141	ECEA1HKS100	10	1
C3	ECEA1HKS100	10	S 1				
C4	ECEA0JKS220	22	1				
C5	PQCUV1E104MD	0.1	1				
C6	PQCUV1E473MD	0.047	1	C160	ECEA1HKS2R2	2.2	1
C7	Not Used			C161	PQCUV1H151JC	150P	1
C8	Not Used			C162	Not Used		
C9	Not Used			C163	ECEA1HKS3R3	3.3	S 1
C10	Not Used			C164	ECEA0JU331	330	1
C11	ECEA1HKS100	10	1				
C12	ECEA2CU2R2	2.2	1	C175	PQCUV1H103KB	0.01	1
C13	ECQV1H155JL3	1.5	1				
C14	Not Used			C201	ECEA1HKS010	1	1
C15	Not Used						
C16	Not Used						
C17	Not Used			C303	PQCUV1E473MD	0.047	1
C18	ECUV1H683MD	0.068	S 1	C304	PQCUV1C683MD	0.068	1
C19	Not Used			C305	PQCUV1E473MD	0.047	1
C20	PQCUV1C683MD	0.068	1				
C21	ECEA1CKS470	47	S 1				
C22	PQCUV1E104MD	0.1	1				
C23	PQCUV1H153KB	0.015	1	R1	PQ4R10XJ470	47	1
C24	PQCUV1E473MD	0.047	1	R2	PQ4R10XJ393	39K	1
C25	ECEA1HKS010	1	1	R3	Not Used		
C26	ECEA1HKS4R7	4.7	S 1	R4	PQ4R10XJ681	680	1
C27	PQCUV1C683MD	0.068	1	R5	PQ4R10XJ151	150	1
C28	PQCUV1H153KB	0.015	1	R6	PQ4R10XJ154	150K	1
C29	ECEA0JU102	1000	1	R7	PQ4R10XJ390	39	1
C30	ECEA1CK101	100	S 1	R8	PQ4R10XJ470	47	1
C31	ECEA1CKS470	47	S 1	R9	PQ4R10XJ102	1K	1
C32	PQCUV1H333JC	0.033	1	R10	PQ4R10XJ274	270K	1
C33	ECEA1CKS470	47	S 1	R11	PQ4R10XJ332	3.3K	1
C34	PQCUV1C683MD	0.068	1	R12	PQ4R10XJ121	120	1
C35	ECEA1HKS4R7	4.7	S 1	R13	PQ4R10XJ473	47K	1
C36	ECEA0JKS220	22	1	R14	PQ4R10XJ103	10K	1
C37	PQCUV1H103KB	0.01	1	R15	Not Used		
C38	Not Used			R16	Not Used		
C39	PQCUV1E104MD	0.1	1	R17	Not Used		
C40	PQCUV1E473MD	0.047	1	R18	Not Used		
C41	ECUV1H104MD	0.1	S 1	R19	Not Used		
C42	ECEA1HKS47	0.47	1	R20	PQ4R10XJ225	2.2M	1
C43	ECEA1HKS010	1	1	R21	PQ4R10XJ303	30K	1
				R22	PQ4R10XJ473	47K	1
				R23	PQ4R10XJ562	5.6K	1
C60	ECEA1CKS470	47	S 1	R24	PQ4R10XJ275	2.7M	1
C61	PQCUV1H333JC	0.033	1	R25	PQ4R10XJ472	4.7K	1
C62	PQCUV1E104MD	0.1	1	R26	PQ4R18XJ104	100K	1
C63	PQCUV1E104MD	0.1	1	R27	PQ4R18XJ393	39K	1
C64	PQCUV1E104MD	0.1	1	R28	PQ4R10XJ152	1.5K	1
C65	ECEA0JU331	330	1	R29	PQ4R10XJ154	150K	1
C66	PQCUV1H153KB	0.015	1	R30	PQ4R10XJ152	1.5K	1
C67	Not Used			R31	PQ4R10XJ472	4.7K	1
C68	ECEA1HKS100	10	1	R32	ERDS2TJ103	10K	1
C69	PQCUV1E104MD	0.1	1	R33	PQ4R10XJ103	10K	1
C70	PQCUV1H103KB	0.01	1	R34	Not Used		
C71	PQCUV1E104MD	0.1	1	R35	PQ4R18XJ3R3	3.3	1
C72	PQCUV1E933MD	0.033	1	R36	PQ4R10XJ682	6.8K	1
C73	PQCUV1E104MD	0.1	1				
				R60	PQ4R10XJ472	4.7K	1
C90	PQCUV1E104MD	0.1	1	R61	PQ4R10XJ103	10K	1
C91	PQCUV1H472KB	0.0047	1	R62	PQ4R10XJ364	360K	1
C92	PQCUV1E104MD	0.1	1	R63	Not Used		
C93	ECEA1HKS4R7	4.7	S 1	R64	PQ4R10XJ221	220	1

